

INSTRUCTION MANUAL

Sandbox Cabana

Ver. 1 SKY5786

WARNING

A WARNING

CHOKING HAZARD - Small parts. Not for children under 3 years old.

ADULT ASSEMBLY REQUIRED

! NOTICE

Please retain these instructions for future reference.

- · Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED



 





 





 
HARDWARE



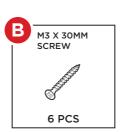




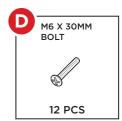






PARTS

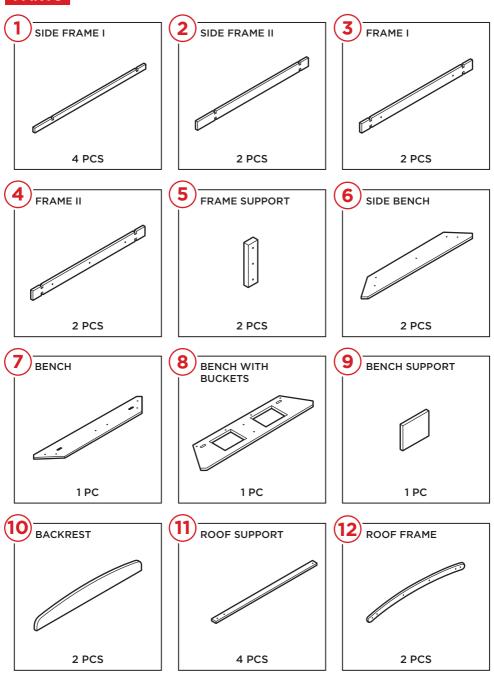

PARTS


2 PCS

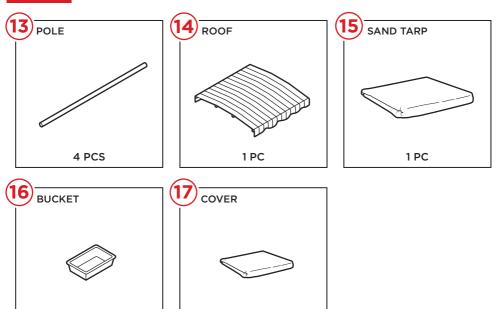

1 PC


1

Insert part 3 and part 4 frames into the designated slots on two part 1 side frames. Insert two part 2 side frames into the designated slots.

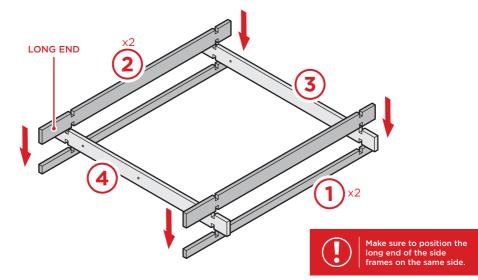


Insert additional part 3 and part 4 frames into the designated slots.

Insert two additional part 1 side frames into the designated slots.

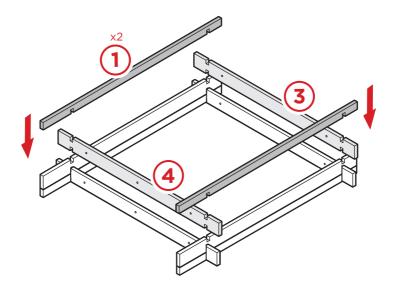


3

Attach two part 5 frame supports with six part B screws.

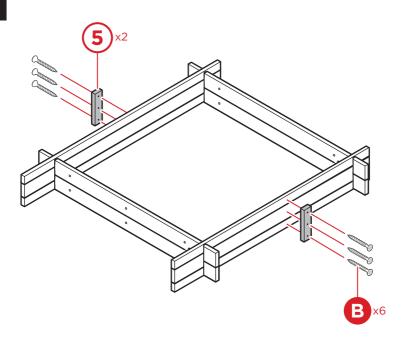


4

Attach part 9 bench support with two part A screws.

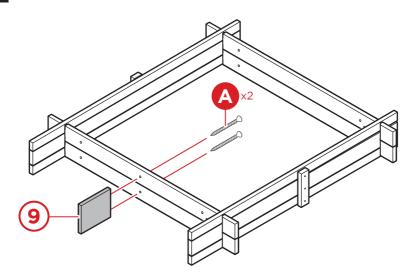




Attach two part 6 side benches with ten part A screws.

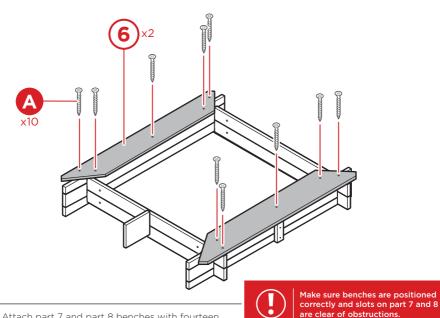

6


Attach part 7 and part 8 benches with fourteen part A screws.

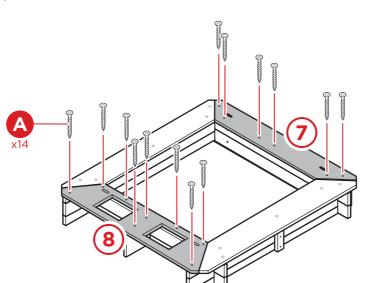

7


Attach two part 10 backrests with four part C screws.

NOTE: If necessary, flip assembly on its side.

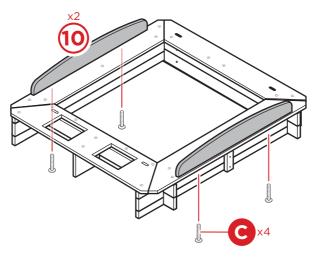


8

Insert four part 11 roof supports into the designated slots, then attach them with eight part D bolts and eight part E sleeve nuts.

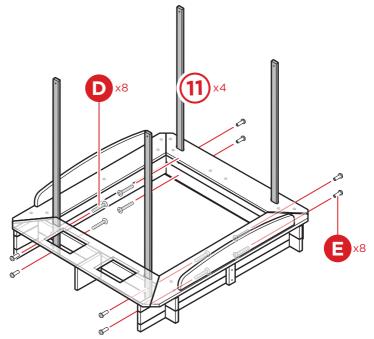




Slide four part 13 poles into the part 14 roof. Attach two part 12 roof frames with eight part A screws.

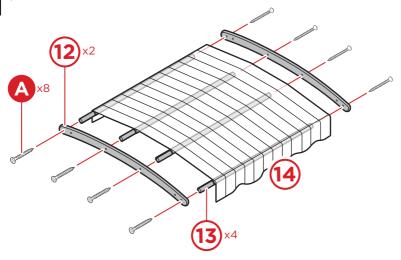


10


Attach the roof with four part D bolts and four part E sleeve nuts.

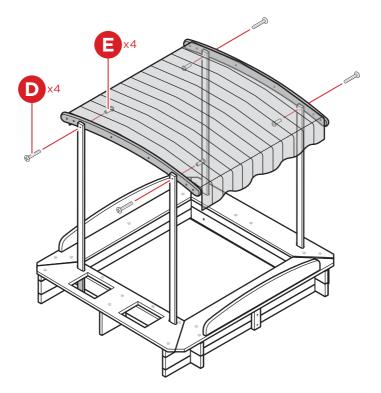

11

Place two part 16 buckets.

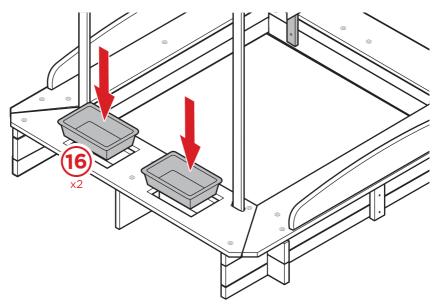


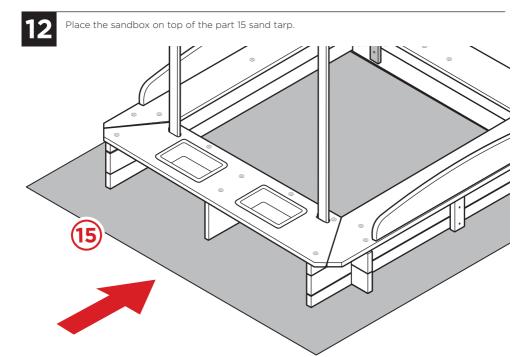

COVERING SANDBOX




Drill eight part F snap button screws into the sandbox. Make sure the screws align witthe buttons on the cover.

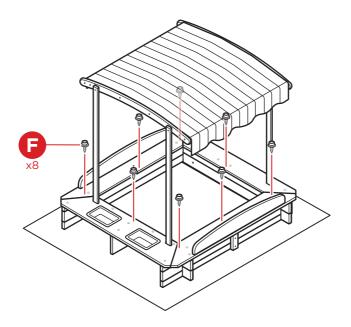

2

Secure the part 17 cover with the built-in buttons.

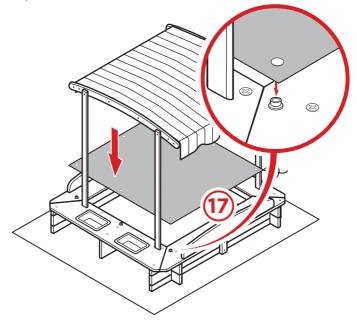



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com











PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

△WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.