 


ASSEMBLY INSTRUCTION

E594C(N1) DINING CHAIR

A Chair Body **B** Front Leg **C** Left Rear Leg **D** Right Rear Leg



1pc

2pcs

1pc

1pc

E Bolt
Ø8x60mm

F Lock Washer
Ø8x13mm

G Flat Washer
Ø8x19mm

H Allen Key
M5




8pcs

8pcs

8pcs

1pc

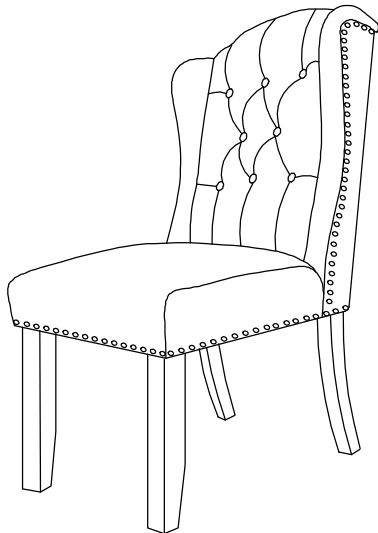

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

