 
 


ASSEMBLY INSTRUCTION

E594C(N1) DINING CHAIR

A Chair Body **B** Front Leg **C** Left Rear Leg **D** Right Rear Leg



1pc

2pcs

1pc

1pc

E Bolt
Ø8x60mm

F Lock Washer
Ø8x13mm

G Flat Washer
Ø8x19mm

H Allen Key
M5




8pcs

8pcs


8pcs

1pc

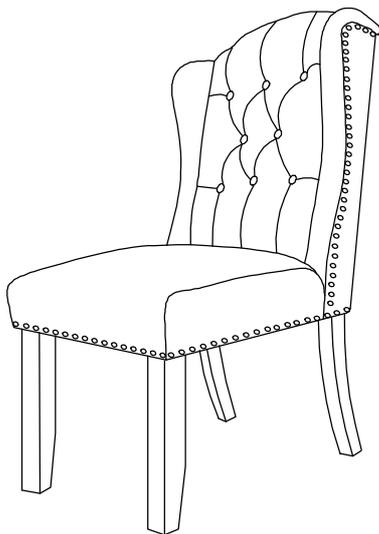

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Attach Front Leg (B) to the Chair Body (A) using Bolt (E), Lock Washer (F) and Flat Washer (G) by Allen Key (H) as below shown.

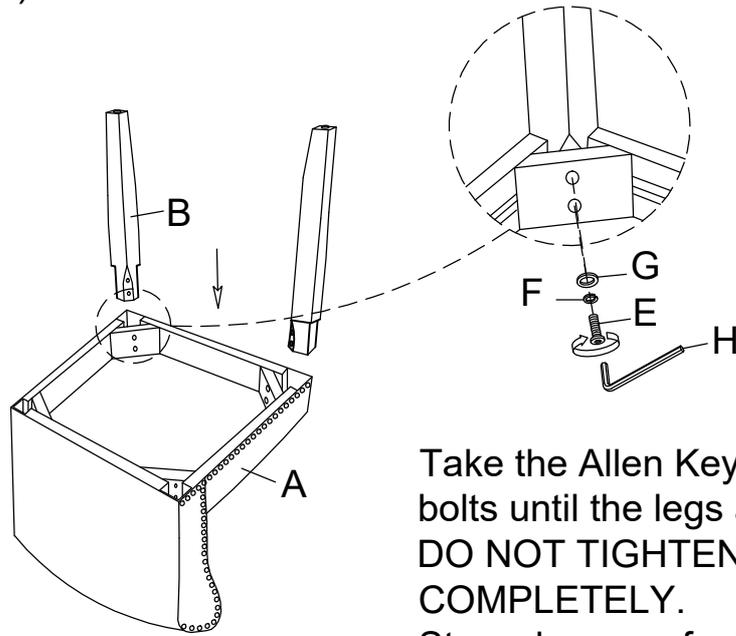

Take the Allen Key, and turn the bolts until the legs are secure. **DO NOT TIGHTEN COMPLETELY.** Stop when you feel you are adding force to tighten the bolt.

- 2** Attach Left Rear Leg (C) & Right Rear Leg (D) to the Chair Body (A) using Bolt (E), Lock Washer (F) and Flat Washer (G) by Allen Key (H) as below shown.

Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

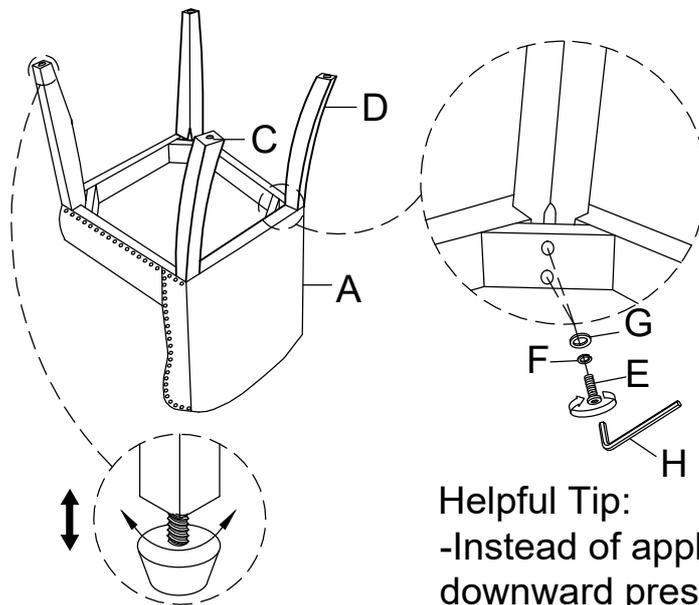

Leveler

Turn left or turn right to adjust the leveler until the chair is stabilized.

Helpful Tip:

-Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the chair while you tighten the bolts.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.