 




BEST CHOICE
PRODUCTS

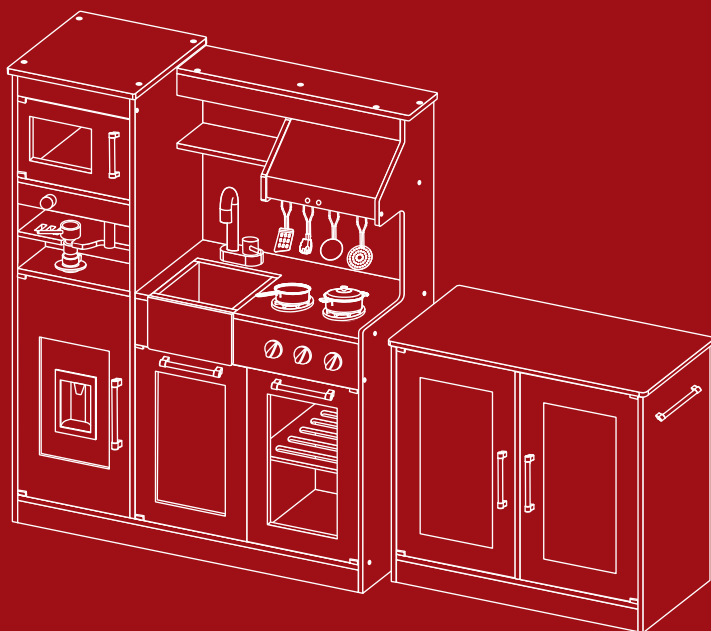

INSTRUCTION MANUAL

Pretend Play Kitchen with
Espresso Machine and Island

⚠ WARNING

ADULT ASSEMBLY REQUIRED

⚠ WARNING

CHOKING HAZARD - Small parts. Not for children under 3 years old.

! NOTICE

Please retain these instructions for future reference.

- This product requires adult assembly and supervision when in use.
- This product is intended for indoor use only.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product contains small parts. May result in choking hazard for children under 3 years.
- To wipe down item, use a damp cloth. Then, wipe it down once more with a dry cloth.
- This product is intended for residential use only.






⚠ WARNING

- This product requires adult assembly and supervision when in use.
- This product contains small parts. May result in choking hazard for children under 3 years.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals and substance.
- Be aware that some parts are heavy or have sharp edges.
- Do not use this item in a way inconsistent with manufacturer's instructions as this could void the product warranty.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Strangulation Hazard - Hooks may catch on clothing or accessories.
- Do not allow children to climb or sit on the play kitchen.
- Secure the product firmly to a wall using the provided anti-tip kit.
- Intended for children ages 3 and up only.
- Keep away from cribs, cords, or other furniture that could entangle the child.
- Hooks are for toy use only. Do not hang real kitchen utensils or heavy items.


 




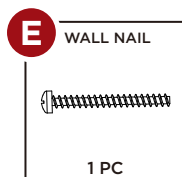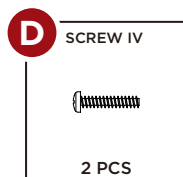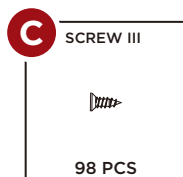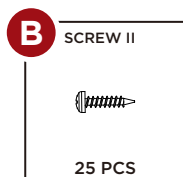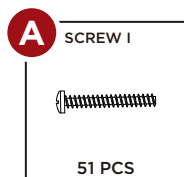 



 

 







TOOLS REQUIRED






HARDWARE



HARDWARE

F DOWEL  85 PCS	G CAM BOLT  16 PCS	H CAM LOCK  16 PCS	I UPPER HINGE  3 PCS	J UPPER HINGE RECEIVER  9 PCS
K HINGE PEG  12 PCS	L COUNTER SUPPORT  7 PCS	M DOOR CATCH  6 PCS	N DOOR INSERT  6 PCS	O SHELF SUPPORT  13 PCS
P BAR HOLDER  16 PCS	Q HOOD CENTER  1 PC	R FAUCET  1 PC	S LONG BAR  7 PCS	T ICE DISPENSER  1 PC
U WALL SPACER  1 PC	V WALL ANCHOR  1 PC	W SHORT BAR  1 PC	X BURNER  2 PCS	Y S-HOOK  4 PCS

  
PARTS

1 BASE  1 PC	2 BASE SUPPORT  2 PCS	3 SKIRT  1 PC
--	---	--

PARTS

4

 
ESPRESSO MACHINE
BOTTOM



1 PC

5

 
ESPRESSO MACHINE
TOP



1 PC

6

 ESPRESSO MACHINE
FRONT



1 PC

7

 
SPOUT



1 PC

8


MICROWAVE UPPER
PANEL



1 PC

9

 
RIGHT COUNTER
WINDOW



1 PC

10

 
LONG DIVIDER



1 PC

11

 
SINK LEFT SIDE



1 PC

12

 
SINK BACK



1 PC

13

 
SINK RIGHT SIDE



1 PC

14

 
SINK BOTTOM



1 PC

15

 SHORT DIVIDER




1 PC

PARTS

16

 
REFRIGERATOR BACK



1 PC

17

 
REFRIGERATOR DOOR

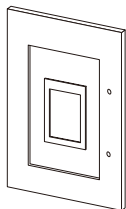

1 PC

18

 
SINK CUPBOARD DOOR

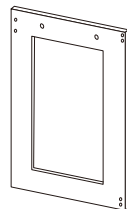

1 PC

19

 
OVEN DOOR

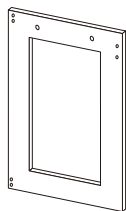

1 PC

20

 
COUNTER PANEL



1 PC

21

 COUNTERTOP



1 PC

22

 
SHORT BACK



2 PCS

23


UPPER SHELF



1 PC

24

 
COUNTERTOP BACK

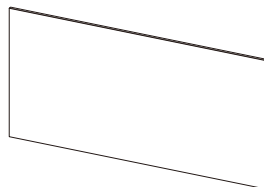

1 PC

25

 
UPPER MID PANEL



1 PC

26

 
HOOD STRIP



1 PC

27

 HOOD BOTTOM




1 PC

PARTS

28

 
HOOD TOP

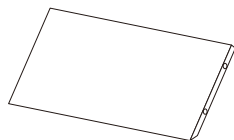

1 PC

29

 
UPPER SHELF BACK

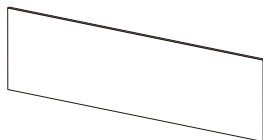

1 PC

30

 
TOP PANEL



1 PC

31

 TOP BOARD



1 PC

32

 
RIGHT SIDE PANEL



1 PC

33


ESPRESSO MACHINE
BACK

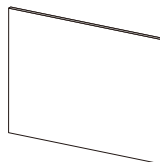

1 PC

34

 MICROWAVE DOOR

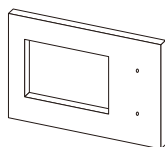

1 PC

35

 
TRAY



1 PC

36


MICROWAVE BACK

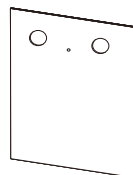

1 PC

37

 
OVEN RACK



1 PC

38

 
MICROWAVE TOP

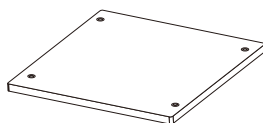

1 PC

39

 ISLAND BASE




1 PC

PARTS

40

 
ISLAND SKIRT



2 PCS

41

 
ISLAND LEFT BACK



1 PC

42

 ISLAND RIGHT BACK



1 PC

43

ISLAND SHELF



2 PCS

44

ISLAND LEFT SIDE



1 PC

45

ISLAND DIVIDER



1 PC

46

 
ISLAND RIGHT SIDE



1 PC

47


ISLAND TOP



1 PC

48

 
ISLAND LEFT DOOR



1 PC

49

 ISLAND RIGHT DOOR




1 PC

50


ACCESSORIES:



 CUP/SAUCER
(1 SET)




PORTAFILTER
(1 PC)

 

UTENSIL
(1 SET)



 CAPSULES
(1 SET)



SAUCEPAN
(1 PC)



DUTCH OVEN
(1 PC)

 
PRODUCT ASSEMBLY

1

Attach three **part J upper hinge receivers** to the **part 1 base** with six **part C screws**. Two screws per receiver.

Attach two **part 2 base supports** to the **part 11 base** with two **part A screws**.


Insert two **part F dowels** into the **part 3 skirt**, then attach the skirt to the **part 1 base** with two **part A screws**.

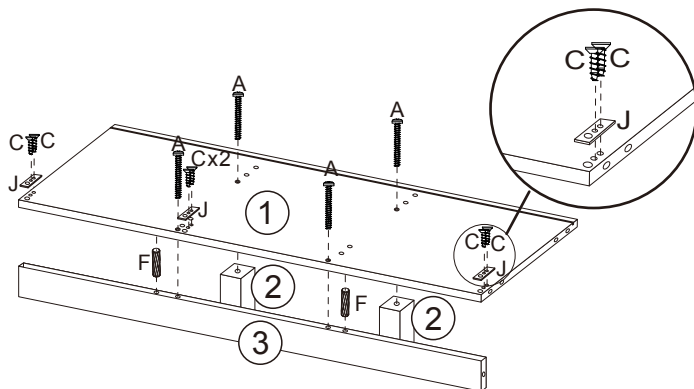

2

Attach two **part M door catches** to the **part 10 long divider** with four **part C screws**, two screws per door catch.

Flip the long divider and attach one **part O shelf support** with one **part C screw**.

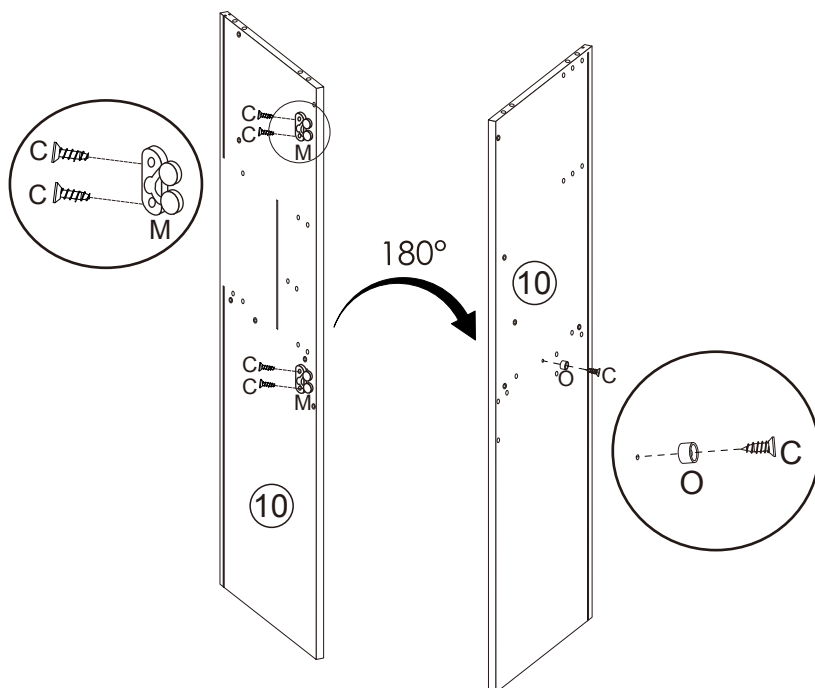


PRODUCT ASSEMBLY

3


Attach one **part J upper hinge receiver** to the **part 4 espresso machine bottom** with two **part C screws**.

Insert two **part F dowels** into the **part 4 espresso machine bottom**, then attach the bottom to the **part 10 long divider** with two **part A screws**.

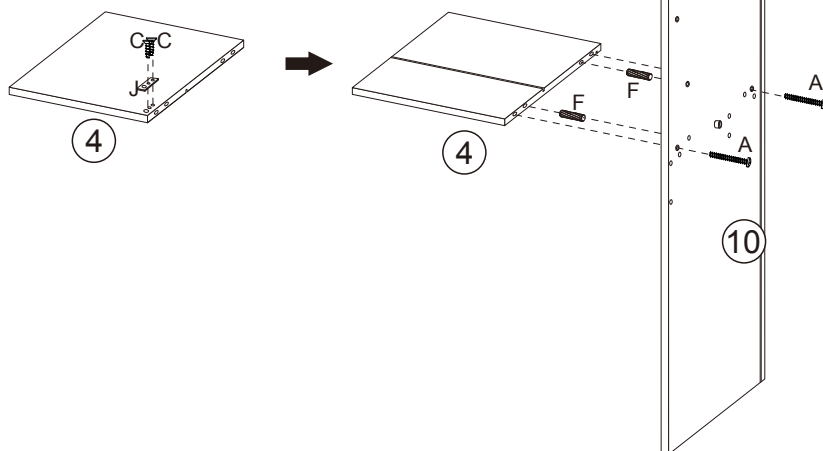

4


Attach the **part 12 sink back** to **part 11 & 13 sink sides** with two **part F dowels** and two **part A screws**, and then slide the **part 14 sink bottom**.

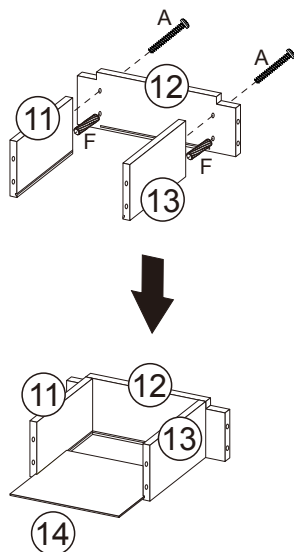

5

Attach two **part O shelf supports** and one **part M door catch** to the **part 15 short divider** with four **part C screws**.


Flip the short divider and attach one **part M door catch** with two **part C screws**.

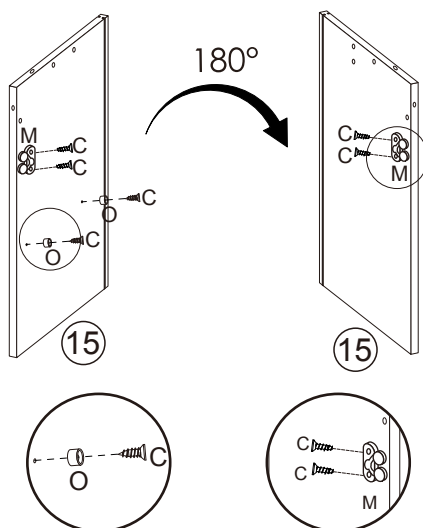

PRODUCT ASSEMBLY

6


Insert one **part F** dowel to the **part 12** sink back, and then attach the sink assembly to the **part 15** short divider with one **part A** screws.

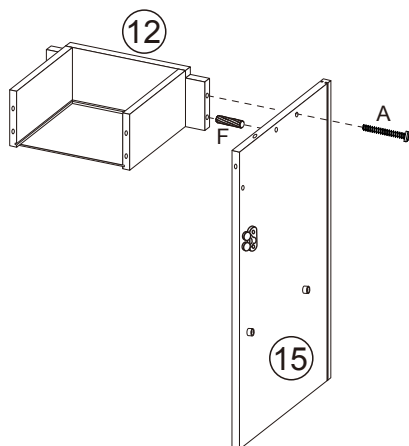

7


Hammer three **part L** counter supports into the **part 21** countertop, then secure with three **part C** screws.

Flip the countertop and attach the **part R** faucet with two **part B** screws.

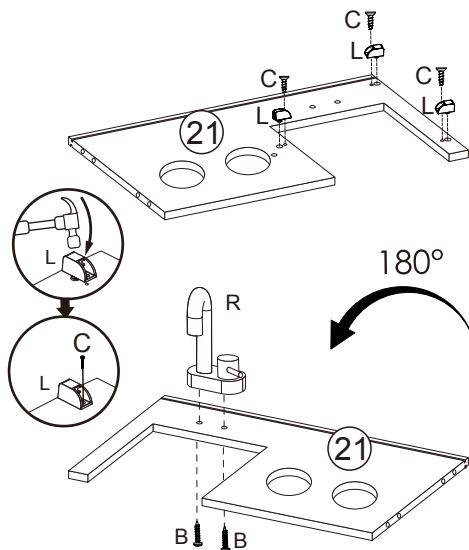

8


Attach the **part 21** counter top to the **part 15** long divider with one **part B** screw and one **part F** dowel.

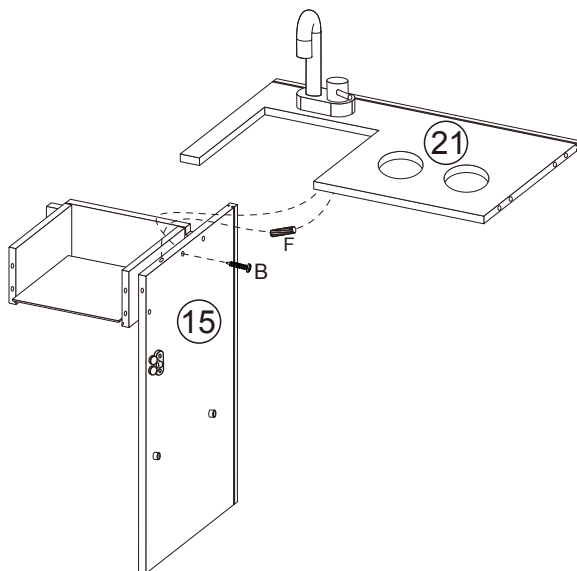

PRODUCT ASSEMBLY

9


Insert three **part F** dowels to the **part 21** countertop, then attach the countertop assembly to the **part 10** long divider with one **part A** screw and two **part B** screws.

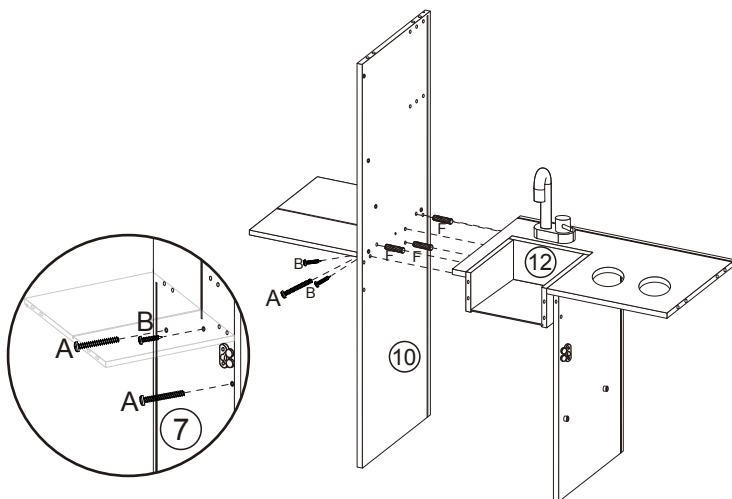

10

Slide in one **part 22** short back panel between the **part 10** & **5** dividers.

Insert four **part F** dowels to the **part 1** base, then attach the base to the dividers with four **part A** screws.

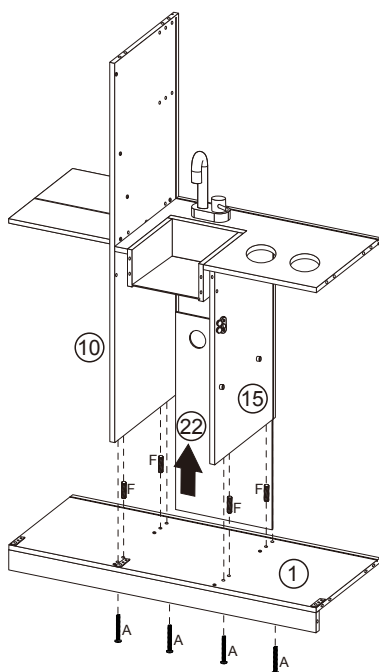


PRODUCT ASSEMBLY

11

Attach two **part I upper hinges** to the **part 20 counter panel** with four **part C screws**, two screws per hinge.


Hammer one **part L counter supports** into the **part 20 counter panel**, then secure with one **part C screw**.

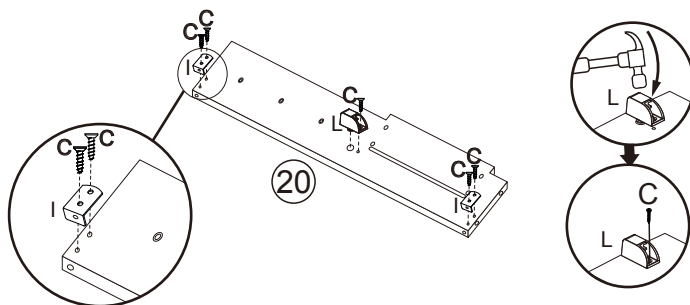

12


Insert four **part F dowels** to the **part 11 & 13 sink sides**.

Insert one **part F dowel** to the **part 15 short divider**.

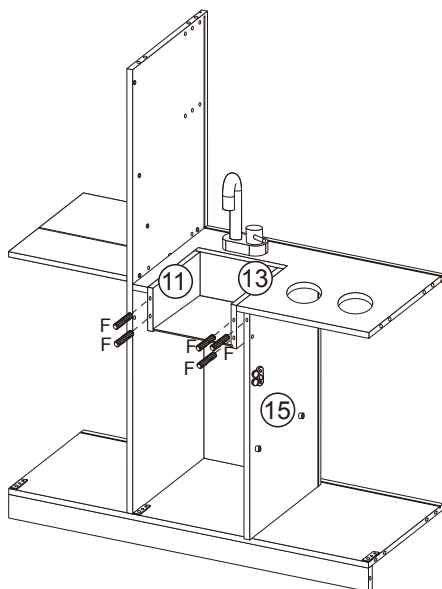

13


Insert one **part F dowel** to the **part 20 counter panel**, then attach the panel to the sink assembly with one **part A screw** and one **part B screw**.

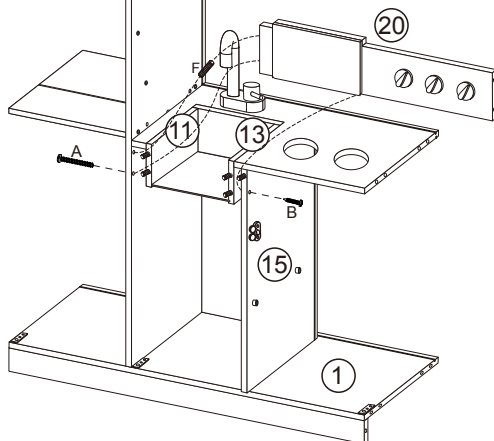

PRODUCT ASSEMBLY

14


Slide in one **part 22 short back** between the **part 1 base** and **part 21 countertop**.

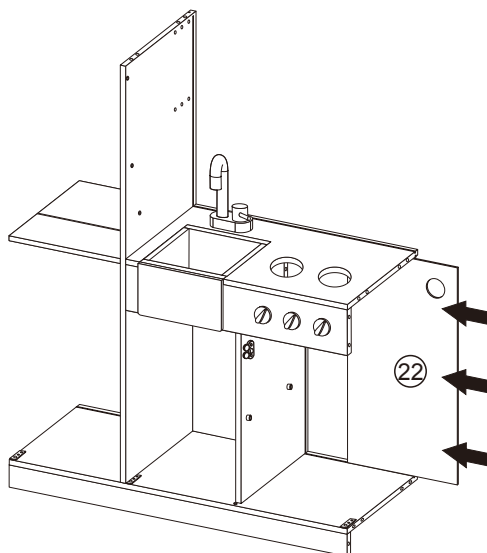

15

Attach two **part P bar holders** to **part S long bar**, then attach the bar assembly to the **part 23 lower shelf** with two **part B screws**.


Insert two **part F dowels** to the **part 23 upper shelf**, then attach the shelf to the **part 10 long divider** with one **part A screw**.

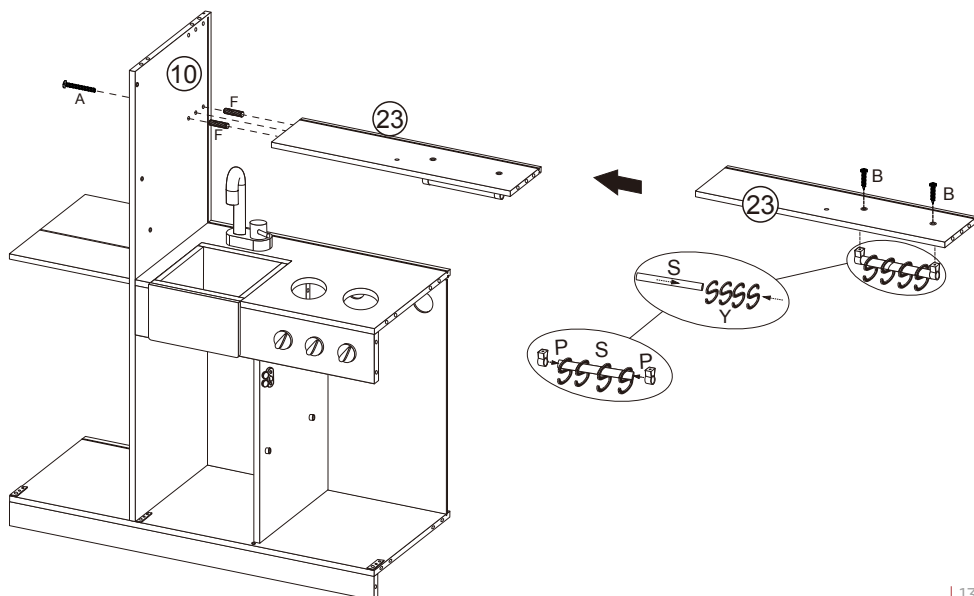

PRODUCT ASSEMBLY

16

Slide in the **part 24 countertop back** between the **part 21 countertop** and the **part 23 upper shelf**.

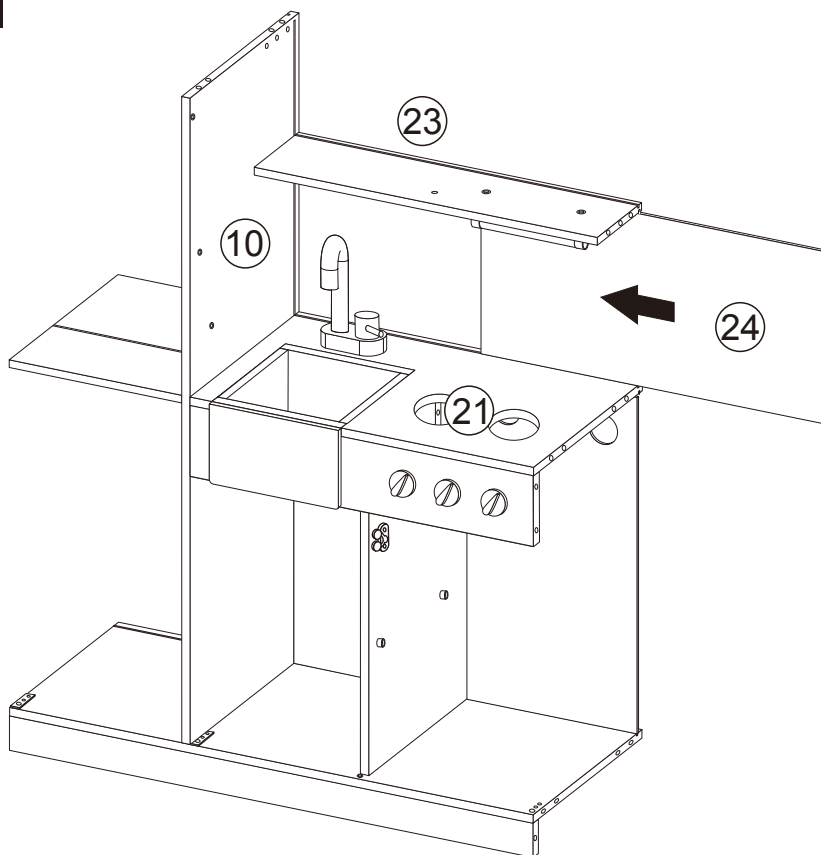



17

Insert two **part G cam bolts** to the **part 26 hood strip**.

Attach the **part Q hood center** to the **part 27 hood bottom** with two **part D screws**.

Insert two **part H cam locks** to the **part 27 hood bottom**, then attach the **part 26 hood strip** to the hood bottom.



NOTE: Use a screwdriver to turn the cam lock to secure the cam bolt.

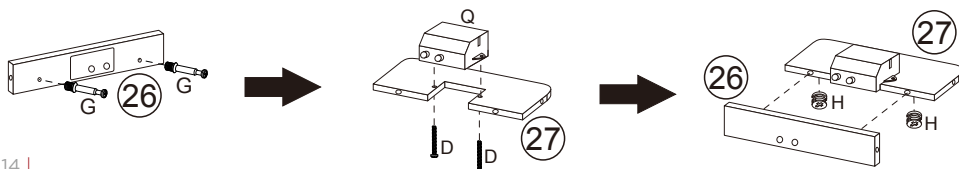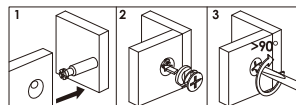

PRODUCT ASSEMBLY


18

Attach two **part O** shelf supports to the **part 32** right side with two **part C** screws.

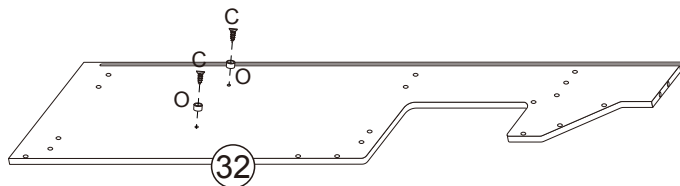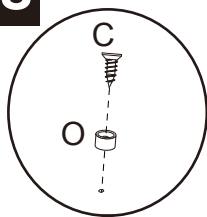

19


Insert six **part F** dowels to the hood assembly, then attach it between the **part 25** upper mid panel and the **part 32** right side with two **part A** screws.

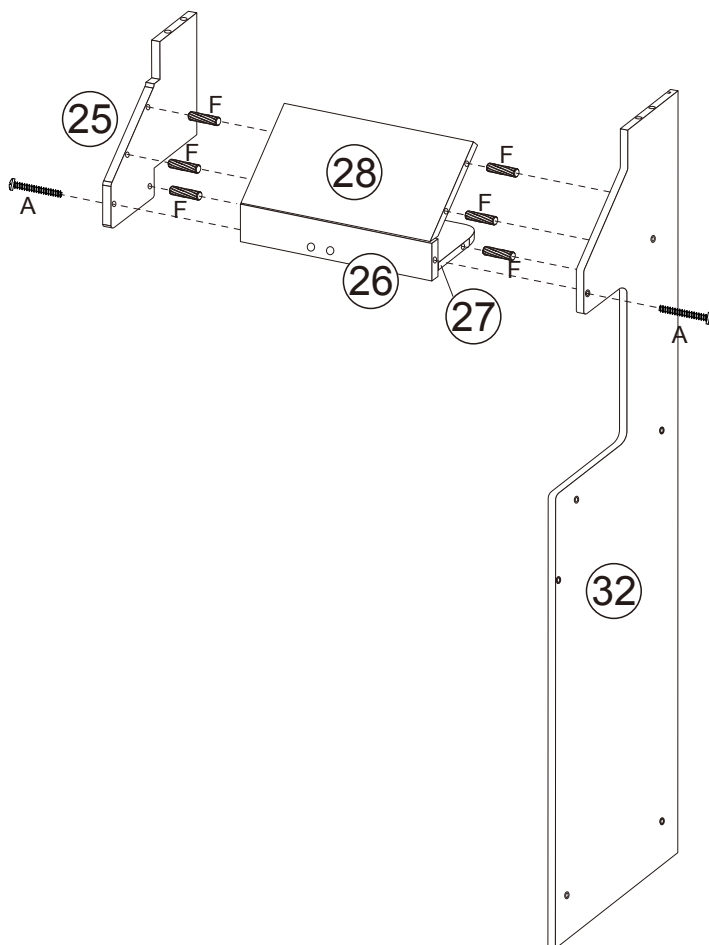

PRODUCT ASSEMBLY

20

Attach the right side assembly with eight **part F** dowels and seven **part A** screws.

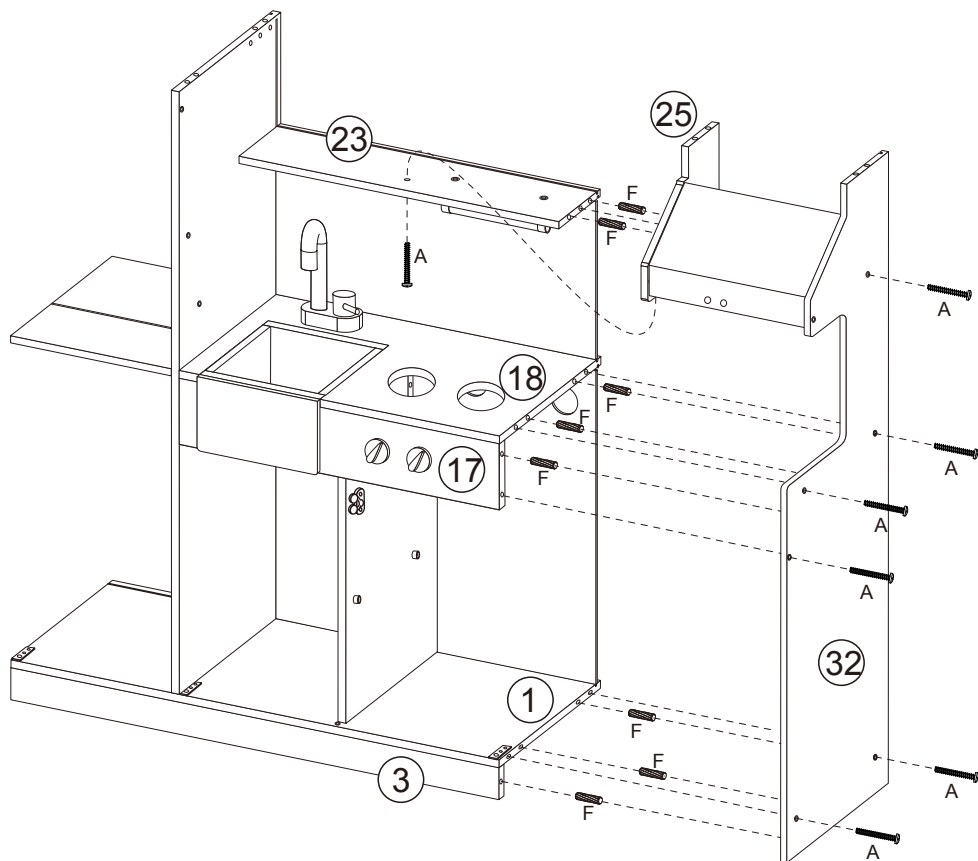


PRODUCT ASSEMBLY

21

Attach one **part J upper hinge receiver** to the **part 5 espresso machine top** with four **part C screws**.


Insert two **part F dowels** to the **part 6 espresso machine front**, then attach the panel and the **part 7 spout** with three **part A screws**.

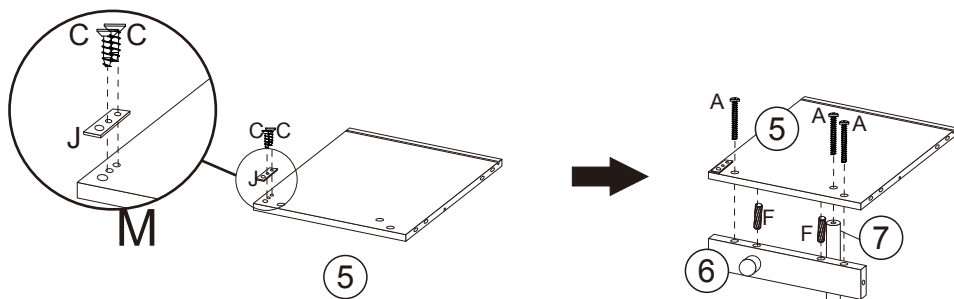

22

Attach the **part 8 microwave upper panel**, the espresso machine assembly, and the **part 35 tray** with three **part F dowels** and three **part A screws**.

Slide in the **part 16 refrigerator back** between the **part 4 espresso machine bottom** and the **part 1 base**.

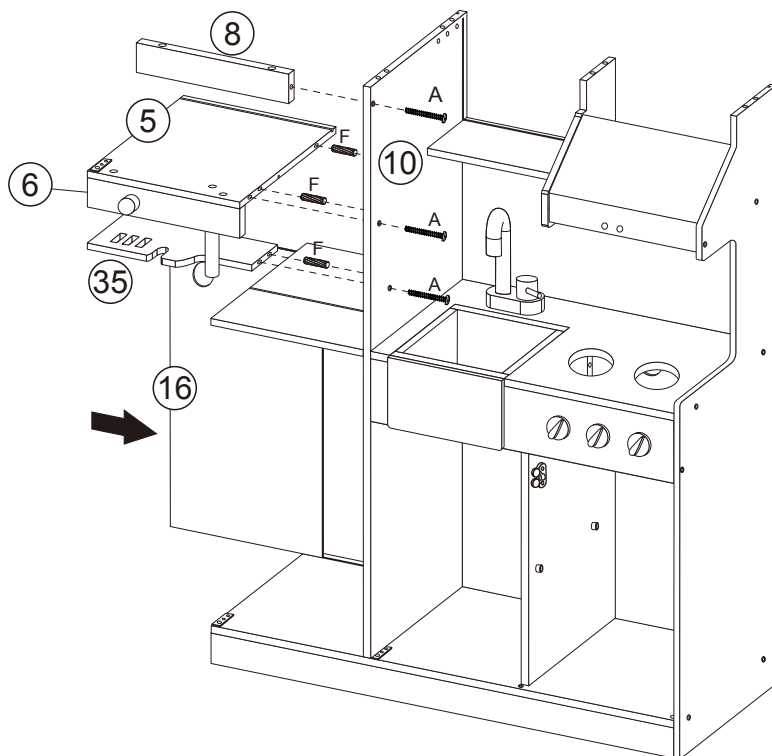


PRODUCT ASSEMBLY

23

Attach one **part N door insert** and two **part K hinge pegs** to the **part 34 microwave door** with four **part C screws**.


Flip the door and attach two **part P bar holders** and the **part W short bar** with two **part B screws**.

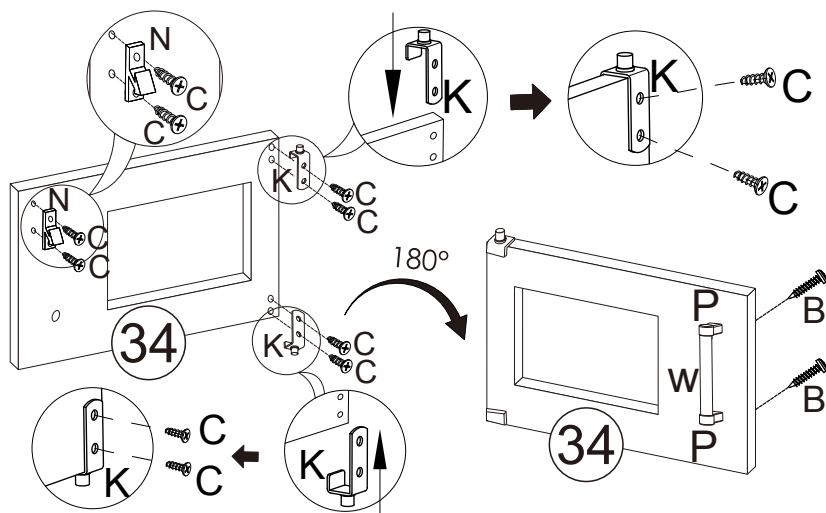

24

Attach one **part N door insert**, two **part K hinge pegs**, and the **part T ice dispenser** to the **part 17 refrigerator door** with twelve **part C screws**.


Flip the door and attach two **part P bar holders** and the **part S long bar** with two **part B screws**.

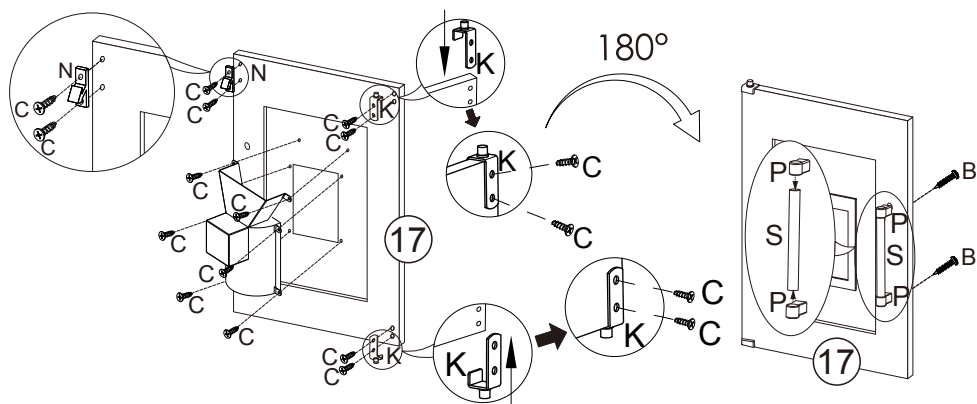

PRODUCT ASSEMBLY

25


Slide in the **part 33 espresso machine back** and the **part 29 upper shelf back**.
Attach the **part 34 microwave door** and **part 17 refrigerator door**.

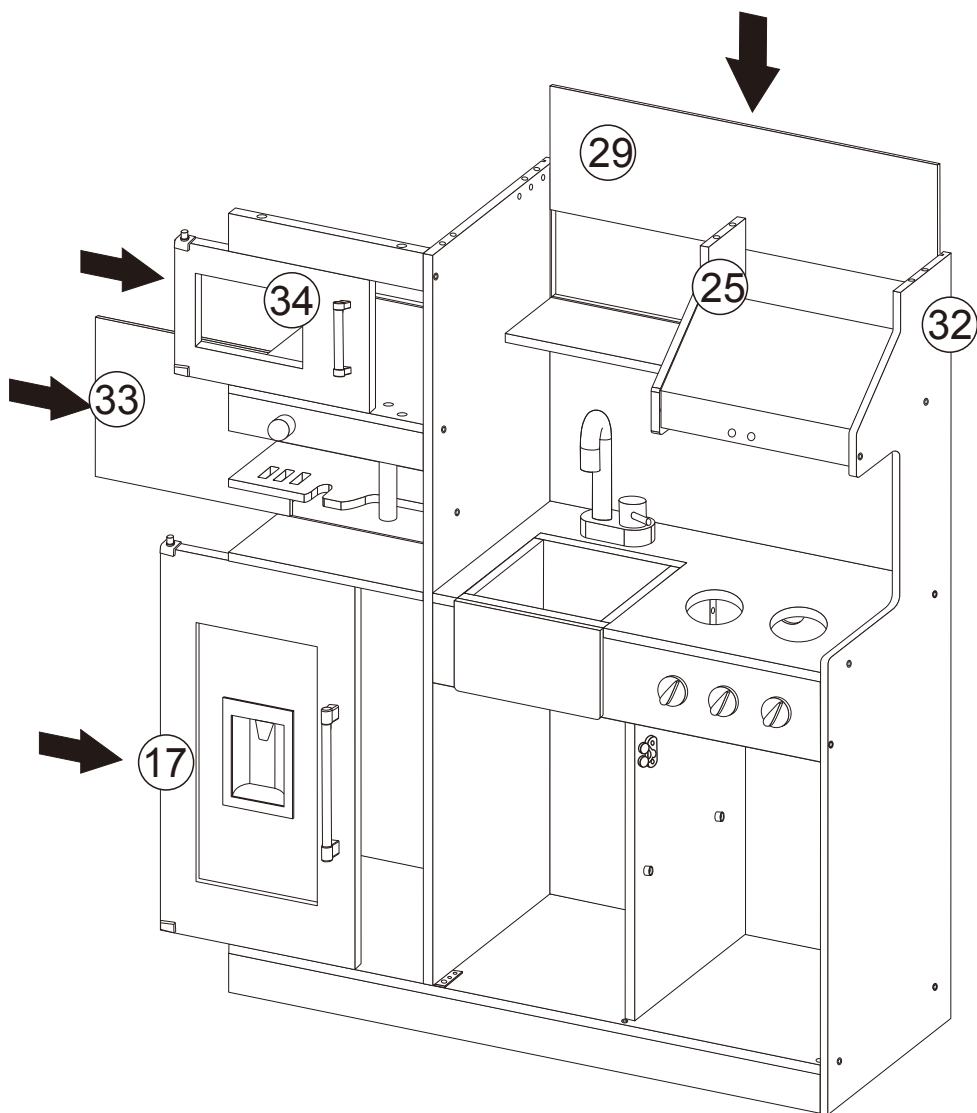

PRODUCT ASSEMBLY

26


Insert three **part F** dowels to the **part 30** top, then attach the panel to the **part 31** top board with two **part A** screws.

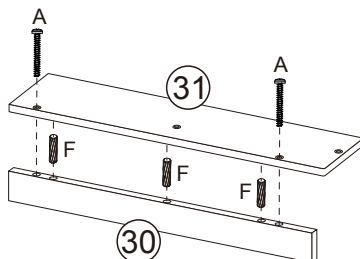

27

Insert four **part F** dowels to the **part 31** top board, then attach the board to the right section assembly with two **part A** screws.


Insert nine **part F** dowels to the **part 9** left side, then attach the panel to the left section assembly with seven **part A** screws.

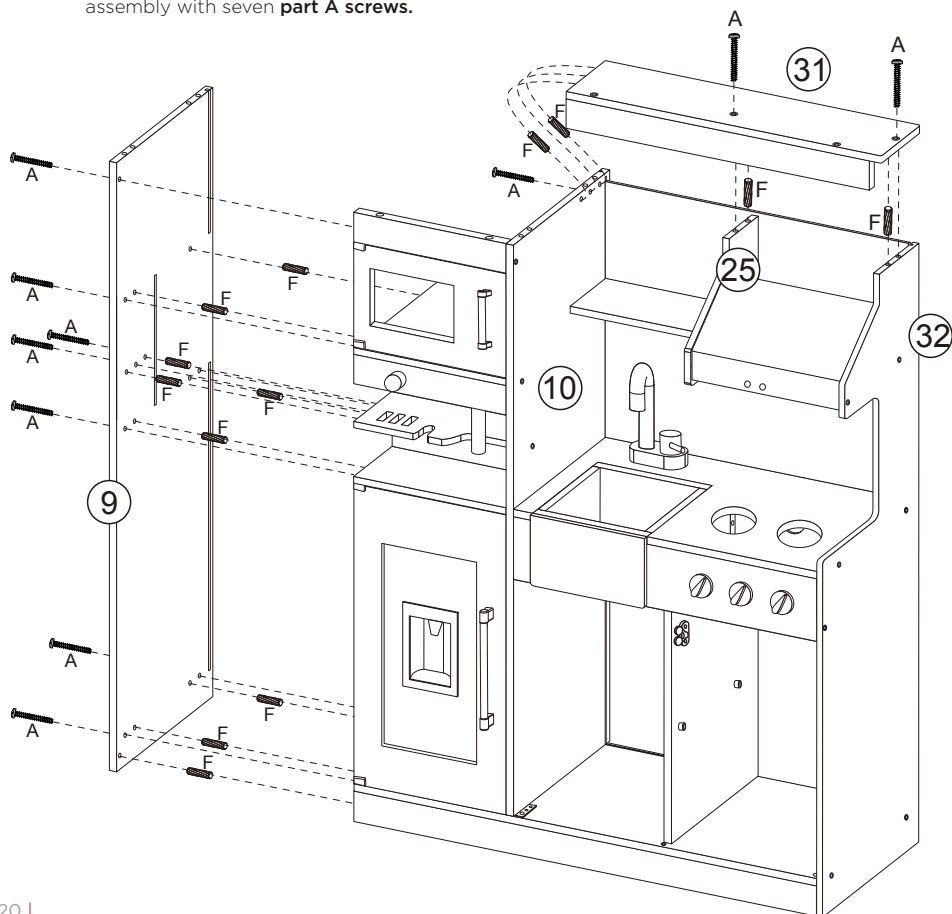

PRODUCT ASSEMBLY

28


Slide in the **part 36 microwave back** between the **part 9 left side** and the **part 10 long divider**.

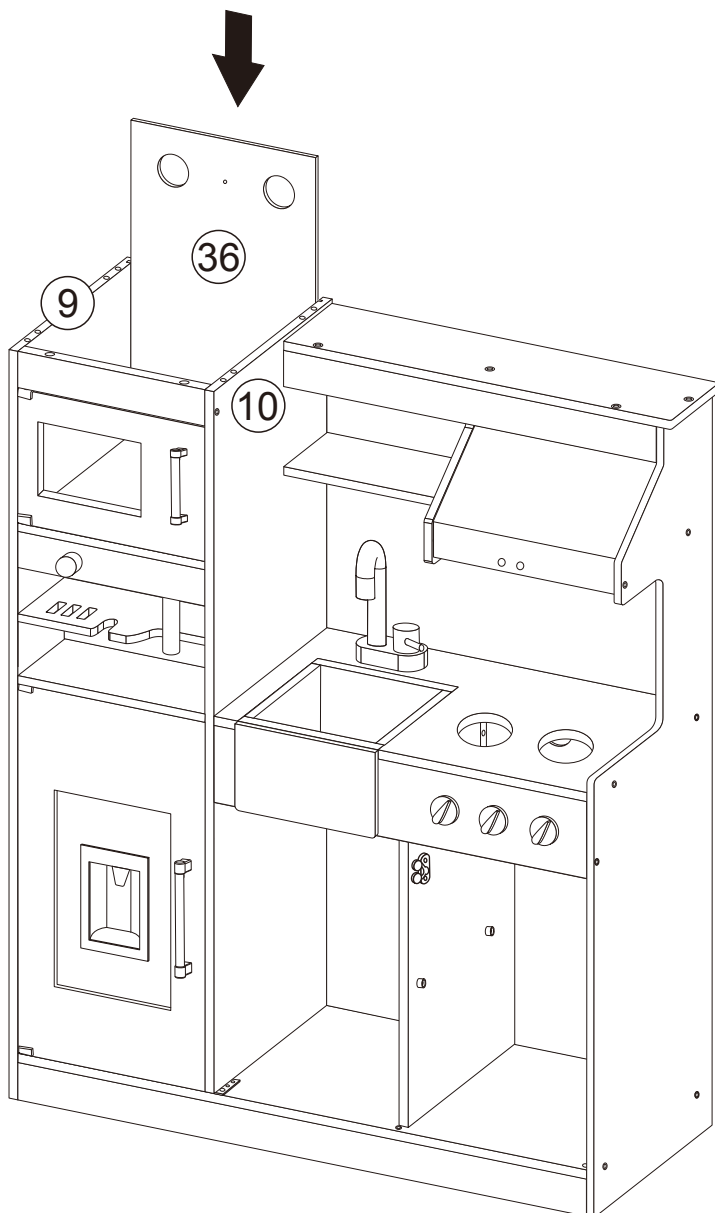

PRODUCT ASSEMBLY

29

Insert six **part F** dowels to the **part 38** microwave top, then attach the panel on top of the microwave assembly with four **part A** screws.

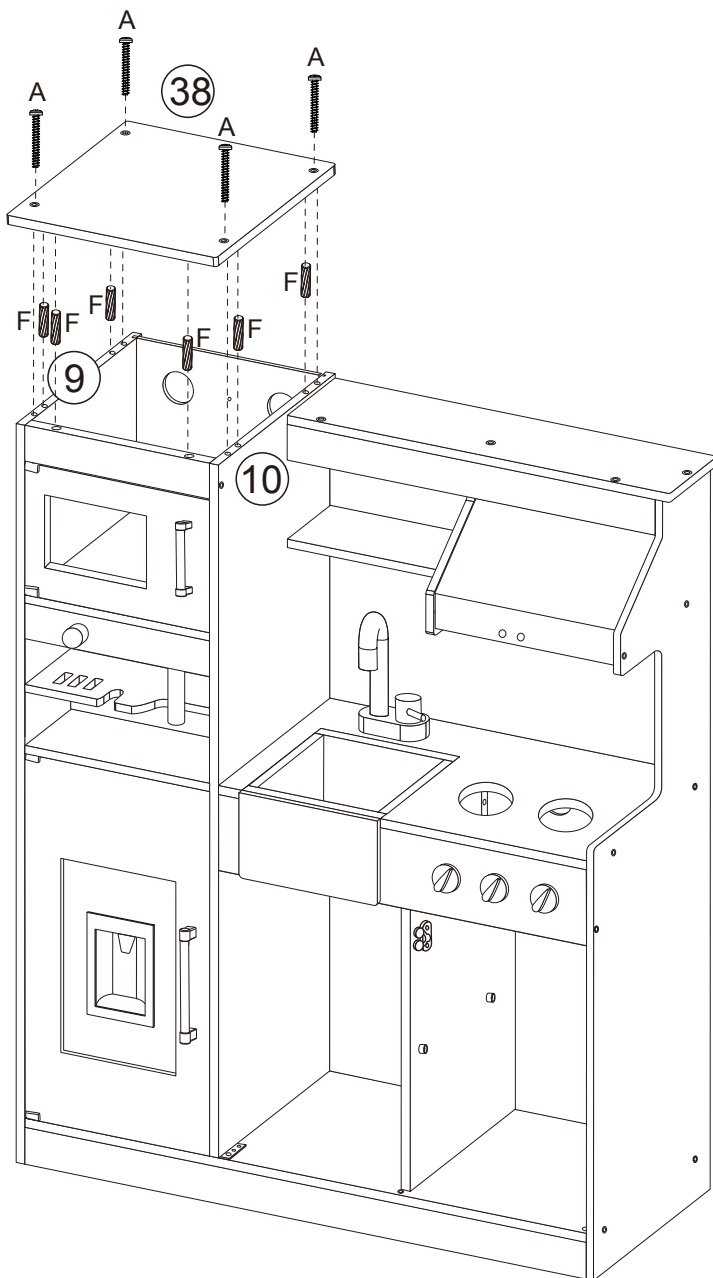


PRODUCT ASSEMBLY

30

Attach one **part N door insert** and one **part K hinge pegs** to the **part 18 sink cupboard door** with four **part C screws**.

Flip the door and attach two **part P bar holders** and the **part S long bar** with two **part B screws**.

Repeat the steps for the **part 19 oven door**.

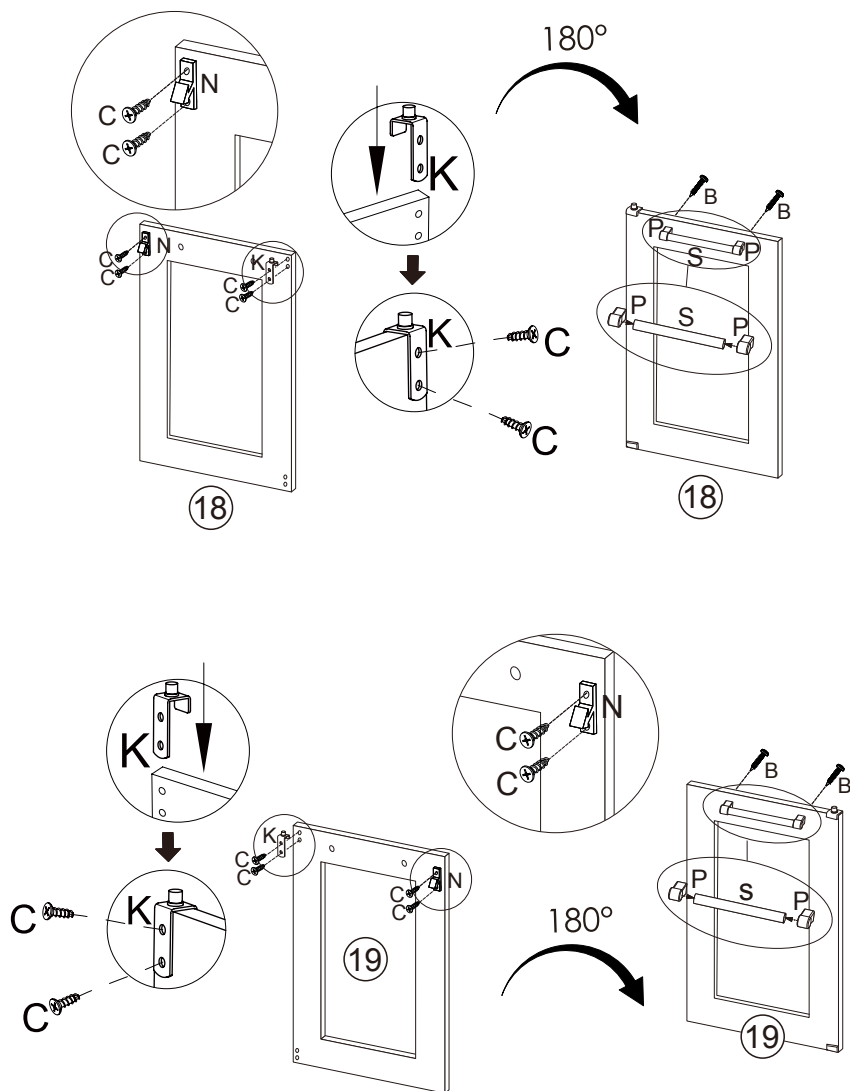


PRODUCT ASSEMBLY

31

Insert the hinge peg on the **part 18 sink cupboard door** into the opening on the **part 20 counter panel**. Insert one **part K hinge peg** into the opening on the **part 1 base**, and secure to the **part 18 cupboard door** with two **part C screws**. Repeat the steps for the **part 19 oven door**.

Attach two **part X burners** and the **part 37 oven rack** into the stove.

WALL MOUNTING: Combine the **part E wall nail**, **part U wall spacer**, and **part V wall anchor** and use a hammer to drive the nail into the wall through the opening on the **part 36 microwave back**.

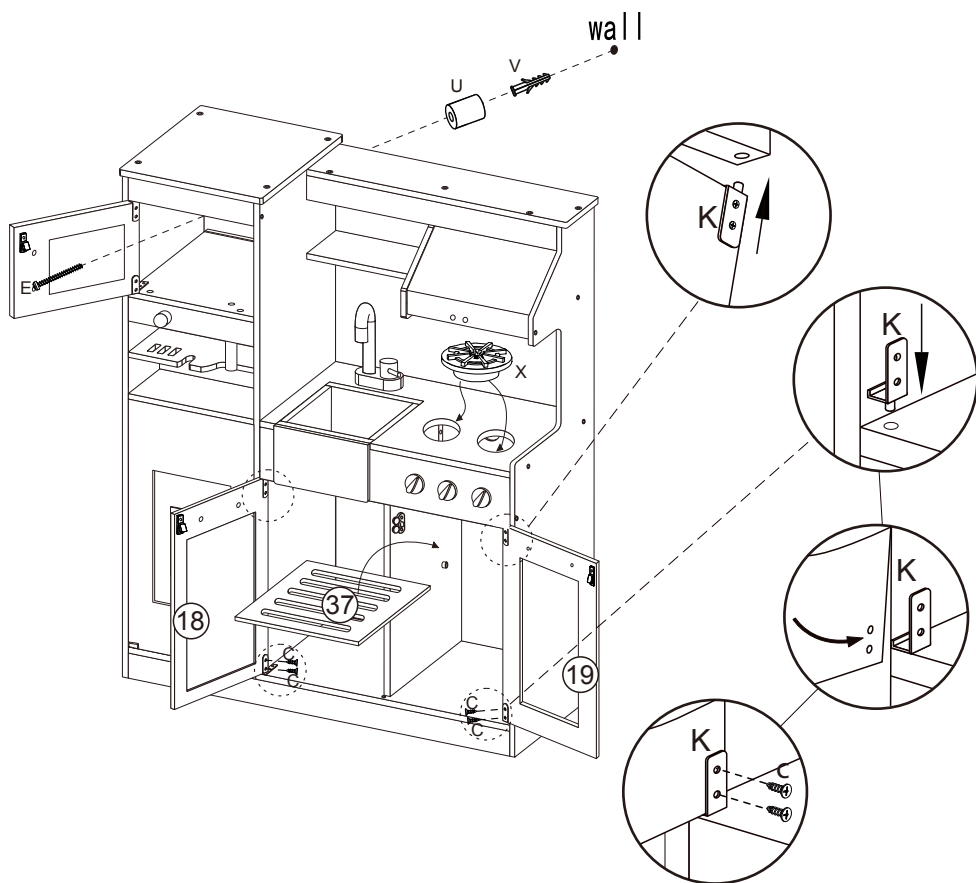


PRODUCT ASSEMBLY

32

Attach two **part J upper hinge receivers** to the **part 39 island base** with four **part C screws**, two screws per receiver.


Flip the base and then insert four **part G cam bolts**.

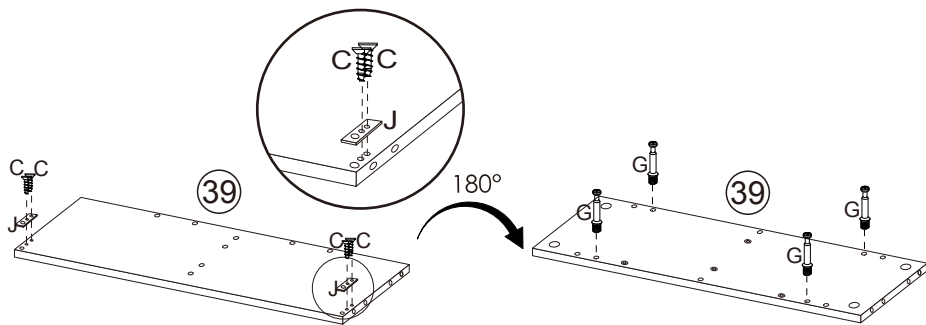

33


Attach one **part M door catch** and two **part O shelf support** to the **part 45 island divider** with four **part C screw**.

Flip the divider and attach another one **part M door catch** and one **part O shelf support** to the **part 45 island divider** with three **part C screws**.

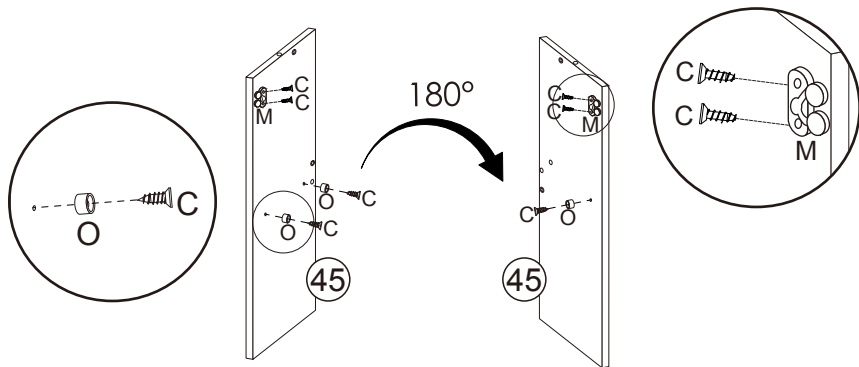

34


Hammer one **part L counter support** into the **part 41 island left back**, then secure with one **part C screw**. Repeat the step for the **part 42 island right back**.

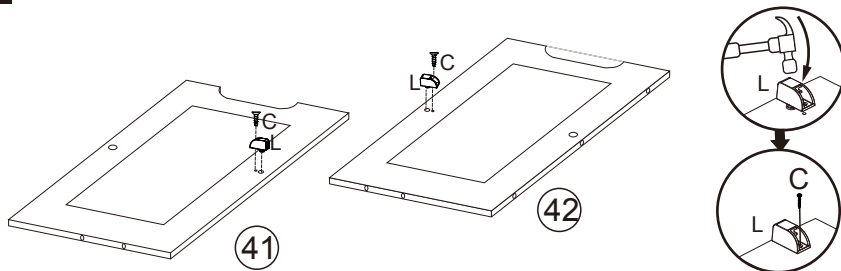

PRODUCT ASSEMBLY


35

Attach the **part 41 & 42 island backs** to the **part 39 island base** with two **part F dowels** and two **part A screws**.

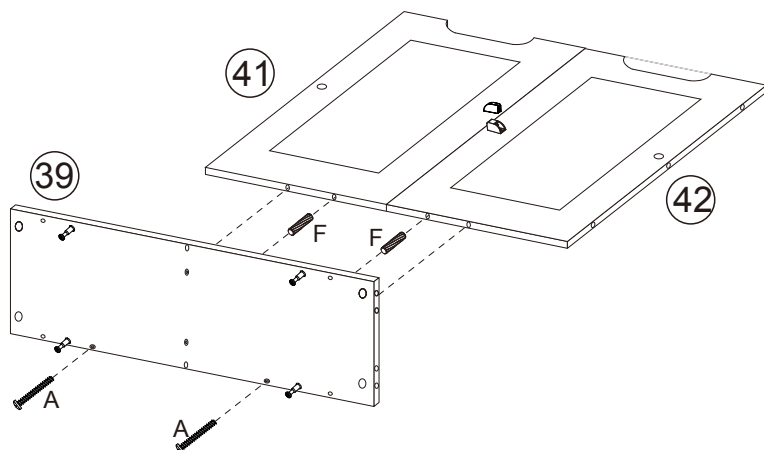

36

Attach the **part 45 island divider** to the **part 39 island base** with two **part F dowels** and two **part A screws**.


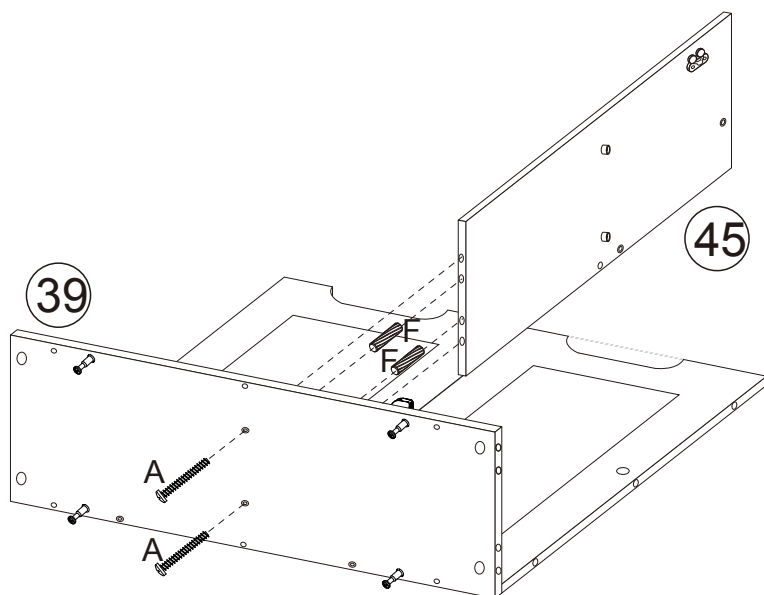


PRODUCT ASSEMBLY

37


Attach two **part 40 island skirts** to the bottom of the **part 39 island base** with six **part F dowels** and four **part H cam locks**.

NOTE: Use a screwdriver to turn the cam lock to secure the cam bolt.

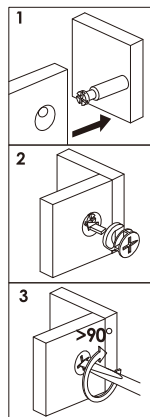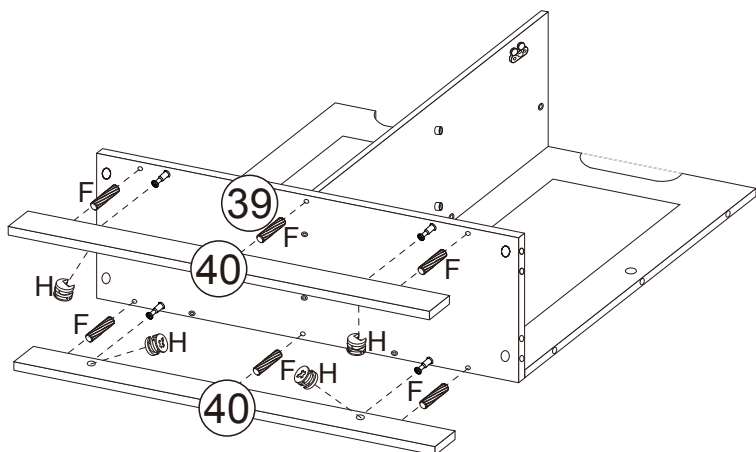

38

Secure two **part B screws** to the **part 45 island divider**.

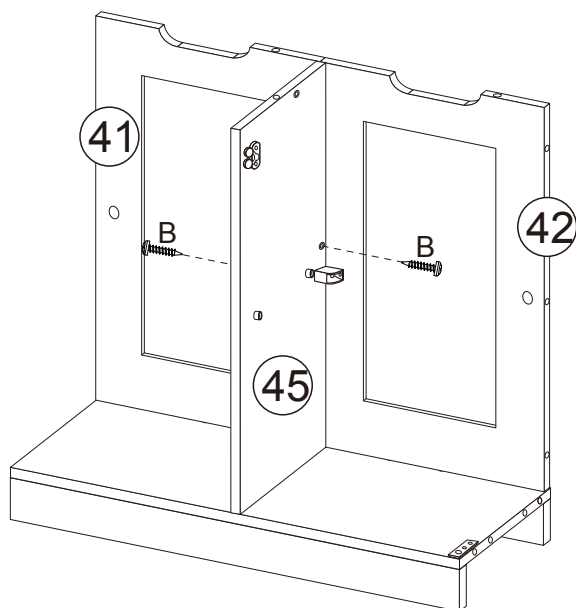


PRODUCT ASSEMBLY

39

Insert three **part G** cam bolts into the **part 44 island left side**, then attach two **part O** shelf support with two **part C** screws. Repeat the step for **part 46 island right side**.



Flip the **part 46 island right side** attach two **part P** bar holders and the **part S** long bar with two **part B** screws.

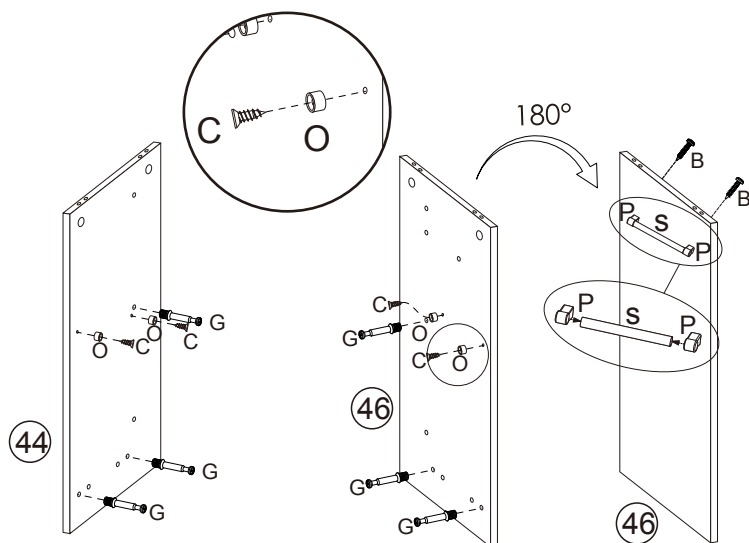

40

Attach two **part 44 island left side** to the **part 41 island left back** and the **part 1 island base** with four **part F** dowels and four **part H** cam locks. Repeat the step on the other side for the **part 46 island right side**.

NOTE: Use a screwdriver to turn the cam lock to secure the cam bolt.

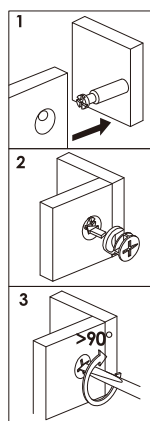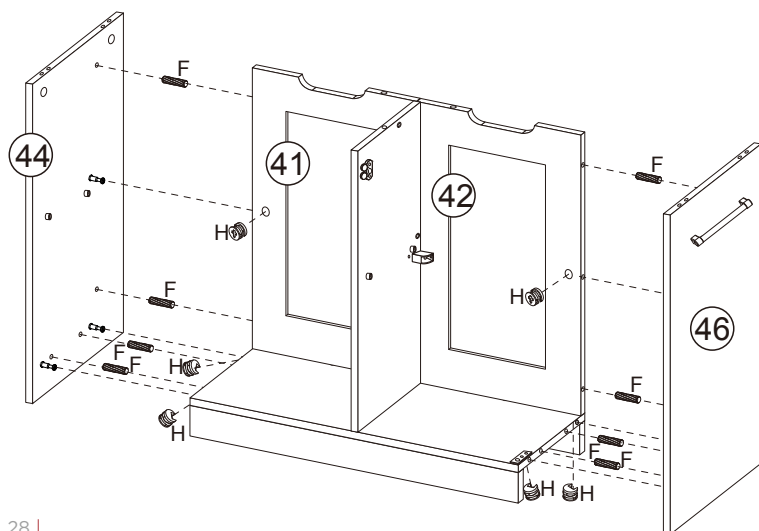


PRODUCT ASSEMBLY

41

Attach two **part J upper hinge receivers** to the **part 47 island top** with four **part C screws**, two screws per receiver.

Hammer one **part L counter support** into the **part 47 island top**, then secure with one **part C screw**.


Insert four **part G cam bolts** into the **part 47 island top**.

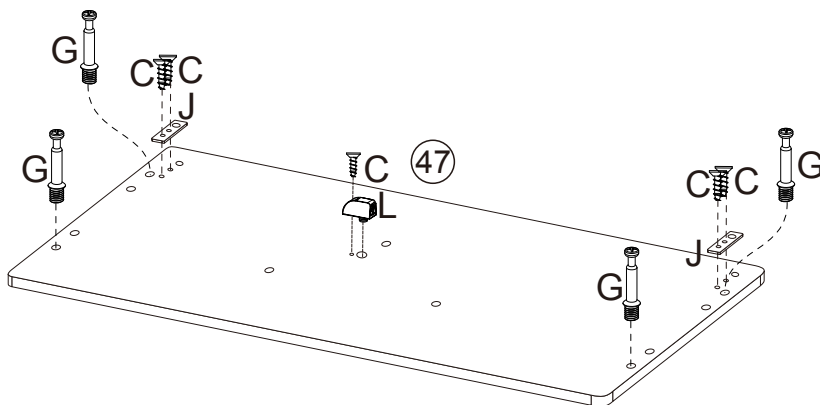

42

Attach two **part 47 island top** to the **part 44 island left side**, **part 45 island divider**, and **part 46 right side** with seven **part F dowels**, four **part H cam locks**, and one **part B screw**.

NOTE: Use a screwdriver to turn the cam lock to secure the cam bolt.

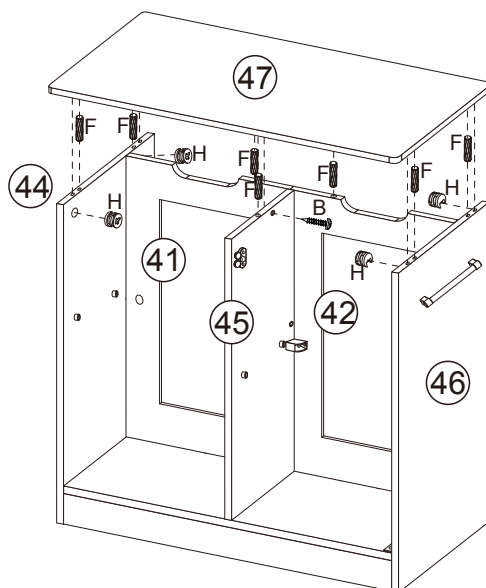


PRODUCT ASSEMBLY

43

Attach one **part N door insert** and one **part K hinge peg** to the **part 48 island left door** with four **part C screws**.

Flip the door and attach two **part P bar holders** and the **part S long bar** with two **part B screws**.

Repeat the steps for the **part 49 island right door**.

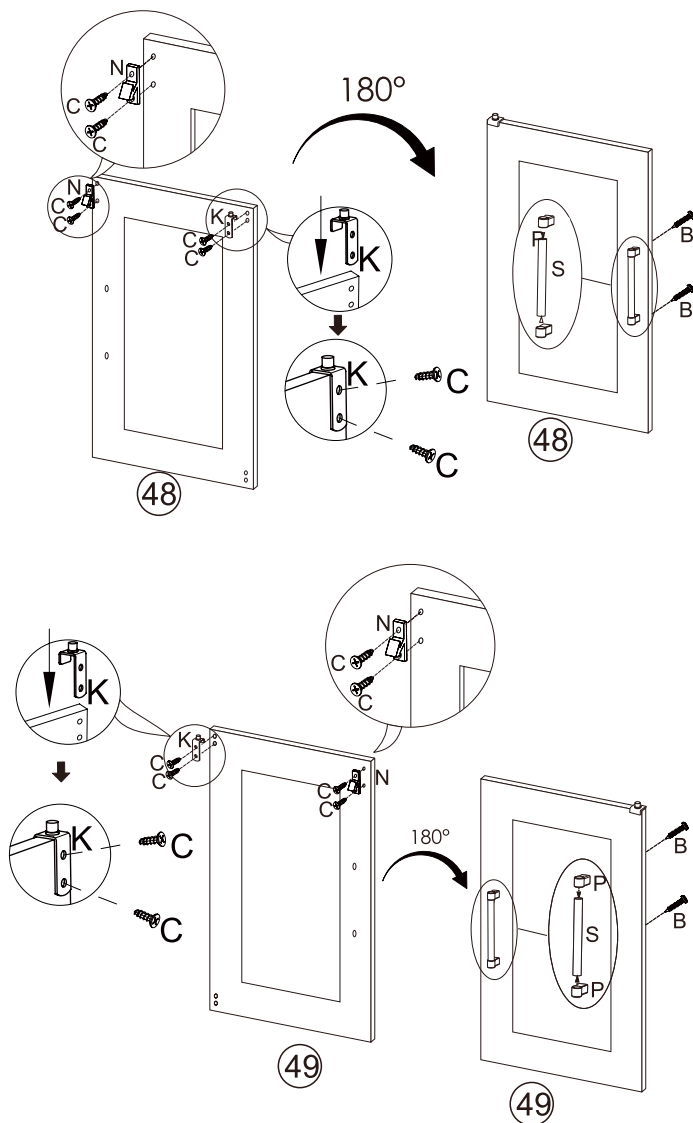


PRODUCT ASSEMBLY

44

Insert the hinge peg on the **part 48 island left door** into the opening on the **part 47 island top**. Insert one **part K hinge peg** into the opening on the **part 39 island base**, and secure to the **part 48 island left door** with two **part C screws**. Repeat the steps for the **part 49 island right door**.

Attach two **part 43 island shelves** into the island.

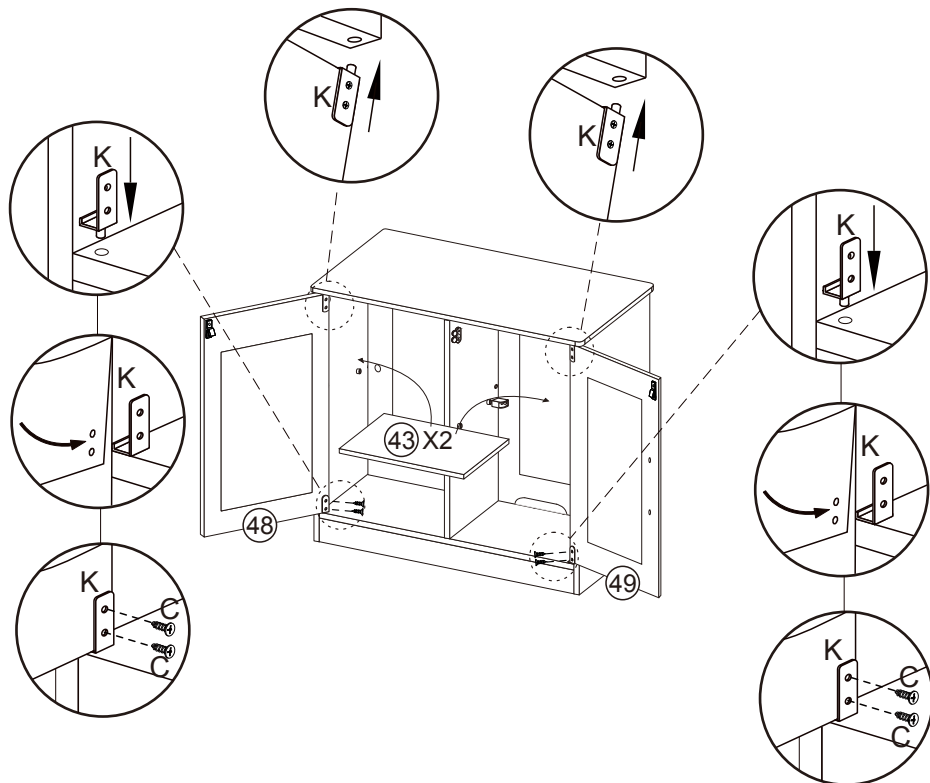



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.