




BEST CHOICE  
PRODUCTS

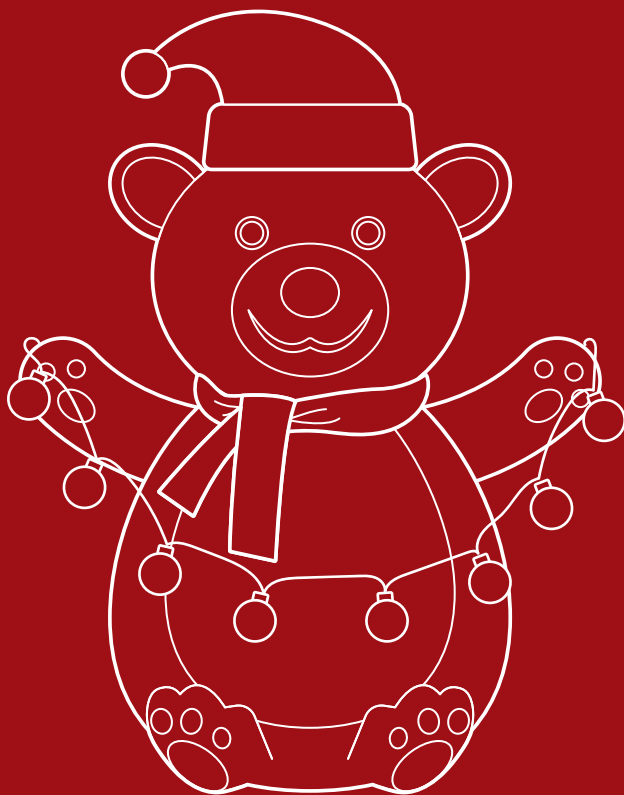

# INSTRUCTION MANUAL

---

3ft Lighted Pop Up  
Christmas Bear

## ! NOTICE

Please retain these instructions for future reference.

- This product is intended for outdoor use and should be assembled outdoors only.
- This item is not intended for permanent installation or use.
- Unplug item when not in use or if left unattended.
- Ensure that your voltage is consistent with specifications.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.



1 PERSON  
ASSEMBLY



UP TO 25 MIN.  
ASSEMBLY

## ! WARNING

- Do not plug into a wall outlet until item is fully assembled and lights are properly connected.
- Do not use in extreme weather conditions.
- Keep item away from all heat sources (fireplace, stove, heater, etc.).
- Please use the provided stakes to properly secure the figures.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.

## HARDWARE

1

STAKE



4 PCS

2

LIGHT HOOK



2 PCS

## PARTS

**A**

BEAR BODY



1 PC

**B**


TOP POLE



1 PC

**C**


BOTTOM INNER POLE

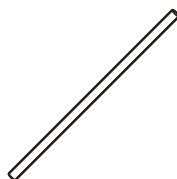

1 PC

**D**

 ARMS



1 SET

**E**


SCARF



1 SET

**F**


STRING LIGHTS

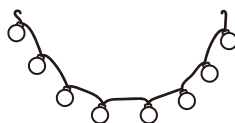

1 PC

**G**

POWER ADAPTER

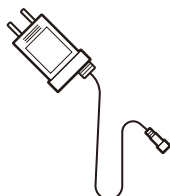


1 SET

## PRODUCT ASSEMBLY

1

Locate the **part A bear body** and turn it upside down with the bear's head on the ground.



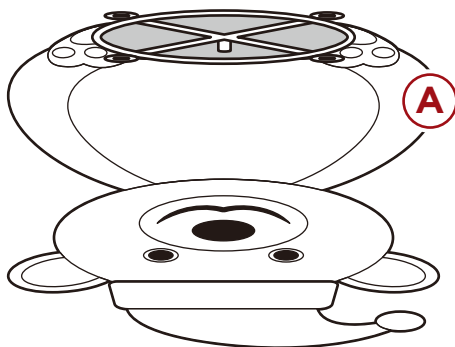


2

Attach **part B top pole** to **part C bottom pole**.

Insert the connected **part B** and **C** through the bottom opening of the **part A bear body**.

Insert the **part B top** of the pole into the opening in the bear's hat, then thread the opposite end of the **part C bottom pole** through the metal insert at the bottom of the bear body.

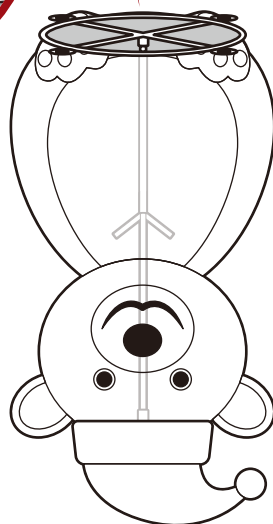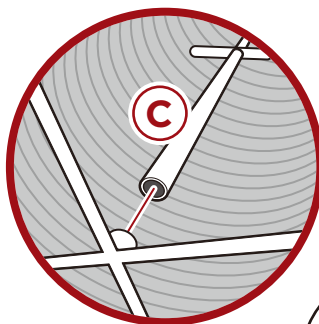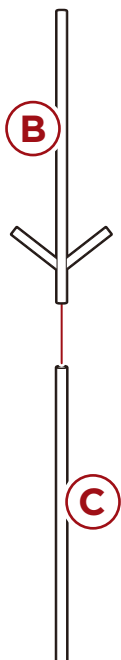


## PRODUCT ASSEMBLY

3


Locate the openings on either side of the **part A bear body** and insert the **part D arms**.  
Connect the wings to the branches of the **part B top pole**.

**NOTE:** If the light plugs on the wings are not connected to the body, connect them before proceeding.

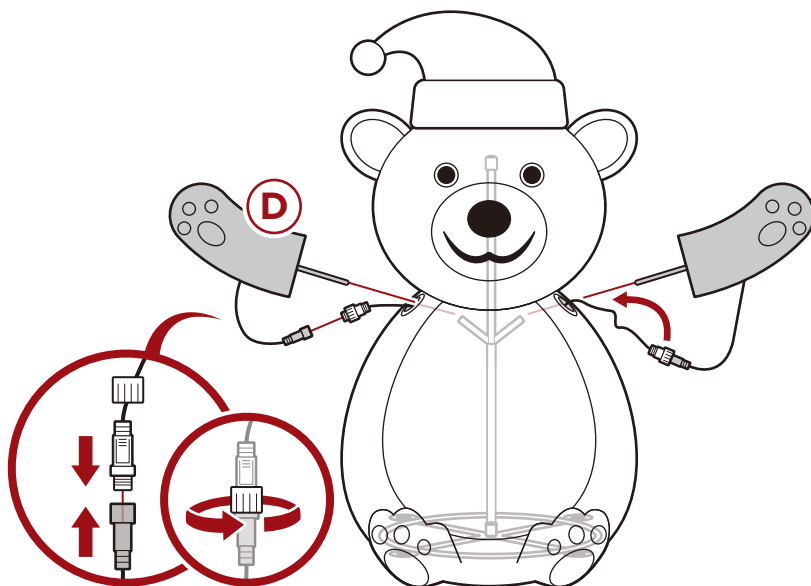

4

Wrap the **part E scarf** around the bear's neck.

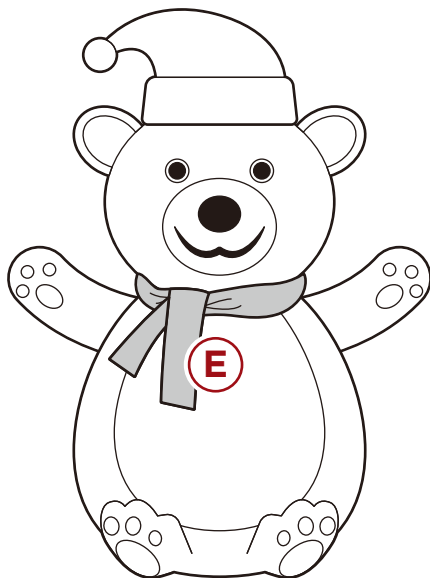


## PRODUCT ASSEMBLY

4

Locate the white plug on the **part A large bear body** and connect it to the green plug on the **part F string lights**.


Attach the **part 2 light hooks** to the **part F string lights** and drape the lights over the bear as desired.

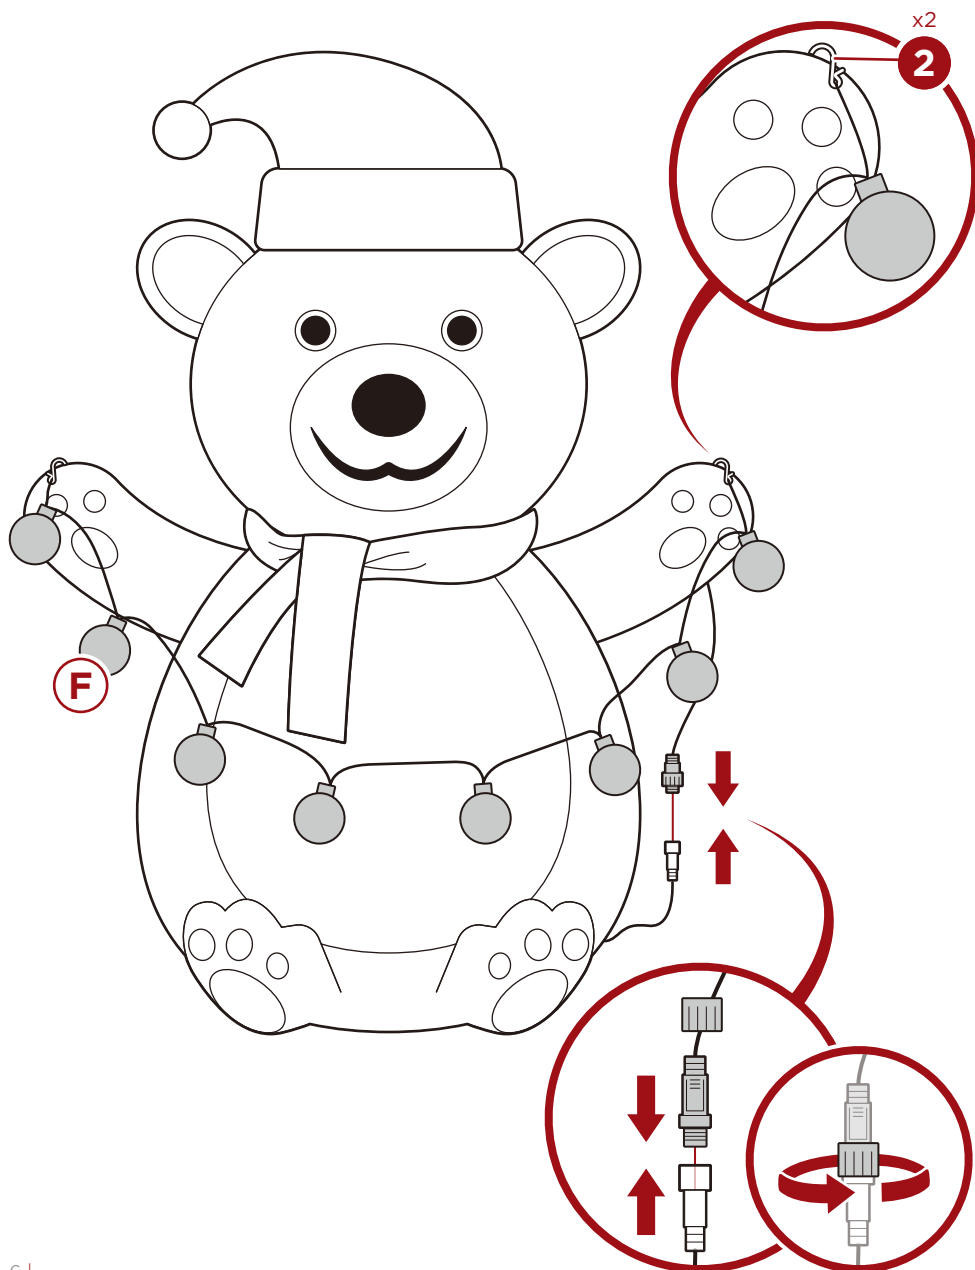

## PRODUCT ASSEMBLY

5


Locate the white plug on the **part A bear body** and connect them to the white plugs on the **part G power adapter**.

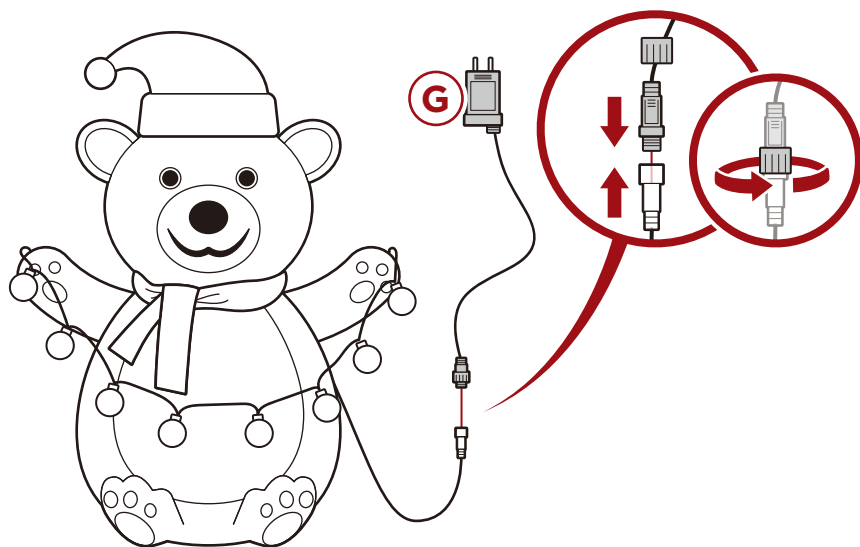

6

Secure the bear figure to the ground with four **part 1 stakes**.

Plug the **part G power adapter** into a wall outlet to turn on the lights.

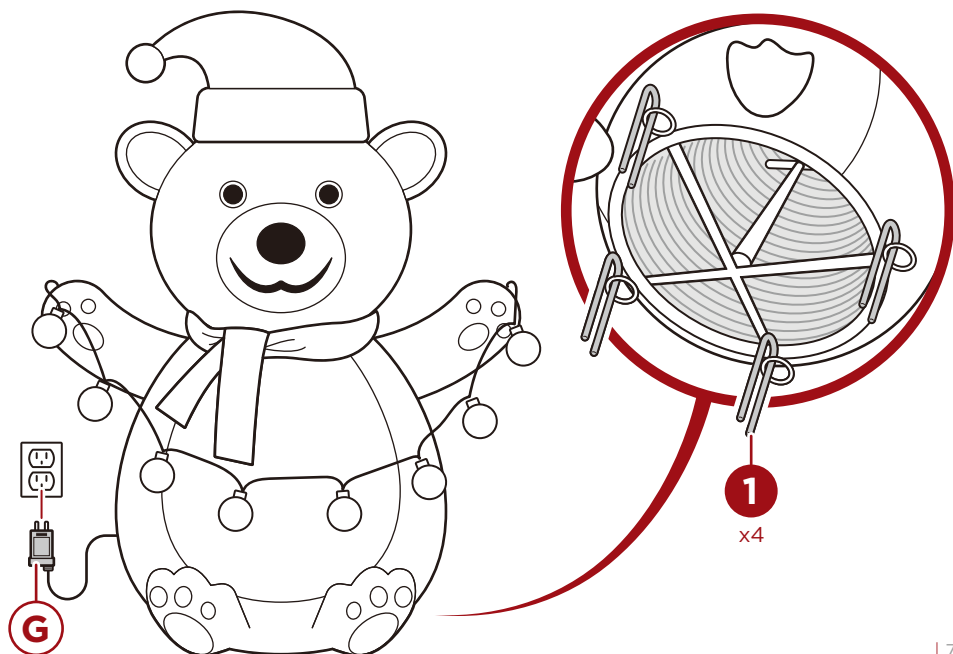



# HELP CENTER



Question about your product? We're here to help. Visit us at:

[help.bestchoiceproducts.com](http://help.bestchoiceproducts.com)



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

## PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660



## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.