

How to get the best out of your

SLEEK CURVED SILICONE RABBIT

TOY CARE INSTRUCTIONS

- In the interest of hygiene once the inner packaging has been removed the item is non-returnable. Statutory rights are unaffected.
- Clean your toy before and after each use with Ann Summers Cleansing products. If this is not available wash the product with clean warm water and soap. Pat dry with a lint free towel.
- Always check if your product is waterproof. This will be clearly marked on the outer box.
- Waterproof toys are intended to be used in water but only when fully assembled in accordance with instructions.
- Do not use alcohol-based products as this may damage the surface of your product.
- Always check the compatibility of your lube with your product.
- Do not use silicone-based lubrication with silicone products.
- Store your toy separately in its own box or in a protective case or sleeve if provided with the toy, as contact with plastic bags or other toys may cause damage to its surface. Different materials have different chemical properties and can react against each other and also damage your toy.
- Keep away from sources of extreme temperature such as direct sunlight or exposure to cold temperatures. This will prevent any adverse effects to the surface of your toy.
- Some toys are electrical and motors may become warm during use. If you feel your toy is getting unduly warm, switch off and allow it to cool down.
- Always allow your toy to cool down before storing in a safe place.
- Store your toy in a clean dry environment as moisture can damage the batteries and the motor.
- Take care when using oils and lubricants and that they do not enter the battery compartment, as they can react with the batteries.

TAKE CARE WHEN USING YOUR TOY FOR THE FIRST TIME, AS VIBRATION CAN BE INTENSE.

WE RECOMMEND LIBERAL USE OF ANN SUMMERS LUBRICANTS.

CHARGING INSTRUCTIONS

- This toy has been supplied partially charged. Before using your toy for the first time, or if you have not used it for a long time, you must fully charge the battery.
- Connect the cable adaptor into the socket on your toy (as shown in diagram) and fix the USB plug into a suitable USB port – we advise the use of a computer port. Ensure the computer is on for the duration of charging.
- Should your toy have an LED it will indicate when charging is taking place.
- Remove toy from the power source once charging is complete.
- Do not use your toy with cable attached or during charging.
- Only use the USB cable supplied with the product for charging.
- Unplug the charging cable once your toy is charged. Do not leave the cable plugged in without the toy.

IMPORTANT INFORMATION


- If the charging cable is damaged – DO NOT USE.
- The power supply and vibrator should be regularly examined for damage. In the event of damage – do not use the toy.
- Always store your charging cable in a dry place.
- Always charge in a dry place.
- Always disconnect the charging cable before cleaning.

This toy contains a lithium battery pack.

Any leakage of ingredients contained within the battery, or, combustion or burning of the lithium battery, can cause personal injury as well as damage to your toy. If battery leakage occurs, stop using it immediately and avoid contact with skin. If skin contact occurs, immediately wash the area thoroughly with warm soapy water. If liquid leakage from the battery comes into contact with the eyes or sensitive membranes, immediately flush the eye thoroughly with water and see a doctor.

WARNING

- This product is not designed to be fully inserted.
- To avoid injury or aggravation of pre-existing conditions, this device should not be used on swollen or inflamed areas or lacerated skin.
- No medical claims are warranted or implied by use of this product.
- If you have a pacemaker or other medical device, consult your doctor.
- If you are unsure or pregnant, consult a doctor before use.
- If you experience pain or discomfort, then discontinue use immediately.
- Do not use on unexplained calf pain.

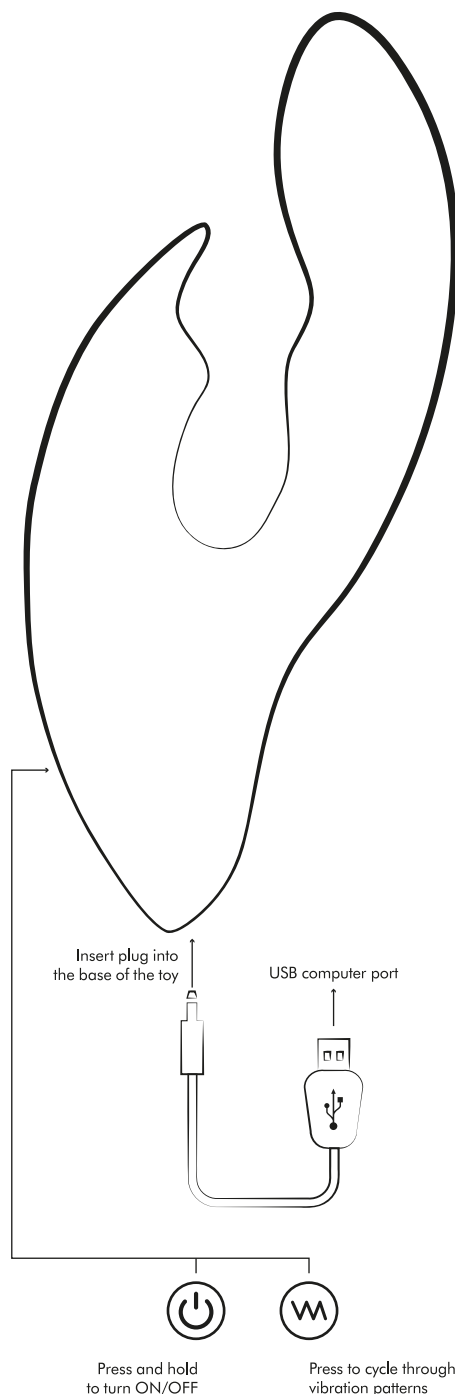

Please connect recharging cable as shown. A flashing light on the toy will show charging is taking place, and a steady glow when fully charged.

And finally ...

If you have any questions about your new sex toy, please contact your nearest Ann Summers store or visit Customer Help Online:
www.annsummers.com/customer-help.html

By following these simple guidelines we are sure your new sex toy will give you great pleasure ... many, many, many times.

PLEASE RETAIN ALL INFORMATION RELATING TO THIS PRODUCT FOR FUTURE REFERENCE.

THIS IS NOT A CHILDRENS TOY – ADULT USE ONLY.

Not for use by persons under the age of 18.

WEEE

Electrical and electronic equipment (EEE) contains materials, components and substances that may be hazardous and present a risk to human health and the environment when WEEE is not handled correctly. Should the time come for you to dispose of this product, please ensure that you do so in accordance with the European Waste of Electrical and Electronic Equipment (WEEE) Directive and compliance with local laws relating to this directive. Alternatively bring your old toy back into store and we will dispose of it for you.

For more information, please visit: www.annsummers.com/recycling.html

RAMPANTRABBIT®

Sleek

CURVED SILICONE
RABBIT



Ann Summers

Made in China for
Ann Summers Ltd. CR3 OGG. UK.

Ann Summers Ireland Ltd.
40 Upper Mount Street. Dublin 2. D02PR89. Ireland.

annsummers.com



Ann Summers