

**STEP 5:** Cook the food for approx. 3–10 minutes, depending upon the type of ingredients.

**STEP 6:** Once cooking is complete, carefully open the lid and remove the food with a heat-resistant plastic or wooden spatula.

**STEP 7:** Switch off and unplug the grill from the mains power supply to turn it off. Leave the lid open and allow to cool.



**NOTE:** Always preheat the non-stick cooking plates before use. During use, the green power indicator light will cycle on and off to signal that the grill is maintaining temperature. To prolong the life of the non-stick coating, carefully apply a thin coat of cooking oil to the non-stick cooking plates, rubbing it in gently with a paper towel.



**CAUTION:** The non-stick cooking plates get very hot during use; always use heat-resistant gloves to avoid injury.



**WARNING:** Exercise caution during cooking; the grill will emit steam.

## Storage

Check that the grill is cool, clean and dry before storing in a cool, dry place.

Never store the grill whilst it is wet.

Never wrap the cord tightly around the grill; wrap it loosely to avoid causing damage.

Use the safety lock to secure both plates during storage.

## Specifications


Product code: EK6348

Input: 220–240 V~ 50–60 Hz

Output: 850 W

# User manual

Grill

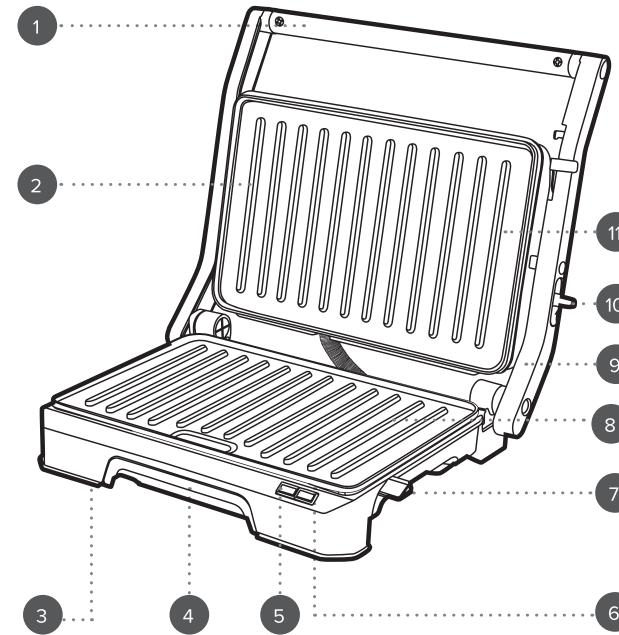

- 1. Handle
- 2. Non-stick coated cooking plates
- 3. Non-slip feet
- 4. Drip tray
- 5. Red power indicator light
- 6. Green ready indicator light

- 7. Safety locking latch
- 8. Lower housing
- 9. Health grill main unit
- 10. Hinge lock
- 11. Upper housing



### Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



To register for your extended guarantee, scan the QR code or visit [guarantee.uppc.com/salter](http://guarantee.uppc.com/salter) and register your product within 30 days of purchase. For any further queries, visit [www.salter.com](http://www.salter.com).

Manufactured by:  
Ultimate Products UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Ultimate Products Europe Ltd.,  
19 Baggott Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

©Salter trademark. All rights reserved.  
CD100424/MD000000/V1

**SALTER**  
1760

Please retain instructions for future reference.

## SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.

- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



**CAUTION: Hot surface** – do not touch hot sections or heating components of the appliance.



**WARNING:** Keep the appliance away from flammable materials.

## Care and maintenance

Before attempting any cleaning or maintenance, unplug the grill from the mains power supply and allow to cool fully.

**STEP 1:** Wipe the grill housing with a soft, damp cloth and dry thoroughly.

**STEP 2:** Remove baked-on food by applying a small amount of warm water mixed with a mild detergent to the non-stick coated cooking plates, then wipe them clean with a paper towel or nonabrasive scourer.

Never use harsh or abrasive cleaning detergents or scourers to clean the grill or its accessories, as this could damage the surface.



**NOTE:** The grill should be cleaned after each use.



**WARNING:** The drip tray will gather oil and fat, which may still be hot after use. Allow it to cool fully before carefully removing the drip tray for cleaning.

## Instructions for use

### Before first use

Before connecting to the mains power supply, clean the grill following the instructions in the section entitled '**Care and maintenance**'.



**NOTE:** When using the grill for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the grill.

### Using the grill

**STEP 1:** Prepare the ingredients that are to be grilled.

**STEP 2:** Plug in and switch on the grill at the mains power supply. The red and green indicator lights will illuminate, signalling that the grill has been switched on and is heating up.

**STEP 3:** Preheat the grill; this will take approx. 1–3 minutes.

The green indicator light will switch off once the required temperature has been reached.

**STEP 4:** Place the prepared ingredients onto the lower non-stick coated cooking plate and then close the lid.