 

 



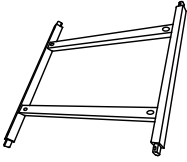











ASSEMBLY INSTRUCTIONS


COUNTER HEIGHT CHAIR BAR HEIGHT CHAIR

A Back Frame 	B Cushion Seat 	C Left Front Leg 	D Right Front Leg 
E Left Back Leg 	F Right Back Leg 	G Stretcher 	H Headless Bolt M6 x 50mm 
I JCBC Bolt M6 x 45mm 	J JCBC Bolt M6 x 70mm 	K Lock Washer M8 x 13mm 	L Flat Washer M8 x 18mm 
M Wood Screw M5 x 38mm 	N Plastic Washer 15mm x 8mmT 	O Allen Key M4 	
4 pcs	2 pcs	1 pc	

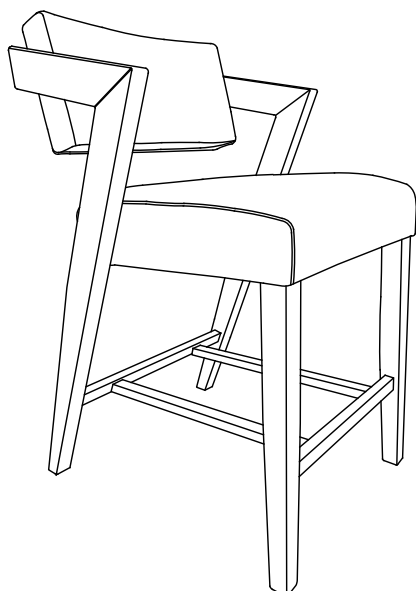


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 1** Place the Left Back (E) and Right Back Leg (F) on a protective surface, and secure Headless Bolt (H) and Plastic Washer (N) into their holes with a screwdriver (not provided).
**Fully tighten the bolts until all bolts are attached.

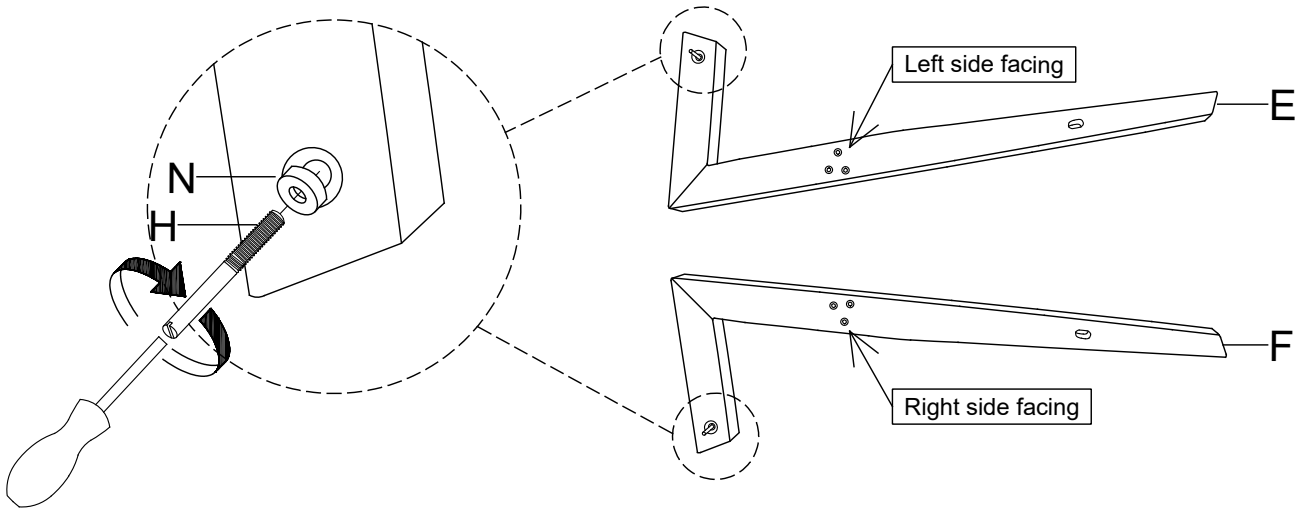


- 2** Attach the Right Back Leg (F) to the Cushion Seat (B) using JCBC Bolt (I), Lock Washer (K) and Flat Washer (L) with the Allen Key (O).
**Do not fully tighten the bolts until all bolts are attached.

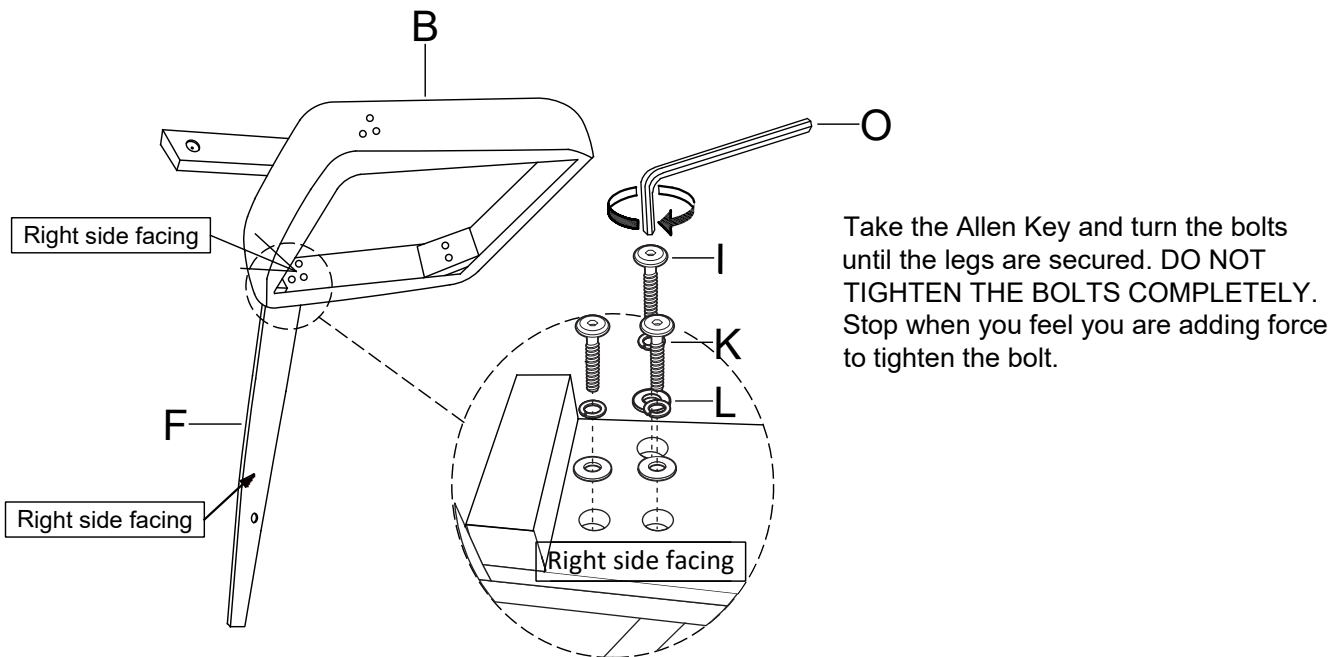


3

Attach the Left Back Leg (E) to the Cushion Seat (B) using JCBC Bolt (I), Lock Washer (K) and Flat Washer (L) with the Allen Key (O).


**Do not fully tighten the bolts until all bolts are attached.

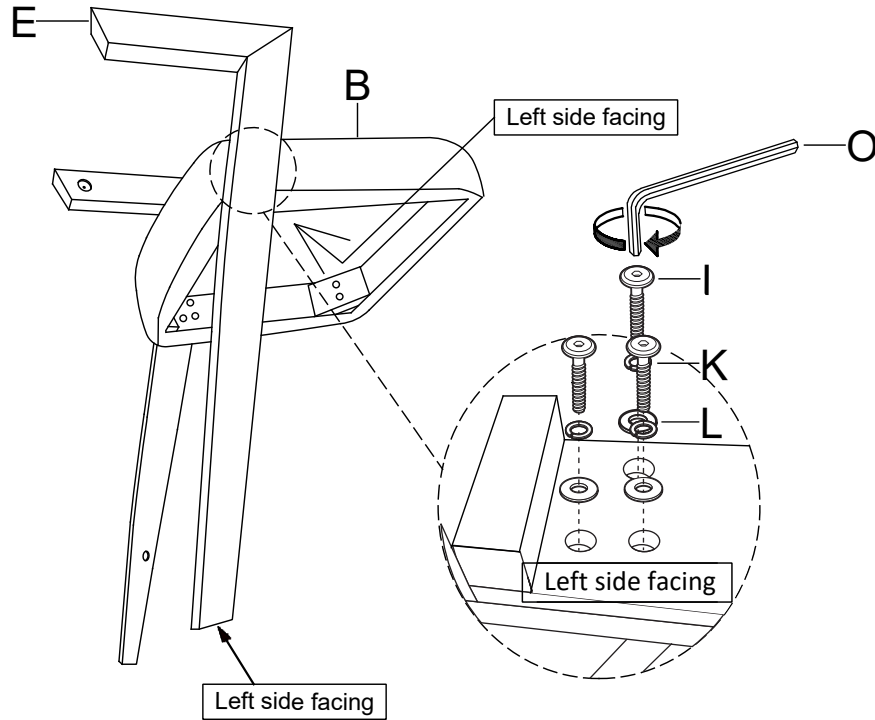**4**


Attach the Back Frame (A) between the Left & Right Back Leg (E & F).

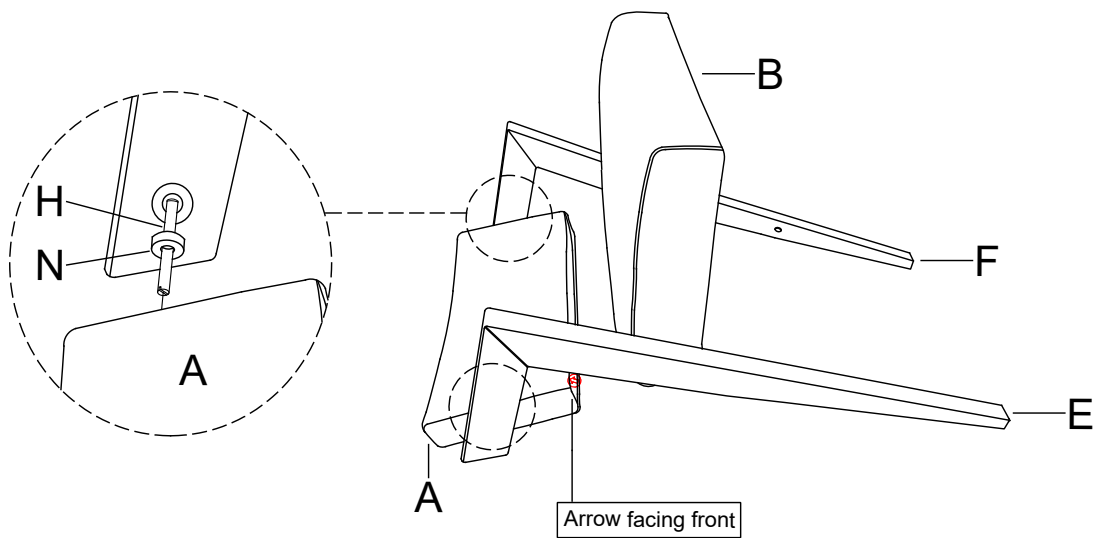

- 5** Attach the Left Front Leg (C) and Right Front Leg (D) to the Cushion Seat (B) using JCBC Bolt (J), Lock Washer (K) and Flat Washer (L) with the Allen Key (O).
 **Do not fully tighten the bolts until all bolts are attached.

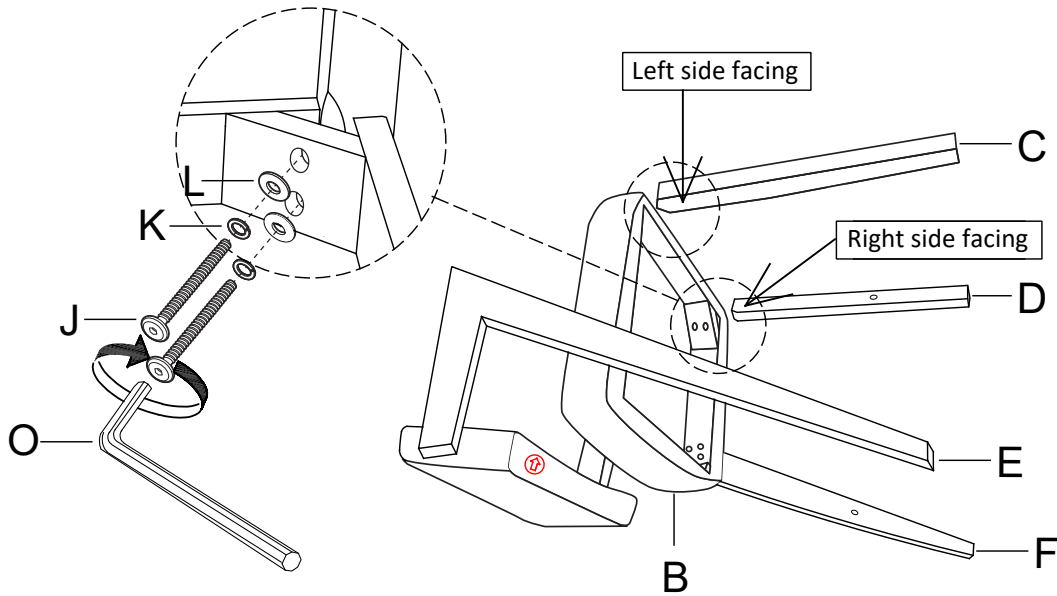

- 6** Attach the Stretcher (G) between the Left & Right Front Leg (C & D) and Left & Right Back Leg (E & F) using Wood Screw (M) with a screwdriver (not provided).
 **Fully tighten the bolts and screws in this Step.

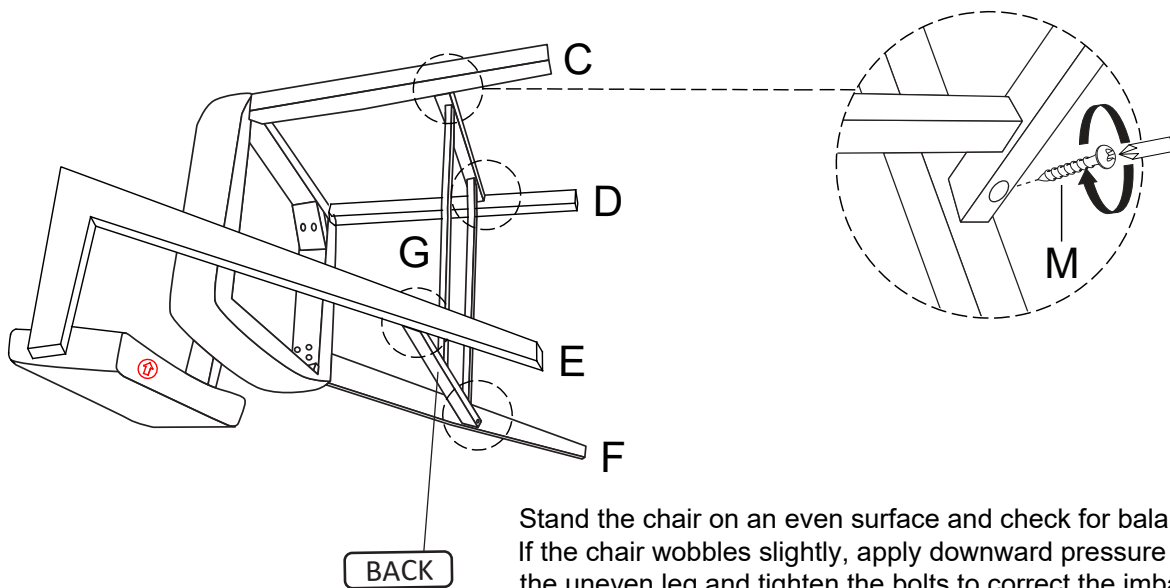

Stand the chair on an even surface and check for balance. If the chair wobbles slightly, apply downward pressure on the uneven leg and tighten the bolts to correct the imbalance. Once the chair is balanced, apply downward pressure evenly in the center of the chair and tighten all bolts, being careful not to over-tighten beyond the hole depth.

Helpful Tip: While tightening the bolts from underneath, have someone sit in the chair.

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.