

ASSEMBLY INSTRUCTIONS



MODEL W790S, 11'8" x 11'8" 7 Person Teepee Tent

SAFETY WARNING - DOs AND DO NOTs

EVERYONE WHO USES THIS TENT SHOULD READ THIS MANUAL AND BECOME FAMILIAR WITH ALL SAFETY WARNINGS AND PRECAUTIONS FOR SAFE USE, ASSEMBLY, CARE, MAINTENANCE, AND STORAGE. KEEP THIS MANUAL SO YOU CAN REFER TO IT LATER.

DANGER CARBON MONOXIDE GAS WILL KILL YOU

Stoves, heaters, grills, lantern, candles, and other fuel-burning devices that burn propane, natural gas, charcoal, kerosene, coal, or other fuels produce a toxic gas called carbon monoxide. Because carbon monoxide gas is invisible, odorless, and colorless, a dangerous level of carbon monoxide gas can accumulate in a tent which cannot be detected by sight, smell, or taste. For these reasons:

- DO NOT use matches, lighters, stoves, heaters, grills, lanterns, candles, cooking equipment, or other fuel-burning devices inside or near a tent.
- DO NOT build fires inside or near a tent.
- DO NOT leave campfires unattended.

Your failure to follow this warning will cause death, serious injury, or permanent disability to you or others.

DANGER PROTECT YOUR CHILDREN

- DO NOT leave children unattended inside a tent or in camp.
- DO NOT allow children to assemble a tent.
- DO NOT allow children to enter or exit a tent except through the door.
- DO NOT allow children to remain in a closed-up tent on hot days.

Your failure to follow this warning will cause death, serious injury, or permanent disability to your children.

WARNING FLAMMABILITY WARNING KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

This tent is made with flame resistant fabric which meets CPAI-84 specification. IT IS NOT FIREPROOF. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective. Your failure to follow this warning could cause death, serious injury, or permanent disability to you or others.

CAMPING DO'S AND DON'TS

DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Do not store tent on concrete floor.

DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

CARE

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON CONCRETE FLOOR. DO NOT SPRAY THE TENT WITH INSECTICIDE.

Your tent is water repellent, however, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

EXERCISE CARE WHEN USING ELECTRIC DEVICES IN AND NEAR TENTS.


Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

REPLACEMENT PARTS

If you have questions or need to order a part, call 1-800-325-4121 or send an e-mail to contactus@wenzelco.com. Have your model number or part number ready when you call. DO NOT ORDER BY REFERENCE KEY NUMBER.

Send your request for parts to:
Exxel Outdoors, LLC.
 6235 Lookout Road
 Boulder, CO 80301

KEY NO.	MODEL NO W790S, 11'8" x 11'8" Teepee Tent		QTY REQ
	DESCRIPTION	PART NO.	
A	Primary Pole	W790P	1
B	Secondary Pole	W790S	1
	Guy Rope	A1001	8
	Steel Stake	PIN STAKE	13

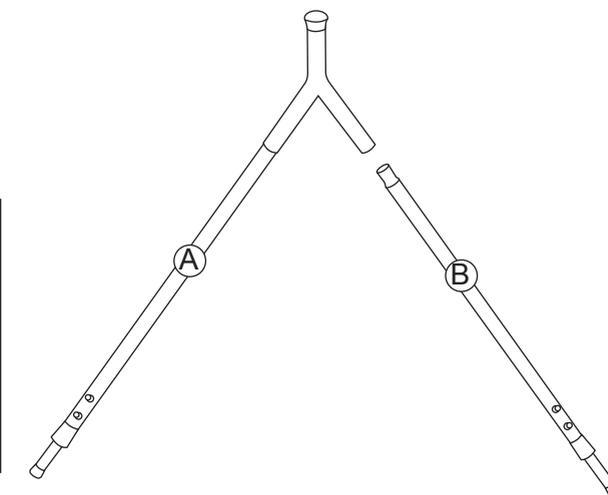

ASSEMBLY INSTRUCTIONS



OZARK TRAIL®
OUTDOOR EQUIPMENT

MODEL W790S, 11'8" x 11'8" 7 Person Teepee Tent

IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT.

NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.


TO PROLONG THE LIFE OF THE TENT FLOOR, SELECT A LEVEL, CLEAN AREA FOR THE CAMPSITE. TO PREVENT DAMAGE TO THE ZIPPER, UNZIP THE DOORS TO ALLOW AIR TO ENTER THE TENT.

STEP 1: Spread tent out flat, floor side down. Unzip door to allow air to enter the tent.



STEP 2: Stake tent to the ground by inserting metal stakes through the stake loops located at the six corners. Hammer stakes into ground at a 45° angle and pull tent floor out even and snug. Continue to stake down all intermediate stake loops.



STEP 3: Extend each of the steel poles by pulling out each wire-corded section and placing the jointed ends into the connected pole sections. The Primary pole will have a "Y" at one end (A) and the secondary pole (B) is straight.

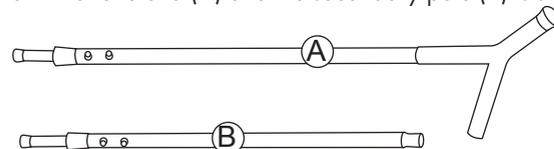

 NOTE: Please note, there is a PVC cap provided with this frame set for "Y" joint as reinforcement. Please make sure PVC cap properly attach with the top "Y" joint if you found it is loose in the pole bag.

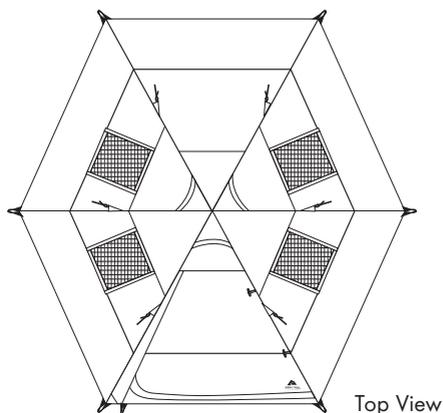


Top View

STEP 4: One adult should enter the tent and lift the roof and tent up off the ground. Another adult should enter with the two poles. The pole with the "Y" (A) should be placed into the center of the roof with the "Y" at the top and the extendable end on the tent floor at the side corner between the 2 windows.


STEP 5: The secondary pole (B) should be inserted into the bottom of the "Y" with the extendable end on the tent floor at the opposite side of the tent from the primary pole.

STEP 6: Extend the poles at the bottom until the spring pin snaps into the first hole. Adjust tension to the second hole as needed to keep tension on the tent.

 
STEP 7: Secure the tent to the poles by wrapping the hook and loop fasteners around both poles.




Tent should appear as shown.

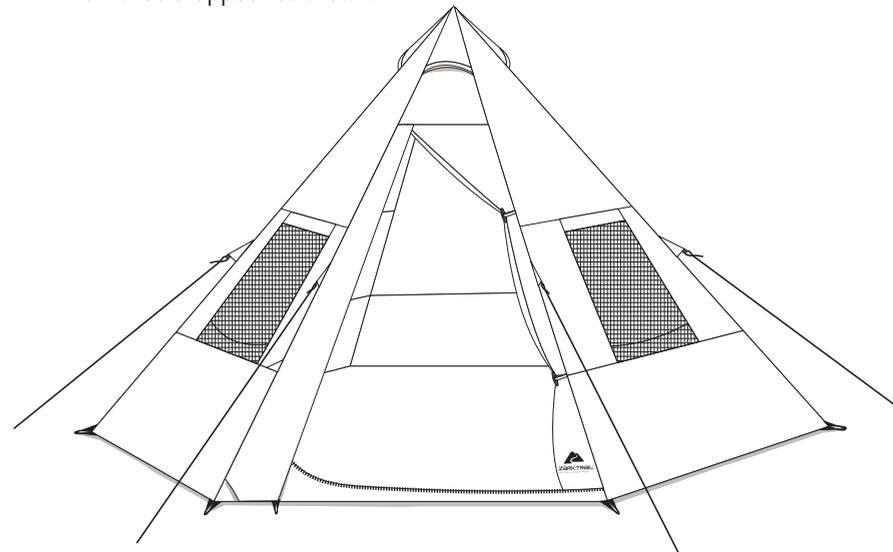

STEP 8: Six guy ropes have been provided for this tent. Extend each guy rope and make a loop at the end by using the slider (as shown). Place the loop over a tent stake and hammer into the ground at a 45° angle. Adjust the slider to make the guy rope snug. Repeat with the remaining guy ropes.

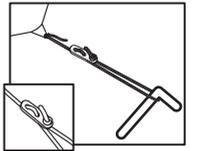

The tent should appear as shown.

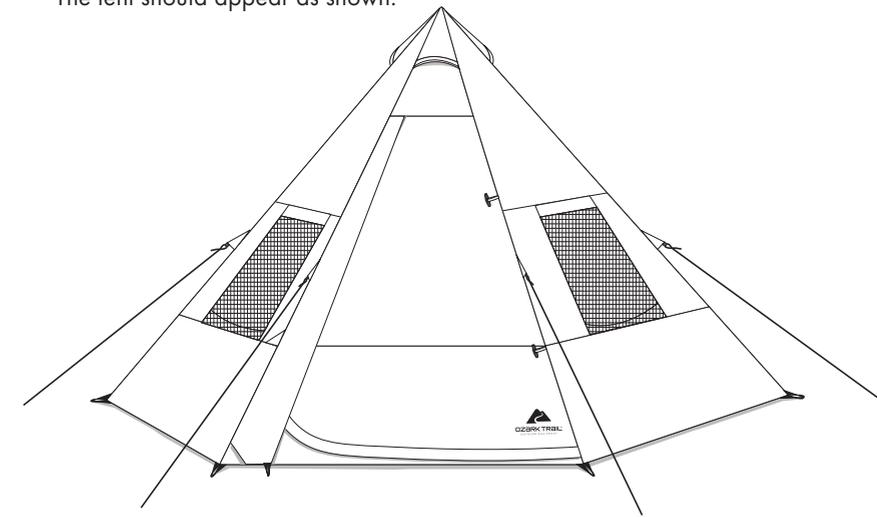

NOTE: To take down tent, follow steps above in the reverse order. Be sure to leave doors unzipped. **MAKE SURE TENT IS CLEAN AND DRY BEFORE STORING.** Place stakes into stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts toward the center to distribute the bulk. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the doors. Roll tent toward doors to allow air to escape. Once rolled, secure with strings or rope, and place into carry bag.