


versa

Mini-319 1- Zone Door/Window Transmitter

Installation & Setup Guide

FEATURES

- Single zone Door/Window Transmitter
- Built-in unique serial number which must be enrolled into the control panel
- Refer to the control panel's installation instructions for programming details.

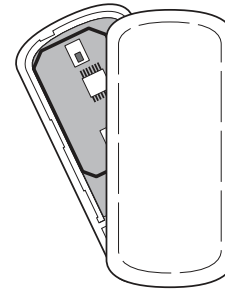

LED Indicators


LED	Meaning
Blue	Lights when the magnet is within proper range of the Mini-319 (1 inch max). LED is active for 15 minutes after battery is first installed or when the cover is removed.
Green	Flashes when the Mini-319 transmits. LED is active for 15 minutes after battery is first installed or when cover is removed.
Red	Upon low battery condition, flashes once about every five seconds for two minutes after a transmission.

MOUNTING

- Choose a mounting location where the device is stationary and the magnet is mounted to the moving part of the door or window.
- Verify adequate signal strength by using the control panel's Go/No Go test (see control's instructions) before mounting permanently.
- Avoid mounting in areas where it will be exposed to moisture or where the operating temperature of 32 to 120°F (0 to 50°C) will be exceeded.
- Keep the Mini-319 and magnet away from metal or metallic surfaces such as foil wallpaper.
- Avoid mounting the Mini-319 in areas with a large quantity of metal or electrical wiring, such as a furnace or utility room.


1. Install the Battery

 - Slide open the cover.
 - Install the battery with "+" side up.
 - Replace the cover.
- The blue and green LEDs will be active for 15 minutes. To reactivate, remove the cover.




2. Mount the Mini-319 & Magnet

- Mount the Mini-319 on the frame of the protected door or window using double-faced tape (supplied).
- Mount the magnet (supplied) on the protected door or opening portion of the protected window. Check that the blue LED lights when the door or window is closed.

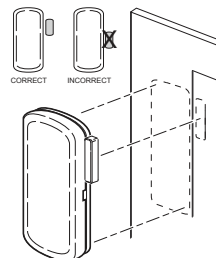

PROGRAMMING

- 1. Place your panel in “autolearn” mode.
- 2. Open / Close magnet
- 3. Customize the name and settings then touch “ADD”

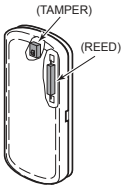

BATTERY REPLACEMENT

- 1. Vertically slide open the cover and remove the old battery.
- 2. Install a fresh battery with + side UP. See Specifications section for compatible batteries.
- 3. Replace the cover.

BATTERY CAUTION: Risk of fire, explosion and burns. Do not recharge, disassemble, heat above 212°F (100°C) , or incinerate. Dispose of used batteries properly. Keep away from children.

Attention de batterie: Risque d'incendie, d'explosion et de brûlures. Ne rechargez pas, démontez, chauffez au-dessus de 212°F (100°C), ou incinérer. Débarrassez-vous des batteries utilisées de façon appropriée. Gardez à partir des enfants.



SPECIFICATIONS

Dimensions:	Transmitter: 1" (25.4mm) x 2.2" (55.9mm) x 0.25" (6.4mm) Magnet: 0.25" (6.35mm) x 0.25" (6.35mm) x 1" (25.4mm)
Operating Conditions:	32° - 122°F / 0° - 50°C Relative Humidity 95%, (non-condensing); UL Tested at 85%
Magnet Gap:	Wood / Metal Surfaces Maximum: 1", 1/4" (25.4mm, 6.35mm)
Battery:	3VDC, 225mAh, Lithium Coin Cell; Panasonic CR2032 Use of another battery may present a risk of fire or explosion.

FEDERAL COMMUNICATIONS COMMISSION STATEMENTS

The user shall not make any changes or modifications to the equipment unless authorized by the Installation Instructions or User Manual. Unauthorized changes or modifications could void the user's authority to operate the equipment.

FCC/IC STATEMENT

This device complies with Part 15 of the FCC Rules, and Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause harmful interference (2) This device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la partie 15 des règles de la FCC et exempt de licence RSS d'Industrie Canada. Son fonctionnement est soumis aux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences nuisibles. (2) Cet appareil doit accepter toute interférence reçue y compris les interférences causant une réception indésirable.

REFER TO THE INSTALLATION INSTRUCTIONS FOR THE CONTROL WITH WHICH THIS DEVICE IS USED FOR DETAILS REGARDING LIMITATIONS OF THE ENTIRE ALARM SYSTEM.

The product should not be disposed of with other household waste. Check for the nearest authorized collection centers or authorized recyclers. The correct disposal of end-of-life equipment will help prevent potential negative consequences for the environment and human health.

RES BURG

versa

103 - 19292 60 Ave
Surrey, BC V3S3M2
© 2024 Versa Wireless Inc.
www.versawireless.com