 


INSTALLATION INSTRUCTIONS

Important: Read all instructions in order to ensure safety and proper installation.

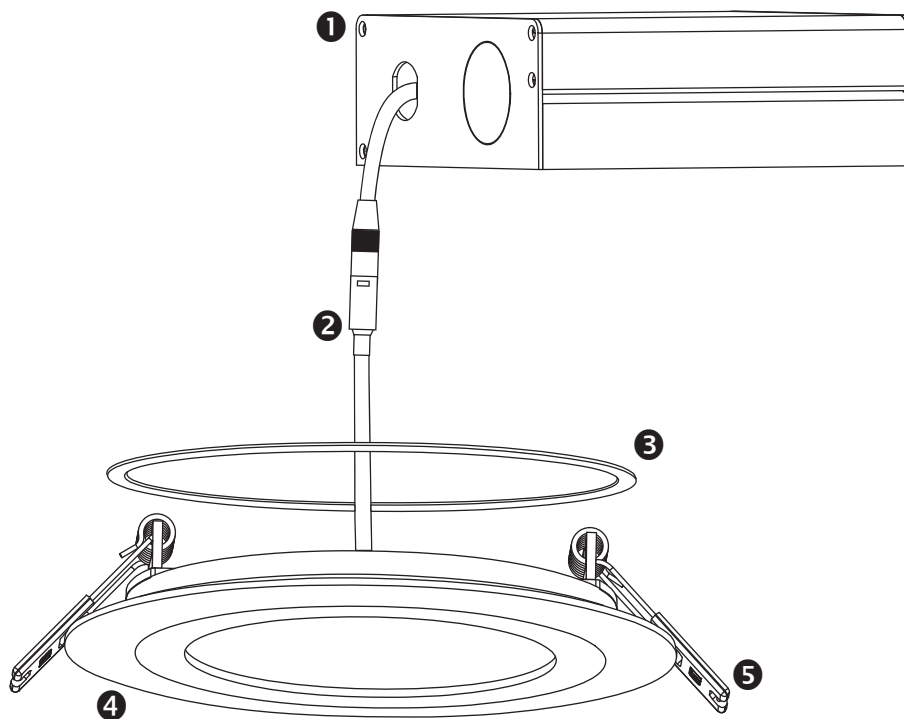

PARTS LIST

- ❶ Junction box
- ❷ Connector
- ❸ Foam Gasket (for airtight installation)
- ❹ Light panel
- ❺ Spring clips

VERIFIED LIST OF TESTED DIMMERS

Brand	Model No.
LUTRON	DVCL-153P-AL
	DVCL-253P-WH
	AYCL-253P-LA
	PD-6WCL-WH-R
Leviton	IPL06-10Z
	IPE04-1LZ

MAINTENANCE

- Do not modify this fixture. Any modifications may render the product unsafe and void warranty.
- This product is suitable for Damp locations.

IMPORTANT!

If the control is not paired properly to LED fixtures, irreparable damage may occur.

FCC INFORMATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

INSTALLATION INSTRUCTIONS

WARNING

Risk of electric shock. Turn OFF power before installation or removal.

1. Turn power OFF from the electrical panel prior to installation.
2. Determine the location for installation and cut ceiling hole in accordance with cut-hole dimensions. Refer to Hole Diameter table for appropriate sizes. (Fig. 1)
3. Open the junction box cover and remove the appropriate knockout(s) on the side panel. (Fig. 2)
4. Insert the electrical supply cable through the knockout and secure with a cable connector (sold separately).
5. Using quick-connect push-in terminals, connect the green ground wire to the green wire terminal; black wire to black wire terminal; white wire to white wire terminal. (Fig. 2)
6. Place all wiring and connections back in to the box and close the cover. Connect the driver to the light panel.
7. Insert junction box through the mounting hole. (Fig. 3)
8. Push spring-loaded clips on the fixture upwards and insert fixture base in to the mounting hole. Release the clips and fixture will be pulled flush to the ceiling. (Fig. 4)
9. For airtight requirements ensure foam gasket remains between fixture and ceiling (do not remove).

Fig. 1

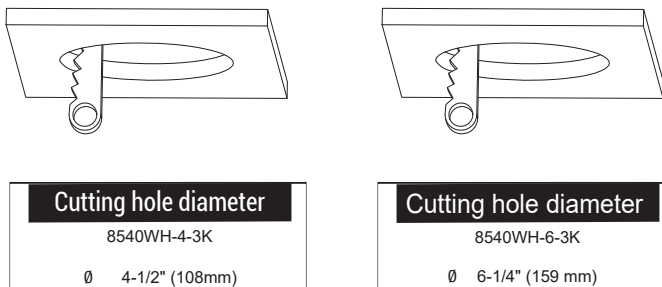 


Fig. 2

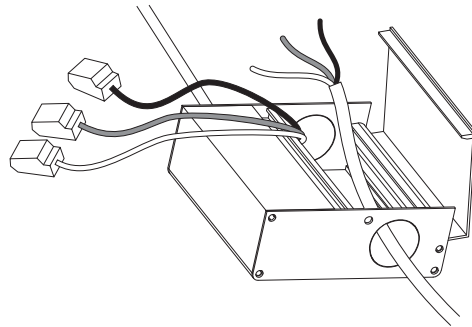 


Fig. 3

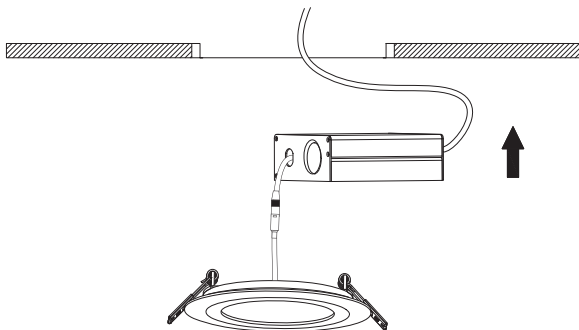 


Fig. 4

