


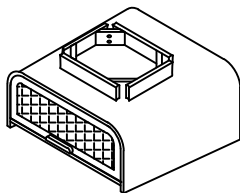


 
 
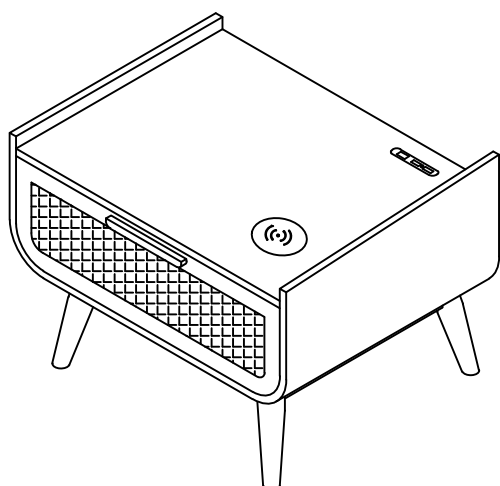


ASSEMBLY INSTRUCTION

END TABLE

A Table Body 	B Leg 	C Bolt $\varnothing 1/4"$ x60mm 	D Lock Washer $\varnothing 1/4"$ x $\varnothing 10$ x1.5mm 
E Flat Washer $\varnothing 1/4"$ x $\varnothing 16$ x1.5mm 	F Levelers $\varnothing 1/4"$ x $\varnothing 19$ x15mm 	G Allen Key M4 	H Adapter 
1pc	4pcs	8pcs	8pcs
8pcs	4pcs	1pc	1pc



Wireless charging operating manual

Charging your Device with the Wireless Charger

1. Your Device must have the Wireless Charging capability.
2. Turn the power switch of your Smart Table from "0" (Off) to "1" (On).
3. Place your Device on the round Fast Charge Panel.
4. You may have to remove the cover on your device.
5. Your Device will instantly start charging and the outer rim of the Fast Charge Panel Lights up GREEN. (Charging mode).


Charging your Device through the USB port

1. Turn the power switch of your Smart Table from "0" (Off) to "1" (On).
2. Connect your device to the Smart Table via the USB port.

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1


Attach the Leg (B) to Table Body (A) using Bolt (C), Lock Washer (D) and Flat Washer (E) by Allen Key (G).

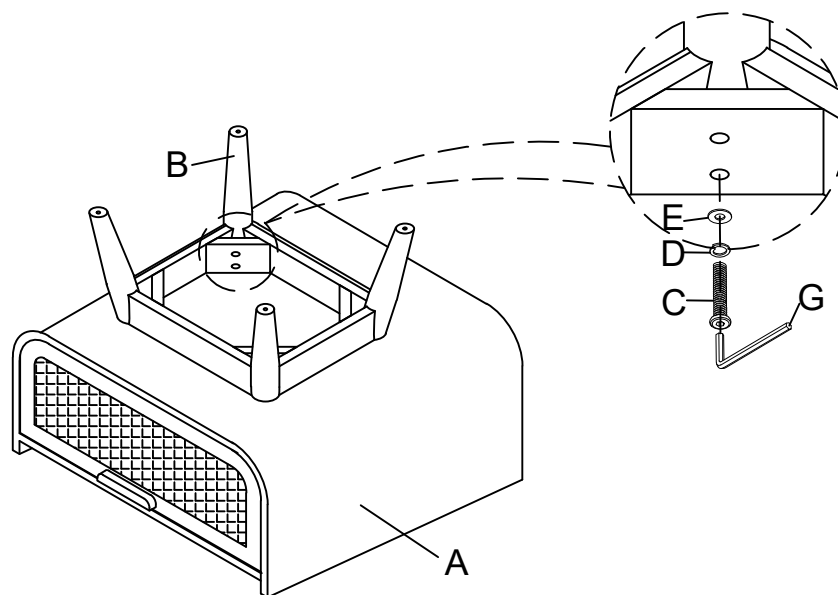

2

Assemble Levelers (F) to Leg (B). Assemble Adapter (H) to Table Body (A).

Remark: If there is any gap between the legs and ground, please adjust the levelers until it reaches the ground.

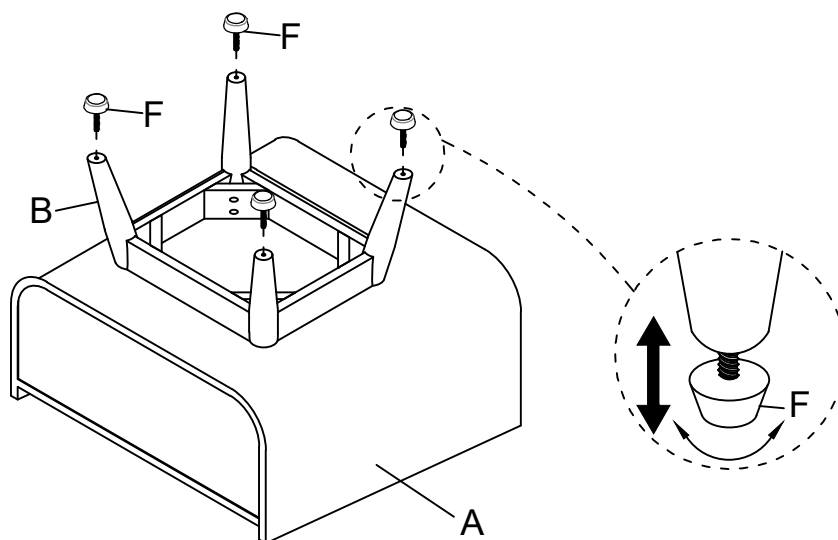


Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION

COCKTAIL TABLE WITH WICKER DRAWER FRONT

A Table Body

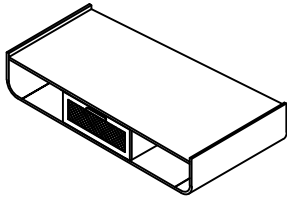

1pc

B Leg



 
4pcs

C Bolt
Ø1/4"x60mm



8pcs

D Flat Washer
Ø1/4"x19mm



8pcs

E Lock Washer
Ø1/4"x10mm




8pcs

F Allen Key




1pc

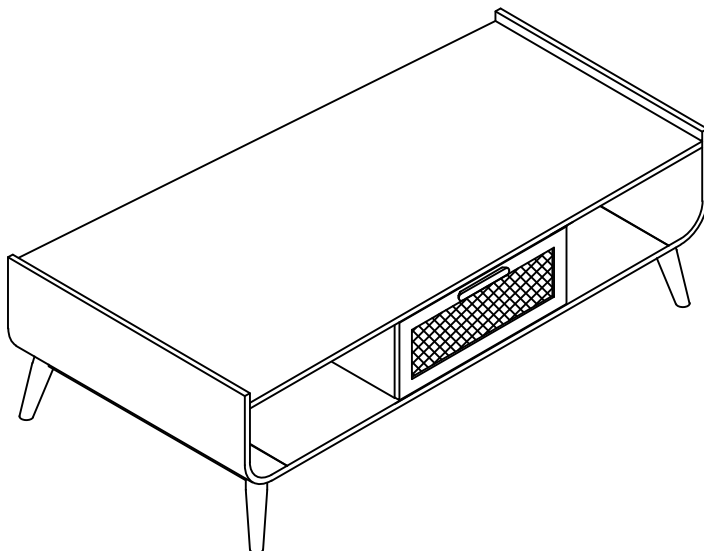

This page list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

-
- 1** Assemble Leg (B) to Table Body (A), using Bolt (C), Lock Washer (E) & Flat Washer (D) by Allen Key (F) as below shown.

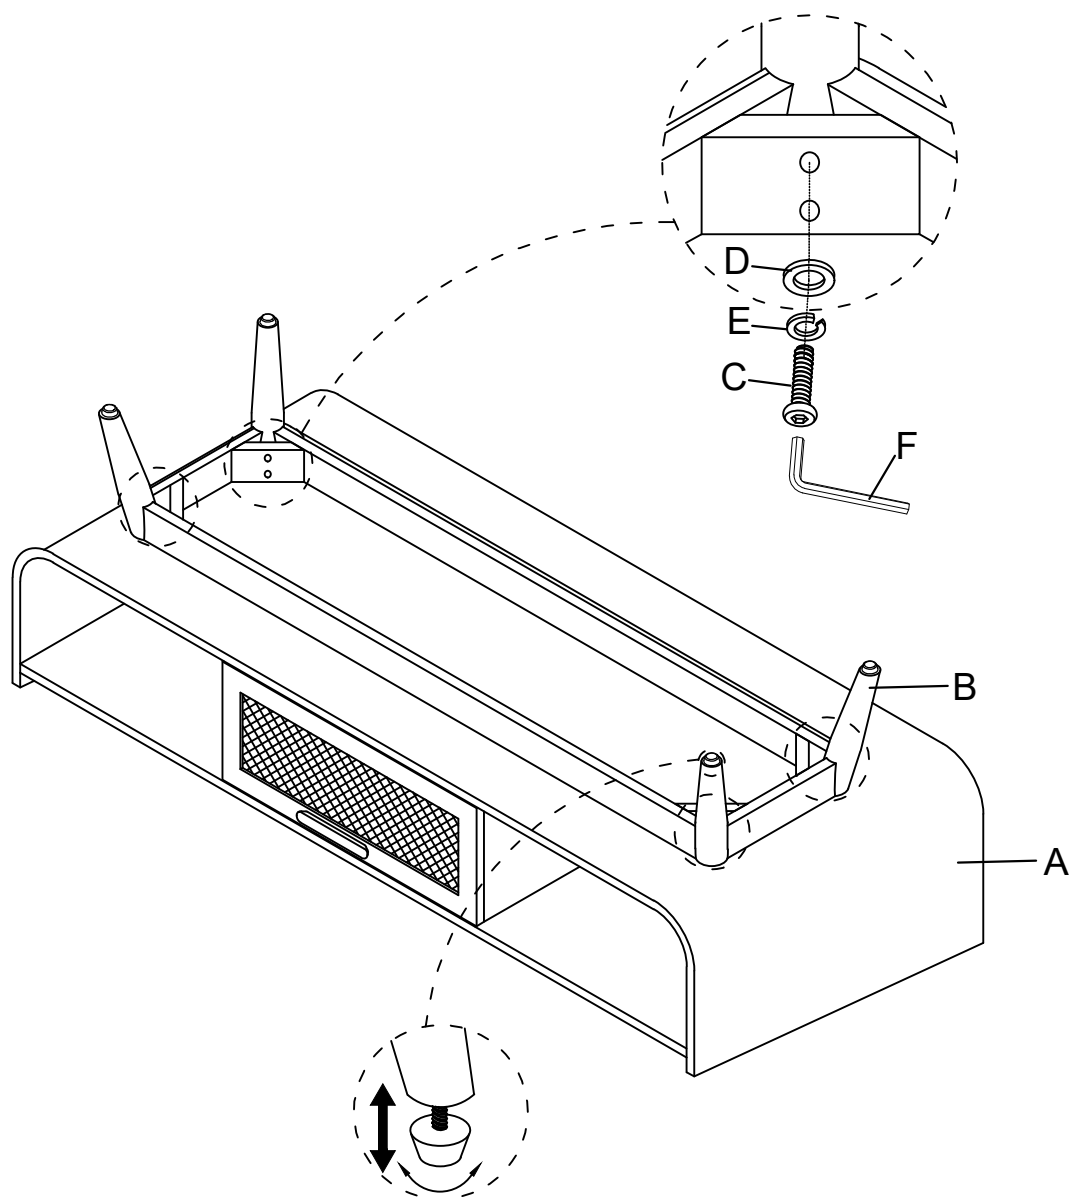

Remark: If there is any gap between the legs and ground, please adjust the leveler until it reaches the ground.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.