 


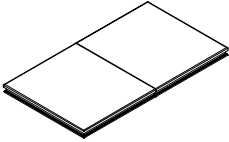 


 


 
 



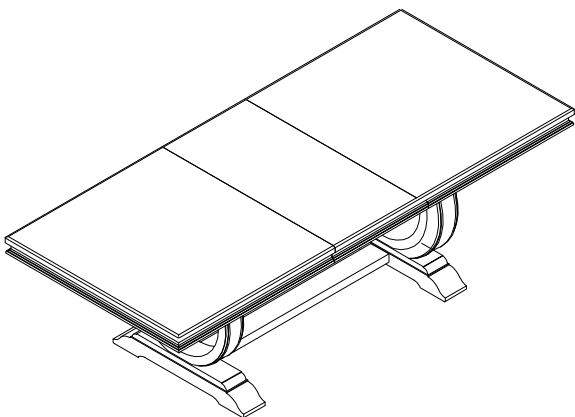 


ASSEMBLY INSTRUCTION

DINING TABLE WITH LEAF


A Table Top 1 pc 	B Table Leaf 1 pc 	C Post 2 pcs 	D Mounting Plate 2 pcs 
E Center Stretcher 2 pcs 	F Center Cross Bar 1 pc 	G Bolt 5/16"*2" 6 pcs 	H Lock Washer 5/16" 6 pcs 
I Flat Washer 5/16" 6 pcs 	J Bolt 1/4"*2" 8 pcs 	K Bolt 1/4"*1-1/2" 4 pcs 	L Lock Washer 1/4" 12 pcs 
M Flat Washer 1/4" 12 pcs 	N Allen Wrench 1/6" 1 pc 		




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

 Tighten the Post(C) and Mounting Plate(D) by Bolts(G), Lock Washers(H) and Flat Washers(I) with Allen Wrench(N).

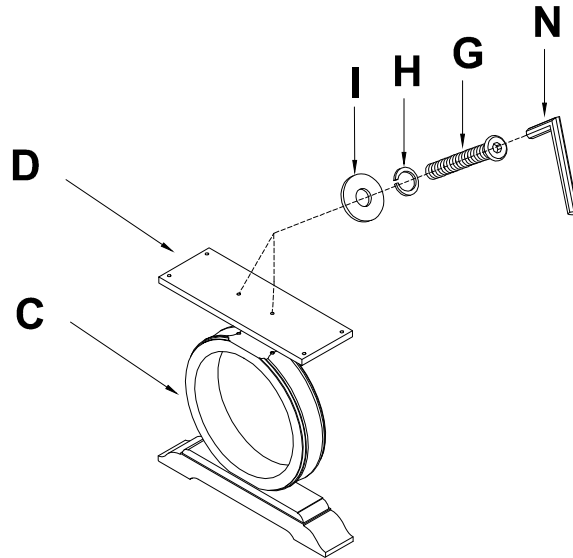
**2**

 Place the Table Top(A) upside down smooth carpet surface. Tighten the Mounting Plate(D) and Table Top(A) by Bolts(J), Lock Washers(L) and Flat Washers(M) with Allen Wrench(N). Tighten the Center Stretcher(E) and Table Top(A) by Bolts(K), Lock Washers(L) and Flat Washers(M) with Allen Wrench(N). Tighten the Post(C) and Center Cross Bar(F) by Bolts(G), Lock Washers(H) and Flat Washers(I) with Allen Wrench(N).

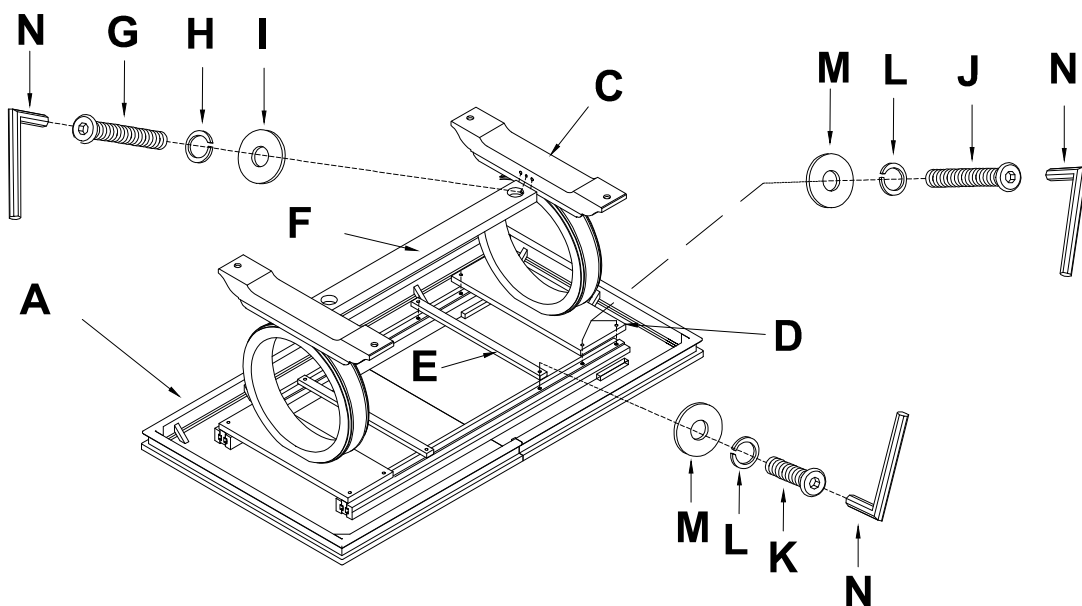


3

 Open the Table Top(A), put the Table Leaf(B) on the slides.

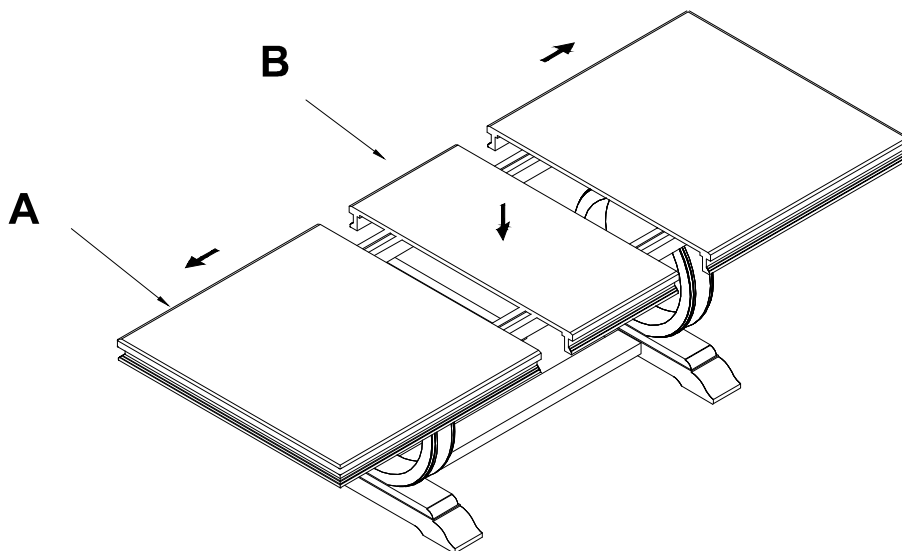

4

 
Close the Table Top(A), put the Table Leaf(B) on the slides.

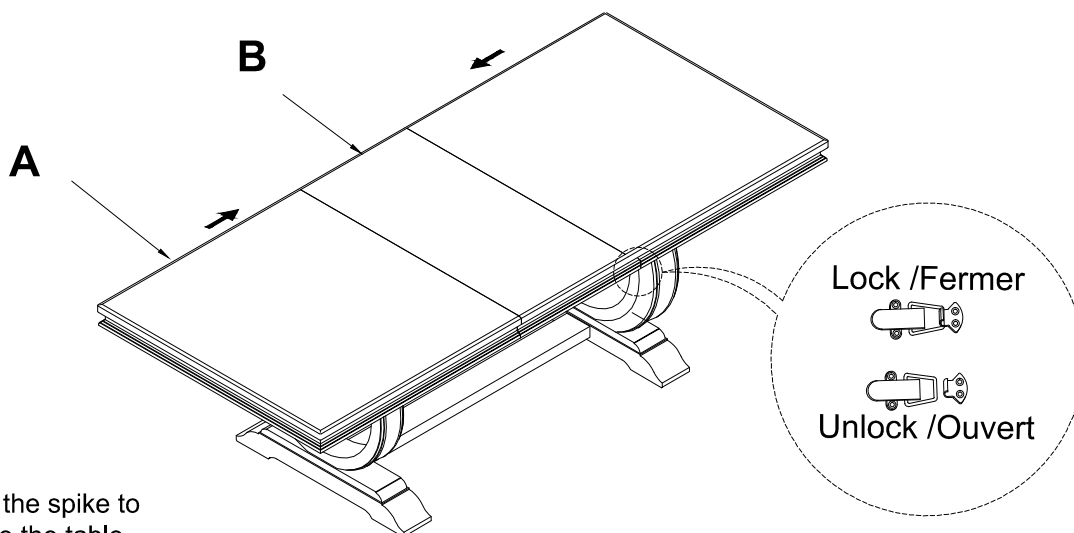

Adjust the spike to balance the table.


5

 Open the Table Top(A) and put the Table Leaf(B) in the slides.

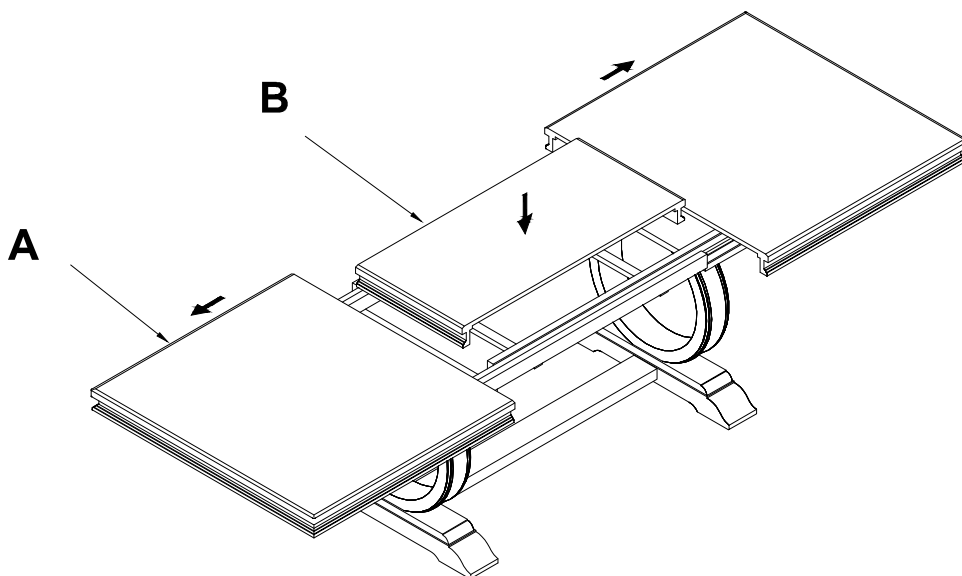

6

 Close the Table Top(A).

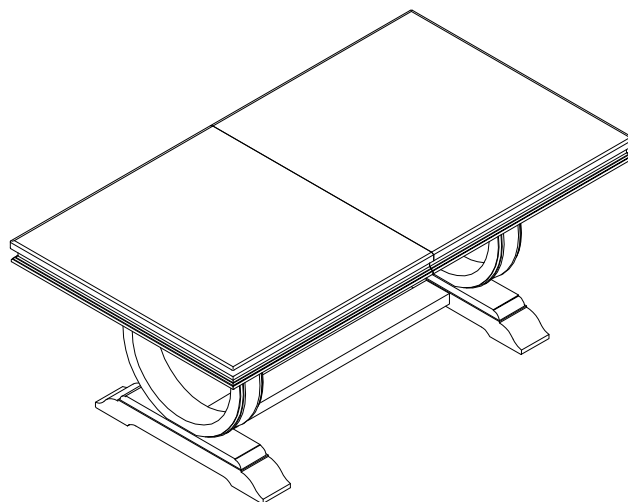


Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION


SIDE CHAIR

 A Chair Back

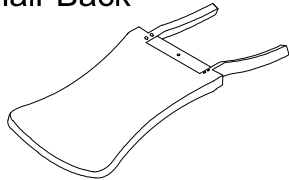


1 pc

 B Seat

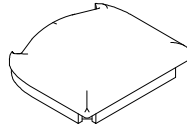

1 pc

 C Front Legs



2 pcs

 
D Bolt
1/4" x 1-1/2"



E Bolt
1/4" x 2"



F Bolt
1/4" x 2-1/2"



G Lock Washer
1/4"



H Flat Washer
1/4"



 
I Allen Wrench
1/6"



9 pcs

9 pcs


1 pc

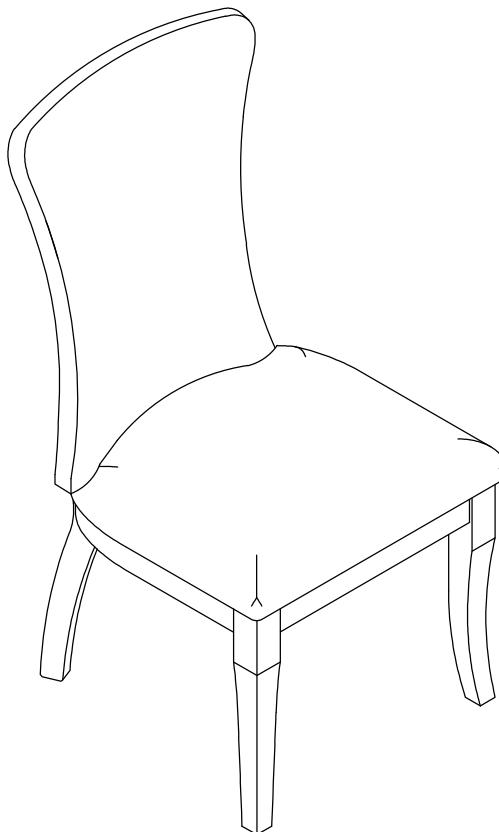

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

 
Place the Chair Back(A) upside down smooth carpet surface. Fixed the Chair Back(A) and Seat (B) by Bolts(D), Lock Washers(G) and Flat Washers(H) with Allen Wrench(I). Tighten the Chair Back(A) and Seat(B) by Bolts(F), Lock Washers(G) and Flat Washers(H) with Allen Wrench(I).

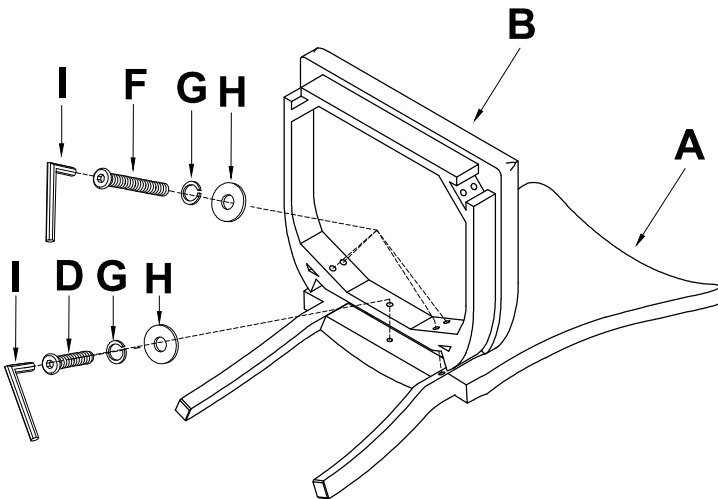

Take the Allen Wrench, and turn the bolts until the legs are secure. **DO NOT TIGHTEN COMPLETELY.** Stop when you feel you are adding force to tighten the bolt.

2

 Tighten the Seat(B) and Front Legs(C) by Bolts(E), Lock Washers(G) and Flat Washers(H) with Allen Wrench(I).

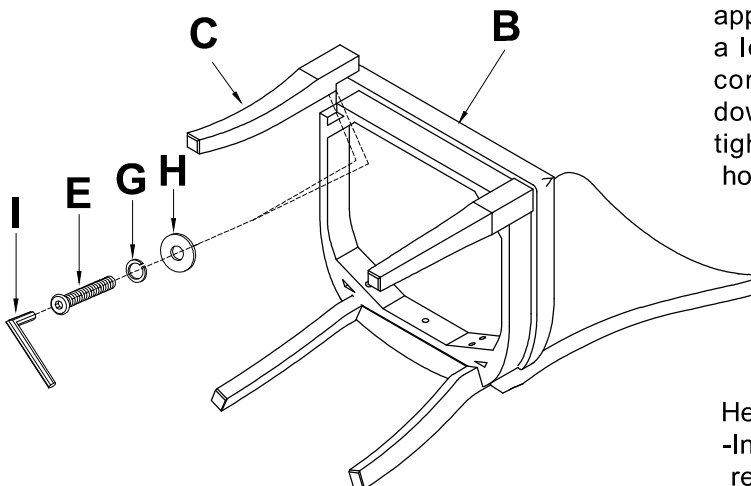

Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

Helpful Tip:

-Instead of applying downward pressure while reaching under to tighten bolts, have someone sit on the chair while you tighten the bolts.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.