



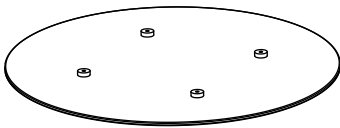 
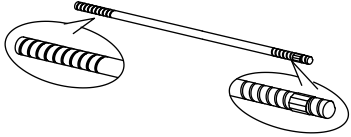 
 


 
 
 
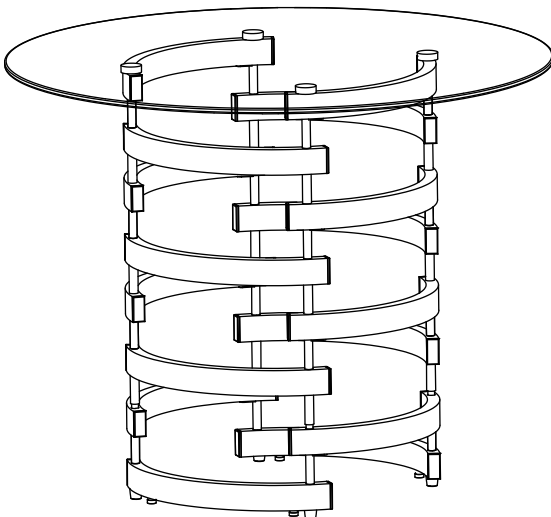 


ASSEMBLY INSTRUCTION

CHOP DINING TABLE

A	Stretcher	B	Stretcher	C	Stretcher	D	Connector Tube
							
8pcs		6pcs		2pcs		12pcs	
E	Glass Top (In other carton)	F	Long Bolt W/Stopper	G	Bolt	H	Nut
							
1pc		4pcs		16pcs		4pcs	
I	Flat Washer	J	Leveler	K	Allen Wrench	L	Open Wrench
							
4pcs		4pcs		1pc		1pc	

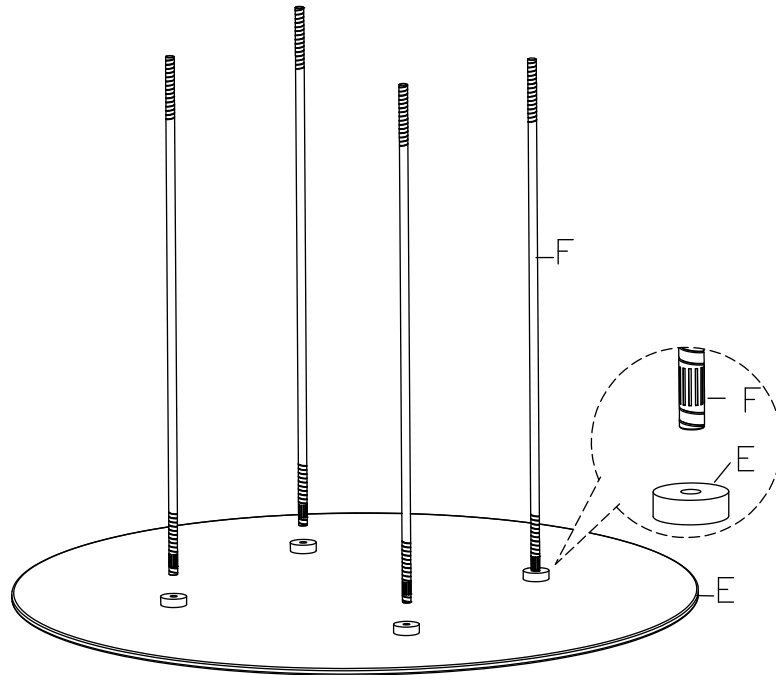 


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

***** Do not tighten screws & bolts until the entire unit is completely assembled.**

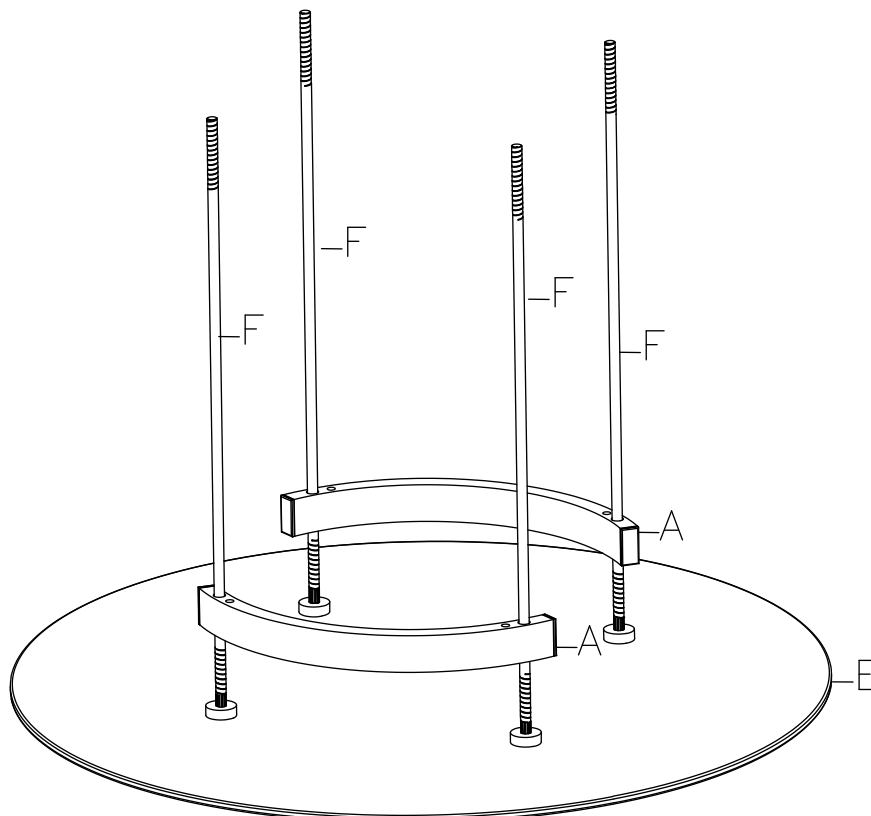 
1

Screw long bolts (F) into corresponding holes on the glass top (E) as shown and tighten it.



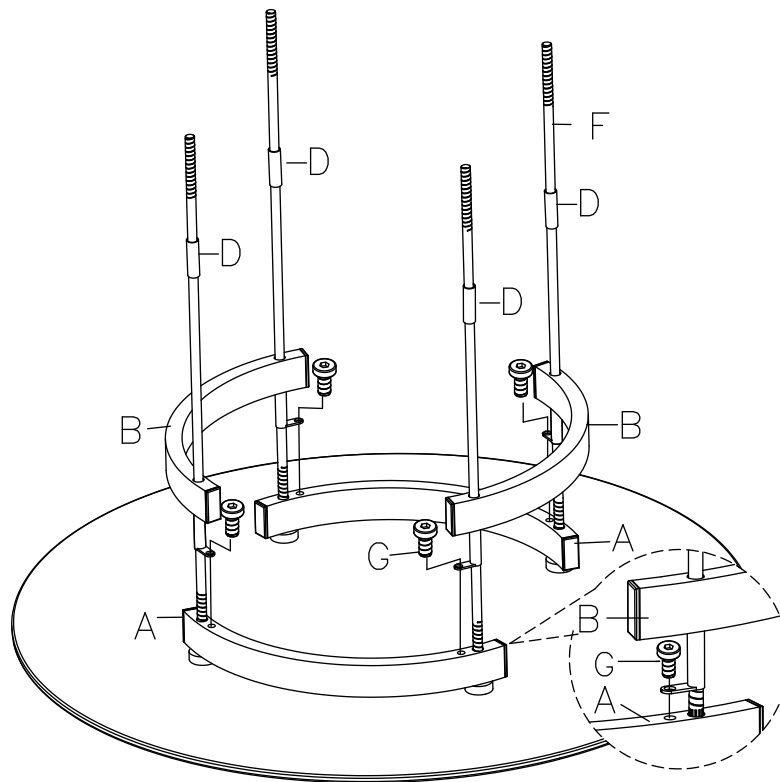 
2

Insert attached long bolts (F) through the corresponding holes on stretchers (A) as shown below.

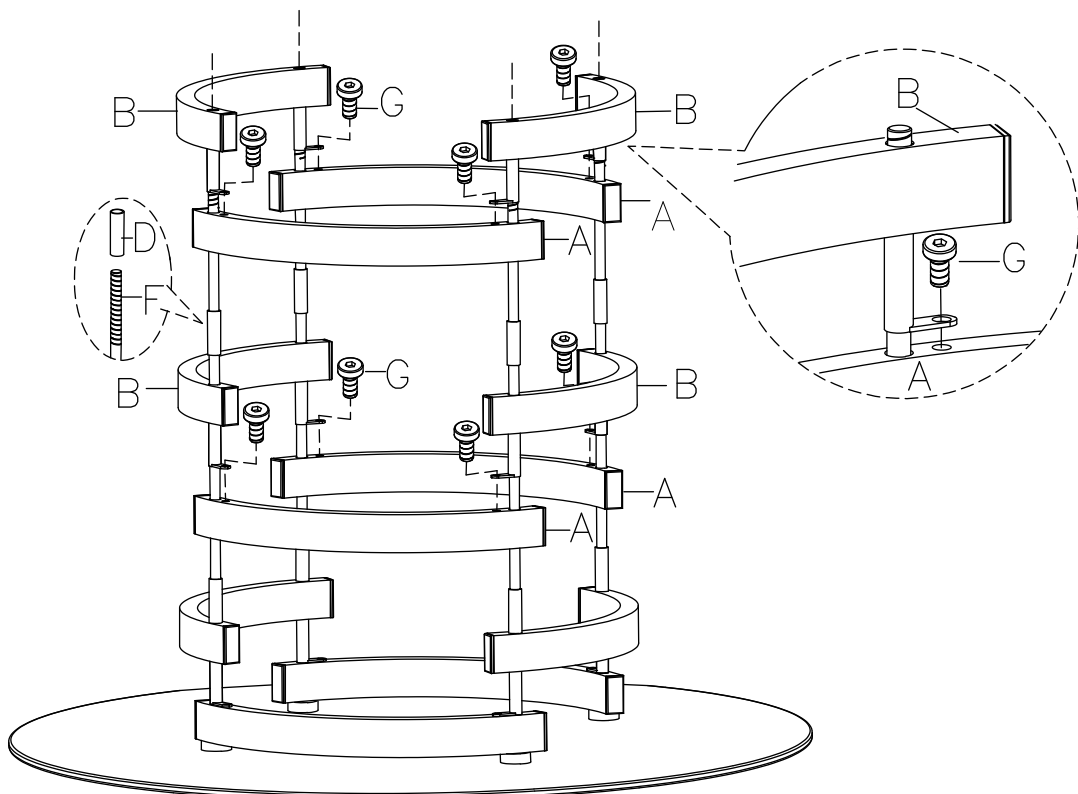 


3

Insert attached long bolts (F) through the corresponding holes on stretchers (B) and fix stretchers (B) to stretchers (A) using bolts (G). Then, follow with connector tubes (D) as shown. .

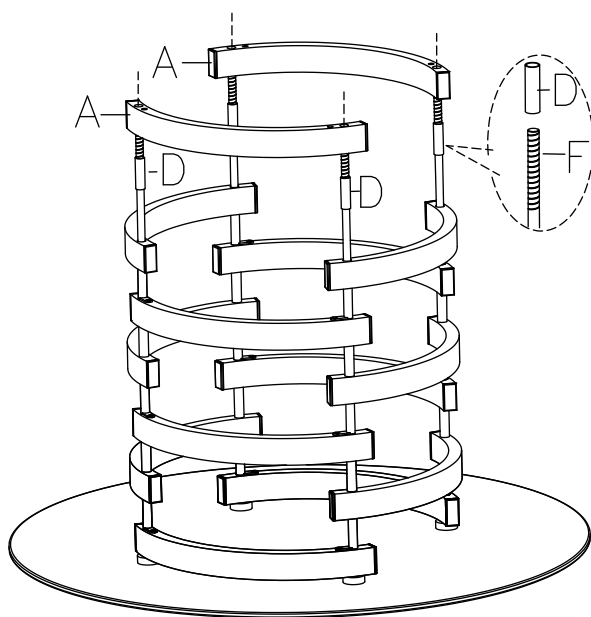 
**4**

Following Step 3 to use stretchers (A), stretchers (B) and connector tubes (D) to build up the frame step by step. Then, tighten bolts (G) firmly.



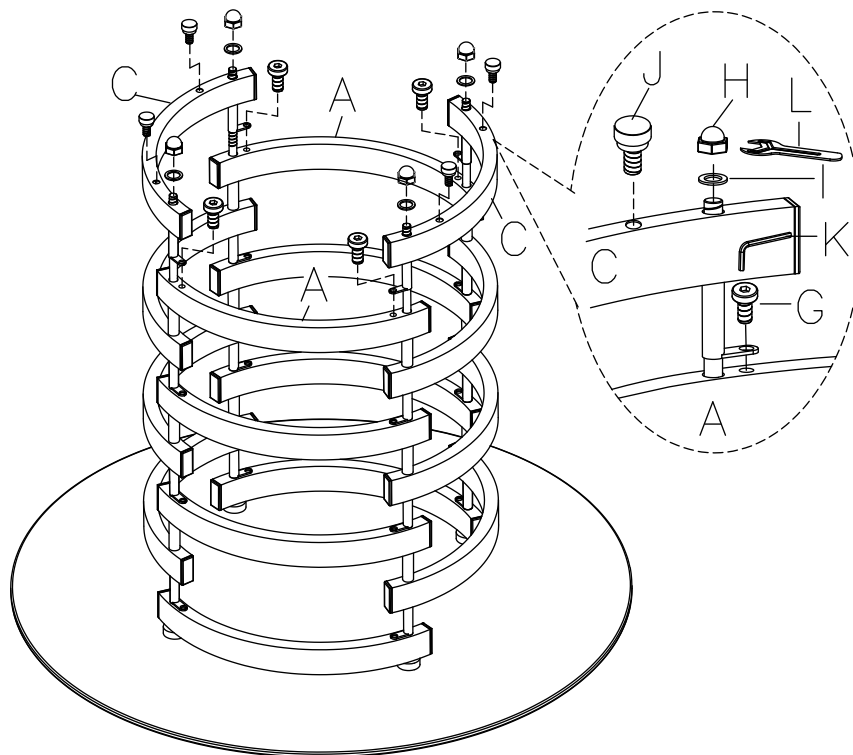 
5

Attach connector tubes (D) and stretchers (A) to long bolts (F) again.

**6**

Attach stretchers (C) to stretchers (A) using bolts (G) as shown.

Fix the frame firmly using flat washers (I) and nuts (H) with open wrench (L). Then, attach levelers (J) to the bottom of stretchers (C) as shown. Carefully, turn the assembled unit upright. The chop dining table is now completed.

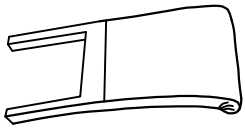 
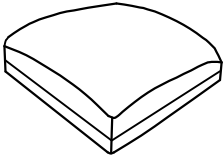 
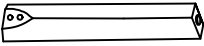 

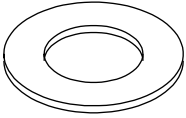 
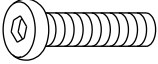 
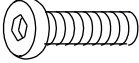 
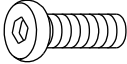 



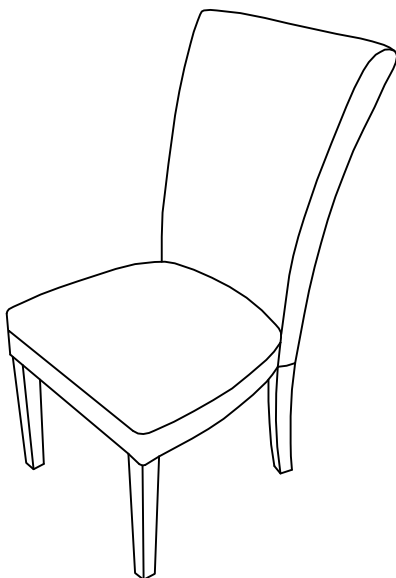 
Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION

CHAIR

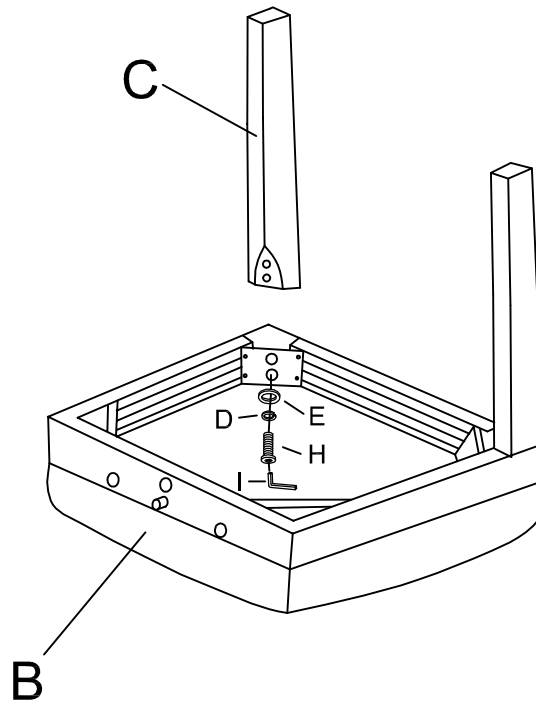 
A Chair Back	B Seat	C Front Leg	D Lock Washer	E Flat Washer
				
1pc	1pc	2pcs	11pcs	11pcs
F Bolt 5/16"x3-1/2"	G Bolt 5/16"x3"	H Bolt 5/16"x2-1/2"	I Allen Wrench	
				
4pcs	3pcs	4pcs	1pc	



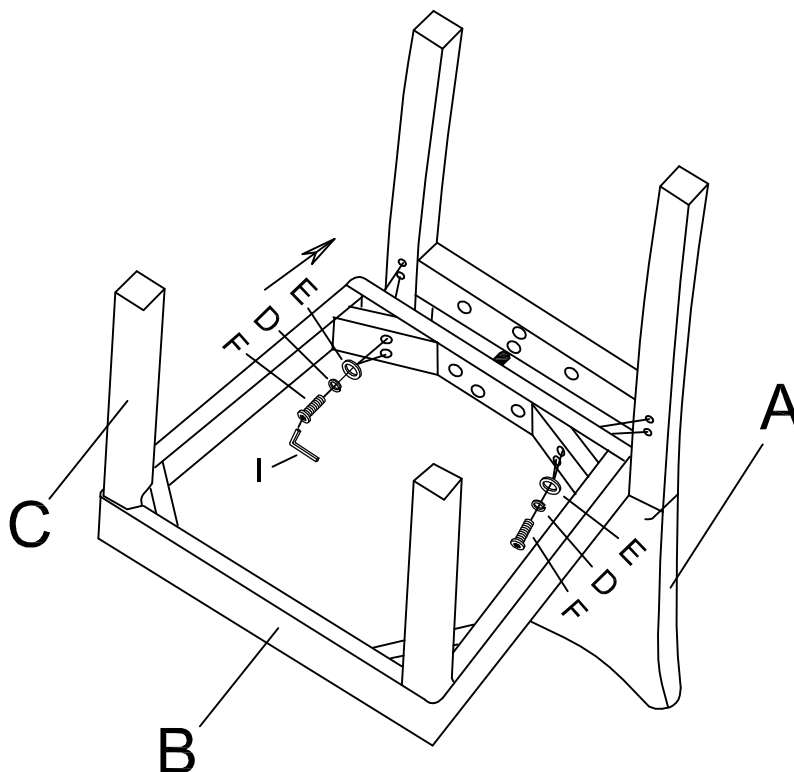 
This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

Put the seat (B) on a smooth flat surface, attached one front leg (C) to the seat (B) use bolt (H), lock washer (D) and flat washer (E) on both of hole of seat. Turn the allen wrench (I) in bolt (H). But not too tight.

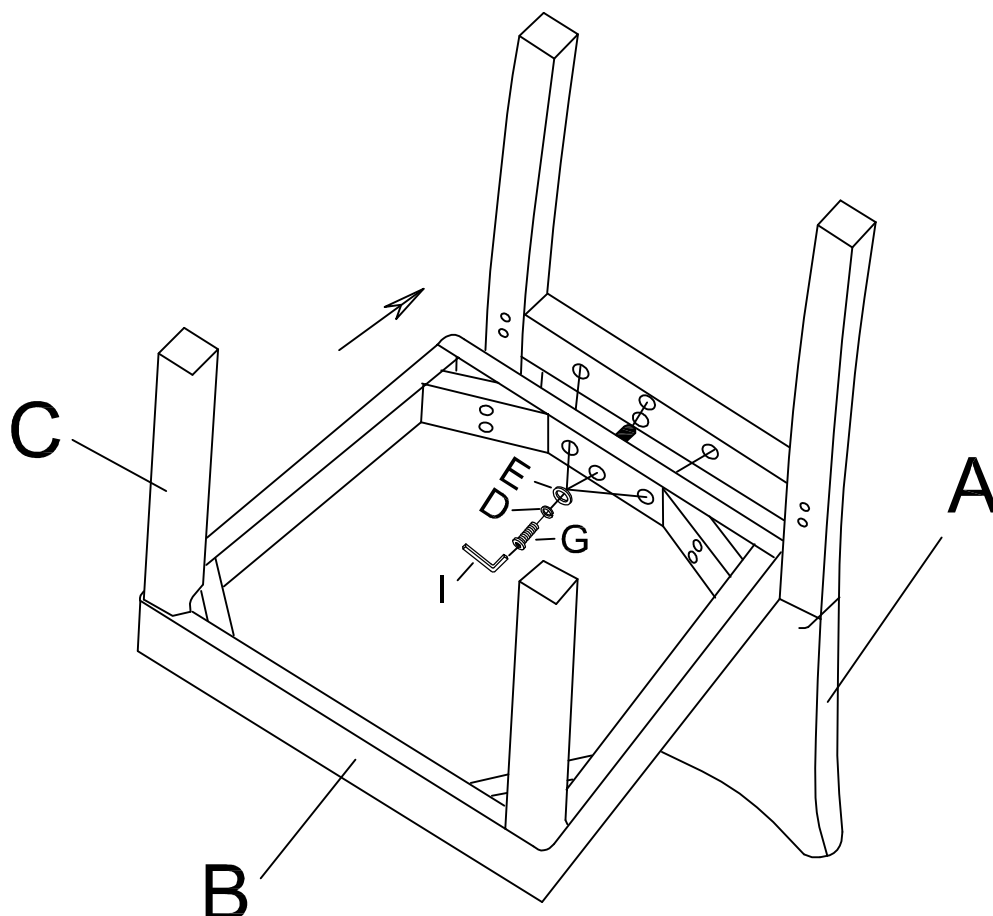 
**2**

Put chair back (A) on a smooth flat surface, attached the seat (B) the chair back (A) use the bolt (F), lock washer (D), flat washer (E) in both of hole of seat (B) and chair back (A), turn the allen wrench (I) in bolt (F). But not too tight.



3

Use the bolt (G), lock washer (D), flat washer (E) in both of hole of seat (B) and chair back (A), turn the allen wrench (I) to tighten the bolt (G).



Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.