
 
 



 
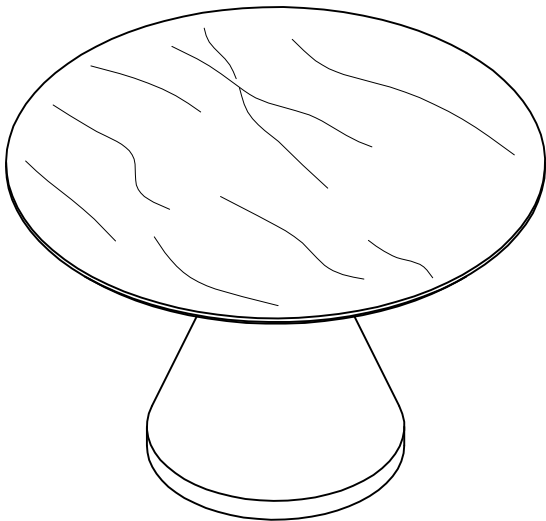


ASSEMBLY INSTRUCTION


FAUX MARBLE 46" ROUND DINING TABLE

A Table Top	B Connecting Panel	C Base	D Bolt 5-16" x 1-3/8"
			
1PC	1PC	1PC	8PCS
E Spring Washer 5/16"	F Flat Washer 5/16" x 19mm	G Allen Key 5mm	
			
8PCS	8PCS	1PC	




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1 Unlock Connecting Panel (B) from the back of Table Top (A) using Allen Key (G).

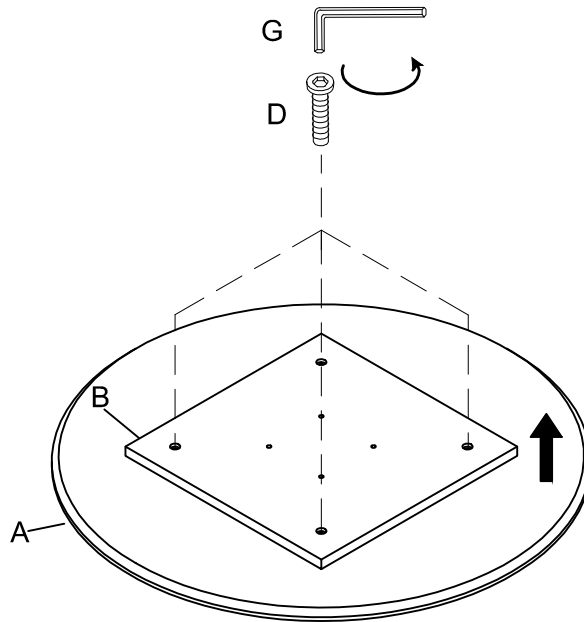


2 Attach Connecting Panel (B) to Base (C) using Bolt (D), Spring Washer (E) and Flat Washer (F) with Allen Key (G).

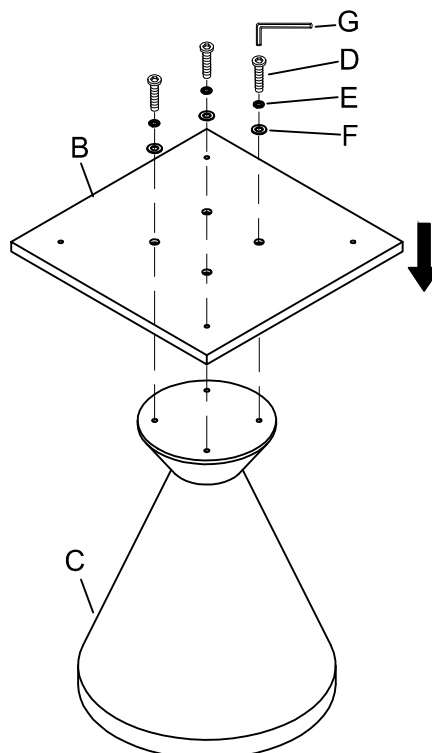

-
- 3** Attach the assembled Connecting Panel (B) and Base (C) to the back of Table Top (A) using Bolt (D), Spring Washer (E) and Flat Washer (F) with Allen Key (G).

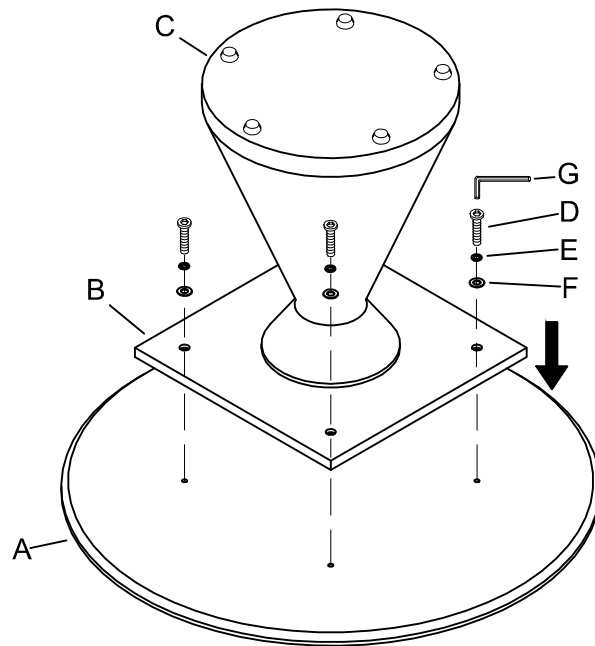

-
- 4** With the assistance of your adult partner, stand the Table up. Adjust the pre-installed levelers on the bottom of Base (B) until the Table is level with ground.

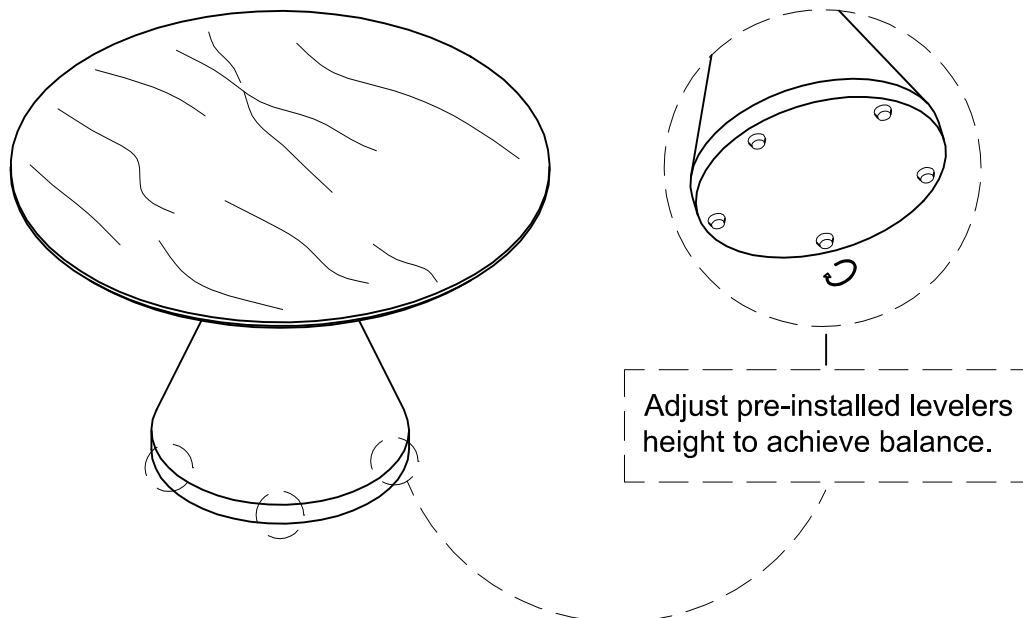

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.