



## TRIUMPH SPORTS ADVENTURE BUCKET BOUNCE

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

**DO NOT RETURN IT TO THE STORE,**

please contact us toll free @:

1-800-467-1421

gameroom@escaladesports.com

**Mailing Address: (Correspondence Only)**

Escalade Sports  
PO Box 889  
Evansville, Indiana 47706-0889

**Physical Location:**

Escalade Sports  
817 Maxwell Ave.  
Evansville, Indiana 47711

Please visit our Web site at:

**www.escaladesports.com**



Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Your Model Number: 45-6004W/F

Date Code: 2 - 45-6004W/F- - JL

Purchase Date: \_\_\_\_\_

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

# SAFETY INSTRUCTIONS

**FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY, PROPERTY DAMAGE AND WILL VOID WARRANTY.**

***Owner must ensure that all players know and follow these rules for safe operation of the system.***

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

***Most injuries are caused by misuse and/or not following instructions.  
Use caution when assembling and using this system.***

- **DO NOT** sit, climb or lean on the product
- Read and follow all the assembly, operation and safety instructions carefully.

## NOTICE

**DO NOT MIX OLD AND NEW BATTERIES  
DO NOT MIX ALKALINE ,STANDARD(CARBON-ZINC)  
OR RECHARGEABLE (NI-CAD,NI-MH,ECT.) BATTERIES.**

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

## First Time Battery Installation:

Locate battery compartment for this product .

Use alkaline batteries for maximum performance .

Remove battery compartment cover .

**Install new batteries only after reading the “ Battery Information NOTICE” !**

Replace compartment cover.

### **IMPORTANT: BATTERY INFORMATION**

**Please retain this information for future reference. Batteries must be installed / replaced by an adult .**

## Notice:

1. Remove and replace batteries when the electrical features of this product work slowly or are not functional .
2. Do not mix old and new batteries .
3. Do not mix different types of batteries : Alkaline , Standard ( Carbon-Zinc ) , or rechargeable ( Nickel-Cadmium batteries ) .
4. Use Alkaline Batteries for maximum performance .
5. Do not use damaged batteries .
6. Use only batteries of the same or equivalent type as recommended.
7. Install new batteries as per matching the battery polarity guide ( + & - , positive and negative ) inside of the battery compartment . Correct battery polarity installation is critical as to not damage the internal electrical components as well as insuring the correct functionality of the product .
8. Do not short circuit the battery terminals .
9. Always remove exhausted , leaking , weak , and batteries from long periods of nonuse from the product . Battery leakage and corrosion can cause damage .
10. Check the battery terminals are clean and bright before installing new batteries.
11. Dispose of old batteries safely and per local battery disposal codes .
12. Do not dispose of batteries into a fire as they may explode or leak.
13. If removable rechargeable batteries are used , they are to be charged under adult supervision .
14. Rechargeable batteries are to removed from the product before they are charged .
15. If you use a battery charger, it should be examined regularly for damage to the cord , plug, enclosure, and other parts. Do not use a damaged or malfunctioning charger until it is properly repaired.
16. Non rechargeable batteries must not be recharged .
17. Always remove batteries from this product for extended storage and or non-use .
18. Should this product cause , or be affected by, local electrical interference , move it away from other electrical equipment . Reset ( switching off and back on again and or removing and reinserting the batteries ) if necessary .

**IMPORTANT! READ EACH STEP  
IN THIS MANUAL BEFORE YOU  
BEGIN THE ASSEMBLY.**

**IMPORTANT!**

THE DRAWINGS IN THIS  
MANUAL MAY BE  
EXAGGERATED OR MODIFIED  
TO SHOW DETAILS.



 
## **ASSEMBLY TIPS**

Make sure you understand the following tips before you begin to assemble your game.

1. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.
2. Assembly can be made both simpler and less timely by first unpacking all parts, and matching and organizing them to the Parts Identifier. This will greatly help you become familiar with the parts before and during assembly.
3. Some of this assembly can be made easier – by placing the parts and building the assembly on a pair of saw horses. A table can be used also as long as the top is well protected from any scratches that could occur. The table or saw horses would need to be structurally strong enough to support this weight.

## **PARTS IDENTIFIER**


**(Not to Scale)**

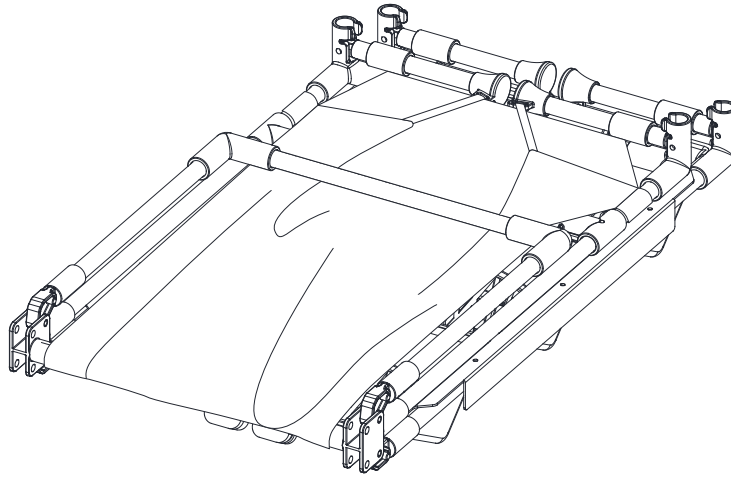

P1 - Main Body  
(1 pc)

## **ACCESSORIES IDENTIFIER**

 
**(Not to Scale)**

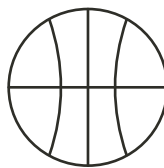


A1 - Bouncy ball  
(3 pcs)

## PARTS REQUIRED

 
1pc - P1 Main Body

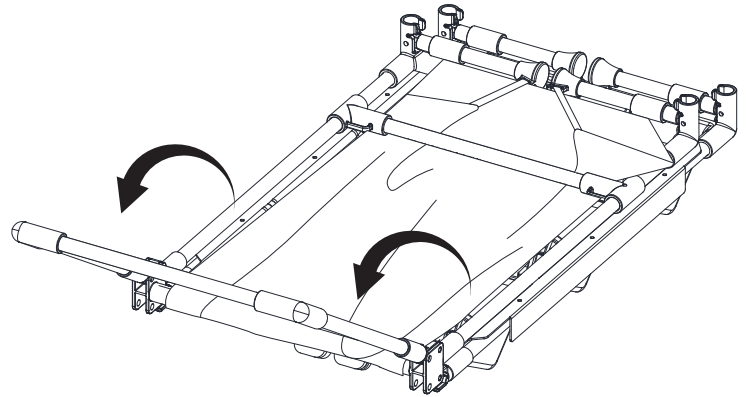


Unfold the back leg backwards

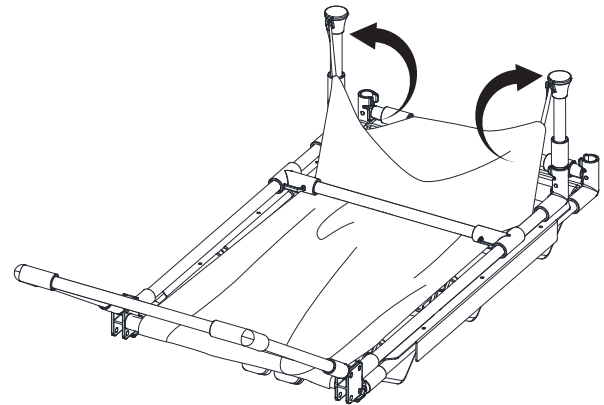 

Unfold the front legs to both sides

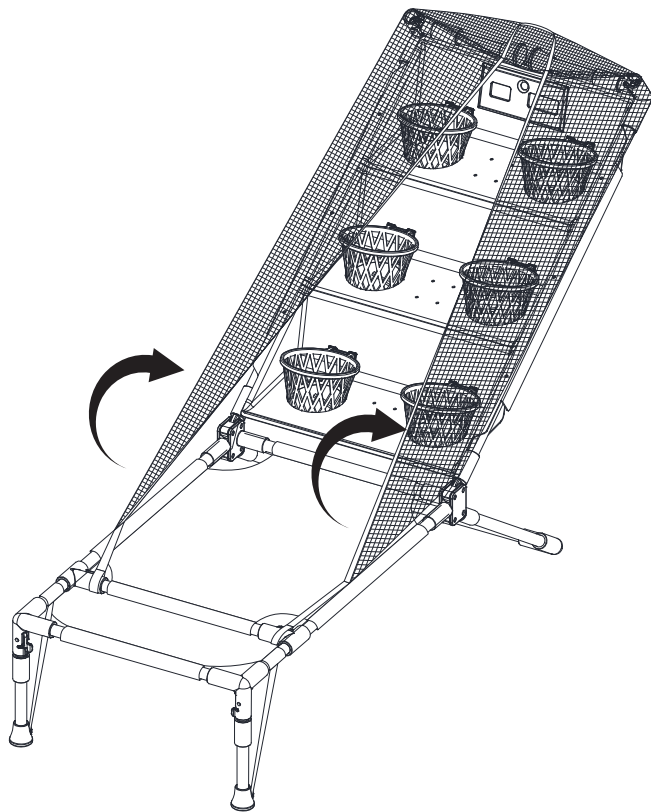 

 Turn over the product and unfold the target board.

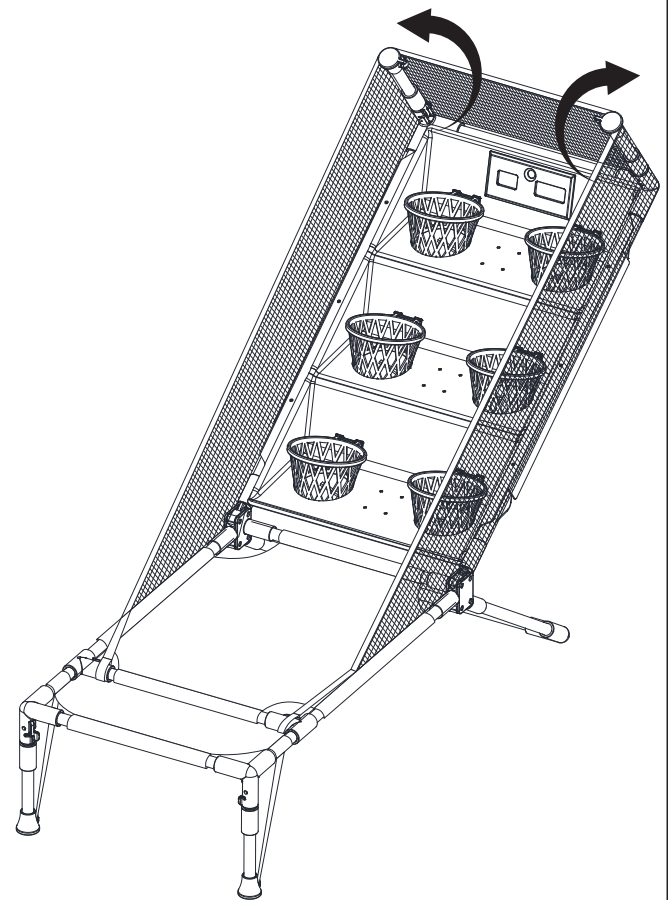

Unfold the top bracket to both sides

## Install the battery

 
 
Firstly, open the elastic strap on the back to shown the battery box.

Then insert 3 pcs AAA batteries (not included) in the correct order of polarity as shown on the inside of the battery box.






Turn on the power by pushing the on/off switch on the battery box to the “ON” position.

(If the game will not be used for a long period of the time, we recommend that the batteries be removed)

See “**FIRST TIME BATTERY INSTALLATION AND NOTICE**”, before installing batteries, located on **page 3**.

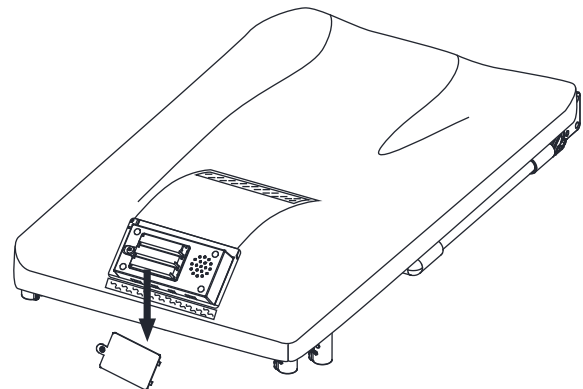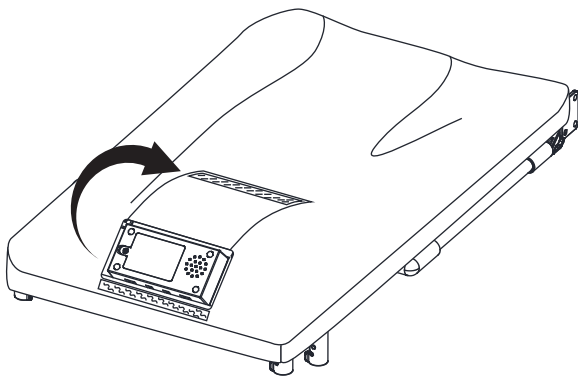


## BATTERY BOX

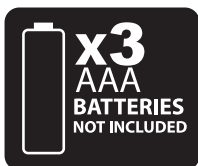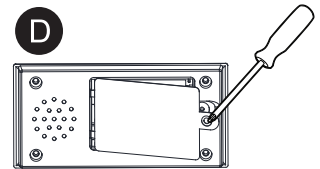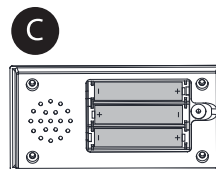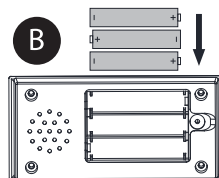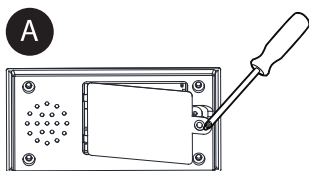     

# How to play

 1. Press the ON/OFF switch to turn on the electric scorer
2. Press ON/OFF again to start the game
3. After the beep sound, the countdown begins  
Game duration: 30 seconds  
The scores are: 50/20/10  
The game will end in 30 seconds
4. Press the ON/OFF switch to proceed to the next round of the game
5. Long press the ON/OFF switch for 2 seconds to turn off
6. If no goals are scored, the game will enter a 5-minute sleep mode. Press ON/OFF to restart the game, and then press ON/OFF again to start playing

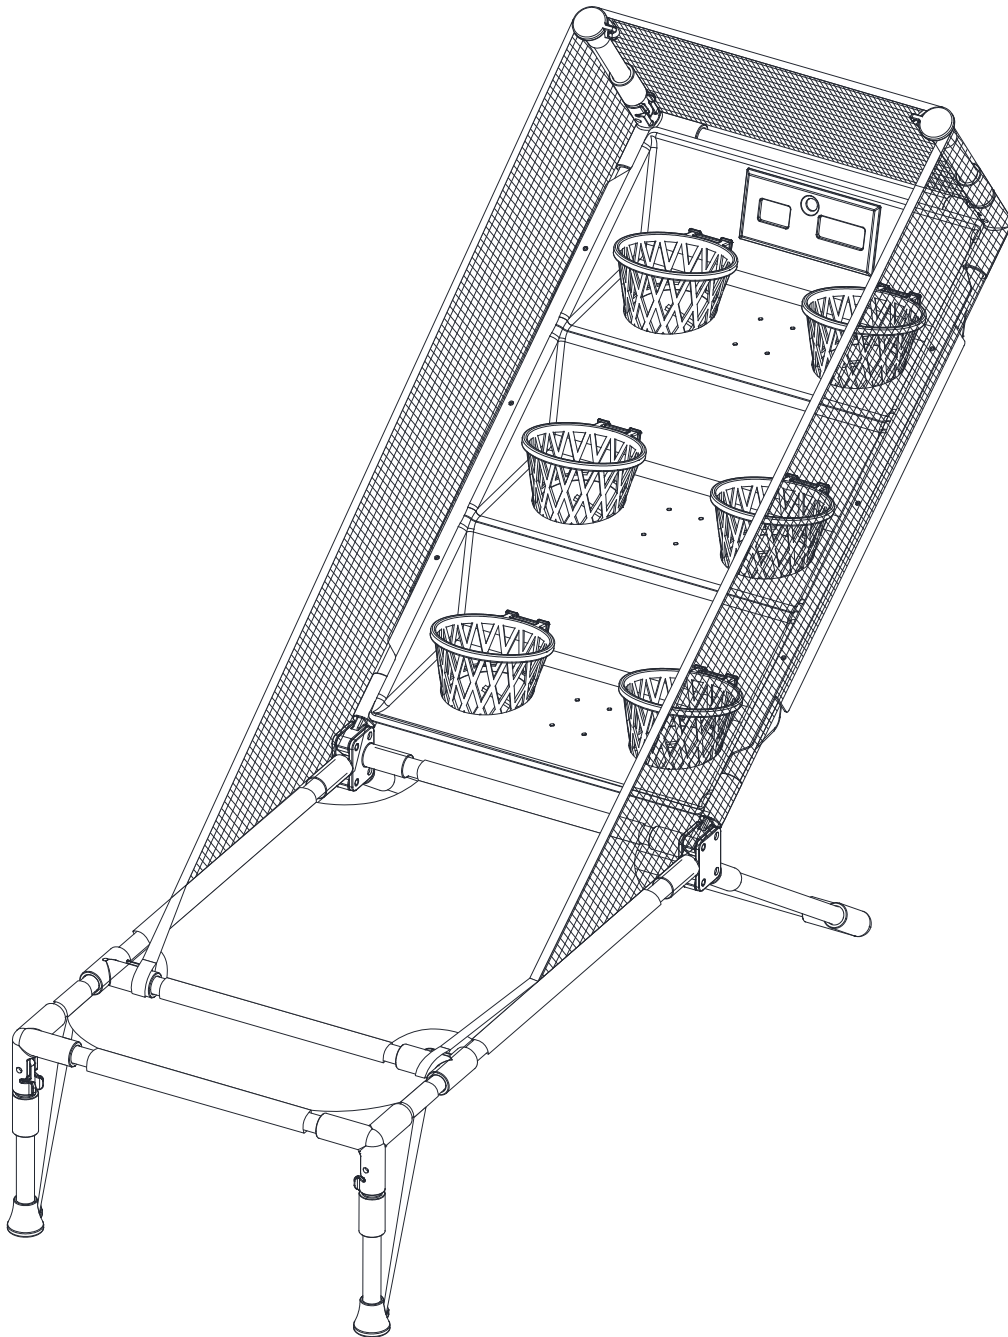

Congratulations! You have now assembled your game. Please note the Care and Use instructions below to ensure many years of trouble-free use of your game.

## CARE AND USE FOR YOUR PRODUCT

1. Product can be used in the dry **OUTDOORS**, but must be stored **INDOORS**.
2. **DO NOT** sit, climb or lean on the target.

## PRODUCT PARTS LIST FOR MODEL # 45-6004W/F

| Key # | Part #      | Description    | Qty. |
|-------|-------------|----------------|------|
| P1    | 45-6004JLP1 | Main Body      | 1    |
| A1    | 45-6004JLA1 | Bouncy ball    | 3    |
| K1    | 45-6004JLK1 | Hardware Kit   | 1    |
| M1    | 45-6004JLM1 | Owner's Manual | 1    |

## 90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

**WARRANTY DURATION:** This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

**WARRANTY COVERAGE:** ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, ESCALADE SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-800-467-1421 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

**WARRANTY DISCLAIMERS:** ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

**LEGAL REMEDIES:** This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

### NOT COVERED BY THIS WARRANTY

- Product not intended to be in places of public assembly, such as, but not limited to, schools, parks, public or private recreational facilities
- Any product subjected to Non-residential abuse, negligence, improper installation, vandalism, acts of God, alteration of product, or any other events beyond the control of ESCALADE SPORTS.