 




BEST CHOICE
PRODUCTS

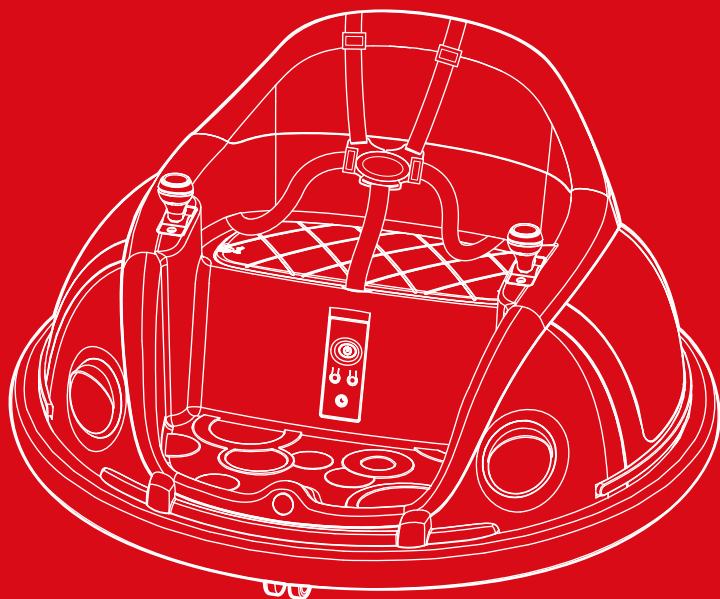

INSTRUCTION MANUAL

Ride On Bumper Car

⚠ WARNING

To reduce the risk of injury, adult supervision is required. Never use on roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than one rider.

FOR: 1.5-6 YEARS OLD & UP TO 66 LBS

⚠ WARNING

ADULT ASSEMBLY REQUIRED



Charge for **18 hrs**
before initial use.

After initial charge,
follow the normal
recommended
charging time.



SAFETY

Please retain these instructions for future reference.

Before using the vehicle the child should understand the vehicle controls and safety issues. They must also demonstrate the capability to handle the vehicle and operate its controls. It is the responsibility of the adult to educate the child and supervise the vehicles use. Read the following safety warnings to any child using the vehicle before riding.

NOTE: For best performance, only use this vehicle on flat and hard surfaces.

AGE RANGE: 18 months to 6 years old

WEIGHT CAPACITY: 66 lbs.

The following safety hazards may result in serious injury or death:

- This product contains small parts. Keep children away during assembly. Make sure to remove all packaging material and parts from underneath the vehicle body.
- Never open the battery. Batteries contain lead and lead compounds (acids) that are toxic and corrosive, and known to the state of California to cause cancer and reproductive harm.
- Limbs, hair, and clothing can get caught in moving parts. Always wear shoes, keep limbs away from moving parts, and do not wear loose clothing while operating this vehicle.
- This vehicle does not have brakes or braking capability. Do not leave a child unattended during operation. Do not use this in a location that may require braking capability, as this could result in loss of control, which may cause serious injury or death.
- Use of this vehicle near streets, motor vehicles, steps, bodies of water, sloped surfaces, hills, wet areas, flammable vapors, in alleys, at night, or in the dark could result in an unexpected accident.
- Use of this vehicle in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel may result in an unexpected accident such as tipping over, and could damage the electrical system or battery.
- Do not operate this vehicle in an unsafe manner. Examples include but are not limited to:
 - Pulling the vehicle with another vehicle or similar device
 - Pushing the user
 - Traveling at an unsafe speed

⚠ WARNING

To reduce the risk of injury, adult supervision is required. Never use on roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water and always wear shoes.

- Maximum of one child is allowed in the vehicle at a time.
- Always sit in the seat when using this vehicle.
- Keep your hands, hair, and clothes away from moving parts.
- Children under 18 months of age cannot use the vehicle.
- Only drive on level ground.
- Do not drive the vehicle into loose dirt, mud, sand, fine gravel, or on wet surfaces.

BATTERY WARNINGS

The following safety hazards may result in serious injury or death:

- Use of a battery or charger other than the supplied rechargeable battery and charger may cause a fire or explosion. Only use the supplied battery and charger.
- Use of the rechargeable battery and charger for any other product may result in overheating, fire, or explosion. Never use the supplied rechargeable battery and charger with another product.
- Explosive gases are created during charging. Charge the battery in a well-ventilated area. Do not charge the battery near heat or flammable materials.
- Contact between the positive and negative terminals may result in fire or explosion. Avoid direct contact between the terminals. Picking up the battery by the wires or charger can cause damage to the battery and may result in a fire. Always pick up the battery by its case or handles.

BATTERY WARNINGS

- Liquids on the battery may cause fire or electric shock. Always keep all liquids away from the battery and keep the battery dry. Contact or exposure to battery leakage (lead acid) may cause serious injury. If contact or exposure occurs immediately call your physician. If the chemical is on the skin or in the eyes, flush with cool water for 15 minutes. If the chemical was swallowed, immediately give the person water or milk. Do not give water or milk if the patient is vomiting or has a decreased level of alertness. Do not induce vomiting.
- Battery posts, terminals, and related accessories contain lead and lead compounds (acid) – chemicals known to the State of California to cause cancer, reproductive harm, and are toxic and corrosive. Never open the battery.
- Tampering or modifying the electric circuit system may cause a shock, fire or explosion and permanently damage the system. Exposed wiring and circuitry in the charger may cause electric shock. Always keep the charger housing closed.

WARNINGS REGARDING BATTERIES

- **RISK OF FIRE:** Do not bypass fuse. This may overload and damage the electrical system. Replace only with original size and type.
- Do not mix alkaline, standard (carbon zinc) and rechargeable (nickel hydride) batteries.
- Do not mix old and new batteries.
- Non-rechargeable batteries should not be charged.
- Rechargeable batteries should be charged under adult supervision only.
- Exhausted batteries should be removed.
- The supply terminals should not be short-circuited.
- Do not put batteries next to or in a heat source (fire, electronic heating device, etc.).
- Do not hit batteries against hard objects.
- Do not submerge batteries in water.
- Batteries should be inserted with the correct polarity.

SPECIFICATIONS

Overall Dimensions	27.5"(L) x 27.5"(W) x 15.7"(H)
Weight	17.5 lbs.
Weight Capacity	66 lbs.
Age Range	18 months – 6 years old
Speed	Approx. 1.2 MPH
Initial Charge Time	18 hours
Charging Time	8 - 12 hours





SPECIFICATIONS

Run Time	1 - 2 hours
Battery Type	6V 4.5AH
Motor	DC 6V
Charger	Input: 100V - 240V AC Output: DC 6V500MA
Material	PP Plastic, Iron

TOOLS REQUIRED



    
PARTS

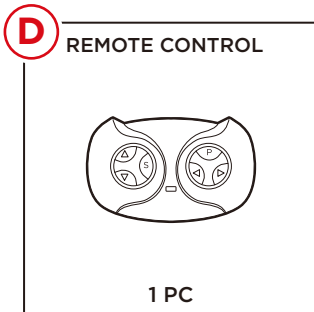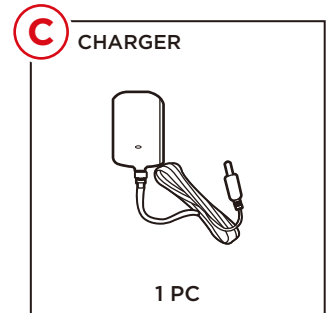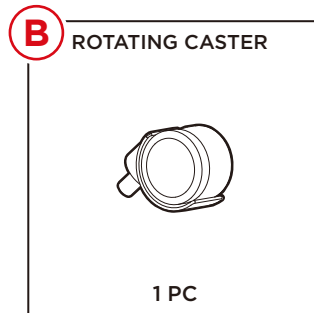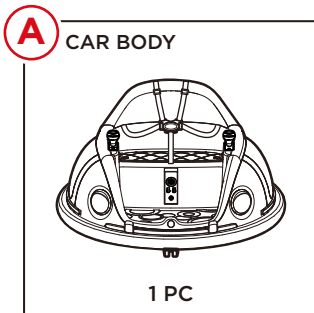

PRODUCT ASSEMBLY

1

 
Place the part A car body onto a flat, level surface with the bottom facing upward. Insert the part B rotating caster into the corresponding slot on the car body.

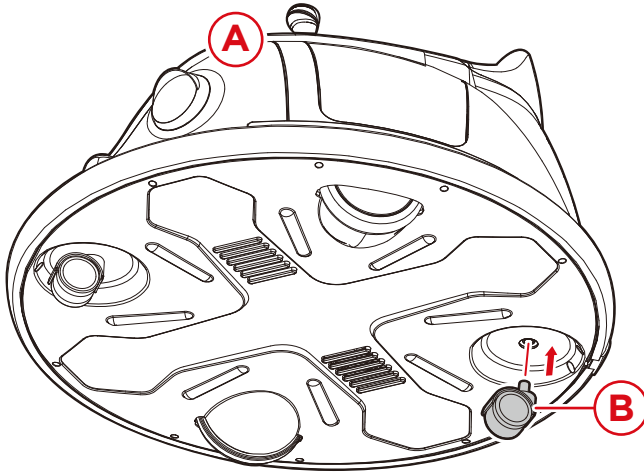

2


Within the seat area, connect the two red couplers to direct power from the battery to the circuit board.

 NOTE: Make sure the connection is secure before attempting to switch the power on.

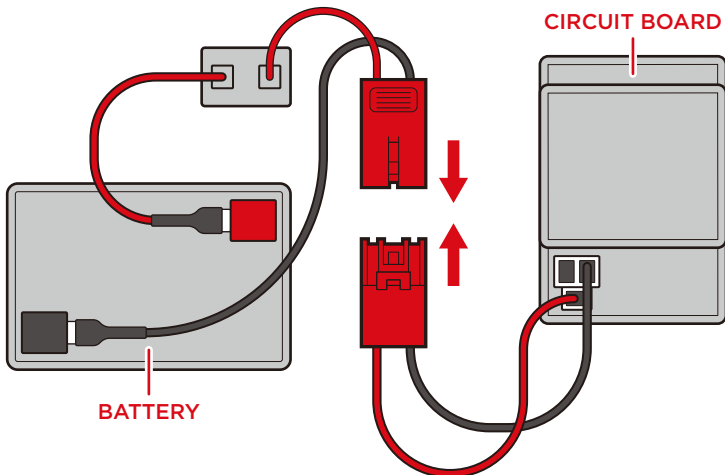

PRODUCT DIAGRAM

 NOTE: Control the forward and reverse of the left and right drive motors with their corresponding joystick. Hold down the power button for three seconds to turn this item on or off.

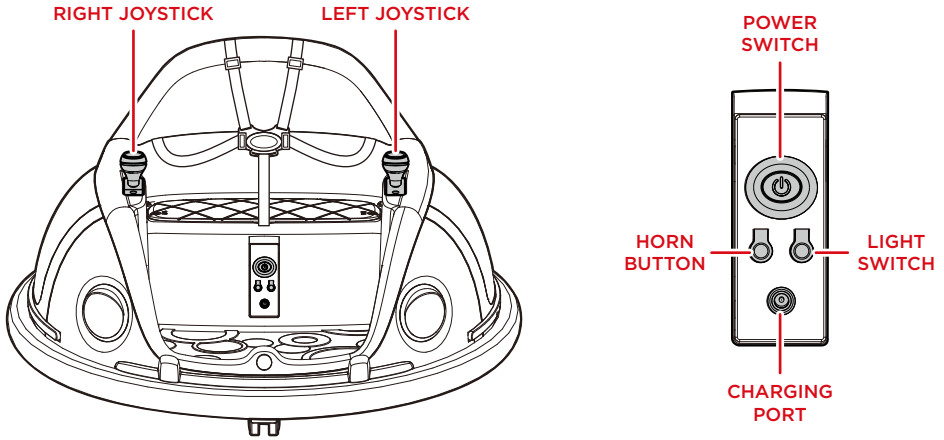


OPERATING INSTRUCTIONS


1. Push both joysticks forward to go forward in a straight line.
2. Push both joysticks back to go reverse in a straight line.
3. To turn right, push the left joystick forward without moving the right joystick.
4. To turn left, push the right joystick forward without moving the left joystick.
5. Push the right joystick forward and the left joystick backward to rotate counterclockwise.
6. Push the left joystick forward and the right joystick backward to rotate clockwise.

RESETTING FUSE

 This product contains an automatic, resetting fuse. If the current exceeds a certain rating, the recoverable fuse will automatically shut down to prevent damage. This shutdown period will last between 5 and 60 seconds before power is restored. Please allow at least this much time before seeking technical support.

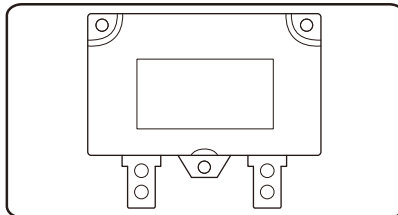


REMOTE CONTROL

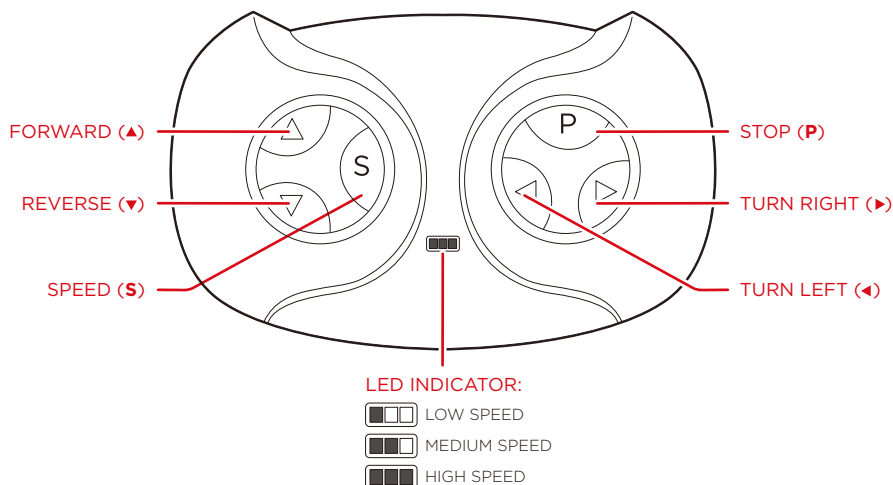 

Linking the remote control:

 1. Install 2 AAA Batteries into the remote control.
2. Turn the power switch on the vehicle to "off."
3. Press and hold both the Forward (▲) & Reverse (▼) buttons for 3 seconds. The LED indicators will flash.
4. Turn the vehicle on. The red indicator lights will stop flashing, indicating a successful link.
5. If the indicator lights continue to flash (indicating an unsuccessful link), remove, and reinsert batteries and repeat steps 1 to 4.

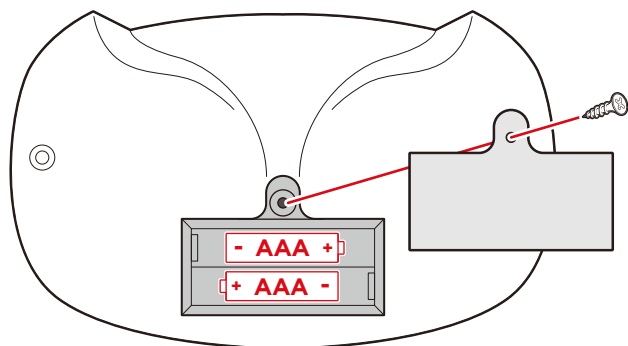


Inserting Batteries in Remote:

  

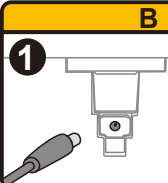 

1. Use a small Philips Head Screw Driver to remove the battery cover of the remote control.
2. Insert Two AAA 1.5V batteries like diagram below.
3. Close the battery cover and screw driver to tighten screw.

CHARGING INSTRUCTIONS AND WARNINGS

- Charging socket is located under the seat. Insert one end of the part C charger into the charging socket and plug the other end into a wall outlet (see Diagram).
- Charge the battery at least 18 hours before initial use.
- On average, you will need to charge the battery between 8 and 12 hours. Do not charge the battery for more than 20 hours. Failure to charge the battery as directed could cause permanent damage to the battery and void the warranty.
- Damage to the battery may occur if it is allowed to drain completely. Do not allow the battery to drain completely.
- Check the battery and charger (supply cord, connector) for wear and damage before charging.
- Do not charge the battery if damage has occurred.
- Only an adult who has read and understood the safety warnings should handle, charge and recharge the battery.

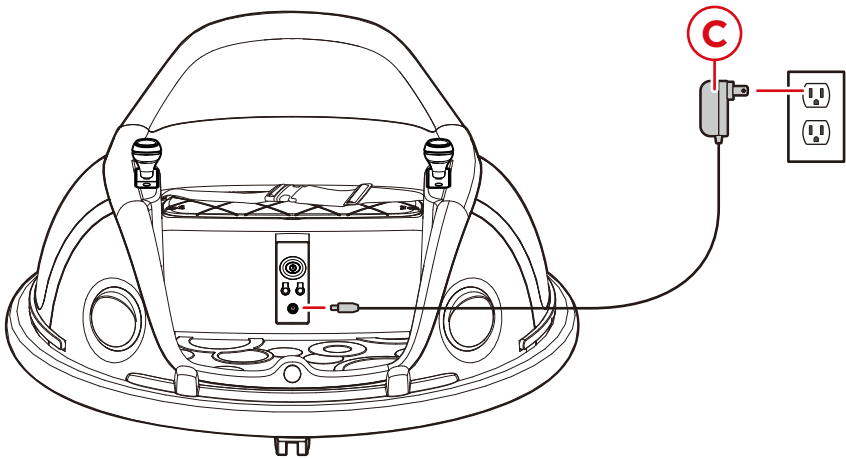

ATTENTION

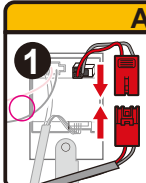 1	 2	 1	 2
--	--	--	--

A: Please connect picture 1: the power connector before assembling the seat. Then press the Start button as shown in picture 2. Otherwise, the car will not start because of no power supply.

B: After charging, please unplug the charger first, then press the Start button as shown in picture 2. Otherwise, the car will not start because of no power supply.


CARING FOR YOUR RIDE-ON

- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Do not leave the vehicle in the sun for long periods of time or fading may occur.
- Store in shade or cover with tarp.
- Do not wash the vehicle with a hose.
- Do not wash the vehicle with soap.

TROUBLESHOOTING

Issue	Solution
The motor does not rotate	<ol style="list-style-type: none">1. Allow 5-20 seconds then restart2. Reconnect foot switch3. Check for loose connections4. Plug the plug in
Car only moves forward or backward	<ol style="list-style-type: none">1. Check the connection lines2. Turn the toy on and off again, and rotate the individual joysticks
Slow Speed	<ol style="list-style-type: none">1. Charge the battery2. Driving circuit board requires professional repair
The battery is not recharging	<ol style="list-style-type: none">1. Clear the contacts of the charging port and cable2. Replace the charger
Wheel is rotating, car is not moving	<ol style="list-style-type: none">1. Make sure all 3 wheels are in contact with the ground
Car is unstable moving on and off	<ol style="list-style-type: none">1. Maximum weight limit exceeded; reduce load2. The surface you are traveling on is not level; change locations

CALIFORNIA PROPOSITION 65

 **WARNING:** Battery posts, terminals, and related accessories can expose you to chemicals including lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm, and are toxic and corrosive. Wash hands after handling. For more information go to www.P65Warnings.ca.gov

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This product may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Responsible party (contact for FCC matters only):

Quality Control Dept.

15101 Red Hill Ave.

Tustin, CA 92780



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.