

ASSEMBLY INSTRUCTION


1-DRAWER NIGHTSTAND



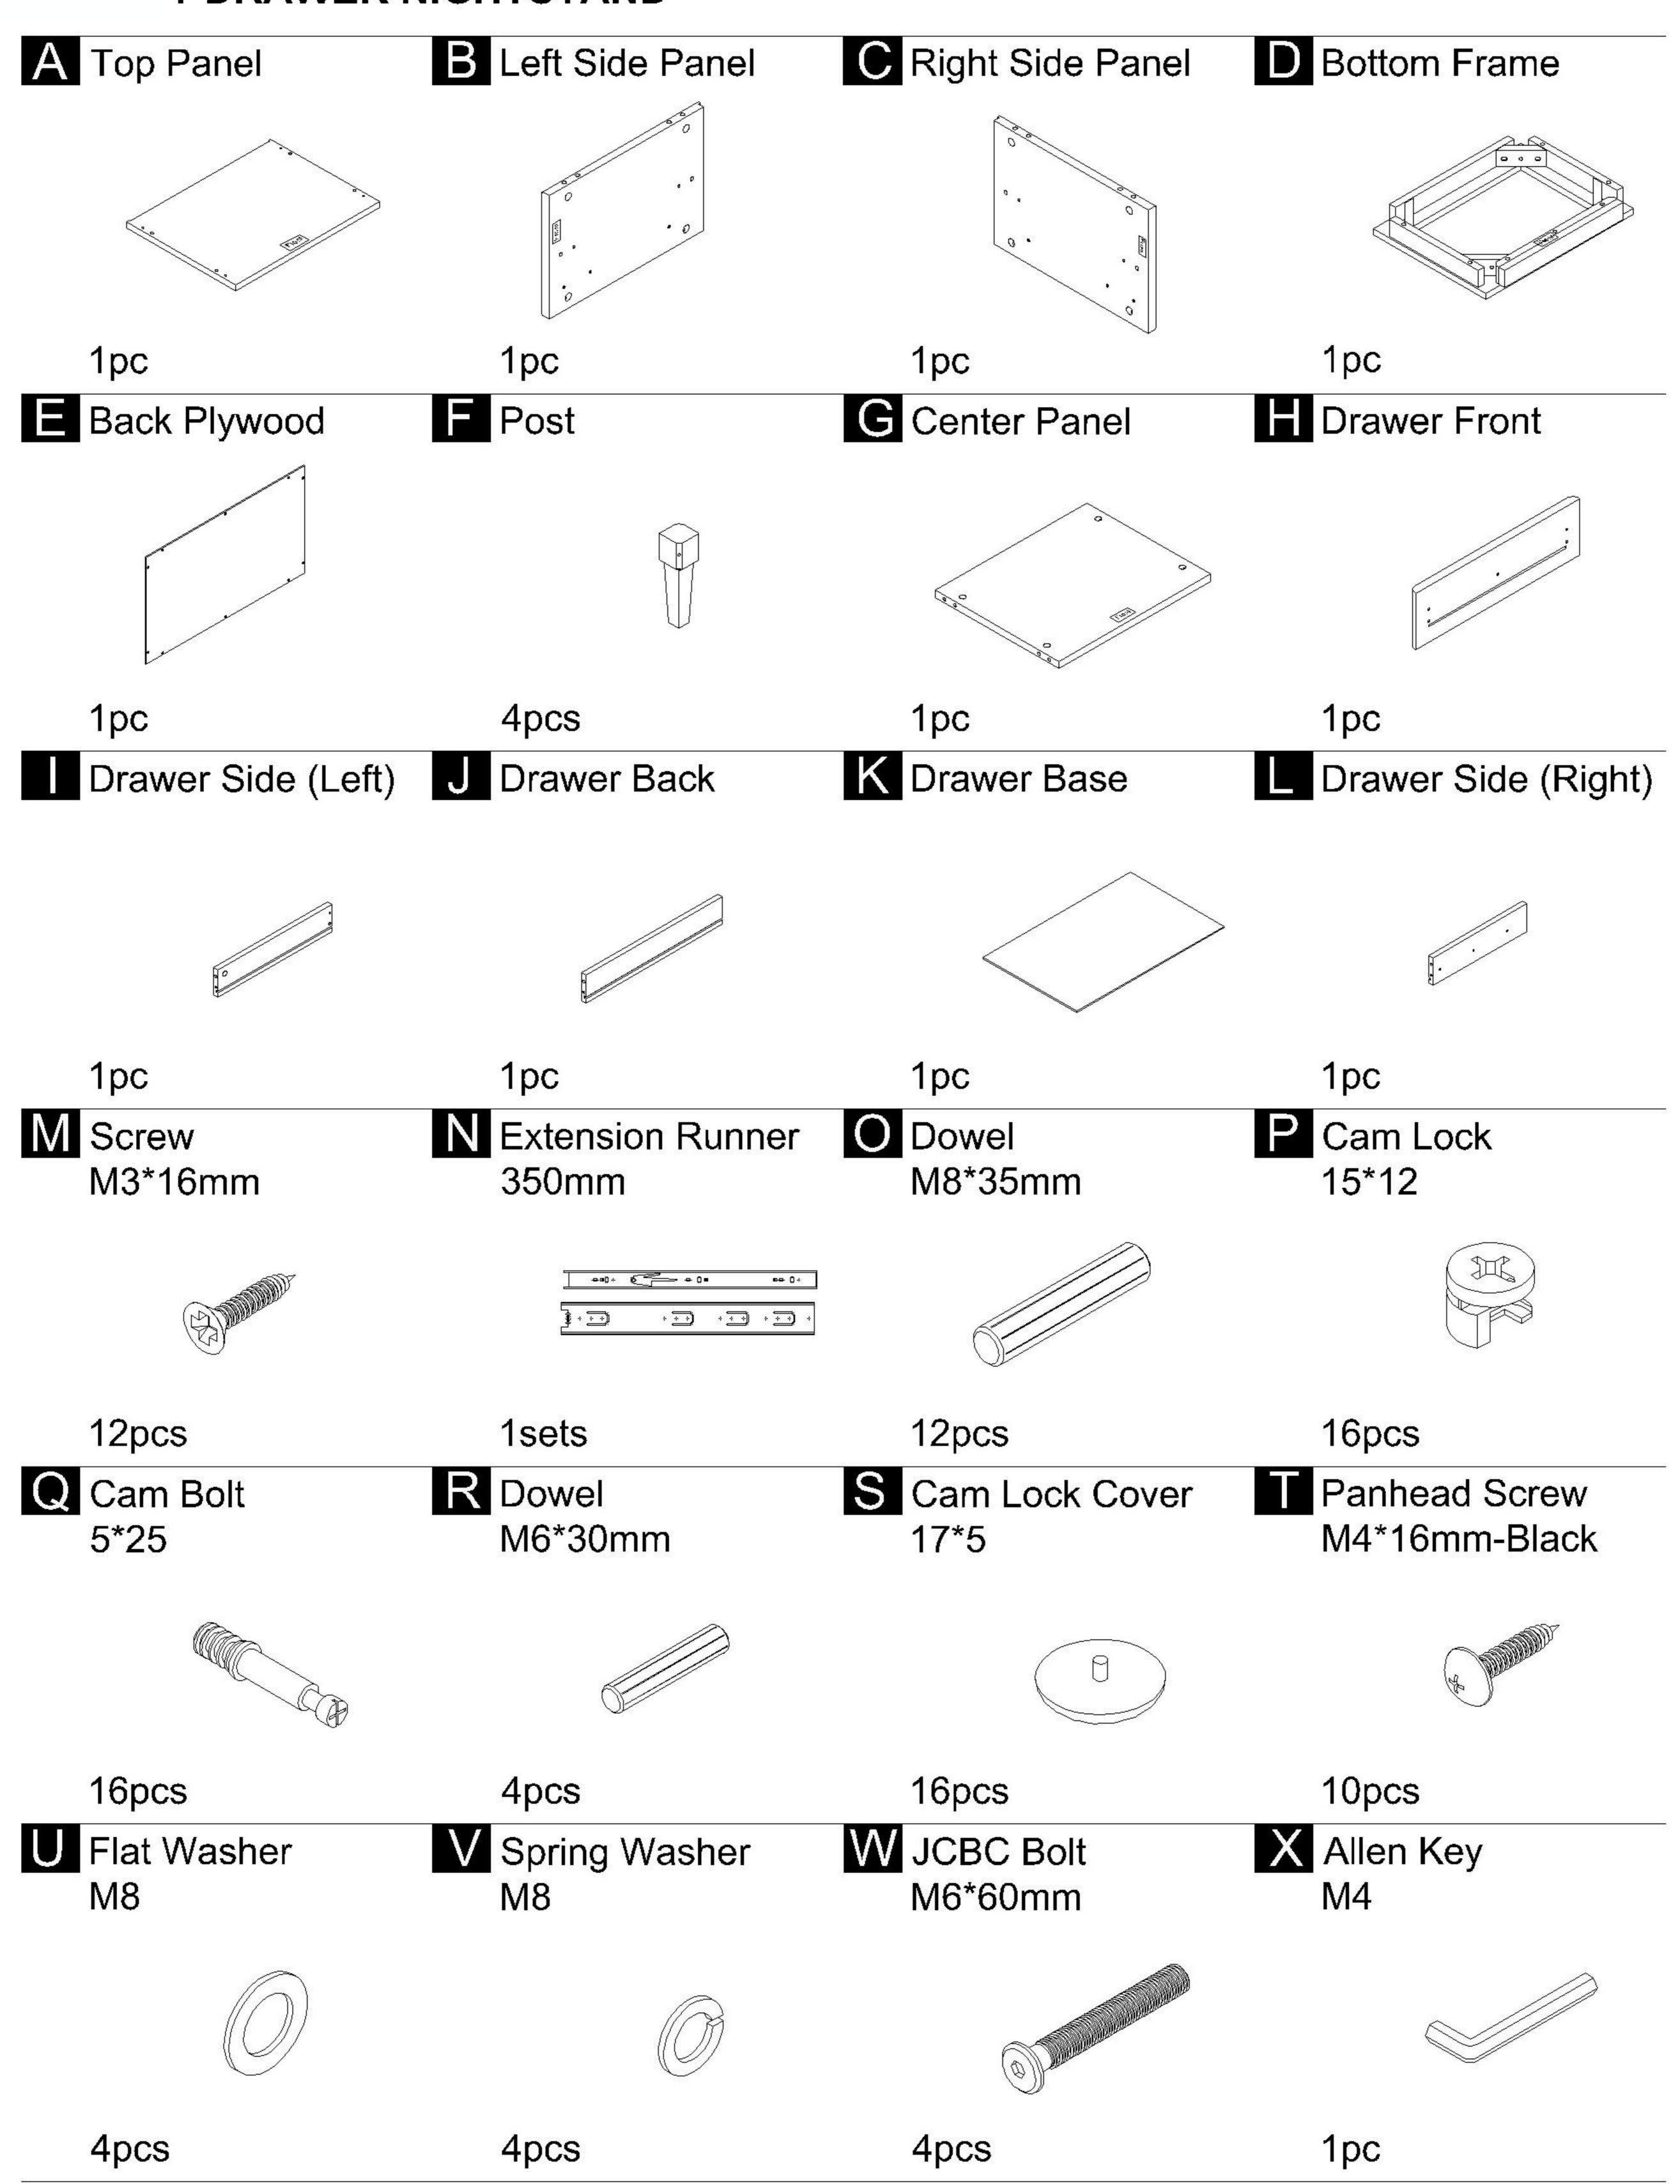

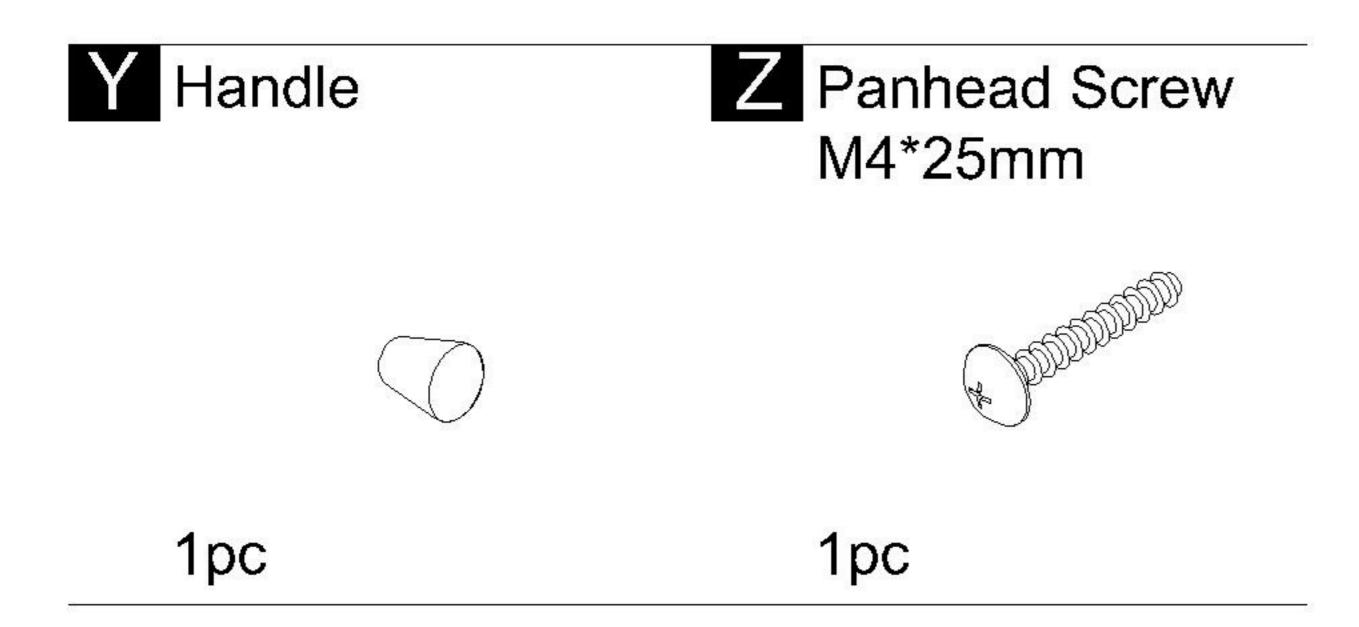


This pages lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

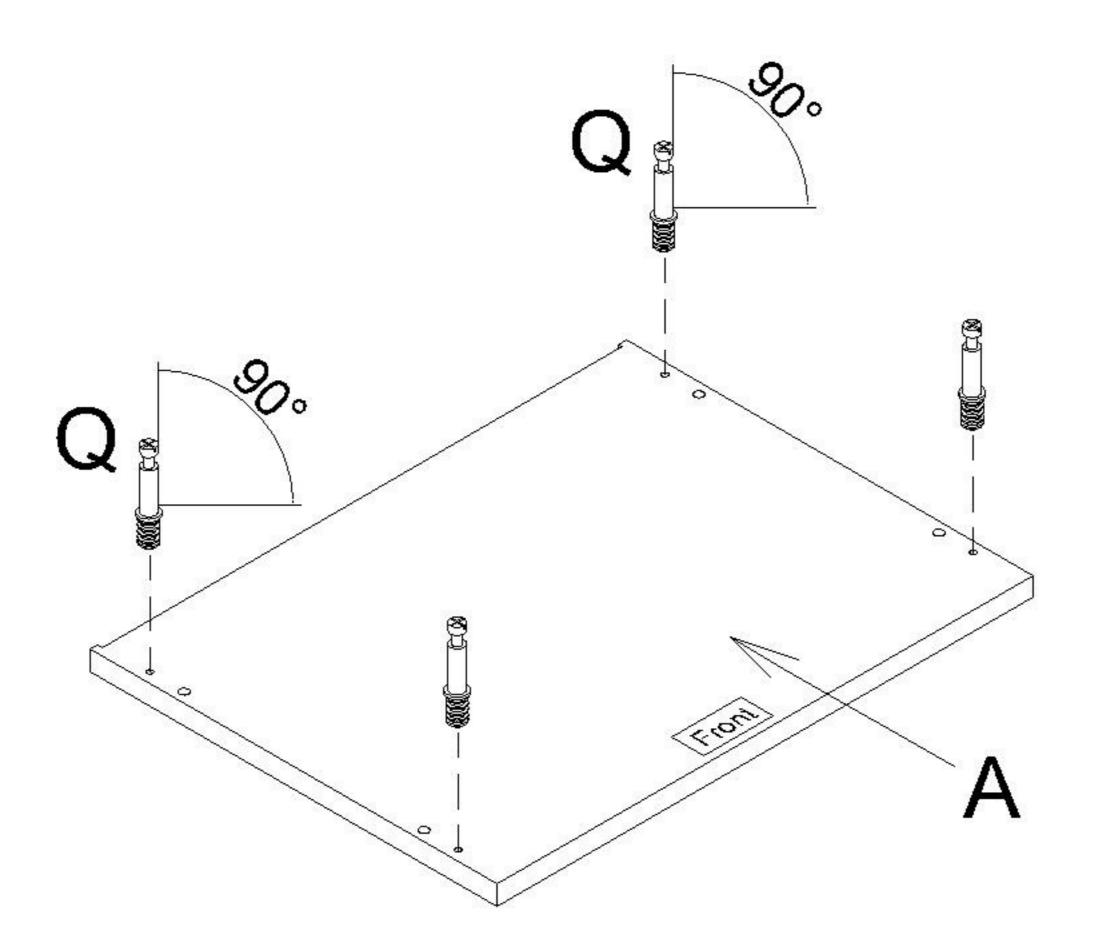


2 Insert Dowel (O) to Left & Right Side Panel (B & C). Attach Cam Lock (P) to Left & Right Side Panel (B & C). Insert & secure Cam Bolt (Q) to Left & Right Side Panel (B & C).


NOTE : - Make sure arrows on each Cam Lock points towards nearest edge with holes

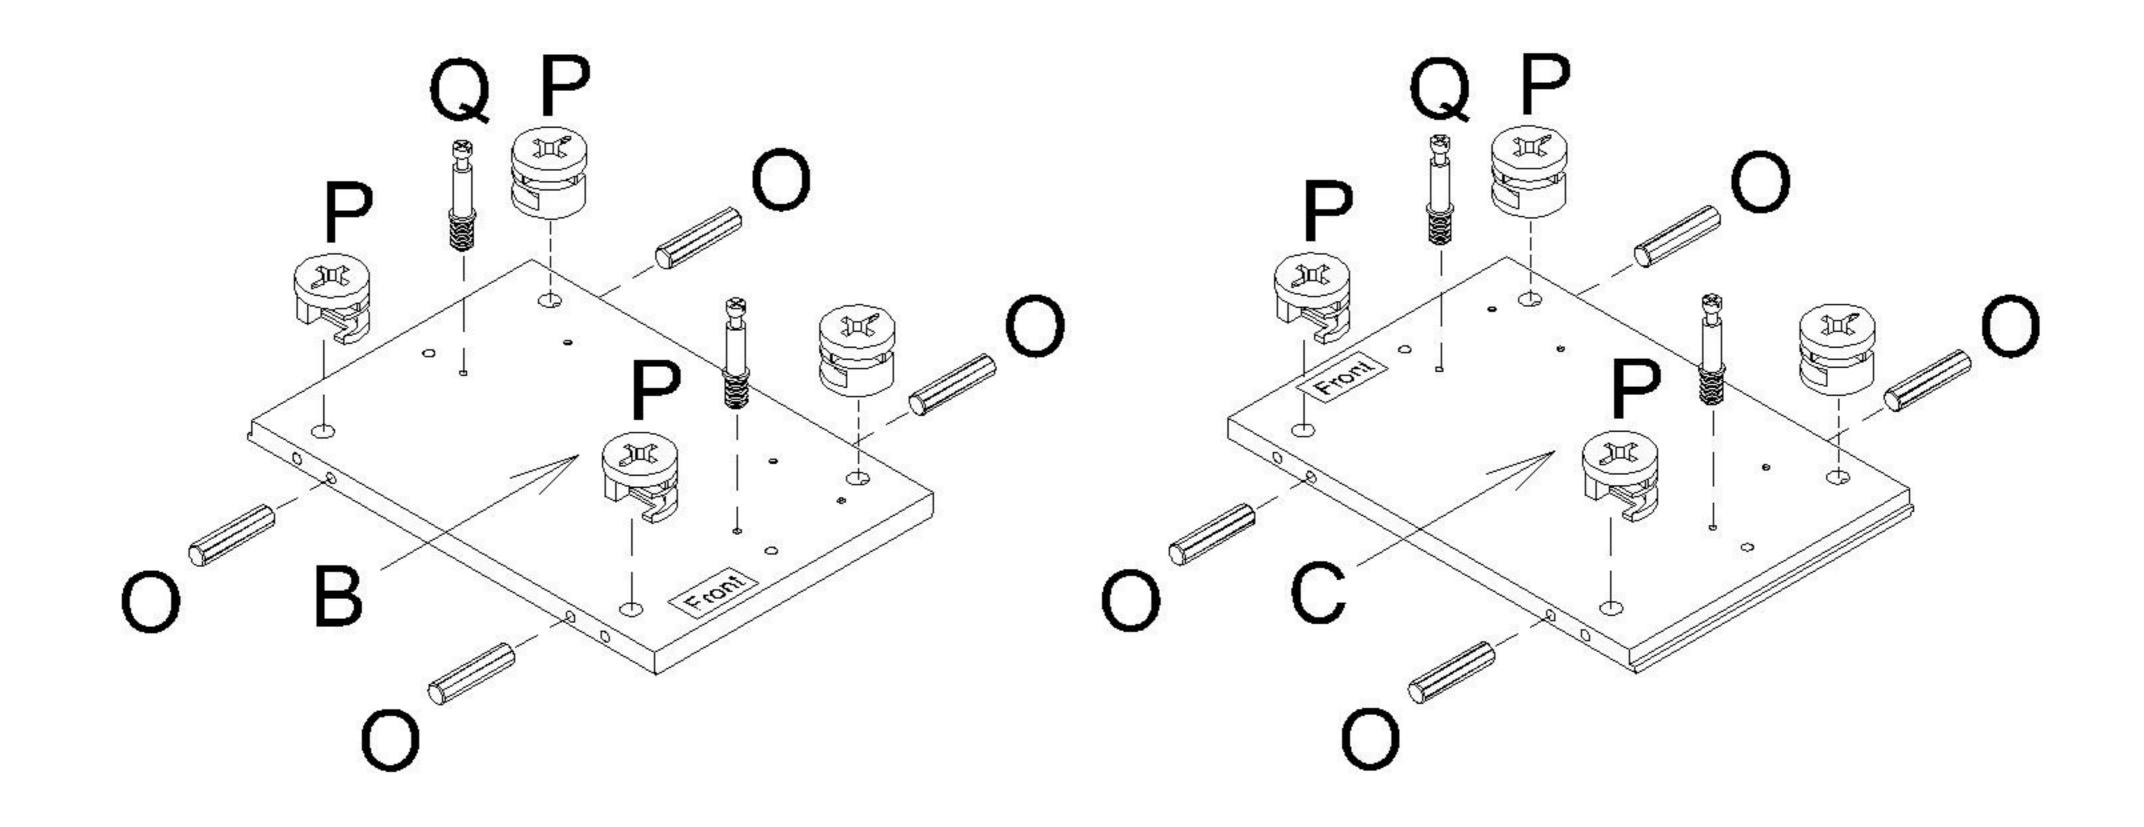


Attach Extension Runner (N) to Left & Right Side Panel (B & C) using Screw (M) to secure.

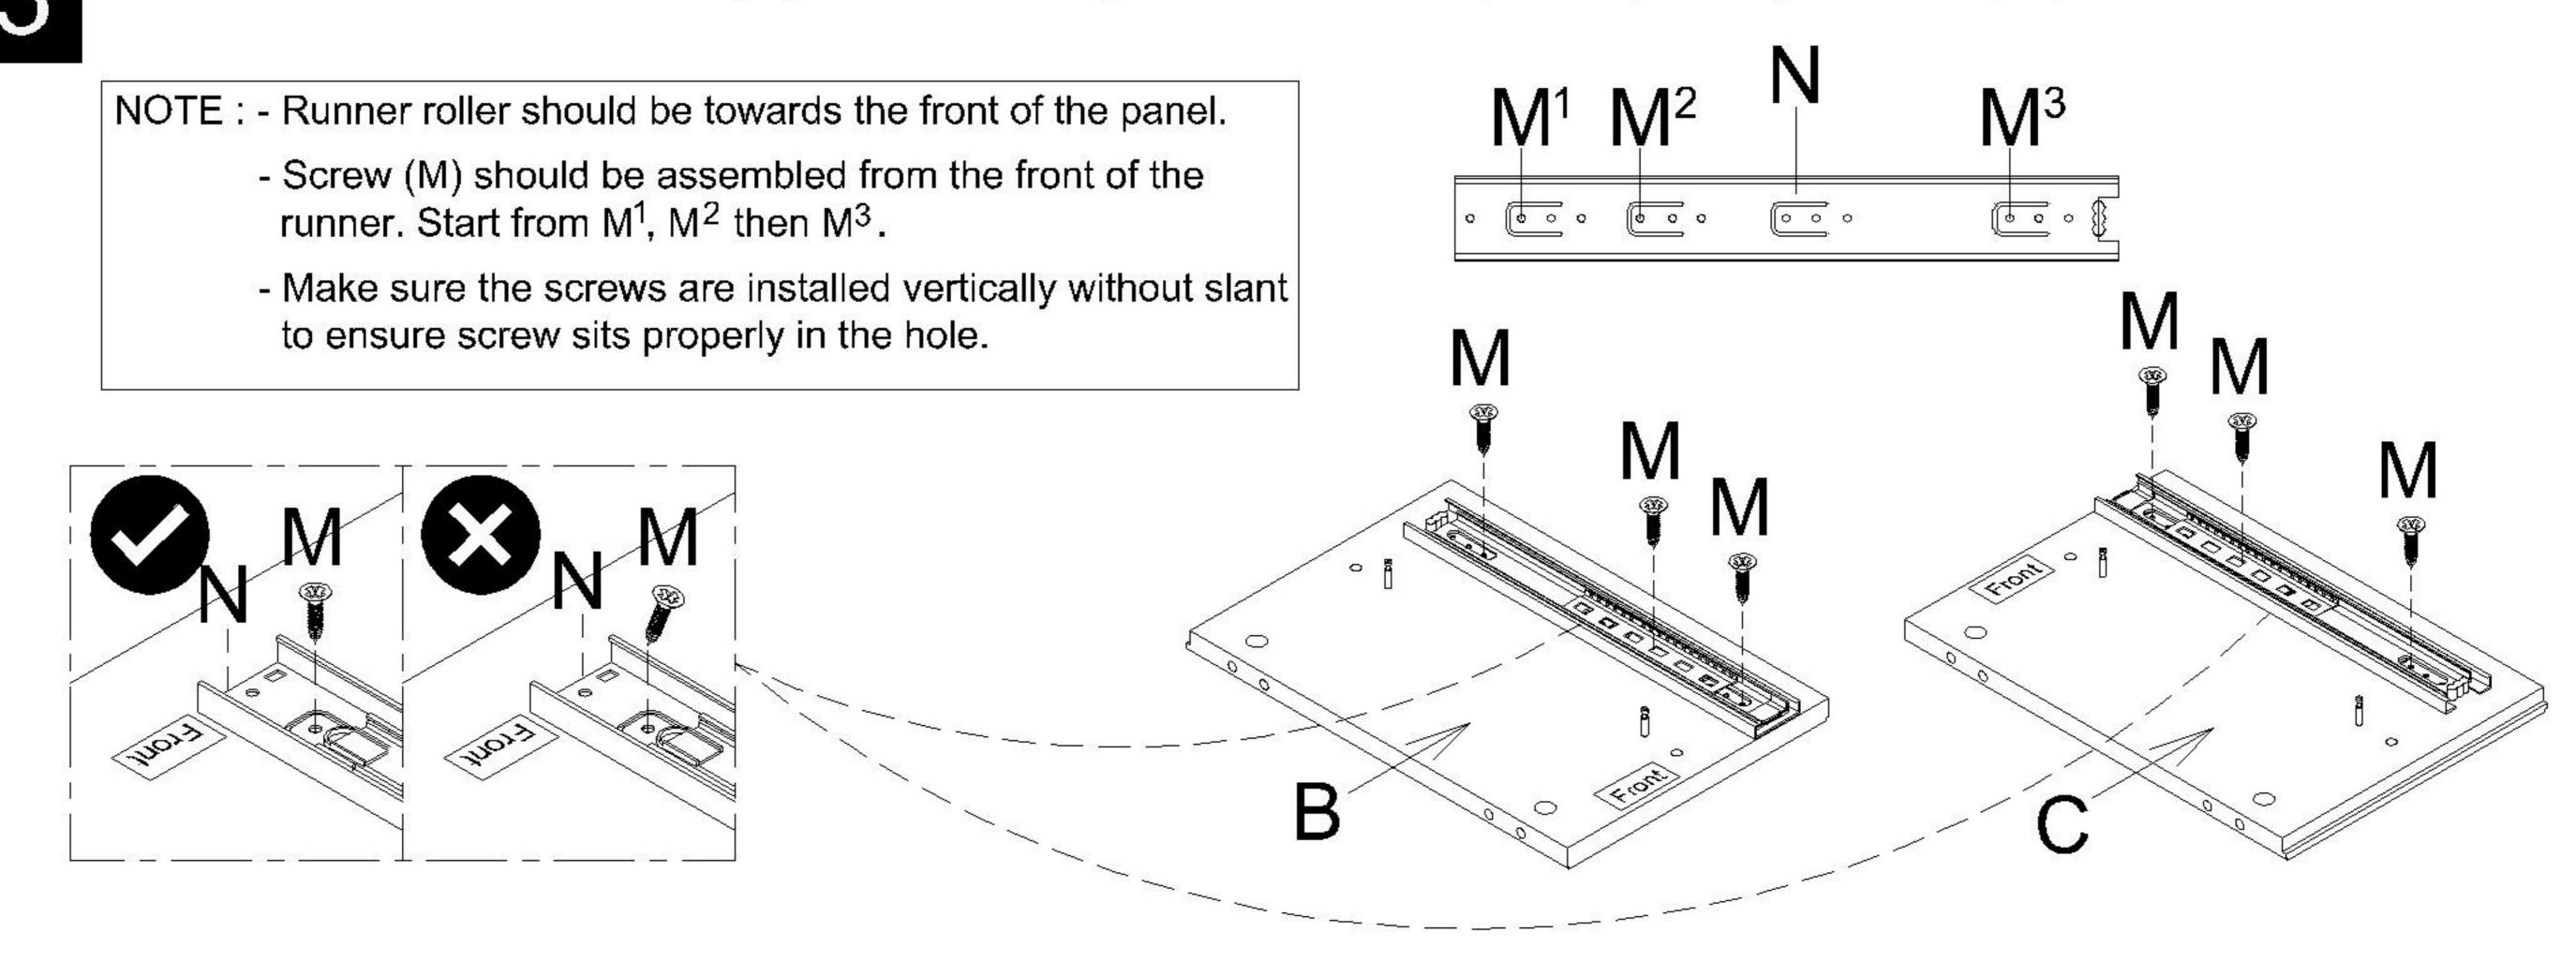


EXTENSION RUNNER DISASSEMBLE STEPS:

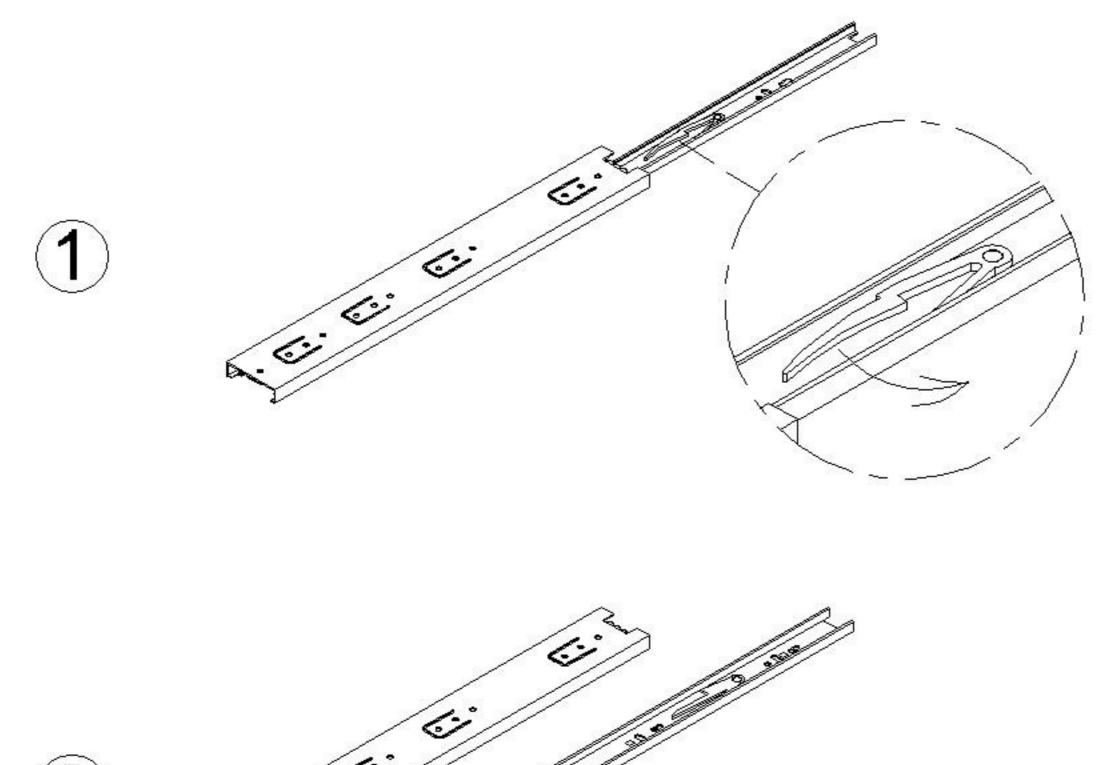


Disassemble the glides to tighten on panel. Glides will be disassembled in 2 parts, 1 part to fix on side panel and the other part to fix on drawer side.

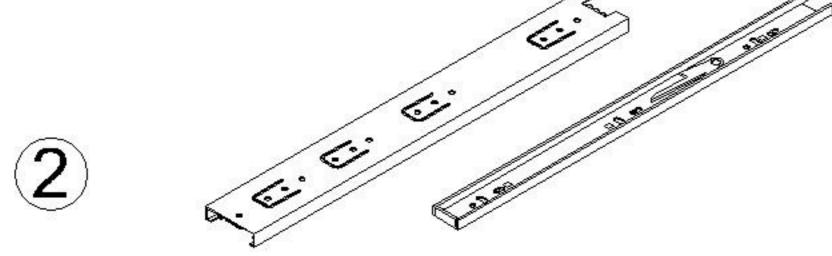


Insert Dowel (O) to Center Panel (G). Attach Cam Lock (P) to Center Panel (G).

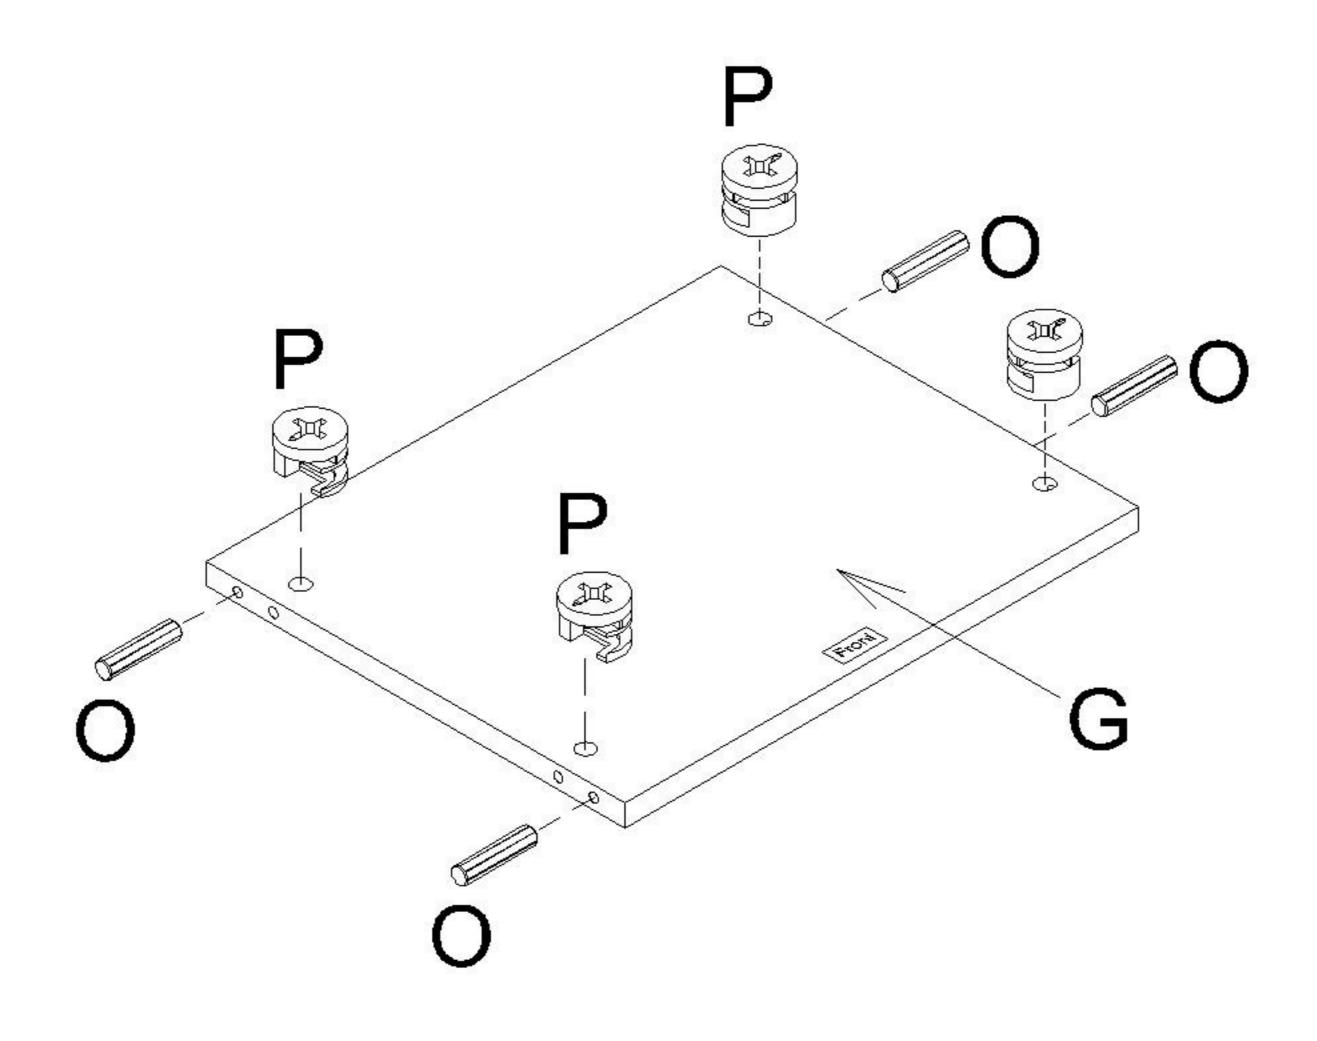


Attach Post (F) to Bottom Frame (D) and secure with Flat Washer (U), Spring Washer (V) and JCBC Bolt (W) and tighten with Allen Key (X) clockwise.

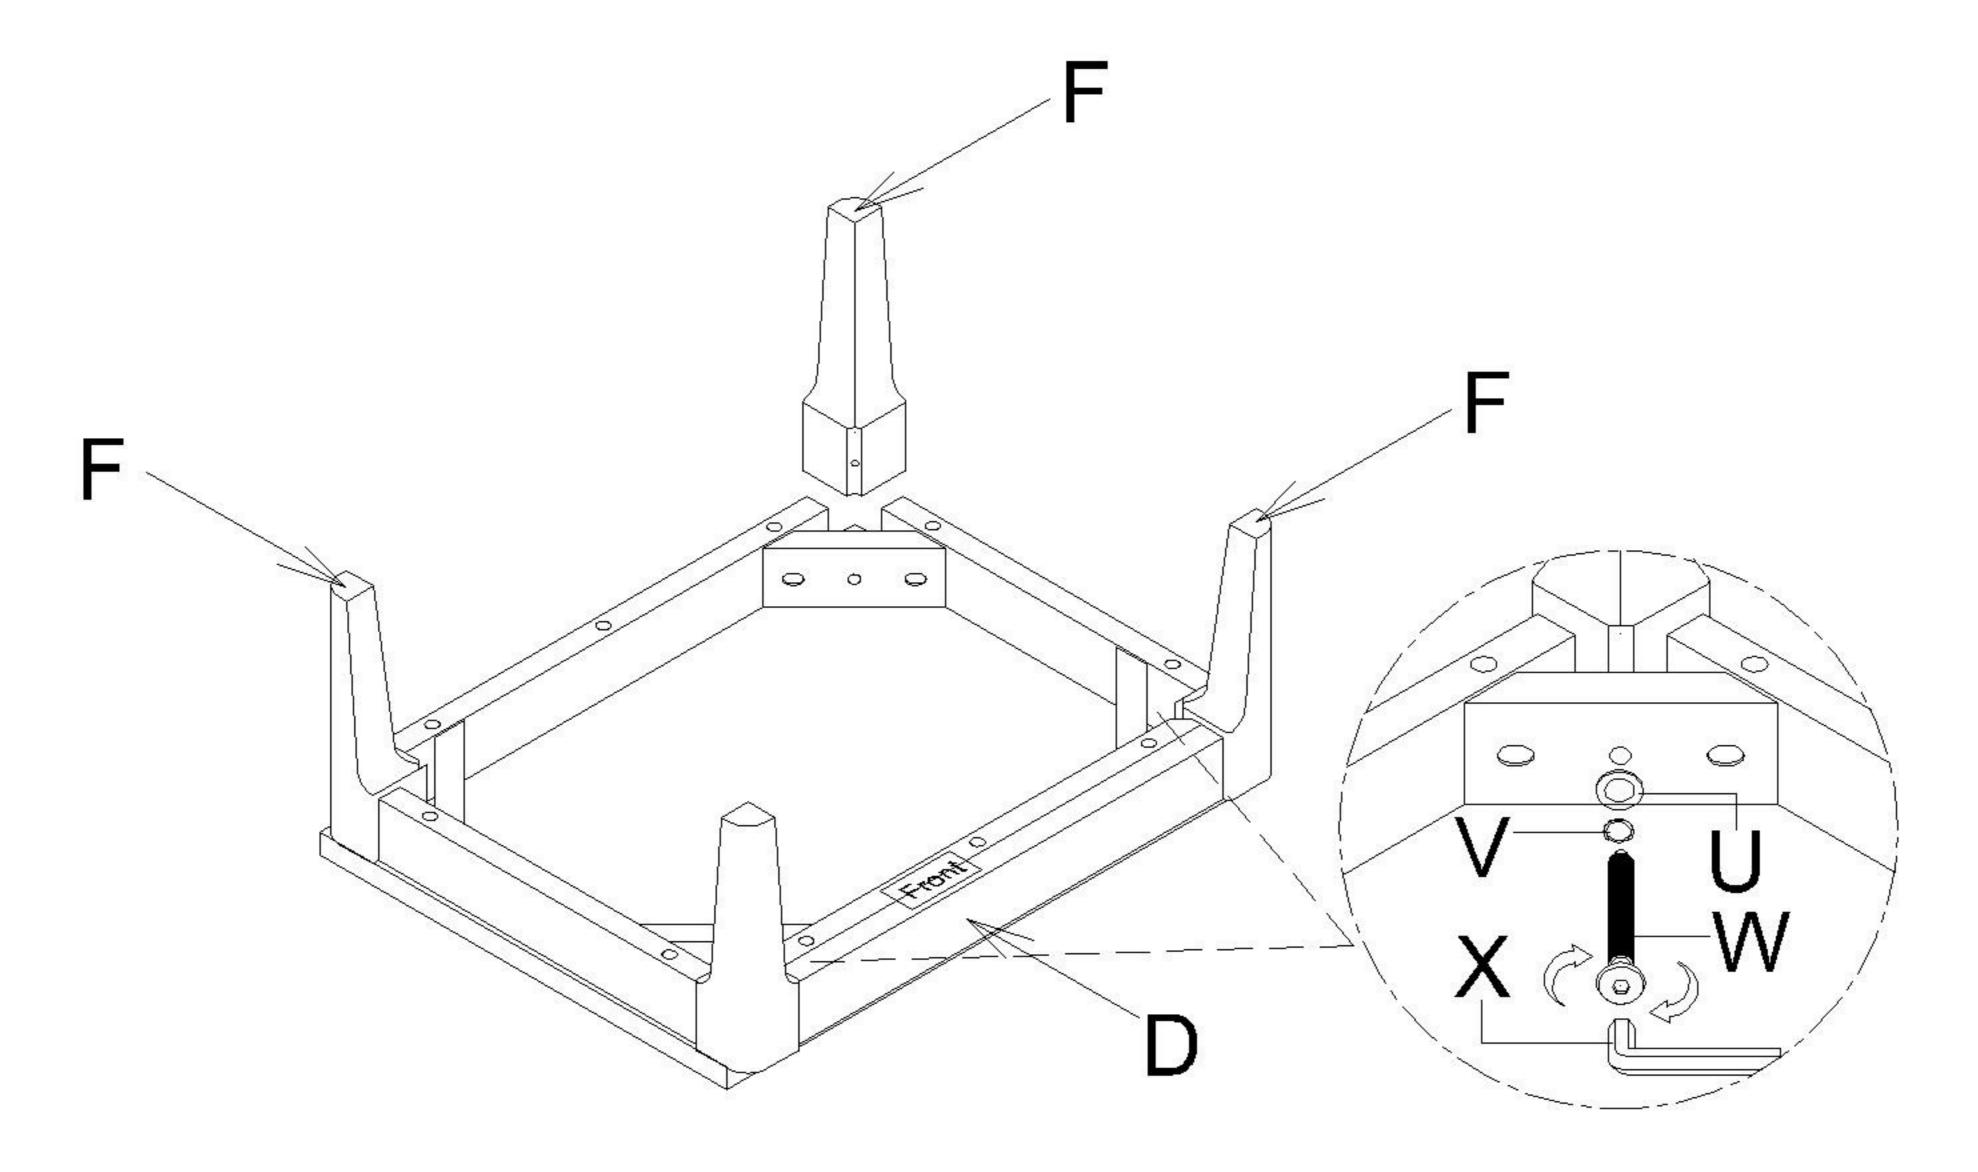


Insert and secure Cam Bolt (Q) to Bottom Frame (D).

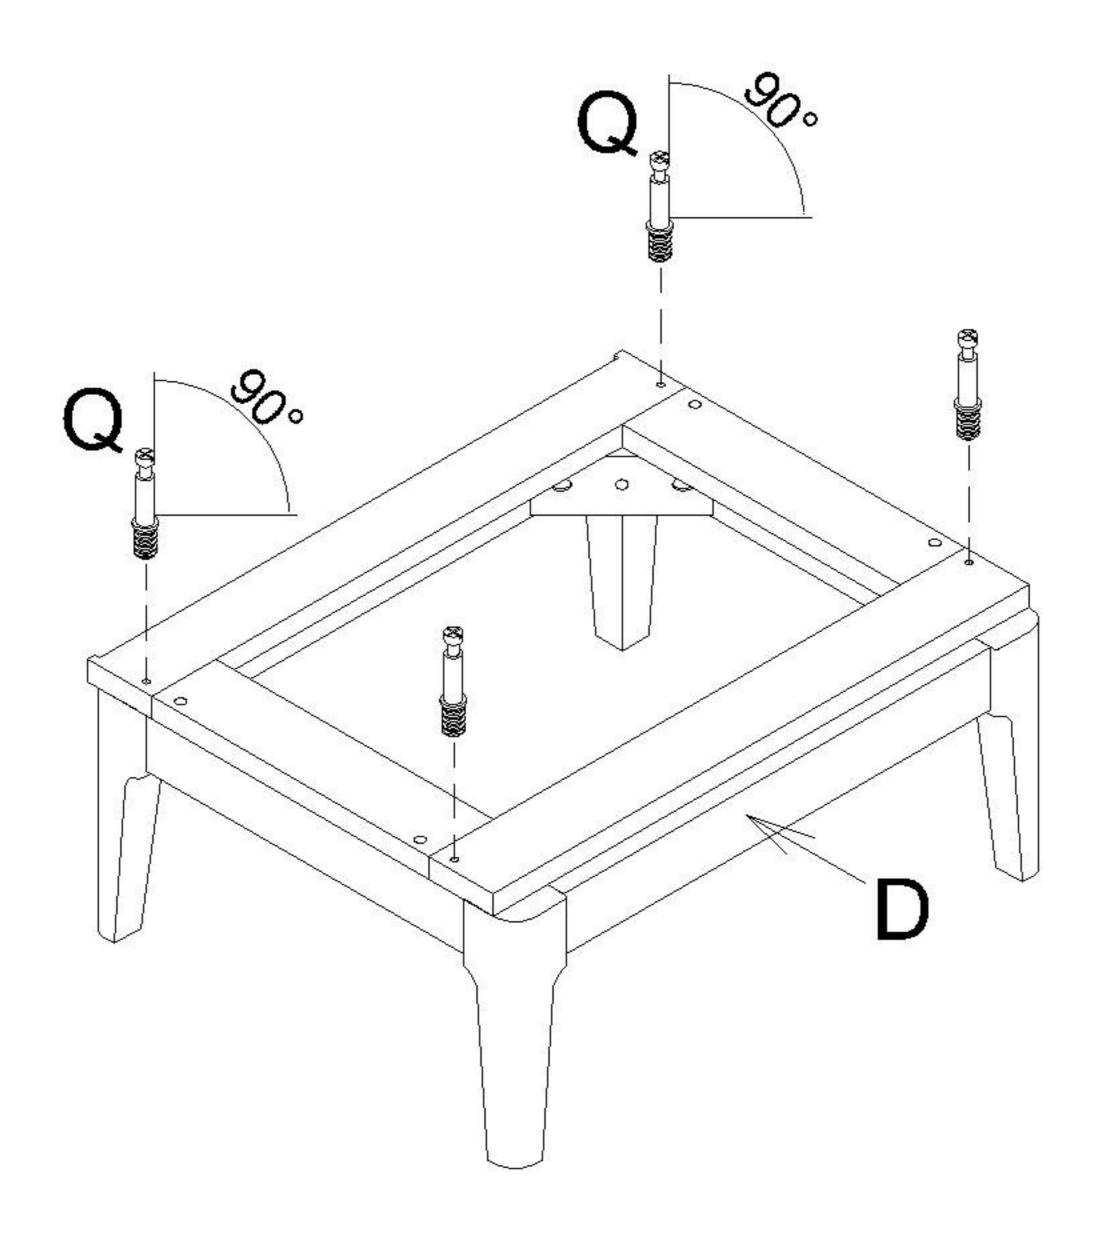


Attach Left & Right Side Panel (B & C) to Center Panel (G) and secure with Cam Lock (P). Cover Cam Lock (P) with Cam Lock Cover (S).

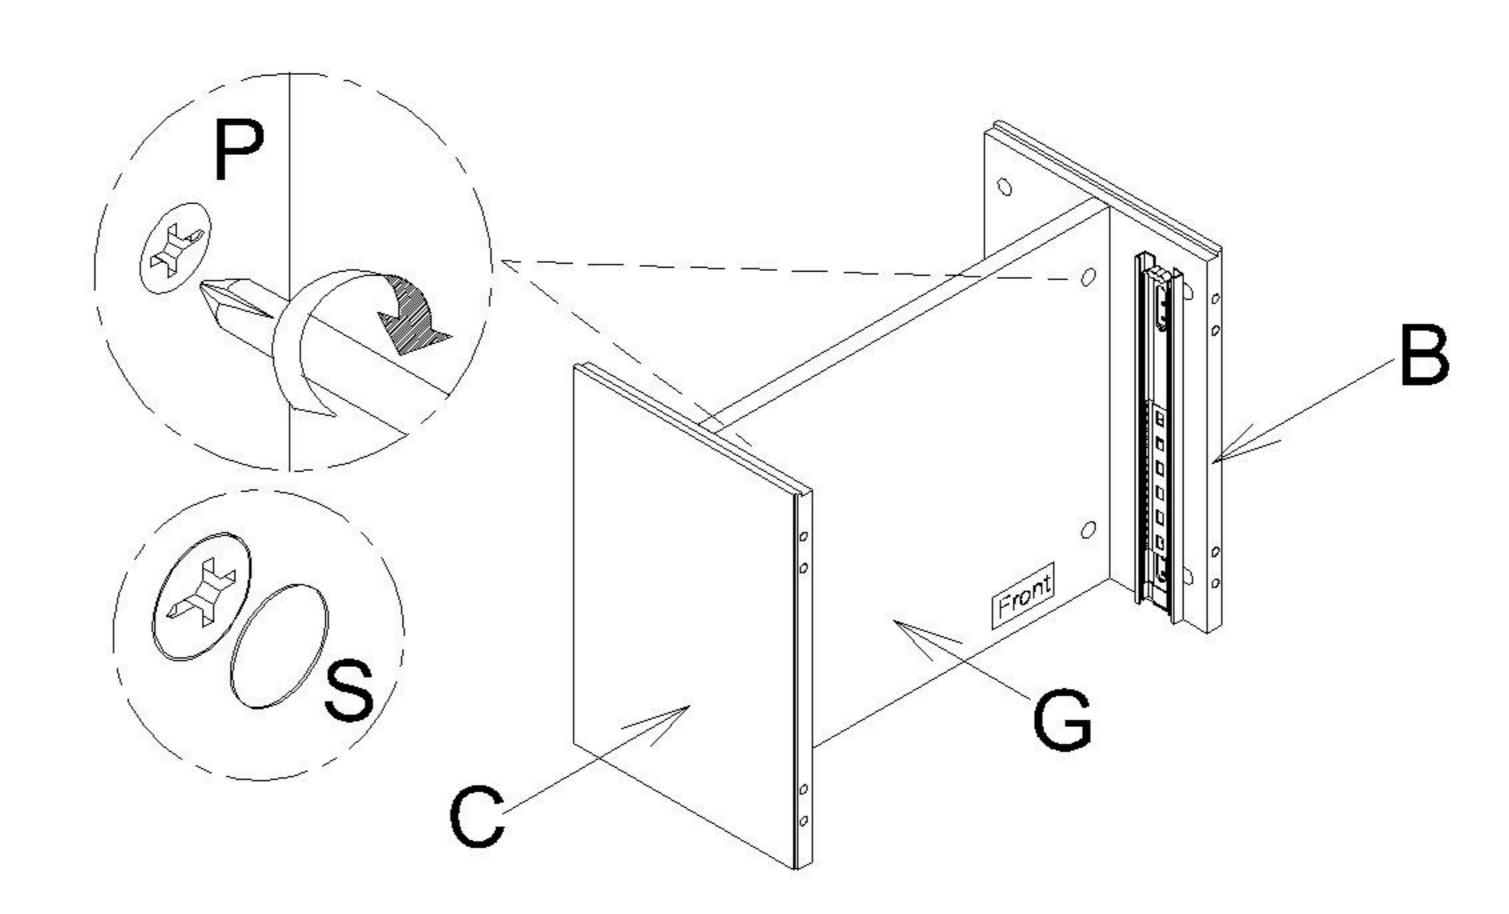




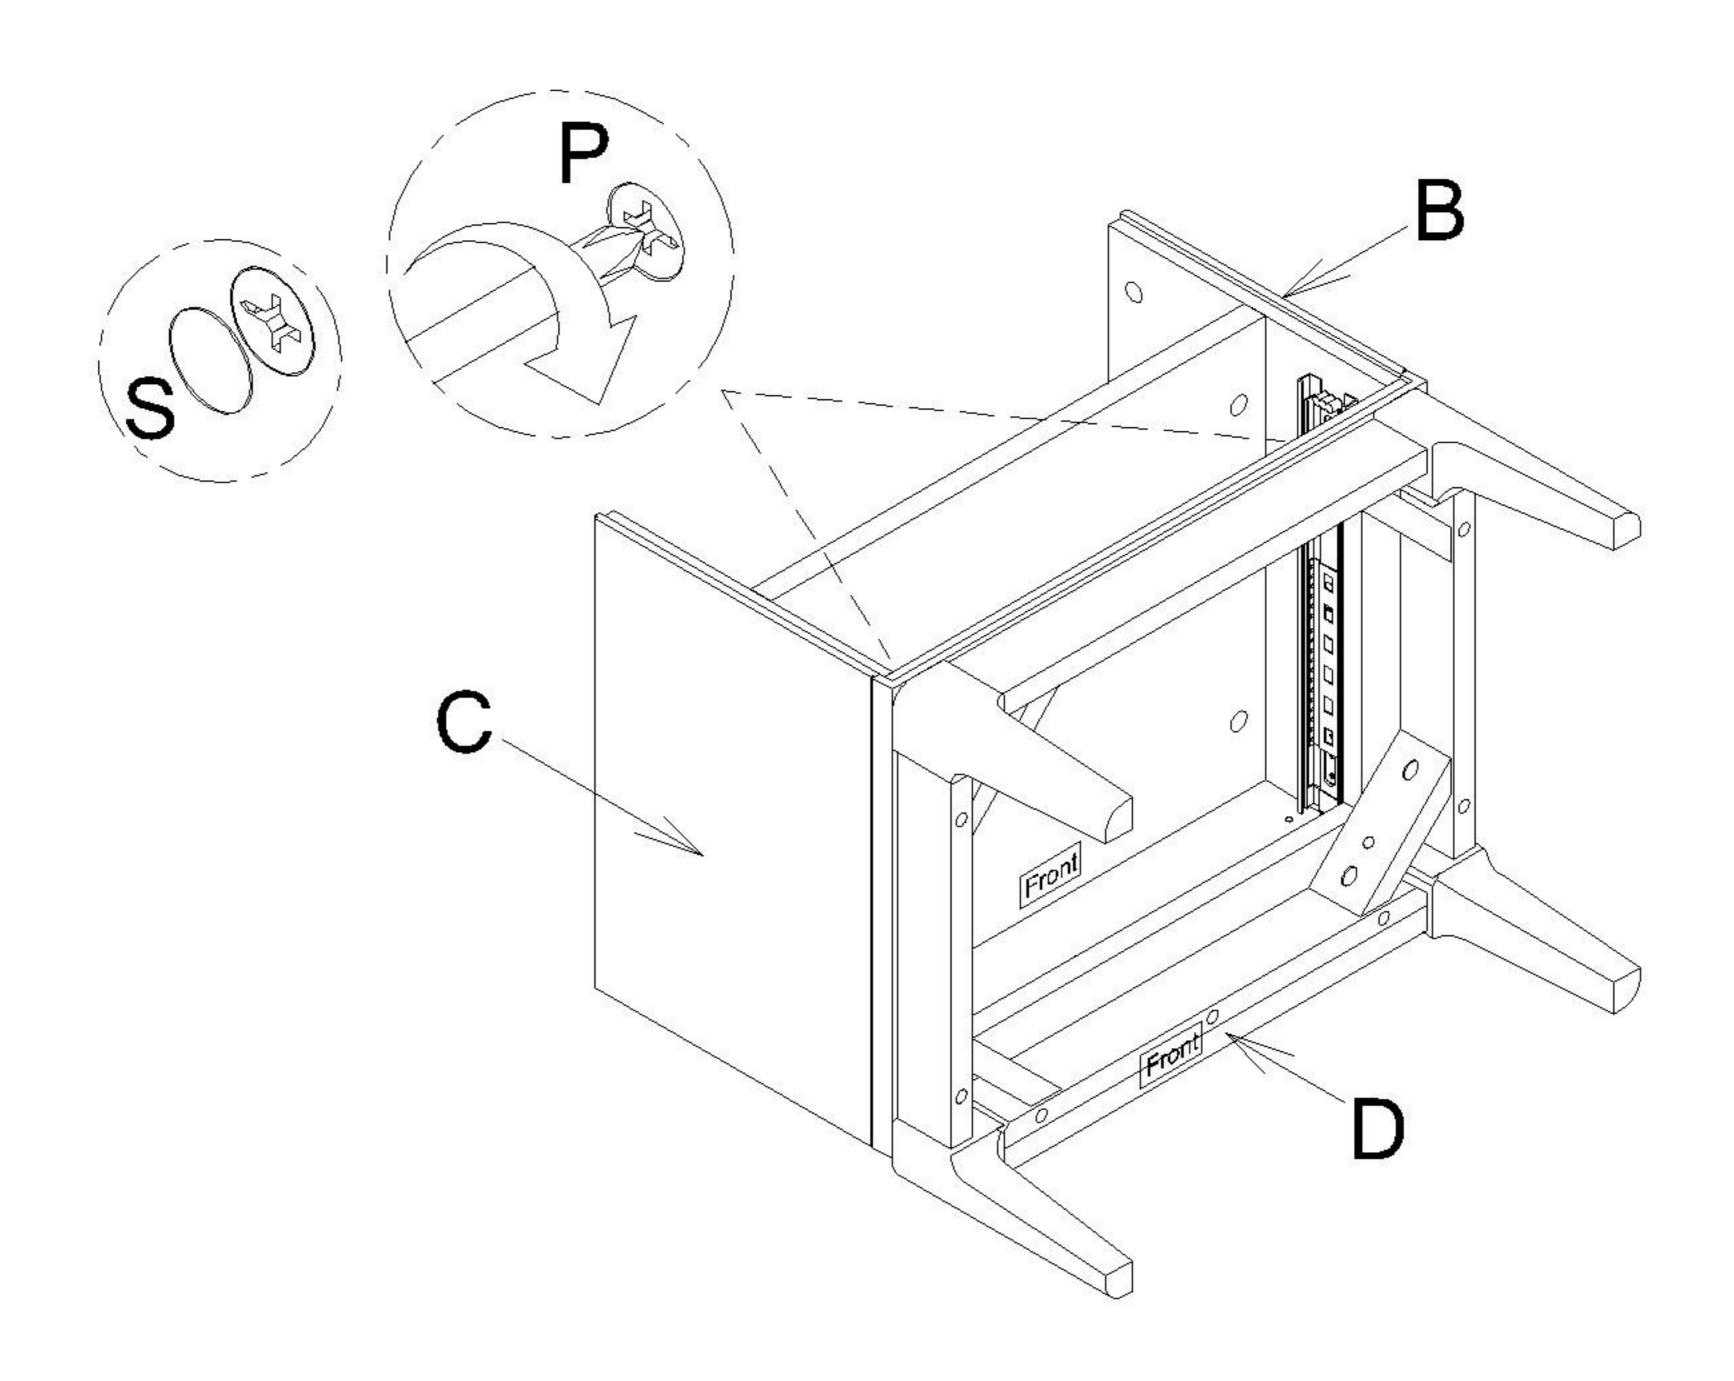


Attach Top Panel (A) to Left & Right Side Panel (B & C) and secure with Cam Lock (P). Cover Cam Lock (P) with Cam Lock Cover (S).

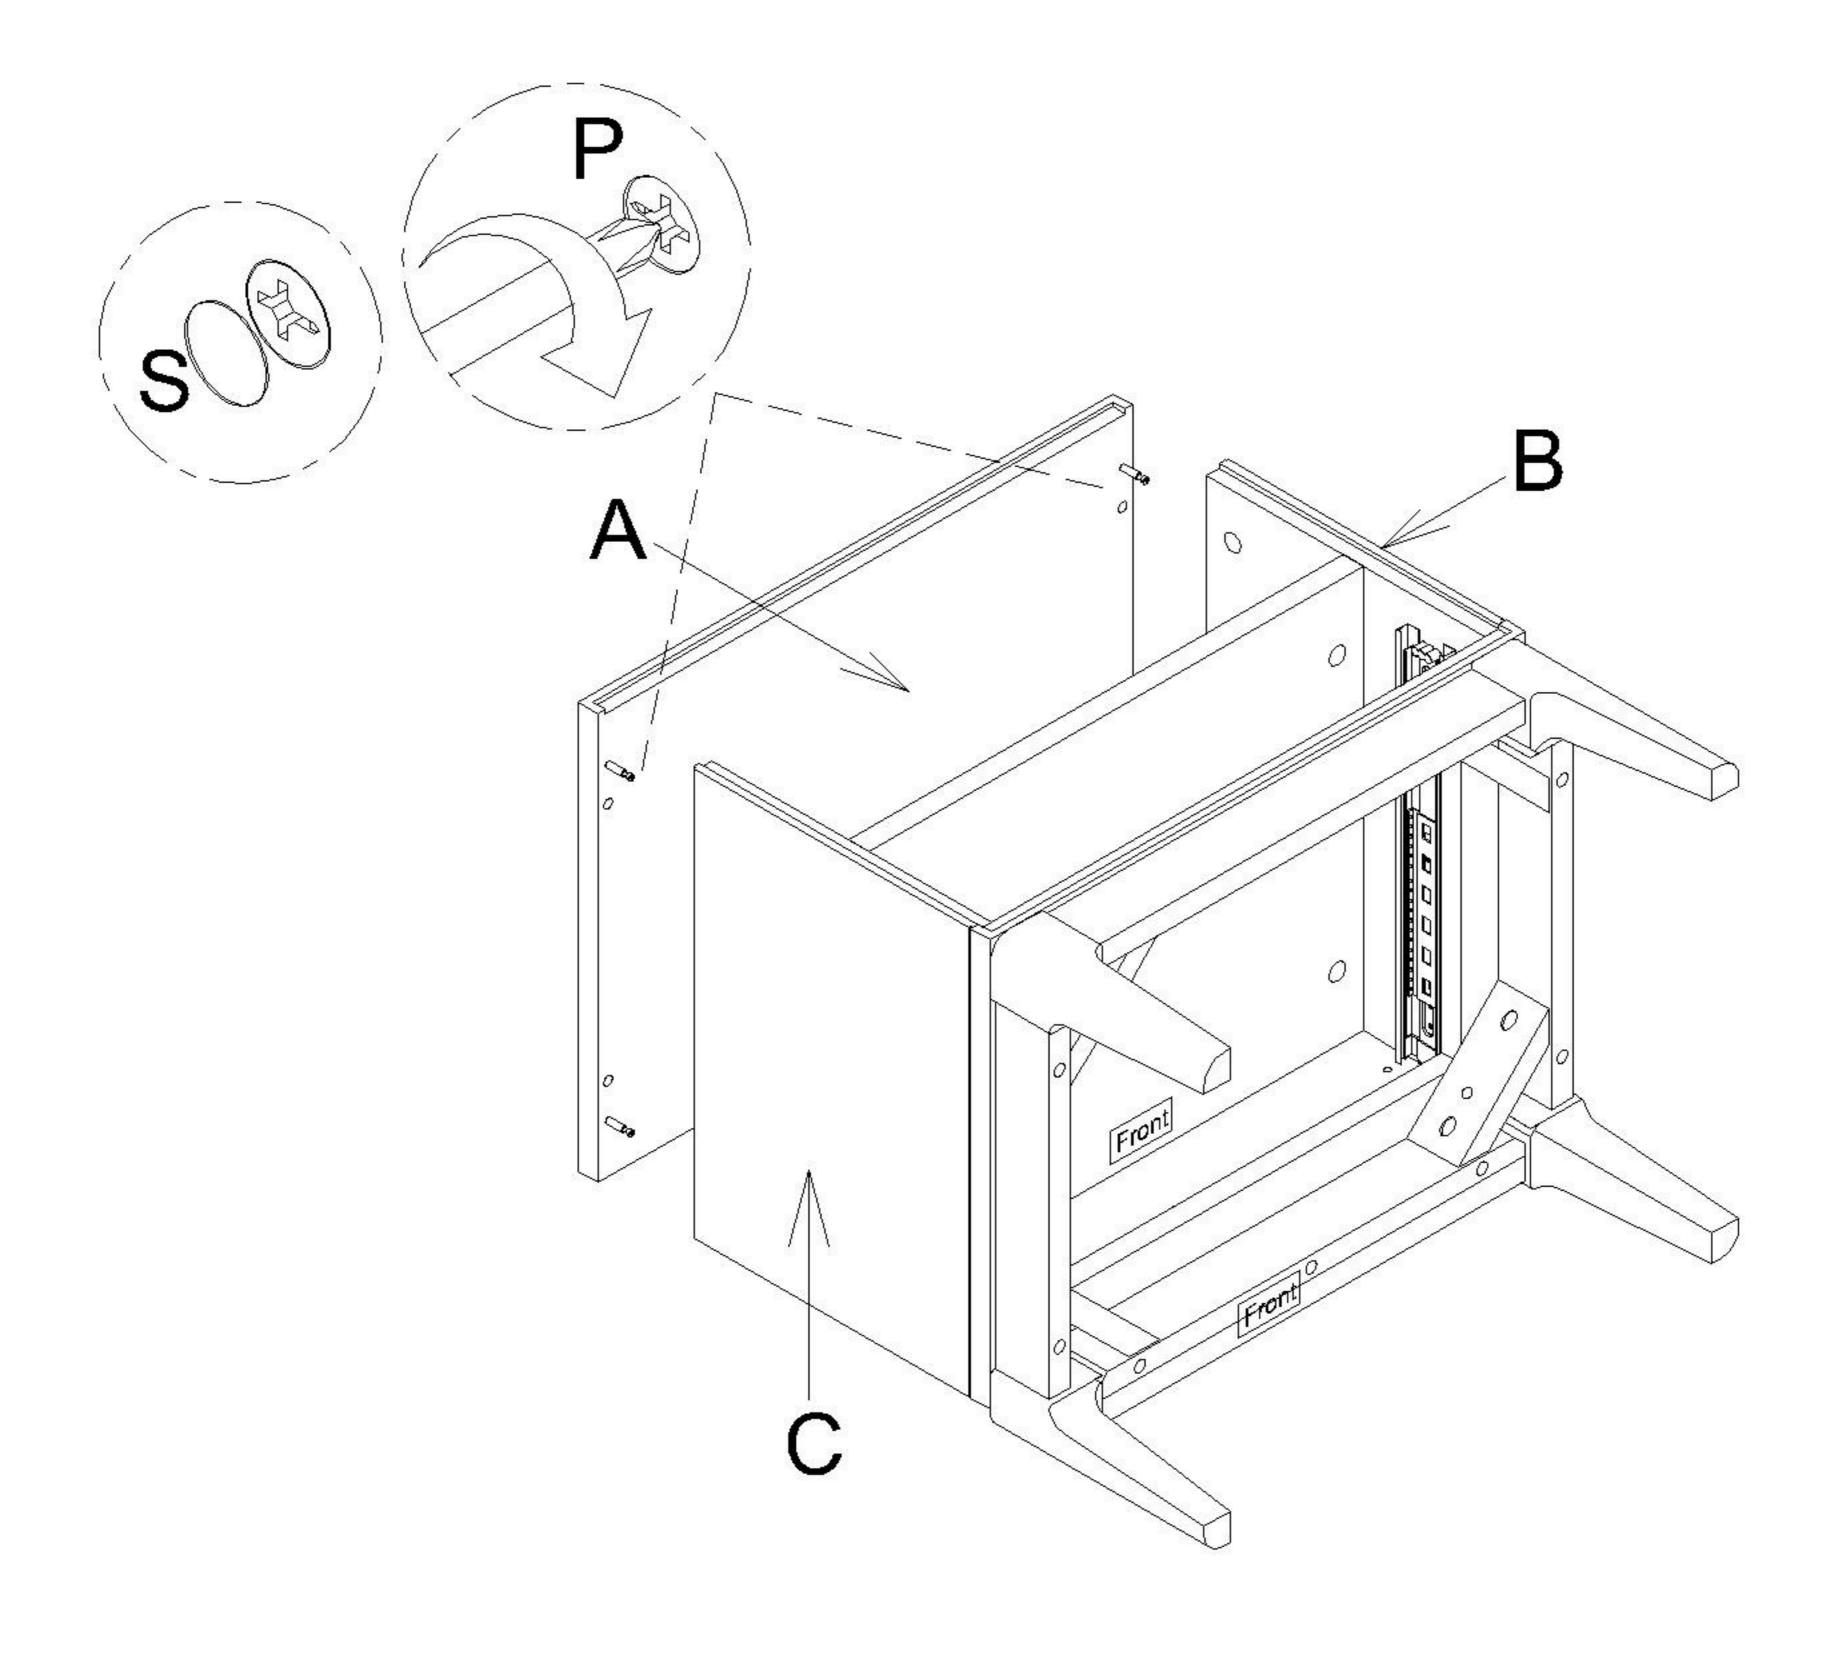


10 Attach Back Plywood (E) to assembled unit using Panhead Screw (T) to secure.

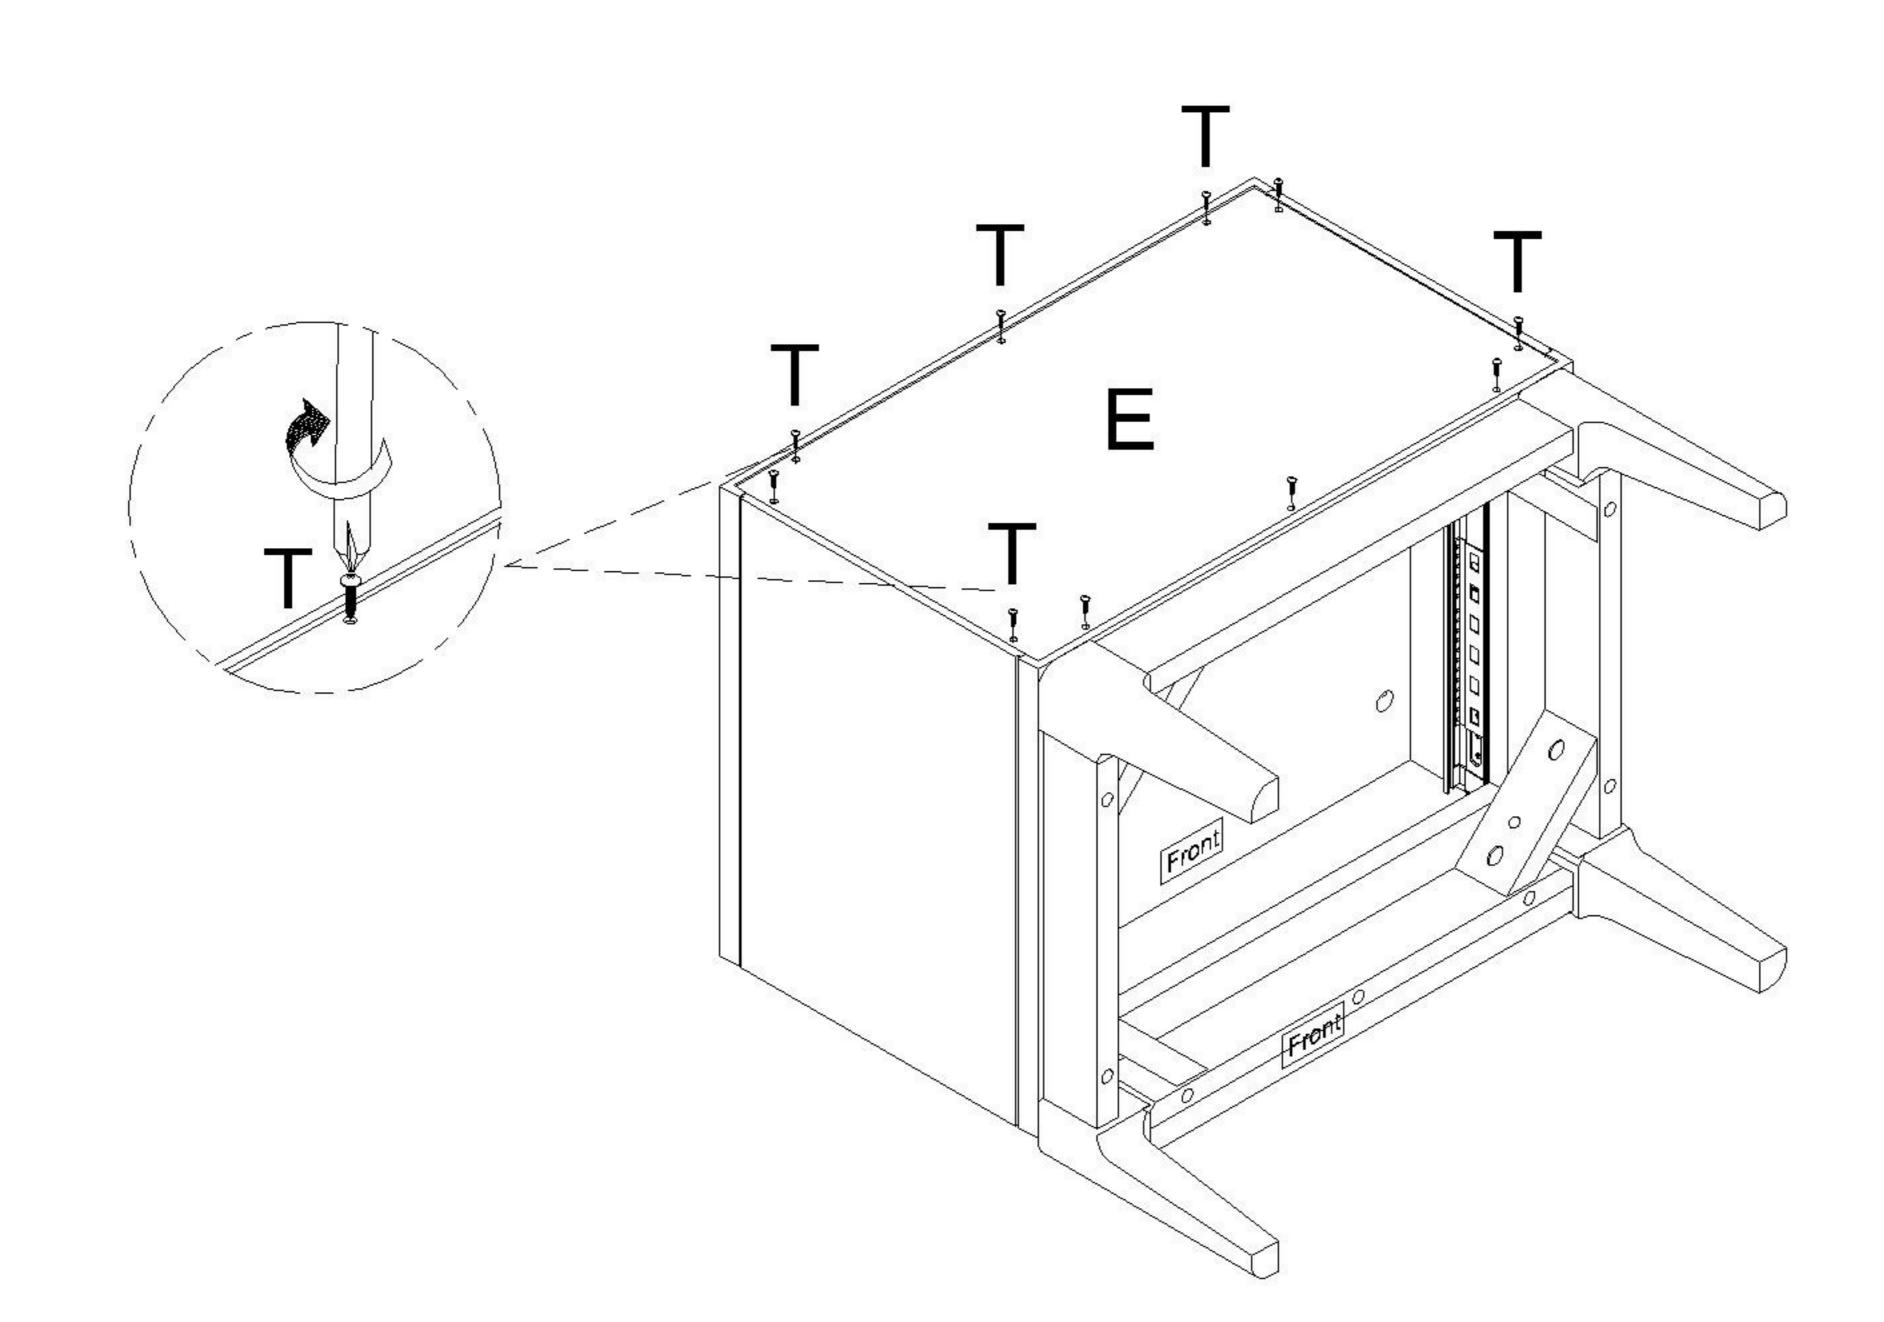


Attach Extension Runner (N) to Left & Right Drawer Side (I & L) using Screw (M) to secure.

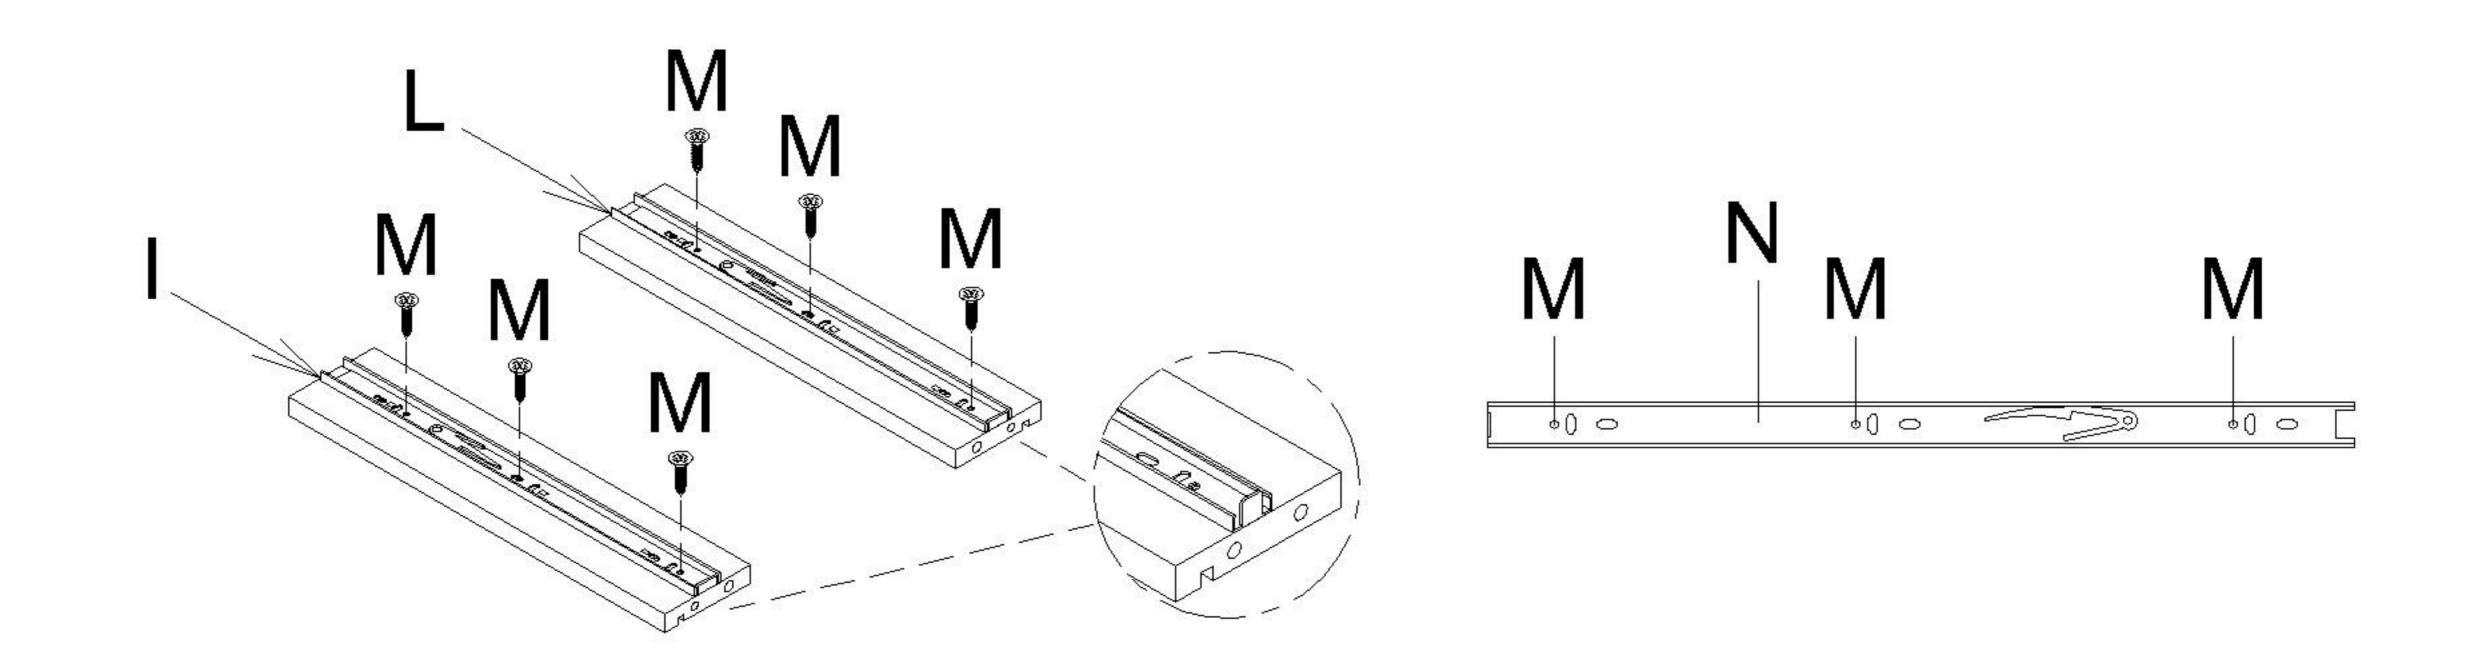


Flip over Left & Right Drawer Side (I & L). Insert Dowel (R) to Left & Right Drawer Side (I & L) & Drawer Back (J). Attach Cam Lock (P) to Left & Right Drawer Side (I & L) & Drawer Front (H).

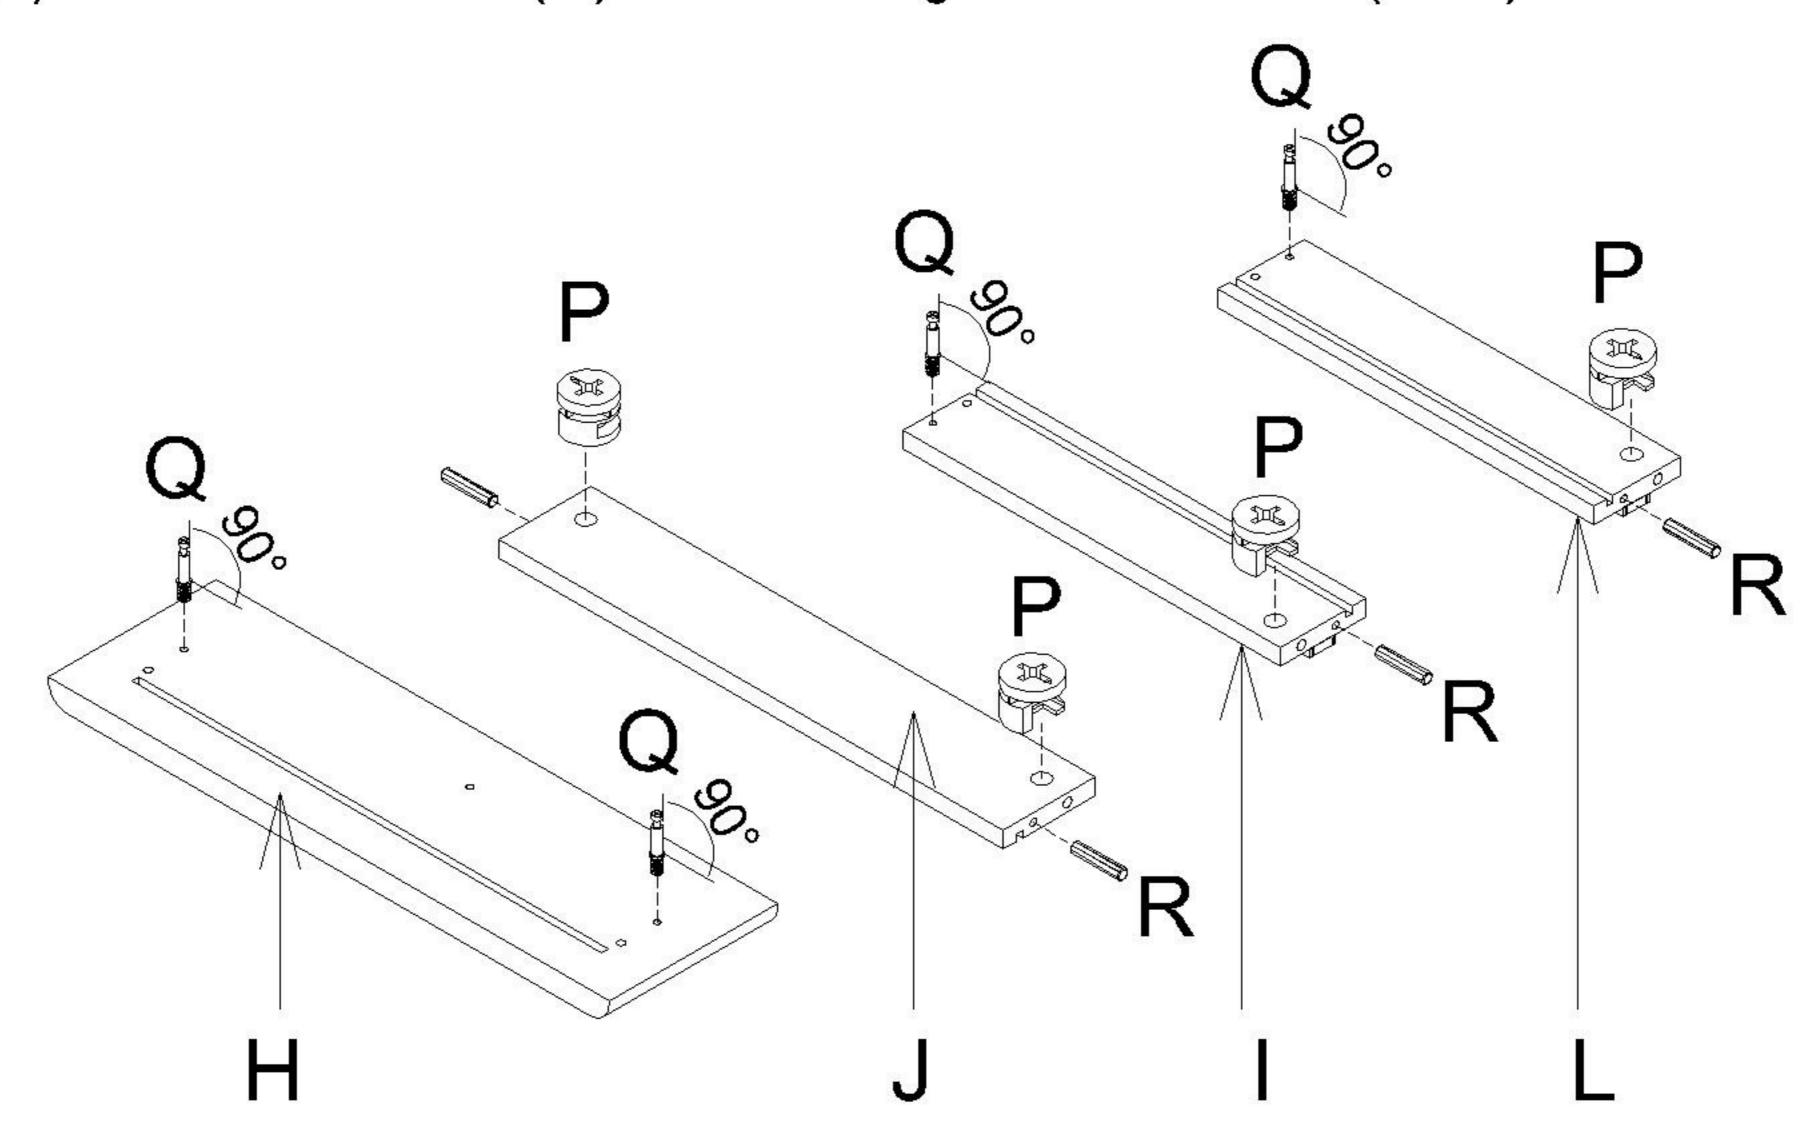


Attach Left & Right Drawer Side (I & L) to Drawer Back (J) and secure with Cam Lock (P). Use Cam Lock Cover (S) to cover Cam Lock (P).

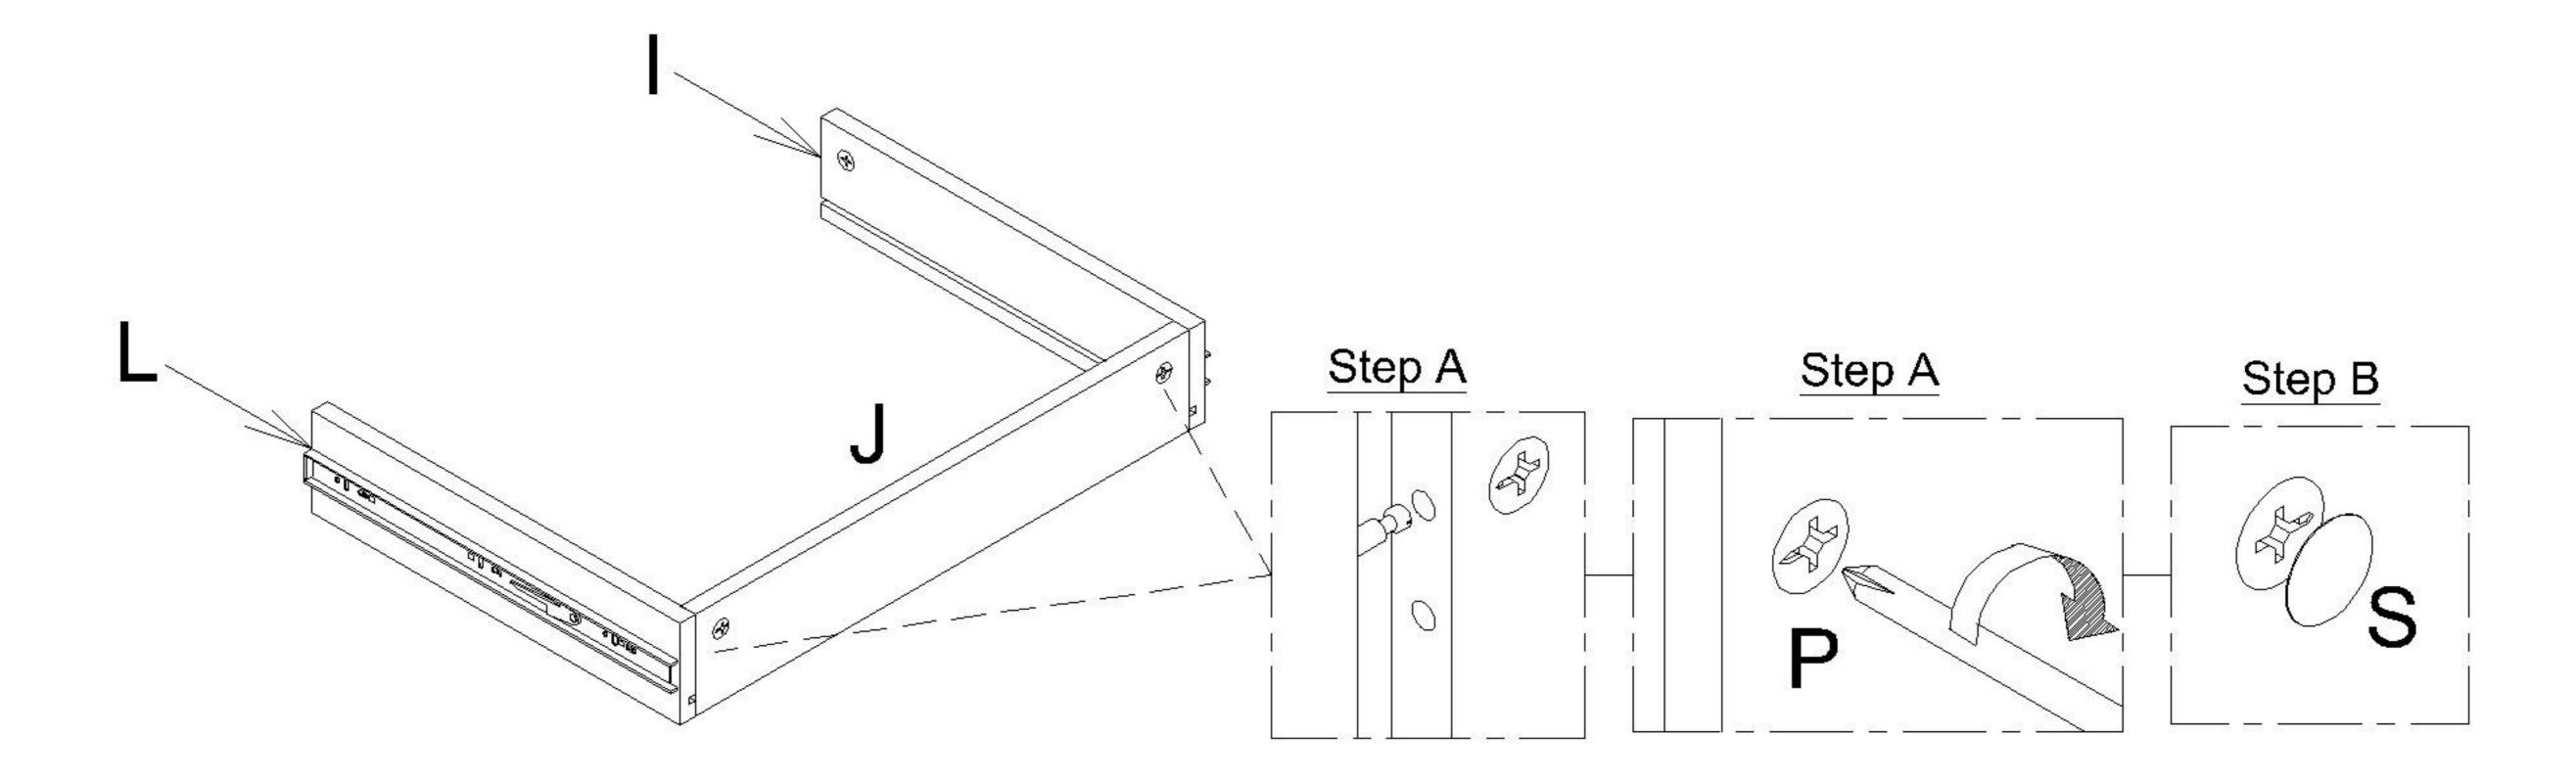


Slot Drawer Base (K) in corresponding grooves. Attach Drawer Front (H) to Drawer Box and secure with Cam Lock (P). Use Cam Lock Cover (S) to cover Cam Lock (P).

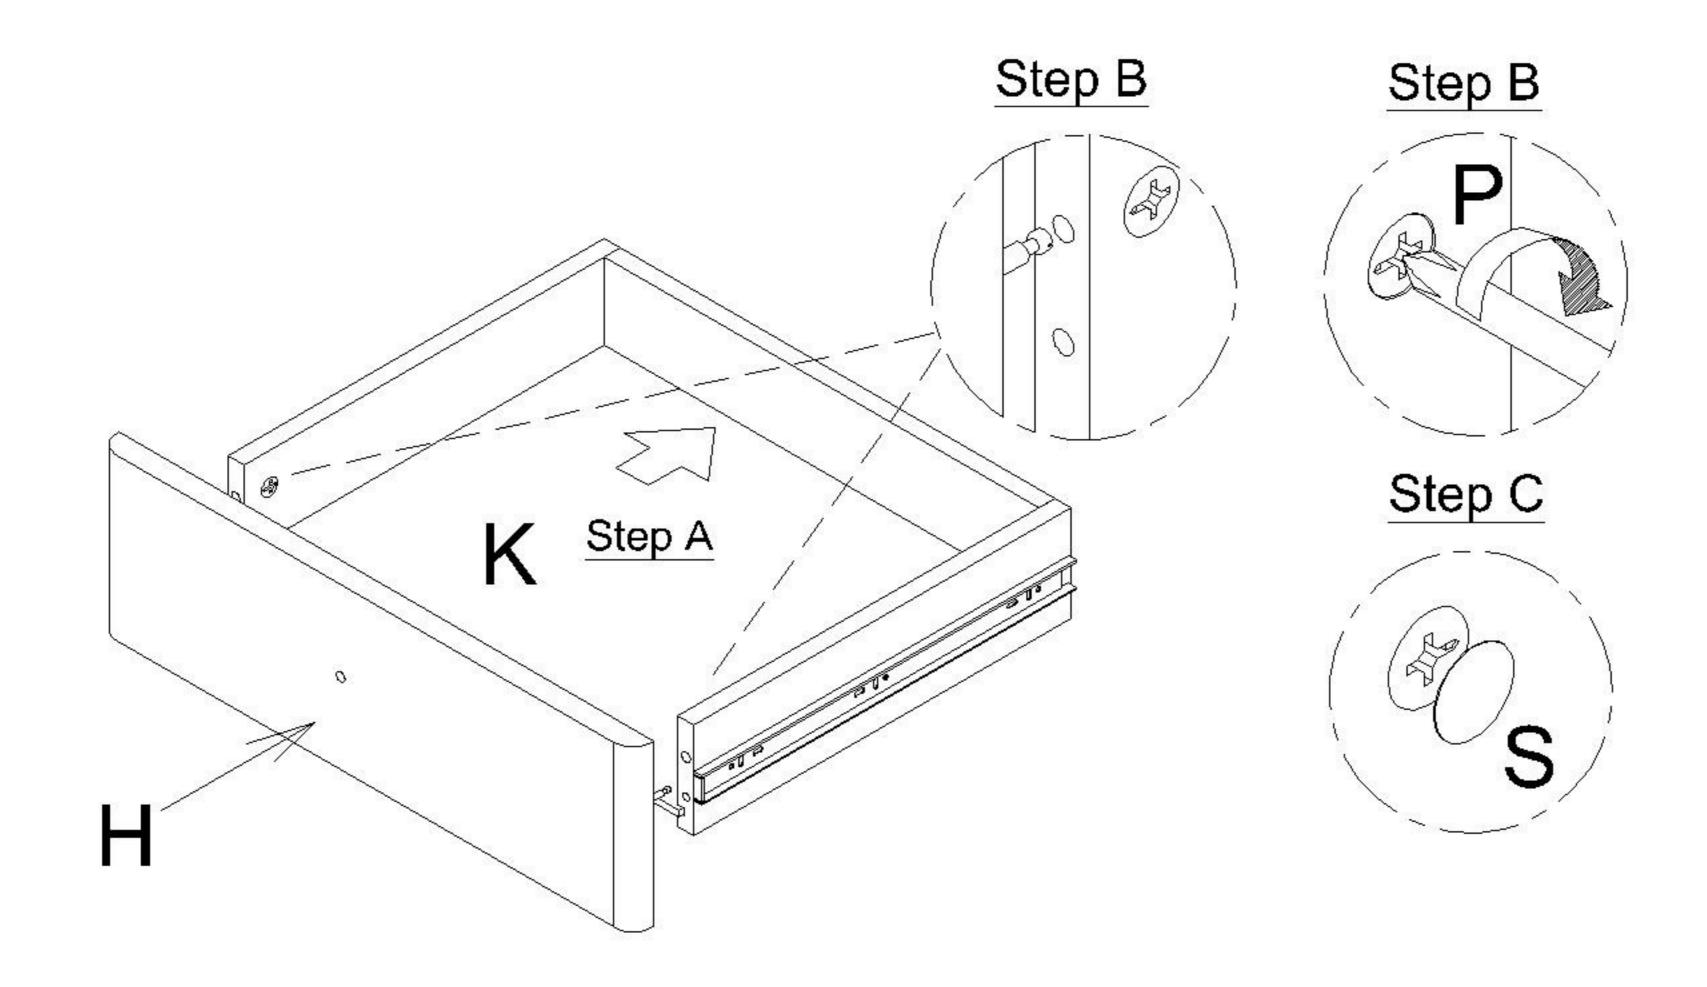


Attach Handle (Y) to Drawer Front (H) and secure using Panhead Screw (Z).

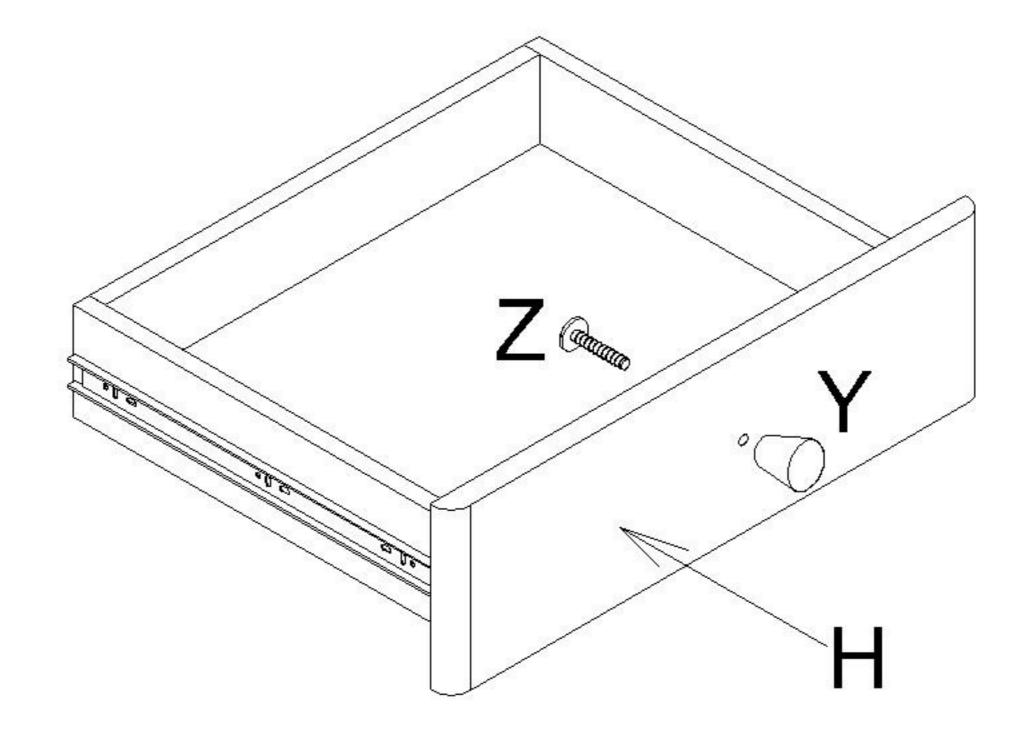

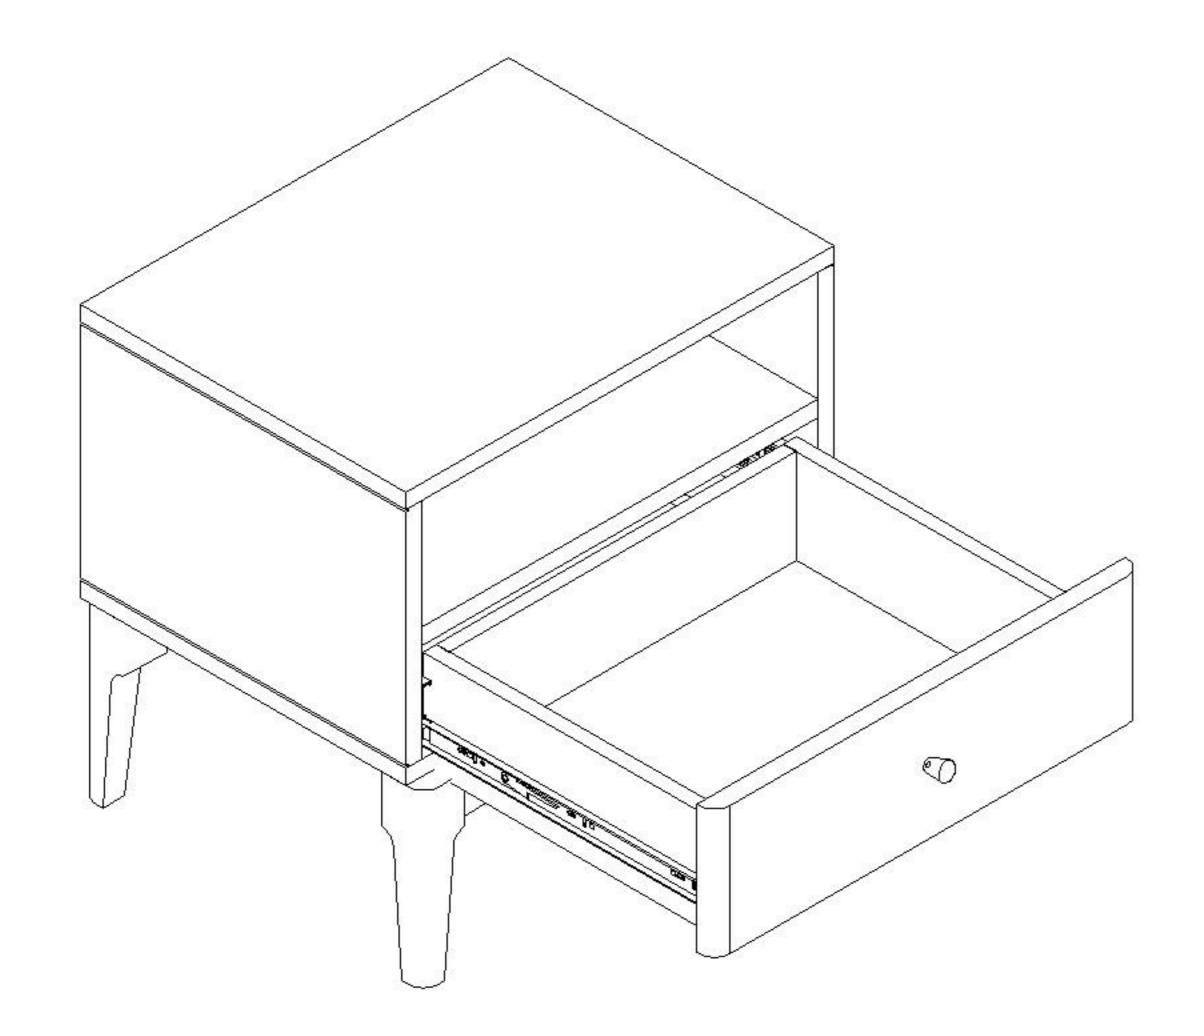

EXTENSION RUNNER ASSEMBLE STEPS:

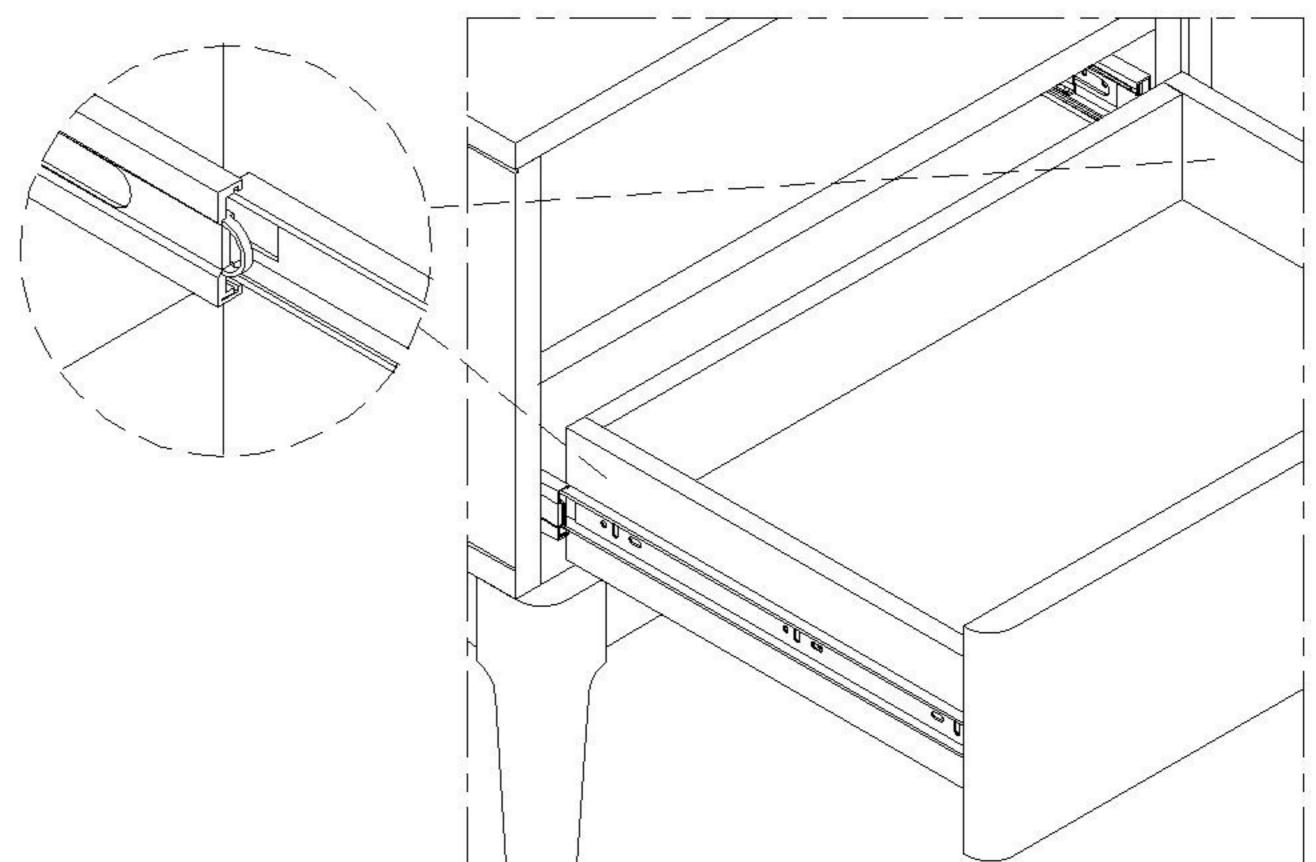

NOTE: Align and pull/push the triggers on both sides of drawer box into the metal track on interior side of side panel.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.