


User manual

NutriPro 1000 blender

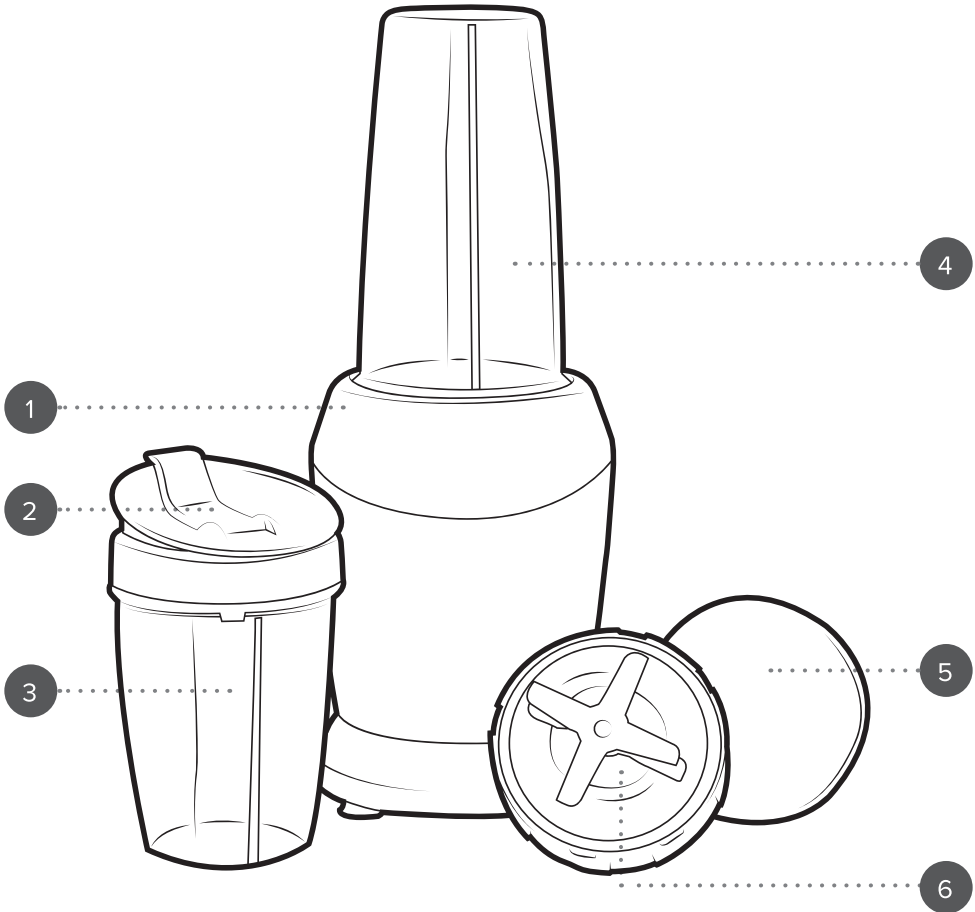

1. Blender base unit
2. Easy-drink lid
3. 800 millilitre blending cup

4. 1 litre blending cup
5. Storage lid
6. Six-blade lid attachment

Important safety

Please read carefully

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of this appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use any damaged accessories.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Do not touch any moving parts on this appliance during use, as this could cause injury.
- Do not touch any sections of the appliance that may become hot during use, as this could cause injury.
- Always unplug the appliance after use and ensure it has cooled fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.



WARNING: Do not touch sharp blades.

**UK
CA CE**

EN | Disposal of Waste Batteries and Electrical and Electronic Equipment



This product is labelled with this crossed out wheel bin symbol in accordance with European Directive 2012/19/EC to indicate that it must not be disposed of with your other household waste. Due to the presence of hazardous substances, mixtures or components, electrical and electronic devices that are not subject to selective sorting are potentially dangerous to the environment and human health. Please check your local city office or waste disposal service for the return and recycling of this product.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD260324/MD000000/V1

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the appliance away from other heat emitting appliances.
- Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.
- Do not immerse the electrical components of this appliance in water or any other liquid.
- Do not operate the appliance with wet hands.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use any damaged accessories.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Do not place boiling water or very hot liquid in the appliance.
- Do not dry blend ingredients; always add a small amount of liquid.

- Do not overload the appliance as the mixture level may rise during blending.
- Do not touch any moving parts on this appliance during use, as this could cause injury.
- Do not touch any sections of the appliance that may become hot during use, as this could cause injury.
- Do not use broken or loose cutting or rotating blades.
- Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.
- Always unplug the appliance after use and before any cleaning or user maintenance.
- Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



WARNING: Do not touch sharp blades.

Care and maintenance

STEP 1: Switch off and unplug the blender from the mains power supply before performing any cleaning or user maintenance.

STEP 2: Wipe the blender base unit with a soft, damp cloth and allow to dry thoroughly.

STEP 3: To clean the blending cups, either rinse under a tap, or add soapy water and blend for 30 seconds.

STEP 4: Empty the water, fill again with fresh water and repeat until clean.

Never touch the blades; using extreme caution, clean the blade with a brush and dry carefully.

Never immerse the blender base unit or the underside of the six-blade lid attachment in water or any other liquid.

Do not use harsh or abrasive scourers to clean the blender, as this could cause damage.

The blender and accessories, including the six blade lid attachment, are not suitable for use in a dishwasher.



NOTE: Always clean the blender immediately after each use.



WARNING: Handle the six-blade lid attachment with care, as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing the attachments.

Instructions for use

Before first use

Before using the blender for the first time, wash all of the accessories and the interiors of the blending cups in warm, soapy water, then rinse and dry thoroughly.

Wipe the blender base unit with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the blender base unit in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the blender or its accessories, as this could cause damage.



NOTE: When using the blender for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the blender.



WARNING: Do not touch sharp blades. Max. continuous operation time is 30 seconds. Leave to cool down for at least 1 minute before using again.

Using the blender

STEP 1: Position the blender base unit onto a flat, stable surface, at a height that is comfortable for the user.

STEP 2: Place the ingredients into the desired blending cup, making sure that they do not exceed the max. fill mark.

STEP 3: Pour a small amount of liquid into the blending cup; this will help to blend the ingredients.

STEP 4: Secure the six-blade lid attachment onto the blending cup by twisting it in a clockwise direction.

STEP 5: Plug in and switch on the blender at the mains power supply.

STEP 6: To pulse blend the ingredients, invert the blending cup so that the six-blade lid attachment is facing downwards, align the three tabs with the corresponding slots in the blender base unit and then push it down.

STEP 7: For a continuous blend, press the blending cup down and twist it in a clockwise direction to lock it into position. To stop blending, twist the blending cup in an anticlockwise direction and lift it up and away from the blender base unit.

STEP 8: Switch off and unplug the blender from the mains power supply.

STEP 9: Remove the six-blade lid attachment by twisting it in an anticlockwise direction and then replace it with either the easy-drink lid or storage lid, as required.



NOTE: Check that the lid is securely fitted before use. If the blades are not running smoothly, stop the blender and carefully remove the six-blade lid attachment. Add a small amount of cold liquid or reduce the quantity of the ingredients in the blending cup. When mixing liquid, use a tall container or blend small quantities at a time to reduce spillage, splattering and the possibility of injury from scalding.



CAUTION: Take care when handling the six-blade lid attachment, as the blades may get hot during use.



WARNING: Do not blend warm or hot liquid or food, as this may cause a pressure build-up and, in turn, serious injury. Do not blend for long periods of time. Max. operation time is 30 seconds; allow the blender to cool for 1 minute before using it again. Using

the blender for longer than 30 seconds at a time will cause the temperature to increase, which may in turn lead to a pressure build-up. If this happens, switch off and unplug the blender from the mains power supply and allow it to cool thoroughly before attempting to remove the six-blade lid attachment. Do not immerse the blending cup in cold water at this time. Do not exceed the max. fill mark when adding ingredients to the blending cup, as this could cause spillage and may damage the blender. Do not operate the blender if the blending cup is cracked, broken or empty.

Handy hint

If the ingredients do not blend evenly, remove the blending cup from the blender base unit. Shake the blending cup to redistribute the ingredients and then blend once more.

Suggested uses for the blending cups

Purpose	Suggested blending cup	Type of food
Mixing	800 millilitre 1 litre	Batter Dips
Sauces	800 millilitre 1 litre	Vinaigrettes Salad dressings Simple sauces
Frozen Blending	800 millilitre 1 litre	Ice Frozen fruit Ice cream
Nutrient/Super smoothies	800 millilitre 1 litre	

Troubleshooting

Symptom	Possible cause	Solution
The blender will not operate.	The blender is not connected to the mains power supply. The six-blade lid attachment is not correctly secured to the blending cup.	Plug in and switch on the blender at the mains power supply. Checking that the threads are correctly aligned, twist the six-blade lid attachment in a clockwise direction until it is secure.
The required lid will not secure to the blending cup.	The tabs on the lid are not correctly aligned with the slots.	Position the blending cup on a level surface and attach the required lid to the top of the blending cup, ensuring that the tabs are correctly aligned. Twist the required lid in a clockwise direction until it is secure.
The drink still contains lumps.	There are too many ingredients in the blending cup.	Reduce the amount of ingredients in the blending cup.
The drink is watery and lacking flavour.	The ingredients have been over blended.	Use the blender to pulse blend ingredients in short bursts for the best results.
The blending cup is leaking.	The required lid is not correctly secured to the blending cup.	Checking that the threads are correctly aligned, twist the required lid in a clockwise direction until it is secure.
The ingredients do not blend well.	The ingredients may need readjusting.	Use the blender to pulse blend ingredients in short bursts for the best results. For frozen ingredients, pulse blend in short bursts of approximately 2–5 seconds.

Storage

Reassemble the blender.

Check that the blender is cool, clean and dry before storing in a cool, dry place.

Specifications

Product code: EK2002V4

Operating voltage: 220–240 V ~ 50/60 Hz

Power: 1000 W

UK
CA CE

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD240120/MD150424/V4