



bestchoiceproducts



INSTRUCTION MANUAL

Electric Pressure Cooker



bestchoiceproducts

Thank you for choosing us! Since 2002, Best Choice Products has been bringing customers high-quality products at the absolute lowest price. With everything ranging from instruments and toys to furniture and outdoor, we've got your everyday living essentials covered. We're centered around a customer-first philosophy - with free shipping, exceptional customer service, and a catalog sourced with you in mind.



WARNING

Be extremely careful of hot steam escaping the pressure limiting device.

Do not place hands, objects, or obstructions above the pressure cooker.



NOTICE

Please retain these instructions for future reference.

- Read all instructions before operation.
- Do not allow children to operate this appliance. Keep appliance out of reach of children.
- Close supervision is necessary when appliance is used near children.
- This item is intended for indoor, household use only.
- Place appliance on a stable and level surface in a cool, dry environment.
- Do not leave appliance unattended while it is running.
- Unplug appliance if it is left unattended and before assembly, disassembly, or cleaning.
- Ensure that your voltage is consistent with specifications.
- Using an extension cord is not recommended as it may overheat and cause a risk of fire. If used, make sure to organize cord to prevent accidental tripping.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.








WARNING

- Immediately turn off and unplug in the event of an accident or if appliance malfunctions.
- Do not touch hot surfaces; only touch handles and knobs.
- Keep appliance away from direct sunlight and other sources of heat (stove, heater, etc.).
- Do not run power cord over sharp edges/corners or a hot surface.
- Do not pull or carry appliance by the power cord.
- Do not place outdoors or in a damp, humid environment like a bathroom or spa.
- Do not immerse the appliance or power cord in water or any other liquid.
- Do not spill water on the electrical components or connectors.
- Do not cover vents or obstruct openings. Beware of hot steam escaping from vents.
- Do not unplug the appliance by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
- Do not move appliance while it is in use. Take caution when moving appliance containing hot ingredients.
- Do not use if the plug, power cord, or any components are damaged.
- Do not use any accessory or fitting other than original accessories and fittings.
- Do not turn off or unplug appliance while it is in operation.

SPECIFICATIONS

Voltage	120V, 60Hz	6-Liter Power (SKY3755)	1000 watts
Max Pressure	90 KPa	10-Liter Power (SKY3756)	1400 watts
Keep Warm Temperature	140-175 °F	12-Liter Power (SKY3757)	1600 watts


DIAGRAM

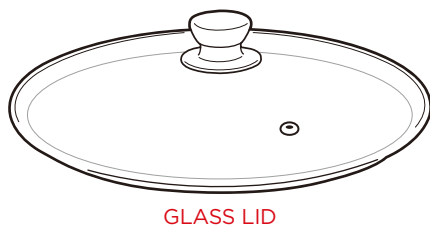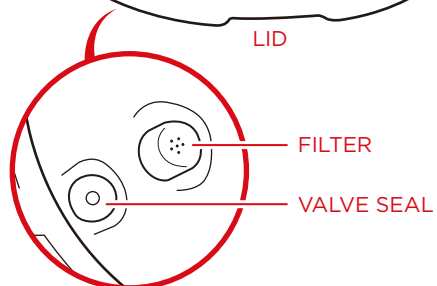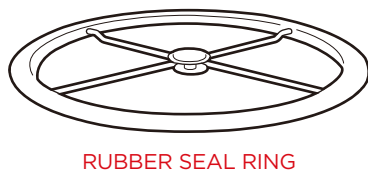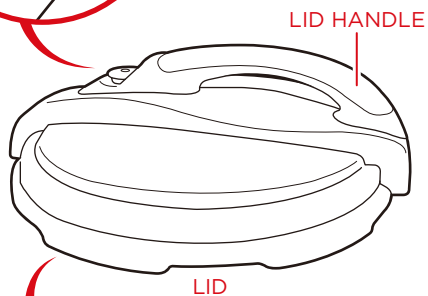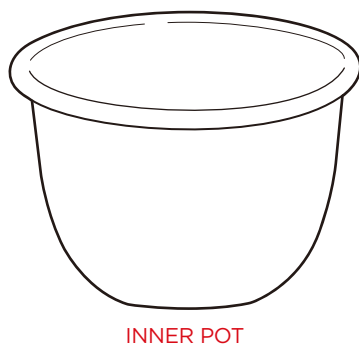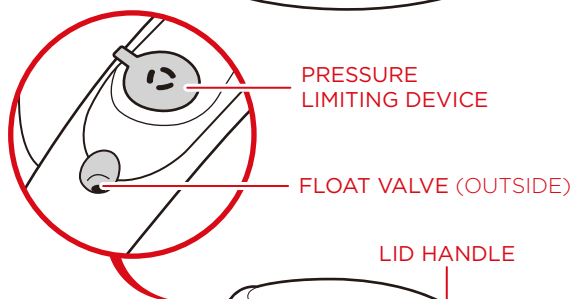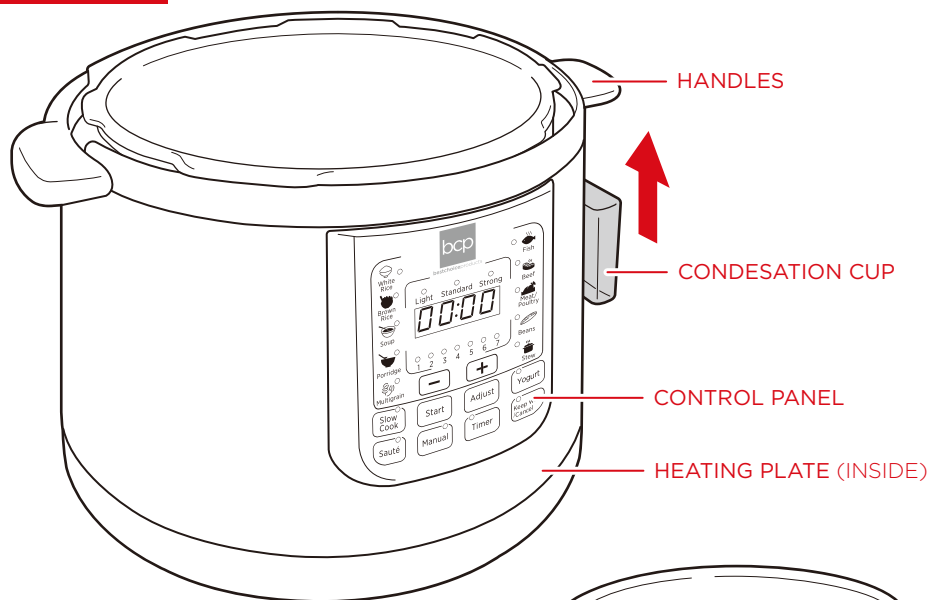


UNDER LID

GLASS LID


DIAGRAM

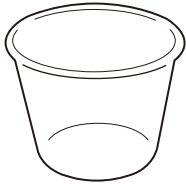

MEASURING CUP

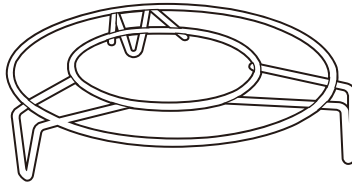


STEAM RACK

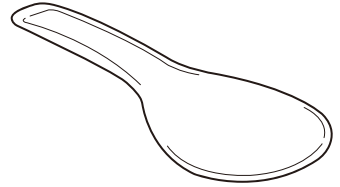

SPOON

CONTROL PANEL




- **COOKING PRESETS:** See Cooking Presets section
- **ADJUST:** Toggle between light, standard, and strong pressure levels
- **MANUAL:** Manually cook by setting pressure and cook time
 - Use if cooking over 3 pounds (or 6 cups) at a time
- **TIMER:** Delay the cooking start time by up to 24 hours
- **KEEP WARM/CANCEL:** Press once to keep cooked food warm, press again to cancel cooking

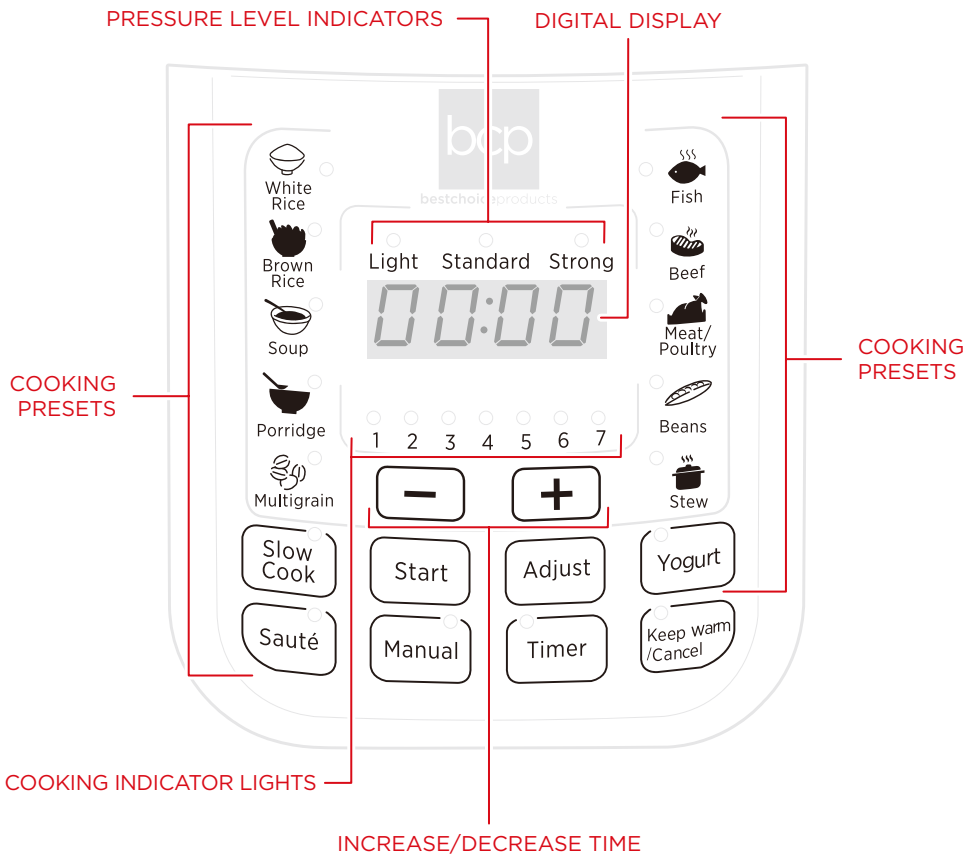




USAGE TIPS

- Appliance cooks under pressure; improper use may result in injury.
- Be extremely careful of hot steam escaping the pressure limiting device. Do not place hands, objects, or obstructions above the pressure cooker.
- Do not use pressure cooker for more than 6 continuous hours.
- Do not use Keep Warm function for more than 4 hours.
- Make sure unit is properly closed before operating.
- Be aware that the pressure limiting device is loose when appliance is not cooking.
- Pressure cooker retains memory of cooking cycle. In case of a power failure, it will automatically renew the cooking cycle it left off on when power resumes.
- Do not place pressure cooker in a heated oven.
- Make sure pressure limiting device is not clogged before use.
- Typically, do not fill inner pot more than $\frac{2}{3}$ full.
- If ingredients expand during cooking (e.g. rice or dried vegetables), do not fill more than $\frac{1}{2}$ full.
- Do not cook ingredients that can foam, froth, or sputter during cooking as they may clog the pressure limiting device.
 - Examples include: Applesauce, cranberries, pearl barley, oatmeal, cereal, split pea, noodles, rhubarb, spaghetti, etc.
- Do not use appliance to fry oil.
- Do not open pressure cooker until unit has cooled and internal pressure has been released.
 - If lid is locked, the unit still has internal pressure. Do not force the lid open.
- Inner pot is non-stick; do not use sharp or metal utensils on the inner pot. Only use wood or plastic utensils.
- Do not use the inner pot with other heat sources other than the pressure cooker.
- Do not damage or tamper with seal belt, steel ring, or pressure limiting device.
- Do not place additional weight or put pressure on the pressure limiting device.
- Unplug and let appliance cool before changing parts, cleaning, or storage.

HARDWARE

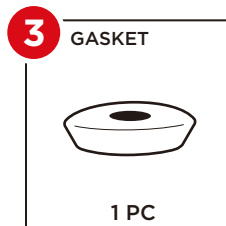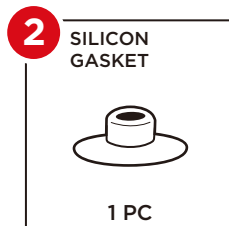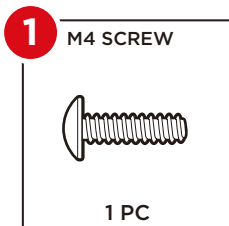


PARTS

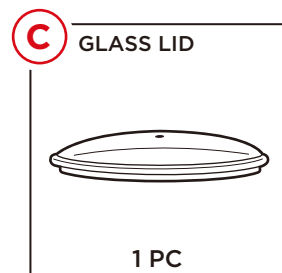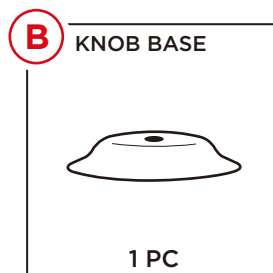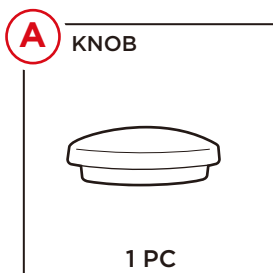



PRODUCT ASSEMBLY

Attach the knob to the glass lid with a part 1 screw.

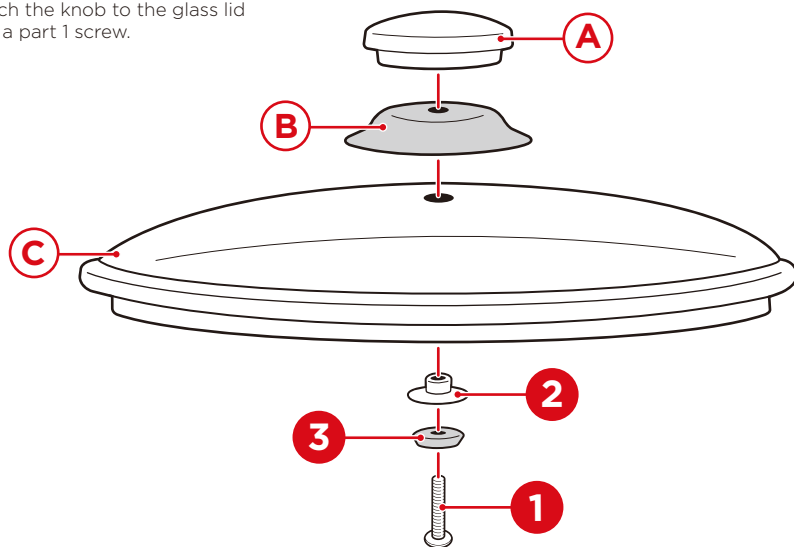

SETTING UP THE APPLIANCE



1. Remove all packaging and accessories. Inspect appliance to make sure it is in good condition.
2. Rinse accessories and attachments with warm water. Allow parts to dry.
3. Wipe exterior of unit with a damp cloth and allow to dry.
4. Insert the rubber seal ring into the slot in the lid.
5. Place appliance on a stable and level surface and arrange so it is at least 12 inches away from other kitchen appliances.

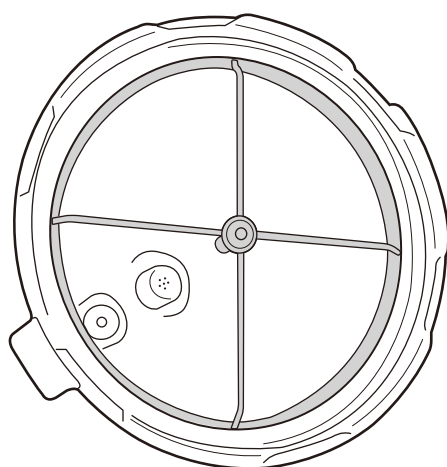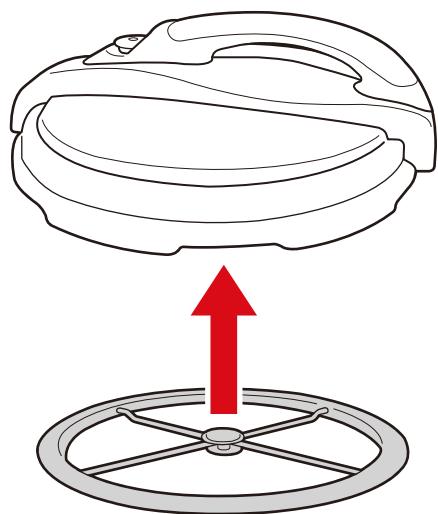


UNDERNEATH

OPERATING INSTRUCTIONS

1. Insert plug into appliance first, then plug into wall outlet.
2. Open the lid by rotating the handle clockwise until it unlocks.
3. Remove the inner pot and add desired ingredients.
 - Do not fill inner pot less than $\frac{1}{8}$ full or more than $\frac{3}{4}$ full.
 - If ingredients expand during cooking (e.g. rice or dried vegetables), do not fill more than $\frac{1}{2}$ full.

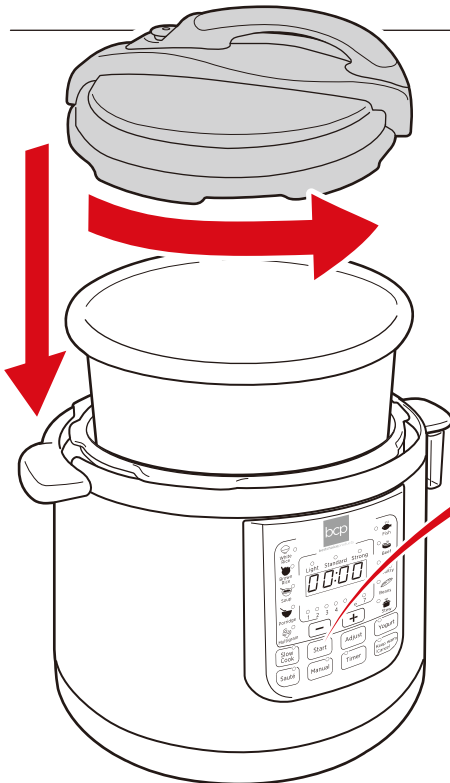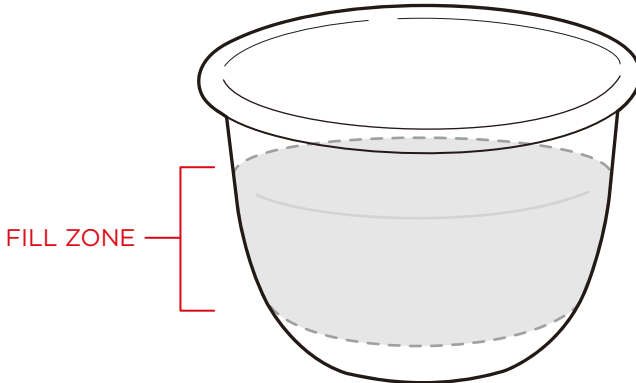


4. Place inner pot into the pressure cooker.
5. Place the lid by rotating the handle counterclockwise until it locks.
 - Make sure the rubber seal ring is properly installed in the lid.
6. Adjust the pressure limiting device to the Air Tight position.
 - Make sure that the float valve is depressed.

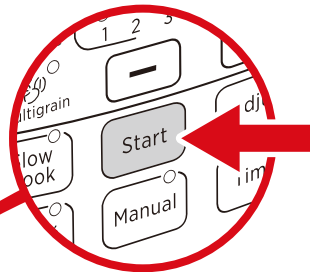

7. Select desired cooking preset or settings, then press Start to begin cooking. Appliance will build up pressure and cook food.
 - If necessary, cook time and pressure level can be adjusted after selecting a preset.
 - The float valve will rise as pressure builds up.
 - During the cooking process, you can press the Keep Warm/Cancel button to cancel cooking.
8. Once cooking is finished, the appliance will emit a sound and automatically switch to Keep Warm mode.

OPERATING INSTRUCTIONS

9. To remove food, adjust the pressure limiting device to the Exhaust position to release hot air and steam.
 - Be extremely careful of hot steam escaping the pressure limiting device.
 - The float valve should depress when pressure is released.**Do not open the lid if appliance is still pressurized.**
10. Open the lid and use oven mitts or utensils to remove cooked food.
11. Turn off appliance completely before unplugging.

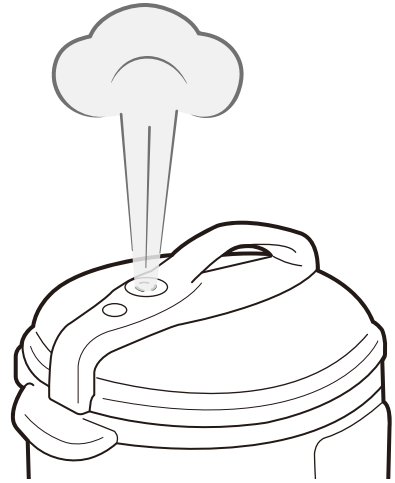

COOKING PRESETS

NOTE: If cooking more than 3 pounds (or 6 cups) at a time, use the Manual cooking function instead of a preset.

- Each preset has a default cooking time; however, the actual cook time will vary depending on the ingredients and the time required for full pressure to build.
- The pressure cooker will detect the weight of ingredients and how much liquid is inside the inner pot and adjust the cook time accordingly.

NOTE: If using Slow Cook preset, use the glass lid instead of the normal appliance lid.

COOKING PRESET	DEFAULT COOKING TIME	COOKING TIME RANGE
White Rice	12 min.	8-15 min.
Brown Rice	70 min.	50-90 min.
Soup	25 min.	15-40 min.
Porridge	15 min.	10-25 min.
Multigrain	25 min.	20-60 min.
Fish	5 min.	3-10 min.
Beef	25 min.	20-60 min.
Meat/Poultry	13 min.	13-60 min.
Beans	40 min.	20-60 min.
Stew	40 min.	25-60 min.
Slow Cook	6 hours	30 min.-9.5 hours
Sauté	5 min.	3-8 min.
Yogurt	12 hours	8-24 hours

TIMER

Use Timer function to delay start of cooking by up to 24 hours.

1. Fill inner pot with desired ingredients and lock the lid.
2. Press the Timer button. Press the (+/-) buttons to increase or decrease delay time at 30-minute increments.
3. Select desired cooking preset or settings. Press Start and the timer will begin to count down.
4. Once the countdown completes, the appliance will pressurize and cooking will begin.

KEEP WARM

1. Close the lid and adjust the pressure limiting device to Exhaust.
2. Press the Keep Warm/Cancel button once to keep food warm.
- **NOTE:** Do not use Keep Warm function for more than 4 hours.

CLEANING AND STORAGE

NOTE: Do not immerse or soak the appliance in water or any other liquid.

- Make sure pressure cooked is unplugged, depressurized, and cool before cleaning or storage.
- Carefully pop off and remove the rubber seal ring, pressure limiting device, float valve, and filter.
- Clean inner pot, lid, accessories, and attachments with warm water, mild detergent, and a sponge.
- Wipe the exterior of the unit with a damp cloth.
- Do not clean with steel wool, abrasive detergents, or corrosive liquids like gasoline or acetone.
- Place unit and attachments in a cool, well-ventilated place to dry.
- Store in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
Not working	Wrong voltage	Use recommended voltage
	Not plugged in	Plug into outlet
	Not turned on	Turn on
Steam escaping around lid	Rubber seal ring not installed correctly	Cancel cooking, open lid, and reposition rubber seal ring
	Pressure limiting device obstructed	Clean pressure limiting device
Steam escaping from pressure limiting device	Pressure limiting device not properly sealed	Carefully reposition until it is sealed

ERROR CODES

CODE	PROBLEM
E1	Open circuit of the sensor
E2	Short circuit of sensor
E3	Overheating
E4	Signal switch malfunction



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.