

ACCUDART®
WHERE TECHNOLOGY TAKES FLIGHT™

Dartboard Installation Manual

ITEM NUMBER: DA8060W

DATE CODE: CPSIA#2- DA8060W - MMY - HC



Please Do Not Return This Product To The Store!

Contact Escalade Sports customer service department at:

Phone: 1-800-467-1421 Toll-Free!

E-mail: customerservice@escaladesports.com

Mailing Address (correspondence only):

Physical Location:

Escalade Sports

Escalade Sports

PO Box 889

817 Maxwell Ave.

Evansville, Indiana 47706-0889

Evansville, Indiana 47711

Please provide model number and/or part number of the product and/or part when you call or write. These numbers can be found on the product, packaging, and/or in this Owner's Manual.

SAFETY INSTRUCTIONS

- Read this manual carefully before starting assembly. Read each step completely before beginning each step.

WARNING

This is not a toy and is intended for use by or under the supervision of adults.

Darts should only be thrown at the dart board. Ensure the flight path is clear of people or pets when playing this game. Impact from darts could cause physical harm, injury or property damage.

Don't throw damaged darts.

CAUTION:

READ ASSEMBLY, OPERATING AND
SAFETY INSTRUCTIONS CAREFULLY!

Assembly Tips


1. **Read this manual carefully before starting assembly.** Read each step completely before beginning each step.
2. **Check inside all parts and cartons before assembling or ordering parts.**
3. To make assembly as easy as possible, place all parts in a cleared area and remove the packaging material. Organize all parts as per parts identifier in the assembly manual. Do not dispose of the packing material until assembly is completed.
4. Assemble product on clean, level and flat surface.
5. **Take time to correctly orientate parts exactly as per each assembly diagram.**
6. **Save this instruction in the event that the manufacturer has to be contacted for replacement parts.**

Tools required:

- Small & Medium Phillips Driver (Electric okay, low torque to avoid stripped screws)
- Stud Finder
- Tape Measure
- Carpenters Level
- Awl and/or Pencil
- Drill and 1/16" Drill Bit


PARTS IDENTIFIER

H1

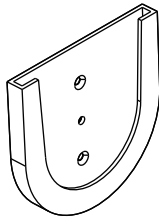

Rotation Lock Bracket
1 PC

H2

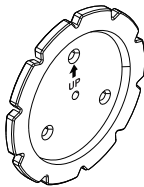

Rotation Lock
1 PC

H3



 
Thumb Screw
3 PCS

H4 (to scale)



M4x20mm
Phillips Flat Head Screw
3 PCS


H5 (to scale)



M4x30mm
Phillips Flat Head Screw
2 PCS

ASSEMBLY MANUAL**Step.1 Attaching the ROTA-X Bracket onto the wall.**

1. Use a stud finder and tape measure to determine the spot where you will hang your dartboard. Mark this spot with a pencil or awl 68 inches from the ground and in the center of a wall stud.
2. With the center hole of the **H1 Rotation Lock Bracket** directly over your 68 inch mark, use a pencil or awl to mark the two screw locations directly above and below the center hole.
3. Use a Carpenters Level to make sure that the marked screw locations are vertical.
4. Use a 1/16" drill bit to drill a pilot hole in both marked screw locations.
5. Install **H1 Rotation Lock Bracket** on the wall using **H5 Phillips Flat Head Screw** as shown in **Figure 1 & Figure 1.1**.

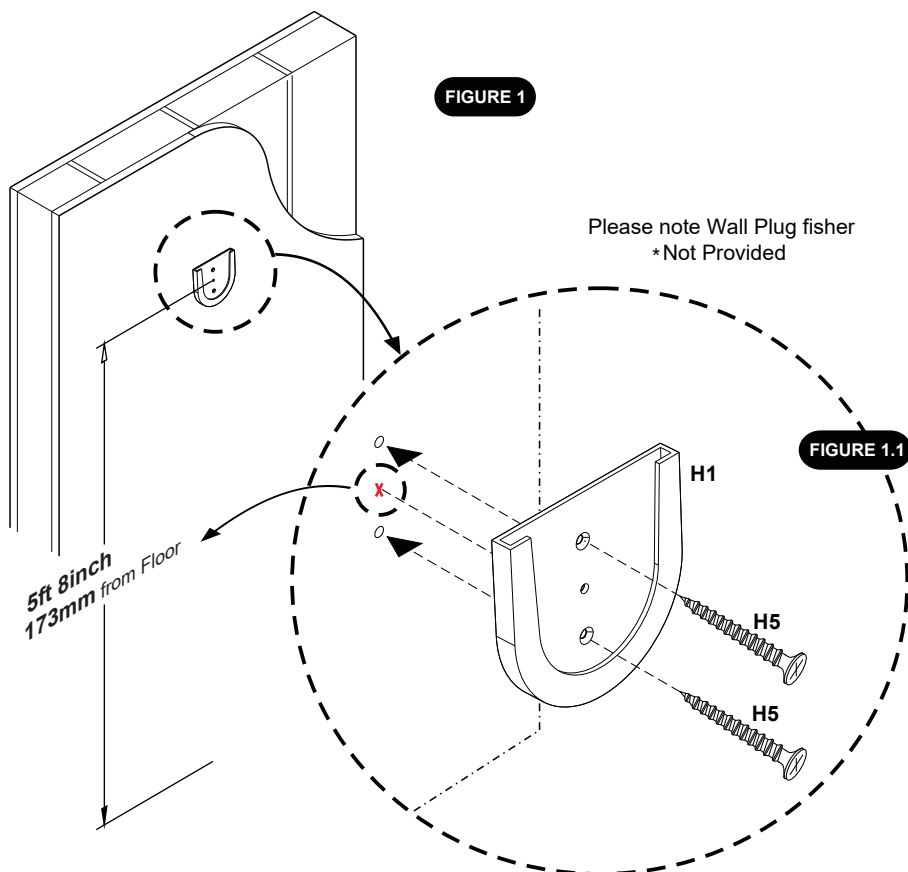

PARTS REQUIRED:



H2-1 pc Rotation Lock

H4-3 pcs M4*20 Phillips Flat Head Screw

H3-3 pcs Thumb Screw

Step.2 Attaching the Rotation lock & Thumb Screw on the dartboard.

1. Install **H2 Rotation Lock** on the back of dartboard using **H4 Phillips Flat Head Screw** as shown with **FIGURE 2 & FIGURE 2.1**.

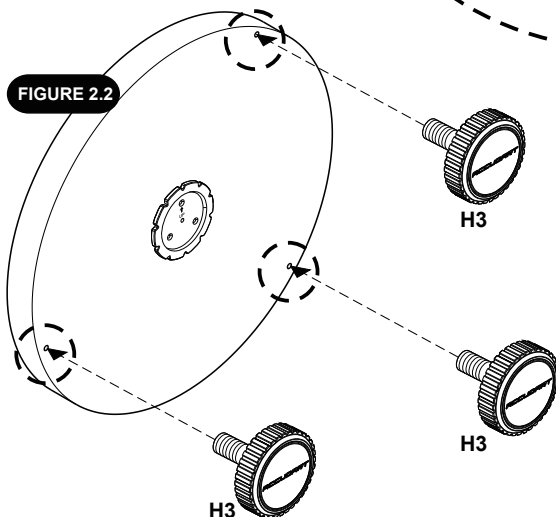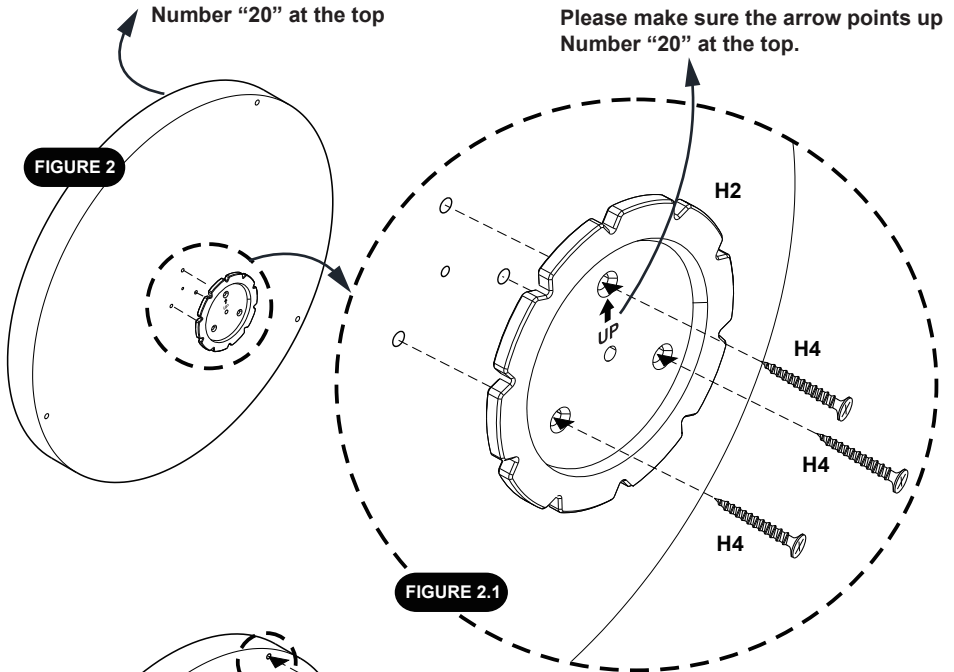


2. Screw **H3 Thumb screws** all the way into the 3 threaded inserts on the back of the dartboard as shown in **FIGURE 2.2**.

Step.3 Hang the dartboard on the wall.


1. Hang the dartboard on the wall as shown in **FIGURE 3**.

IMPORTANT NOTE: Please make sure the Rotation lock is in the correct position in the ROTA-X Bracket As shown in **FIGURE 3.1**.

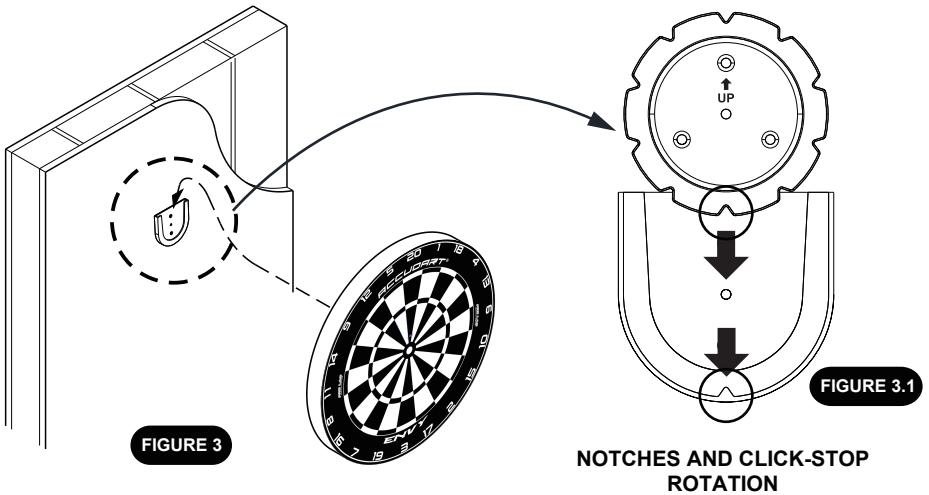

Step.4 Adjust the Thumb Screw.

1. Adjust Thumb screw clockwise to individually level, and secure your dartboard to the wall as shown in **Figure 4**.

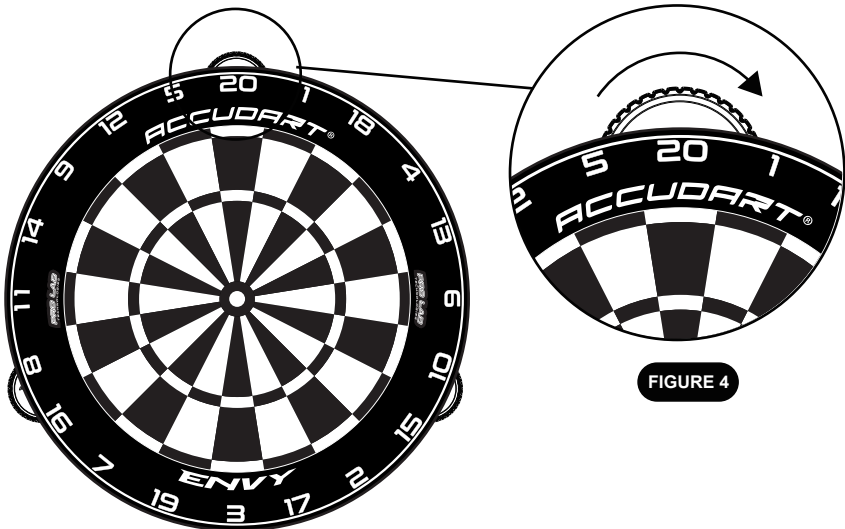


360° PRO-GLIDE NUMBER RING


FLAT, HIGH-DEFINITION WHITE NUMBER RING ALLOWS FOR FULL 360-DEGREE ROTATION WITHOUT REMOVING IT FROM THE BOARD, THANKS TO THE ROTA-X SYSTEM THAT MAINTAINS PERFECT ALIGNMENT EVERY TIME.



A MOUNT AND HANG
WITH ROTA-X BRACKET

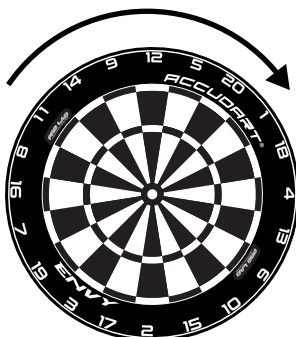

B ALIGN BOARD WITH
CLICK-STOP ROTATION

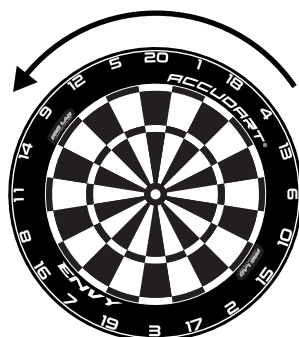

C ROTATE NUMBER RING WITHOUT
REMOVING IT FROM THE BOARD.

ROTA-X BRACKET

FEATURING AN EASY-HANG BRACKET WITH NOTCHES AND CLICK-STOP ROTATION, THIS SYSTEM ENSURES ULTRA-ACCURATE, PROFESSIONAL ALIGNMENT WITH EACH TURN, AND THE NUMBER RING CAN BE ROTATED EFFORTLESSLY WITHOUT REMOVING IT FROM THE BOARD.

LEVELTECH STABILIZERS

THE LEVELTECH SYSTEM FEATURES 3 ADJUSTABLE THUMB SCREWS, ENSURING YOUR DARTBOARD SITS FLUSH AND EVEN AGAINST THE WALL FOR A PERFECTLY LEVEL PLAYING FIELD.

Darting Game Rules

Various darting websites are available that explain darting rules and other specifics of the game.

PART LIST

PART NO.	DESCRIPTION	QTY.
DA8060HCH1	Rotation Lock Bracket	1
DA8060HCH2	Rotation Lock	1
DA8060HCH3	Thumb Screw	3
DA8060HCH4	M4x20 mm Phillips Flat Head Screw	3
DA8060HCH5	M4x30 mm Phillips Flat Head Screw	2

LIMITED WARRANTY

Escalade®Sports (the Company) warrants the Product to be free from defects in workmanship and materials under normal use and conditions **FOR A PERIOD OF 90 DAYS FROM THE DATE OF ORIGINAL PURCHASE** in the United States and Canada.

Product Registration Card

The Product Registration Card must be filled out completely and mailed to the Company at the address printed on the card within 10 days from the date of your purchase of the Product.

What Is Covered

Except as provided below, this Limited Warranty covers all defects in materials and workmanship. This Limited Warranty is void if the Product is:

- Damaged through improper usage, negligence, misuse, abuse, transportation damage, acts of nature, or accident (including failure to follow the instructions supplied with the Product)
- Used in commercial applications or rentals
- Modified or repaired by anyone not authorized by the Company

What Is Not Covered

This Limited Warranty does not cover:

- Any expendable items such as batteries, light bulbs, fuses, accessories, cosmetic parts, tools and other items that wear out.
- Due to normal usage. Any costs you may incur for delivery, installation, assembly or transport of your product.

What The Company Will Pay For

If during the Limited Warranty period, any part or component of the Product is found by the Company to be defective, the Company will, at its option, repair the Product, replace the Product with a new Product (either the same or an equivalent model) or cause the original retailer of the Product to exchange the Product with a new Product (either the same or an equivalent model) or refund the original purchase price of the Product, without charge for labor or parts. The Company's obligation to repair, replace or exchange the Product, however, shall be limited to the amount of the original purchase price of the Product.

How To Obtain Warranty Service

In order to enforce your rights under this Limited Warranty, you must follow these procedures:

- You must have completed and mailed the Product Registration Card to the Company within 10 days of purchase of the Product.
- You must include THE ORIGINAL COPY OF YOUR SALES RECEIPT.
- You must call the Company's Consumer Service Department at 1-866-556-2754 from 9:00 A.M. to 5:00 P.M. (EST) to notify the Company of the nature of the problem.
- If you are instructed to return the Product to the Company for servicing, you are responsible for shipping the Product, at your expense, to the address designated by the Company in packaging that will protect against further damage.
- You must also include your name, address, daytime telephone number, model number of the Product and a description of the problem.

THIS LIMITED WARRANTY IS AVAILABLE ONLY TO THE ORIGINAL PURCHASER OF THE PRODUCT AND IS VALID IN THE UNITED STATES AND CANADA ONLY.

THE COMPANY'S LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT ITS OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL NOT INCLUDE ANY LIABILITY FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR DO NOT ALLOW FOR EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. TO THAT EXTENT, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

This Limited Warranty gives you specific legal rights, but you may also have other rights that vary from state to state.

If you have questions regarding this Limited Warranty or the operation of the Product, you may call or write us:

**Consumer Service Department
817 Maxwell Ave.
Evansville, IN 47711
1-800-467-1421
www.escaladesports.com**