

STEP 2: Place the filled removable water tank onto the dispenser following the instructions in the section entitled ‘**Assembling the dispenser**’.

STEP 3: Place a heat-resistant cup onto the drip tray below the water outlet and press the control button once to dispense 200 ml of water. The indicator light will illuminate blue.

STEP 4: For a continuous stream of hot water, press the control button twice. The indicator light will illuminate green. To stop water dispensing, press the control button again. It will take several seconds for the water to stop flowing once cancelled.



NOTE: The indicator light will flash blue and green if there is not enough water in the tank; unplug the dispenser and add more water before continuing. Follow the guidance on the water filter packaging regarding when to replace the filter.

Storage

Check that the dispenser is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the dispenser; wrap it loosely to avoid causing damage.

Always empty the water tank after use.

Specifications

Product code: EK6116
Input: 220–240 V ~ 50/60 Hz
Output: 2200–2600 W

Go to **www.salter.com** and search **EK6116** to access the instruction manual for your product.




Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Quick start guide

Instant hot water dispenser

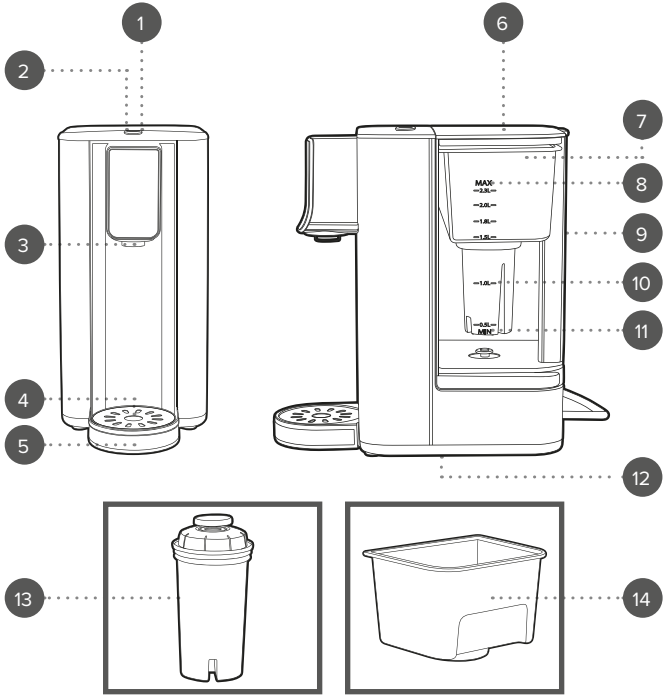

1.

Control button (on/off)
2.

Indicator light
3.

Water outlet
4.

Drip tray cover
5.

Drip tray
6.

Water tank lid
7.

Removable water tank
8.

Max. fill mark (2.3 L)
9.

Reset key
10.

Water gauge
11.

Min. fill mark (0.5 L)
12.

Drainage hole
13.

Filter
14.

Filter tank



To register for your extended guarantee, scan the QR code or visit guarantee.uppic.com/salter and register your product within 30 days of purchase. For any further queries, visit www.salter.com.



Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.
©Salter trademark. All rights reserved.
CD270324/MD000000/V1



Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Do not immerse the electrical components of this appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not use the appliance for anything other than its intended use.
- Do not move the appliance whilst it is in use.
- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Hot surface – do not touch hot sections or heating components of the appliance.



WARNING: Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance.

Dos and don'ts

DO:

Switch off the appliance and disconnect it from the mains power supply before changing or fitting attachments.

DON'T:

Use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

Use the appliance if the water level is above the max. fill mark or below the min. fill mark.

Use attachments if they are loose, damaged or broken.

Thermal cut-out device

This product is fitted with a thermal safety cut-out device, built in to prevent it from overheating. Should the product start to overheat, the thermal safety cut-out system will automatically operate and the dispenser will turn off. To reset the dispenser, allow it to full cool before using the reset key located at the bottom of the dispenser to press the reset button.

Boil-dry sensor

The dispenser is equipped with a boil-dry sensor. If the dispenser is accidentally turned on whilst empty, the boil-dry sensor will activate causing the power to switch off. Do not try to use the dispenser during this time; once it has cooled down, it will resume its normal function.

Care and maintenance

Wipe the dispenser with a soft, damp cloth then allow it to dry thoroughly. Wash the water tank, filter tank and drip tray in warm soapy water then allow it to dry thoroughly. Do not immerse the dispenser in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the dispenser as this could cause damage.

Removing limescale

Limescale can develop over time and may affect the performance and lifespan of the dispenser. It is recommended to descale the dispenser regularly, at least once every three months, especially if used in a hard water area. Frequent descaling will improve the performance and lifespan of the dispenser.

The indicator light will flash green after 10 hours of cumulative use to indicate it needs to be descaled.

If the dispenser switches off before it has boiled or a white deposit is noticed on the inside of the dispenser, it needs to be descaled.

Add a commercial descaling agent to the dispenser, adhering to the manufacturer's instructions. It is not recommended to use vinegar to descale the dispenser.

Instructions for use
Before first use

Before using the dispenser for the first time, clean the water tank and accessories following the instructions in the section entitled 'Care and maintenance'.

Do not wash the filter with soapy water; follow the steps on the filter packaging before use.



NOTE: When using the dispenser for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the dispenser.



WARNING: The dispenser is not suitable for dishwasher use.

Assembling the dispenser

STEP 1: Slot the removable water tank on to the back of the main unit down the slot.

STEP 2: Place the filter tank into the removable water tank and place the filter in the hole at the bottom of the filter tank.

STEP 3: Place the water tank lid onto the removable water tank.

STEP 4: Slot the drip tray onto the tab below the water outlet.

Using the dispenser

STEP 1: Insert the filter tank and filter into the removable water tank and carefully add water to the removable water tank. Do not pour all the water into the removable water tank at once, as it will take time for the water to pass through the filter.