

Important safety

Please read carefully

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of this appliance in water or any other liquid.

- Do not operate the appliance with wet hands or if any connections are wet.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Hot surface – do not touch hot sections or heating components of the appliance.



WARNING: Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance.

UK CE

EN | Disposal of Waste Batteries and Electrical and Electronic Equipment











This product is labelled with this crossed out wheel bin symbol in accordance with European Directive 2012/19/EC to indicate that it must not be disposed of with your other household waste. Due to the presence of hazardous substances, mixtures or components, electrical and electronic devices that are not subject to selective sorting are potentially dangerous to the environment and human health. Please check your local city office or waste disposal service for the return and recycling of this product.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**
MADE IN CHINA.

CD260324/MD000000/V1

Frothing functions

Function	Selection	Best for	Max. fill mark
Part foam 	Press  once	Latte or matcha latte	150 ml max. fill frothing mark
Full foam 	Press  twice	Cappuccino or macchiato	150 ml max. fill frothing mark
Hot milk/ hot chocolate 	Press  three times	Hot chocolate or mocha	300 ml max. fill heating mark
Cold foam 	Press  four times	Frappé or iced cappuccino	150 ml max. fill frothing mark

Storage

Check that the milk frother is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around or inside the milk frother; wrap it loosely to avoid causing damage.

Specifications

Product code: EK6328


Input: 220–240 V ~ 50/60 Hz

Output: 500 W

Power consumption (off mode): <0.5 W

User manual

Milk frother

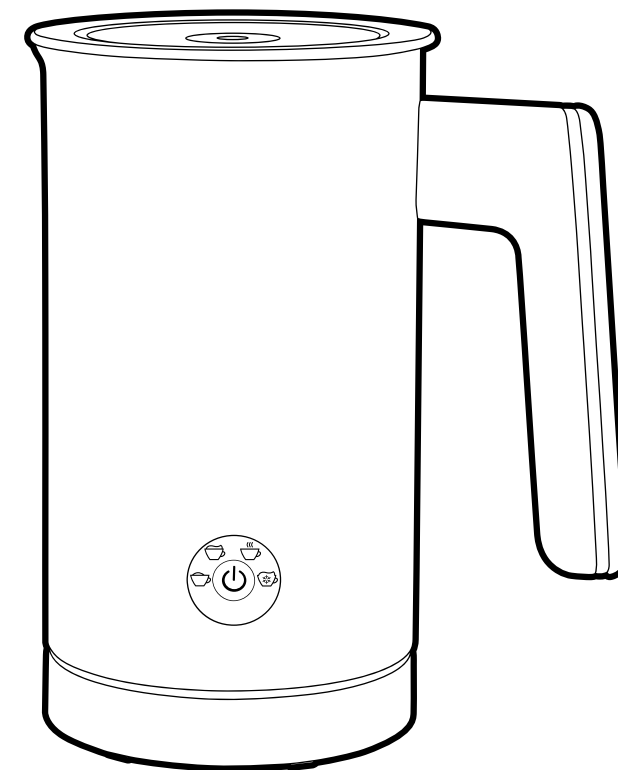

To register for your extended guarantee, scan the QR code or visit guarantee.uppic.com/salter and register your product within 30 days of purchase. For any further queries, visit www.salter.com.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.


©Salter trademark. All rights reserved.

CD100425/MD030424/V2

SALTER
1760

Description of parts

- 1. Lid
- 2. Sealing ring
- 3. Removable whisk
- 4. Whisk spindle
- 5. Milk frother cup
- 6. Min. fill mark (80 ml)
- 7. Max. frothing fill mark (150 ml)
- 8. Max. heating fill mark (300 ml)
- 9. Indicator lights
- 10. On/off switch (⏻)
- 11. Milk frother base unit
- 12. Handle

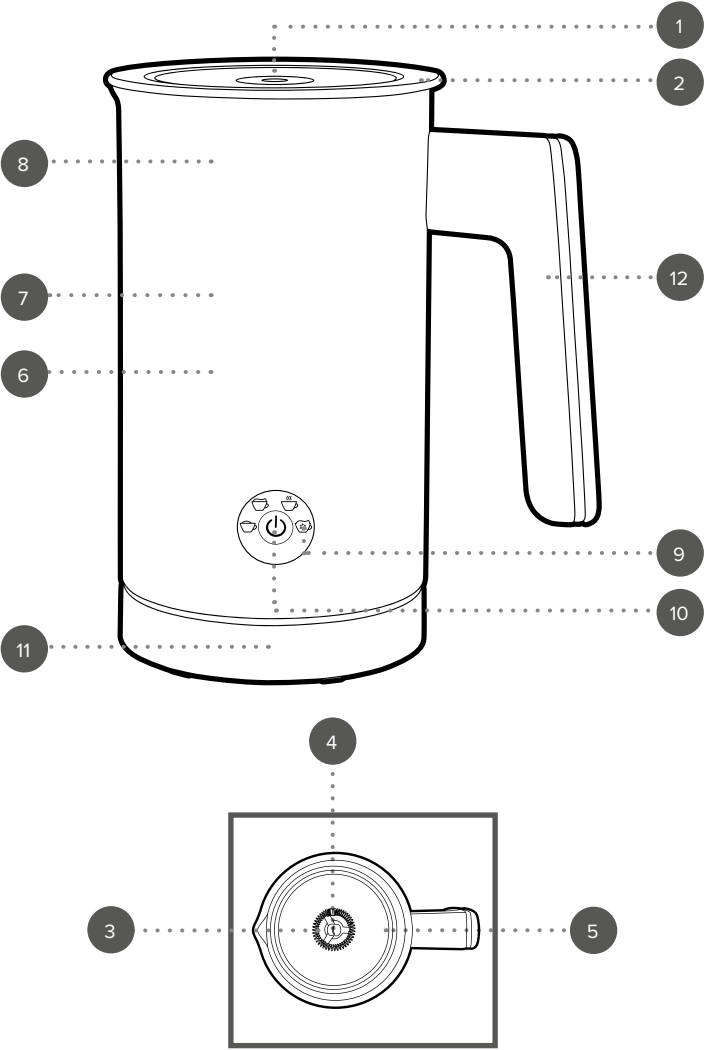

Please retain instructions for future reference.

Dos and don'ts

DO:
Check that the base of the milk frother is clean before each cycle.
Always fill the milk frother cup above the min. fill mark.

DON'T:
Connect the milk frother to the mains power supply before milk has been added.
Allow any liquid to come into contact with the base.
Exceed the max. fill mark when filling the milk frother cup.
Operate the milk frother whilst empty.

Boil-dry protection

If there is insufficient milk in the milk frother, the indicator lights will flash and it will automatically shut off. If this happens, switch off and unplug the milk frother from the mains power supply. Allow to cool fully for at least 10 minutes before using again.

Care and maintenance

Switch off and unplug the milk frother from the mains power supply and allow it to cool fully before attempting any cleaning or maintenance.

STEP 1: Wipe the milk frother with a soft, damp cloth and dry thoroughly.

STEP 2: Clean the interior of the milk frother with warm, soapy water, then rinse and dry thoroughly.

Do not use harsh or abrasive cleaning detergents or scourers to clean the milk frother, as this could cause damage.



NOTE: The milk frother should be cleaned after each use.



WARNING: The milk frother is not safe for dishwasher use.

Instructions for use

Before first use

Clean the milk frother following the instructions in the section entitled 'Care and maintenance'.

Using the milk frother

STEP 1: Place the milk frother base unit onto a flat, stable, heat-resistant surface at a height that is comfortable for the user.

STEP 2: Position the removable whisk onto the whisk spindle at the bottom of the milk frother cup.

STEP 3: Fill the milk frother cup with the desired amount of milk. Ensure that the milk is above the min. fill mark but below the max. frothing fill mark.

STEP 4: Attach the milk frother lid and place the milk frother onto the milk frother base unit. Then plug in and switch on the milk frother at the mains power supply.

STEP 5: Press and hold '⏻' to switch on the milk frother; the indicator light will illuminate.

STEP 6: Repeatedly press '⏻' to change the function. When the cycle is complete, the milk frother will turn off automatically.

STEP 7: Switch off and unplug the milk frother at the mains power supply. Carefully remove the milk frother lid and pour out the milk.

Making hot chocolate

STEP 1: Place the milk frother base unit onto a flat, stable, heat-resistant surface at a height that is comfortable for the user.

STEP 2: Position the removable whisk onto the whisk spindle at the bottom of the milk frother cup.

STEP 3: Pour the required amount of milk into the milk frother in line with the max. fill mark.

STEP 4: Add a maximum of 35 g chocolate shavings to the milk, based on 300 ml milk.

STEP 5: Press and hold '⏻' to switch on the milk frother, then press '⏻' three times to start the programme.