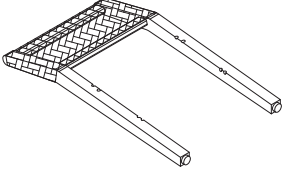 
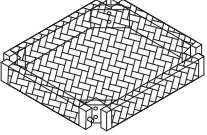 
 
 
 
 
 


ITEM NAME / NOM D'ITEM: MIZUYA DINING CHAIR

ITEM# / NO. ITEM: 704230/704231


PARTS LIST/LISTE DES PIÈCES

(1)	(2)	(3)	(4)
 x1	 x1	 x1	 x1
(5)	(6)	(7)	
 x1	 x1	A.M6 x 50MM  x8 B.Ø20MM  x8 C.M6 x 25MM  x1 D.M5 x 60MM  x4 E.Ø20MM  x8 F.4MM  x1	


ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

Do not FULLY TIGHTEN the screws or nuts for any step until all are in place.

 
I

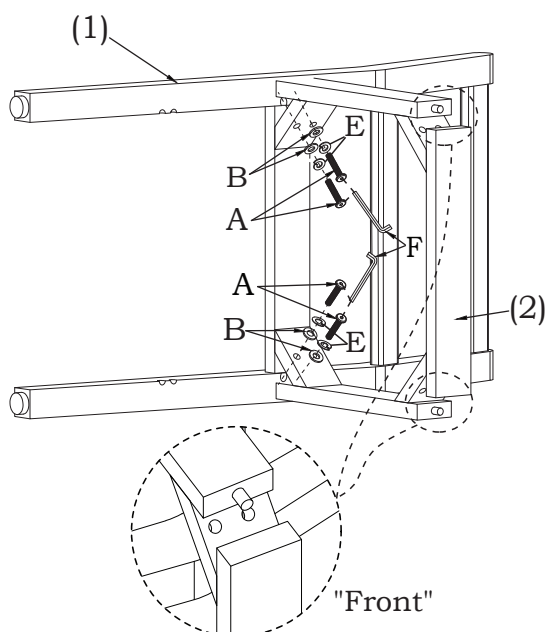

II

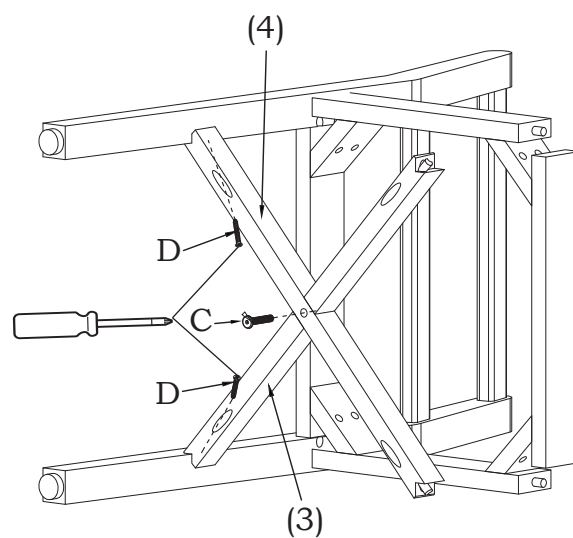 


III

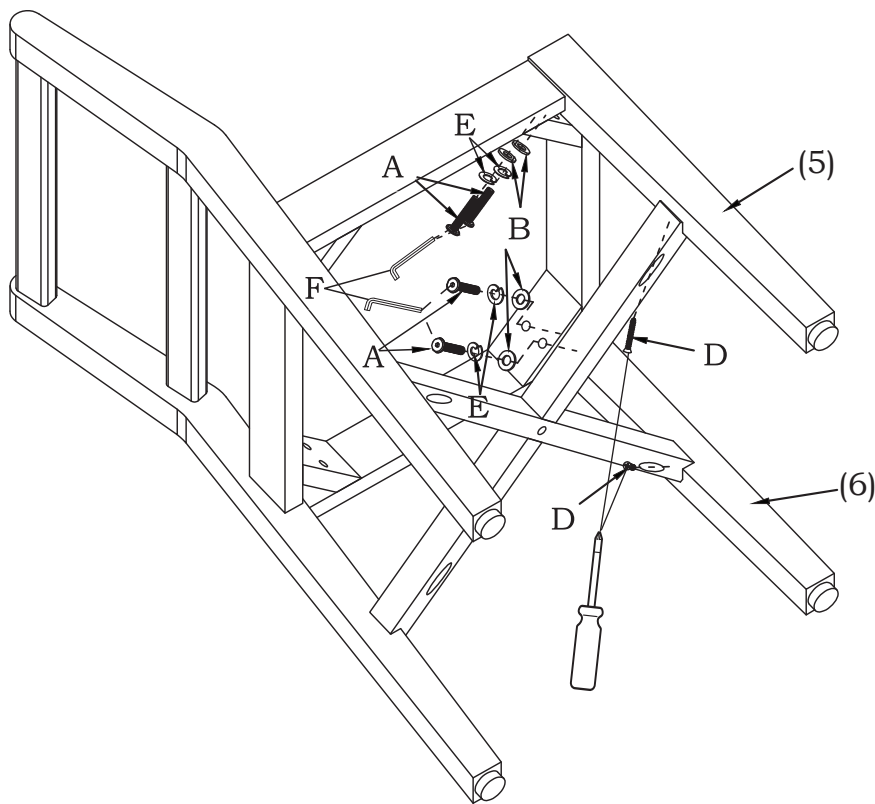 


"Tighten all hardware
before usage"

 VI

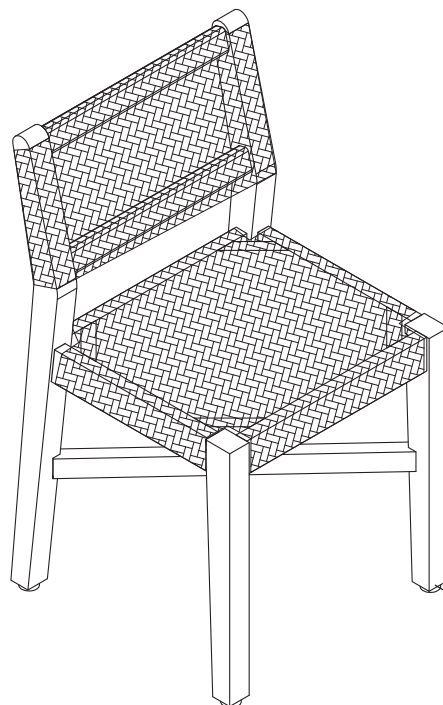

 Assembled
Please use the attached
adjustable footglides to
level the chairs on an
uneven surface.

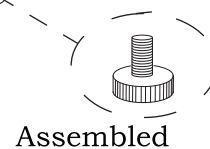

For missing parts or damaged parts, please call /
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico: (866)-798-6663

AI-V1-F008-260526