

 










# ASSEMBLY INSTRUCTION
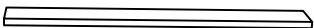
## DINING TABLE

<b>A</b> Top 	<b>B</b> Leg 	<b>C</b> Rail 
<b>D</b> Screw 5/16" * 2" 	<b>E</b> Flat Washer 5/16" 	<b>F</b> Spring Washer 5/16" 
<b>G</b> Allen Wrench 5/16" 	<b>H</b> Bolt 5/16" * 3-3/4" 	<b>I</b> Half Moon Screw Nut 5/16" 
<b>J</b> Screw Nut 5/16" * 6mm 	<b>K</b> Spanner 5/16" 	

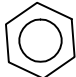 


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

**\*\*\* Do not tighten screws & bolts until the entire unit is completely assembled.**

 
**1**

Attach Rail(C) to Leg(B) by using Bolt(H), Half Moon Screw Nut(I), Screw Nut(J) and Spanner(K) as shown.

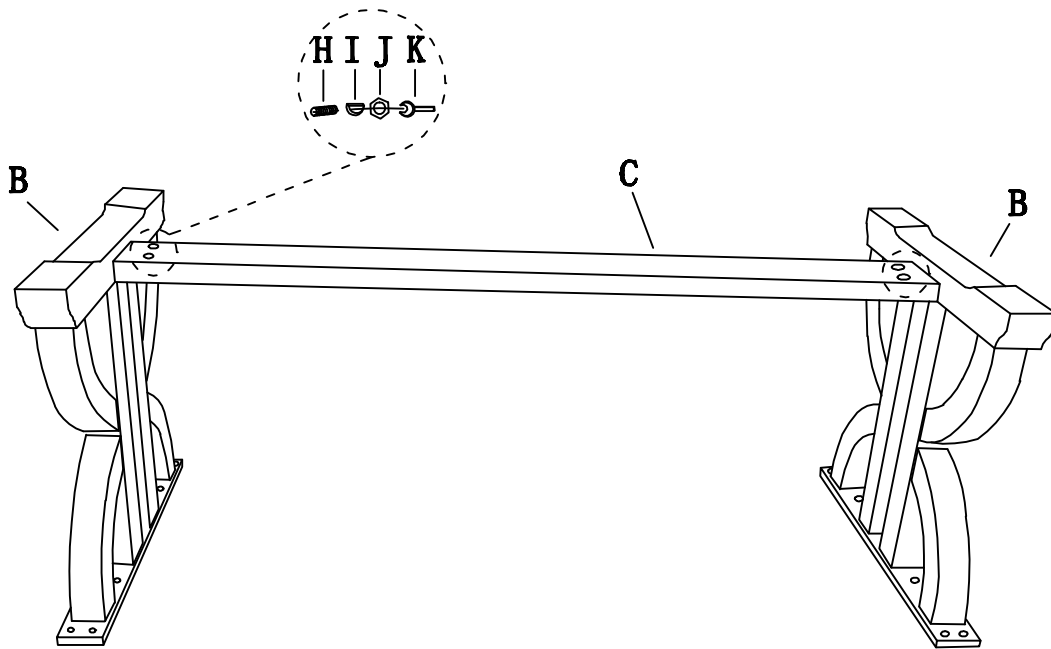

**2**

 Attach Leg(B) to Top(A) by using Screw(D), Flat Washer(E), Spring Washer(F) and Allen Wrench(G) as shown.

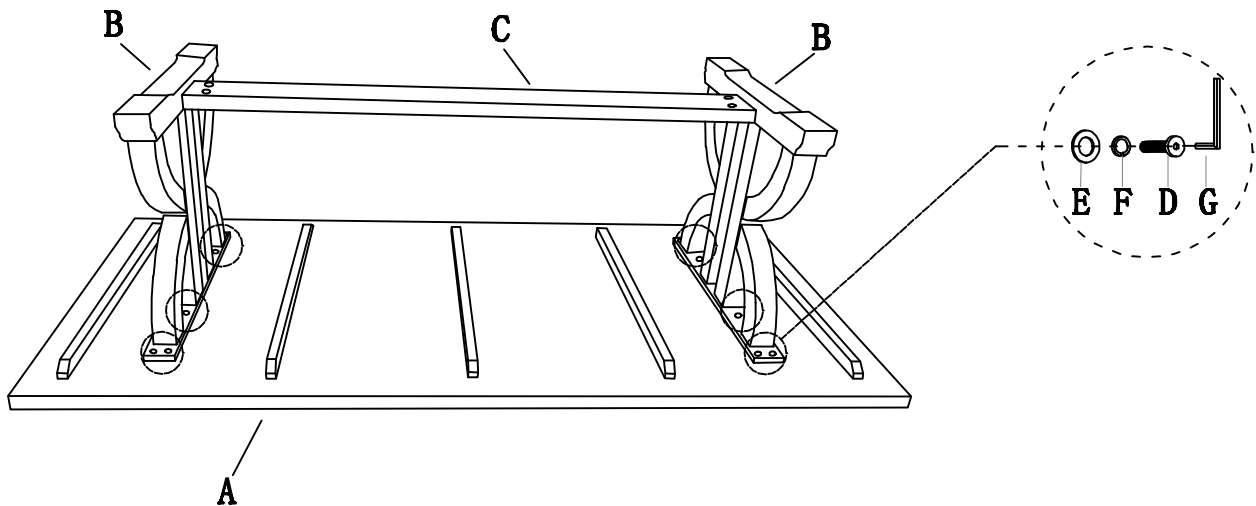






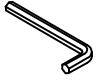 



### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

# ASSEMBLY INSTRUCTION

## CURVED BACK TUFTED DINING CHAIR

 
<b>A</b> CHAIR BACK  1PC	<b>B</b> FRONT LEG  2PCS	<b>C</b> BACK LEG  2PCS	<b>D</b> LOCK WASHER M8*Ø12mm  8PCS
<b>E</b> FLAT WASHER M8*Ø22mm  8PCS	<b>F</b> BOLT M8*70mm  4PCS	<b>G</b> BOLT M8*50mm  4PCS	<b>H</b> ALLEN KEY 5mm  1PC

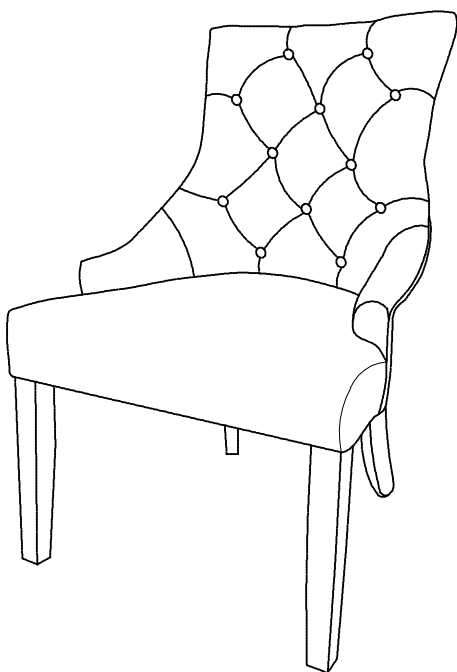

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

 Attach the Front legs(B) to Seat(A) with Lock washer(D) and Flat washer(E) and Bolt(F) by Allen key(H).

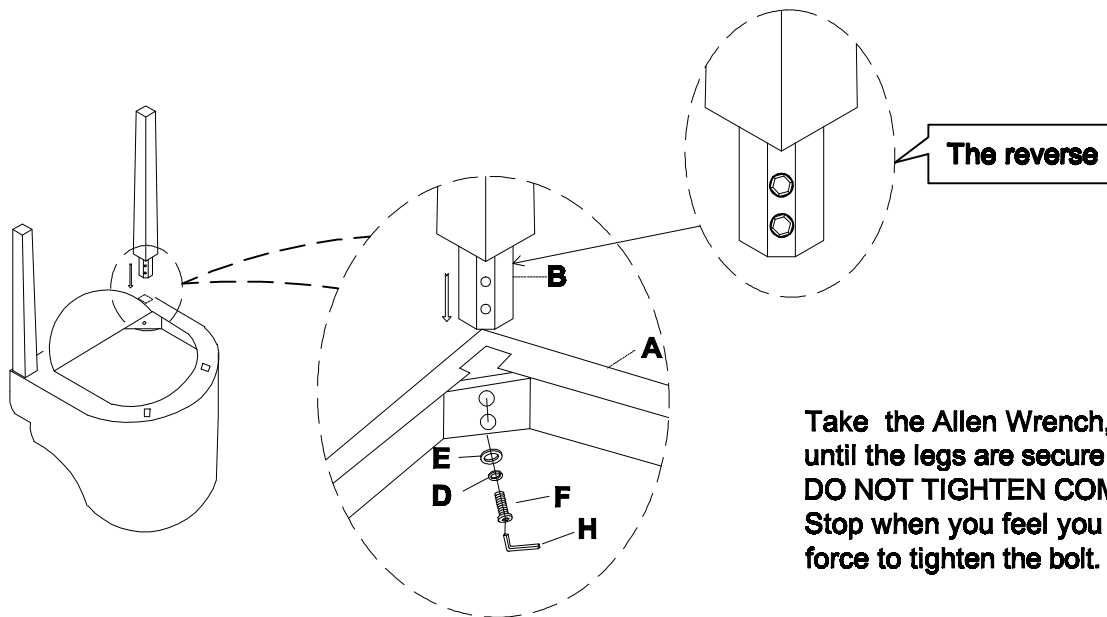


Take the Allen Wrench, and turn bolts until the legs are secure  
DO NOT TIGHTEN COMPLETELY.  
Stop when you feel you are adding force to tighten the bolt.

2

Attach the Back legs(C) to Seat(A) with Lock washer(D) and Flat washer(E) and Bolt(G) by Allen key(H).

 Stand chair up on an even surface and check that it is balanced.  
If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts.  
If balanced, apply downward pressure evenly in the center and tighten all bolts.  
Do not over-tighten beyond hole depth.

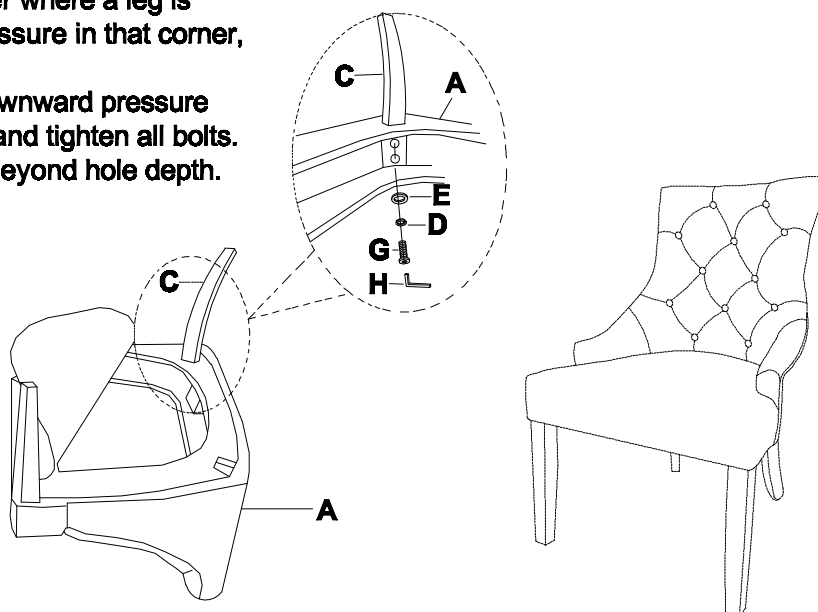

Helpful Tip:  
-Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the chair while you tighten the bolts.


### Cleaning & Care

 Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

# ASSEMBLY INSTRUCTION

## 52"W BENCH

**A** Bench

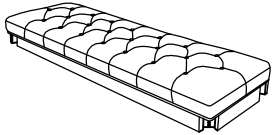

1pc

**B** Leg



 
4pcs

**C** Lock Washer  
5/16"




8pcs

**D** Flat Washer  
5/16"

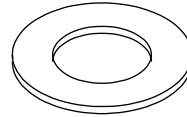

8pcs

 **E** Bolt  
5/16"x2-1/2"




8pcs

**F** Allen Wrench  
5/16"



 1pc

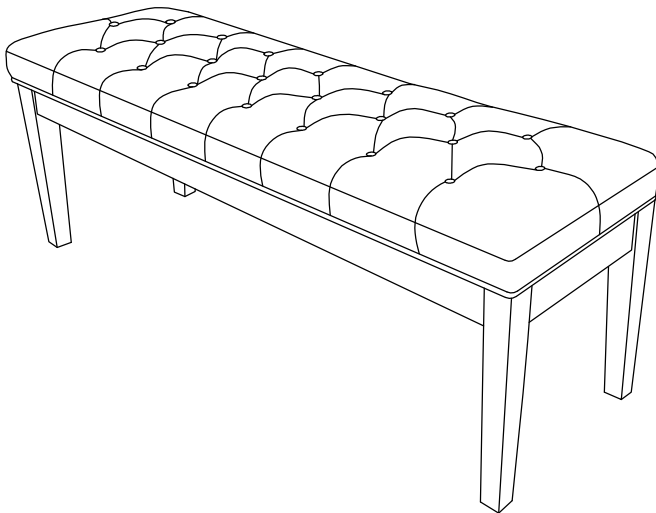


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 
- 1** Put the bench (A) on a smooth flat surface, attached one leg (B) to the bench (A) use bolt (E), lock washer (C) and flat washer (D) on both of hole of bench. Turn the allen wrench (F) in bolt (E). But not too tight.

Take the Allen Wrench, and turn the bolts until the legs are secure.

 **DO NOT TIGHTEN COMPLETELY.**  
Stop when you feel you are adding force to tighten the bolt.

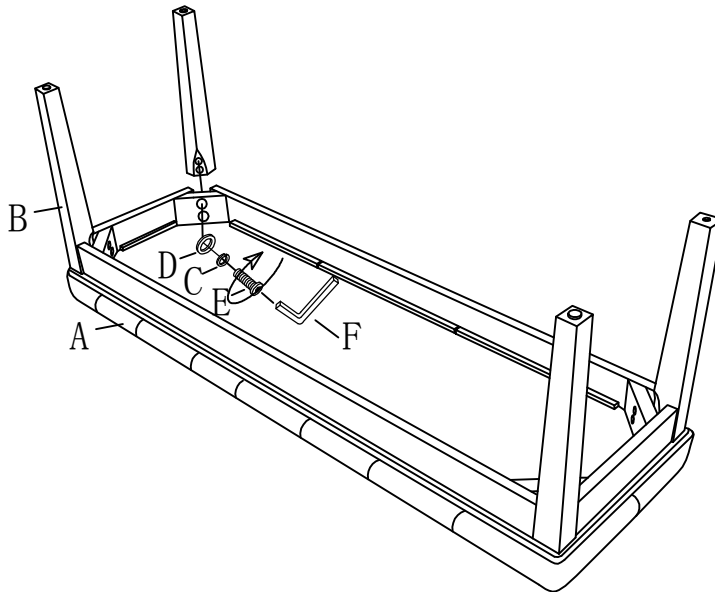

Stand chair up on an even surface and check that it is balanced.  
If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts.  
If balanced, apply downward pressure evenly in the center and tighten all bolts.  
Do not over-tighten beyond hole depth.

**Helpful Tip:**

-Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the chair while you tighten the bolts.

---

**Cleaning & Care**

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.