

ASSEMBLY INSTRUCTIONS



OZARK TRAIL®
OUTDOOR EQUIPMENT

MODEL W203.2 1 PERSON HIKER 7' X 5'

SAFETY WARNING - DOs AND DO NOTs

EVERYONE WHO USES THIS TENT SHOULD READ THIS MANUAL AND BECOME FAMILIAR WITH ALL SAFETY WARNINGS AND PRECAUTIONS FOR SAFE USE, ASSEMBLY, CARE, MAINTENANCE, AND STORAGE. KEEP THIS MANUAL SO YOU CAN REFER TO IT LATER.

⚠ DANGER CARBON MONOXIDE GAS WILL KILL YOU

Stoves, heaters, grills, lanterns, candles, and other fuelburning devices that burn propane, natural gas, charcoal, kerosene, coal, or other fuels produce a toxic gas called carbon monoxide. Because carbon monoxide gas is invisible, odorless, and colorless, a dangerous level of carbon monoxide gas can accumulate in a tent which cannot be detected by sight, smell, or taste. For these reasons:

- DO NOT use matches, lighters, stoves, heaters, grills, lanterns, candles, cooking equipment, or other fuelburning devices inside or near a tent.
 - DO NOT build fires inside or near a tent.
 - DO NOT leave campfires unattended.
- Your failure to follow this warning will cause death, serious injury, or permanent disability to you or others.

⚠ DANGER PROTECT YOUR CHILDREN

- DO NOT leave children unattended inside a tent or in camp.
 - DO NOT allow children to assemble a tent.
 - DO NOT allow children to enter or exit a tent except through the door.
 - DO NOT allow children to remain in a closed-up tent on hot days.
- Your failure to follow this warning will cause death, serious injury, or permanent disability to your children.

⚠ WARNING FLAMMABILITY WARNING KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

This tent is made with flame resistant fabric which meets CPA84 specification. IT IS NOT FIREPROOF. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

CAMPING DO'S AND DON'TS DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Do not store tent on concrete floor.

DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly vented in all weather conditions. In extreme weather conditions, snow could obstruct outflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, stis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

CARE

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON CONCRETE FLOOR. DO NOT SPRAY THE TENT WITH INSECTICIDE.

Your tent is water repellent, however, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage or point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

EXERCISE CARE WHEN USING ELECTRIC DEVICES IN AND NEAR TENTS.

 
Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled now, possibly causing broken frames and torn fabric.

REPLACEMENT PARTS

If you have questions or need to order a part, call 1-800-325-4121 or send a email to contactus@wenzelco.com. Have your model number or part number ready when you call. DO NOT ORDER BY REFERENCE KEY NUMBER.

Send your request for parts to:
Exxel Outdoors, LLC.
6235 Lookout Road
Boulder, CO 80301

| KEY NO. | MODEL NO. W203.2, 7' x 5' | PART NO. | QTY REQ |
|---------|-----------------------------|-----------|---------|
| A | Fiberglass Tent Pole - Main | 01238669 | 2 |
| | Complete Frame | W203FR | 1 |
| | Replacement Fly | W203.FLY | 1 |
| | Steel Stakes | PIN STAKE | 6 |

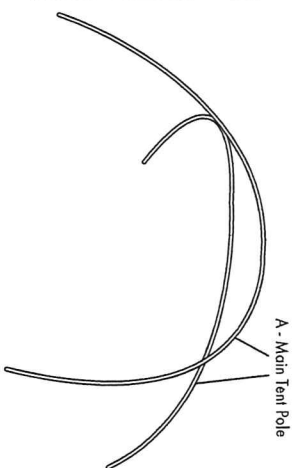

A - Main Tent Pole

ASSEMBLY INSTRUCTIONS



MODEL W203.2 1 PERSON HIKER 7' X 5'

IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT. NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.

TO PROLONG THE LIFE OF THE TENT FLOOR, SELECT A LEVEL, CLEAN AREA FOR THE CAMPSITE. TO PREVENT DAMAGE TO THE ZIPPER, UNZIP THE DOOR TO ALLOW AIR TO ENTER THE TENT DURING SET UP.

 
TO IMPROVE THE WEATHER RESISTANCE OF YOUR TENT, IT IS ADVISABLE TO USE SEAM SEALER TO COAT ALL EXPOSED SEAMS. YOU SHOULD APPLY ONLY TO THE INSIDE SEAMS OF THE TENT AND UNDERSIDE OF THE TENT FLY. IF APPLIED TO THE OUTSIDE OF SEAMS, DISCOLORATION OF YOUR TENT MAY OCCUR. SEAM SEALER IS AVAILABLE IN THE CAMPING SECTION OF ANY LOCAL SPORTING GOODS STORE.

STEP 1: Spread tent out flat, floor side down.

STEP 2: Extend the fiberglass frame poles by pulling out each section and placing it into the metal connectors. You will have two fiberglass poles (A).

STEP 3: Lay both poles across the top of the tent. Insert the pole ends into the grommets at the front of the tent.

Clip the plastic hook just above the grommet to the pole. Move to the back of the tent and gently flex one pole into an arch and place the pole end into the grommet at the back of the tent. Clip the plastic hook just above the grommet to the pole. Repeat for the second pole.

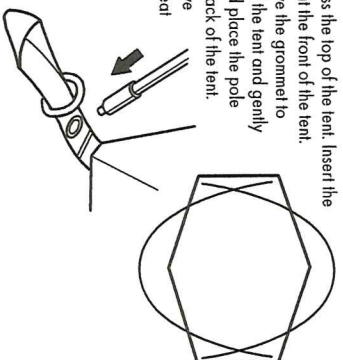


STEP 4: Raise both poles upward to make two hoops that cross at both ends of the tent.

STEP 5: Clip the plastic hooks attached to the tent walls to the tent poles



STEP 6: Stake down tent by inserting tent stakes through the loops at each corner of the tent and at the center of the tent. Hammer stakes into ground at a 45° angle, by using a hammer or mallet. Make sure to pull tent out even and tight.

 Tent should appear as shown.

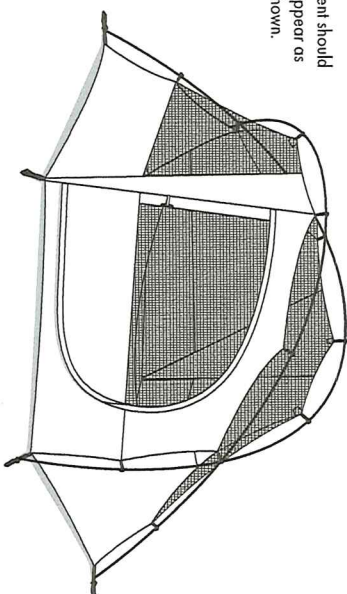


STEP 7: Unfold the fly. Place fly over the tent so that the cut out for the door is placed over the tent door. Attach the hooks on the fly to the webbing loops at the tent corners. Fasten the Velcro fasteners sewn to the edge of the fly around the fiberglass tent poles.

WARNING: Elastic cords can snap back and hit your eye. To reduce the risk of injury to you and others:

- Keep your body and face clear.
- Do not over stretch elastic cords.
- Maintain firm grip on hook.
- Pull the hook toward you; if it slips it will spring away from you.
- Make sure hook is fully clipped to tent before releasing.
- Wear protective eyewear during tent assembly.

Your failure to follow this warning could cause serious injury or permanent disability.

 Tent should appear as shown.

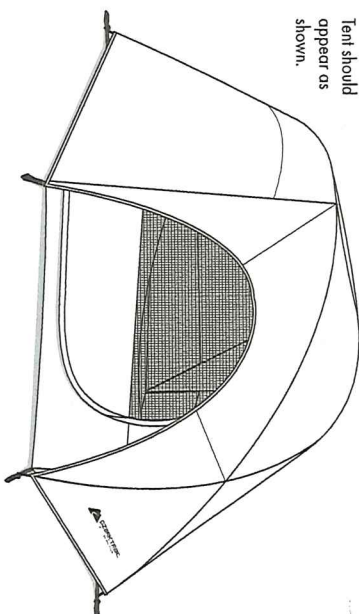

NOTE: To take down tent, follow steps above in the reverse order. Be sure to leave tent unzipped. Place stakes into stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay on top of tent. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the door. Roll tent toward door to allow air to escape. Once rolled, secure with strings or rope. Slide tent and stake bag into carry bag. Make sure tent is clean and dry before storing.