 
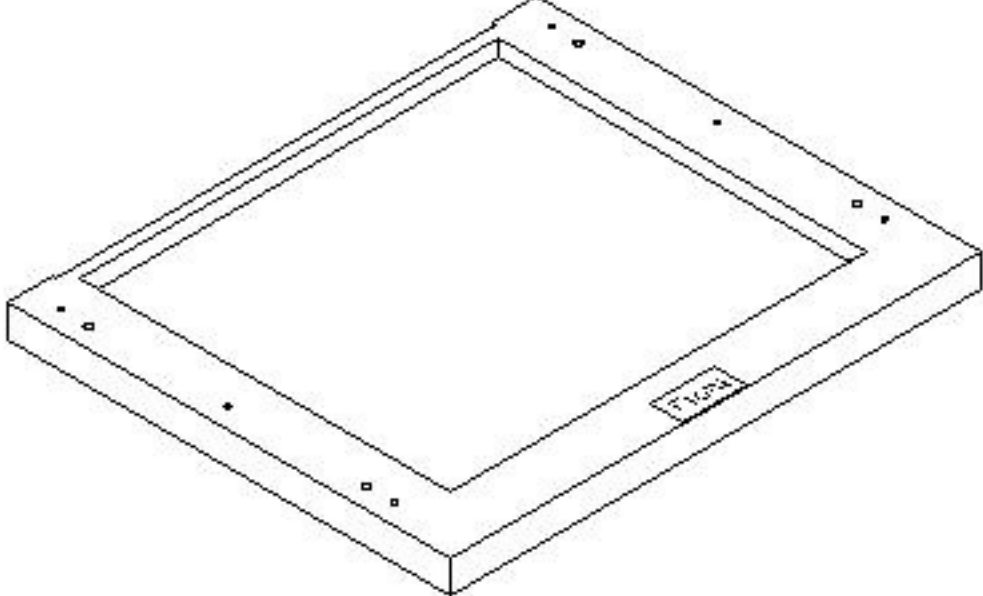 
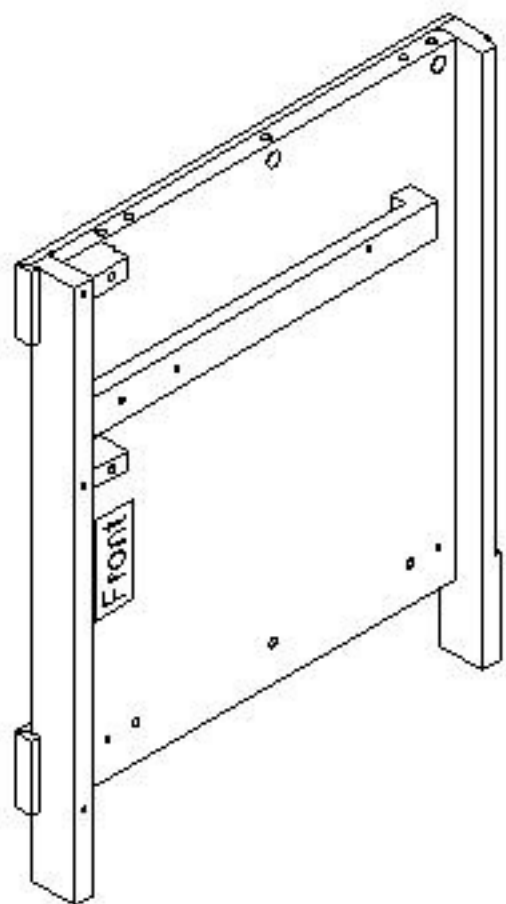 
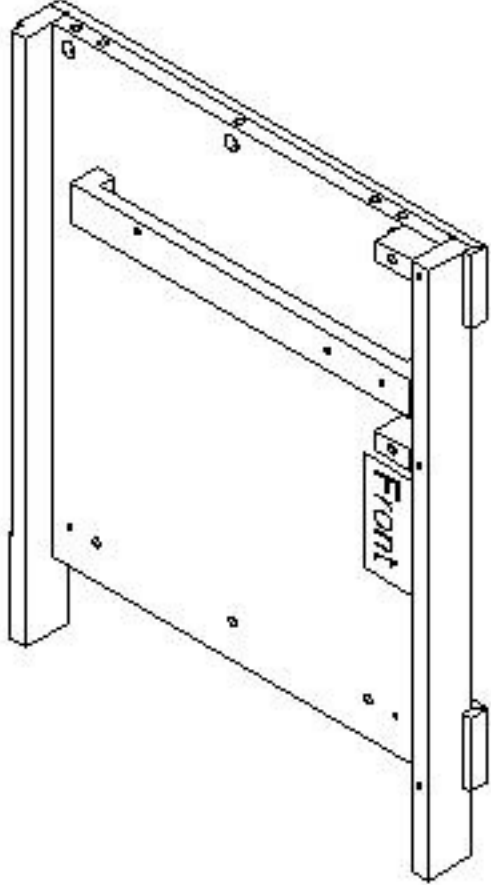 
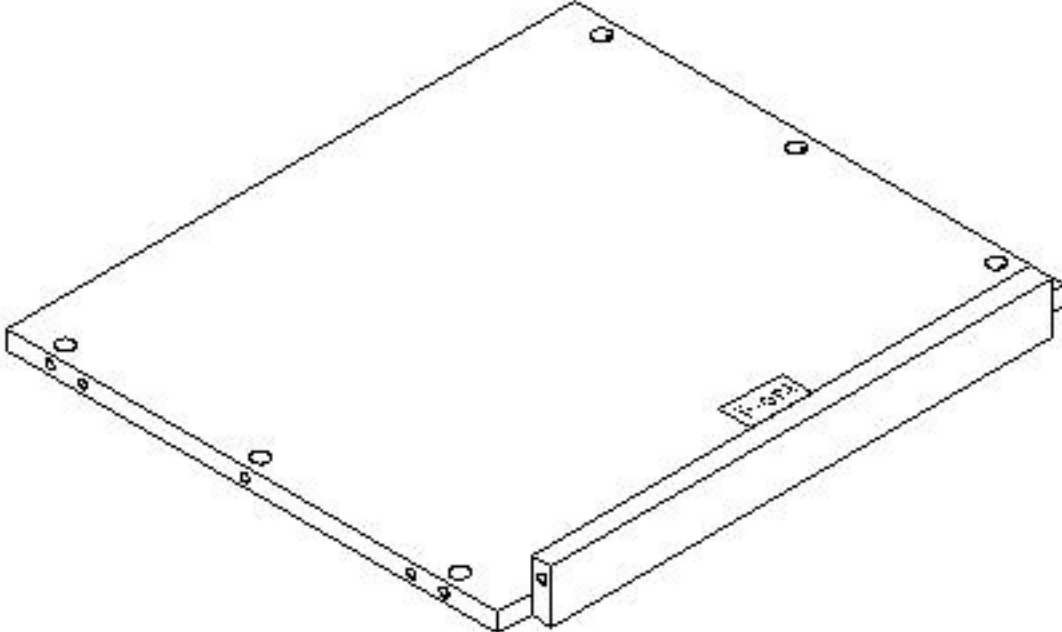 
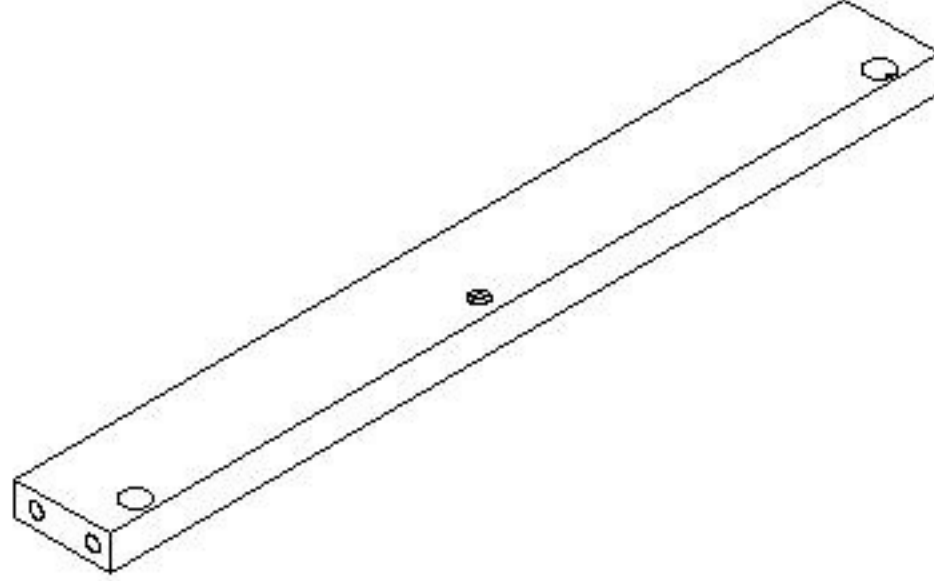 
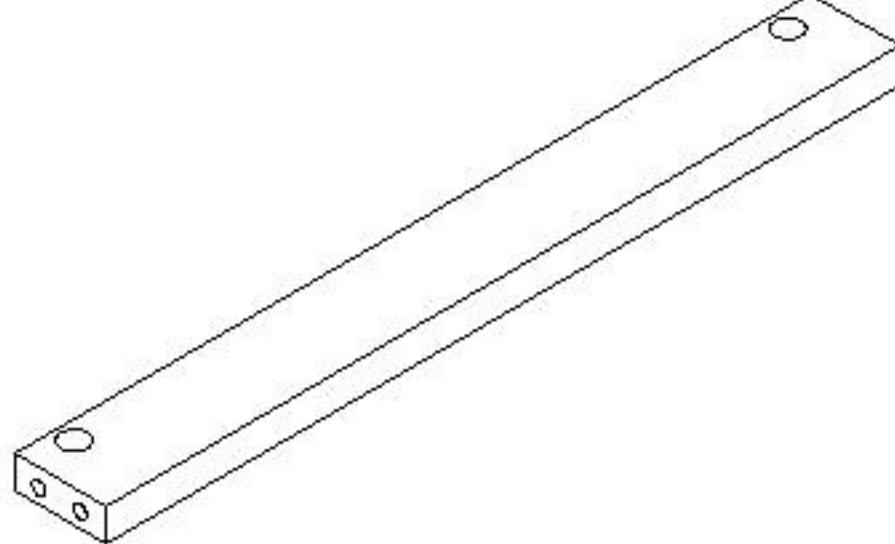 
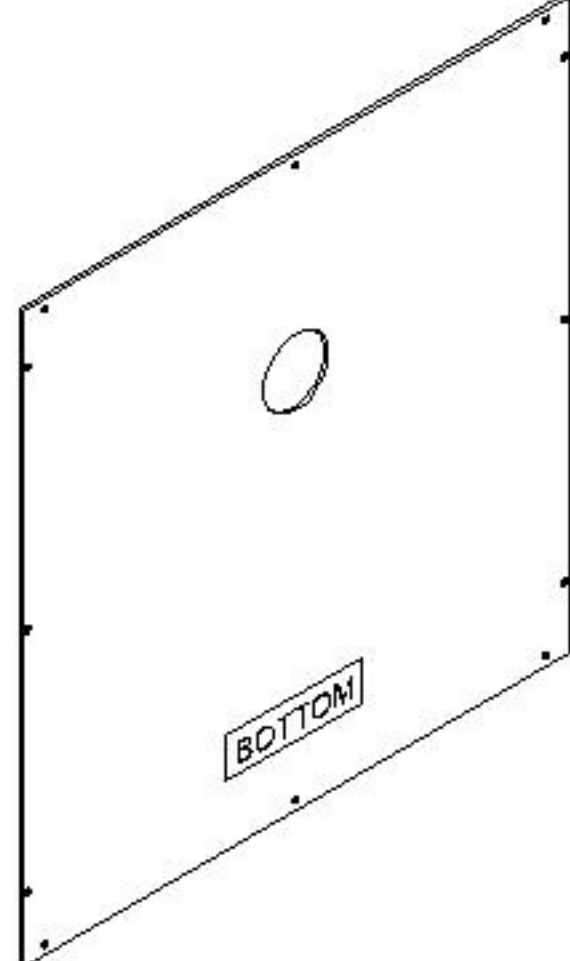 
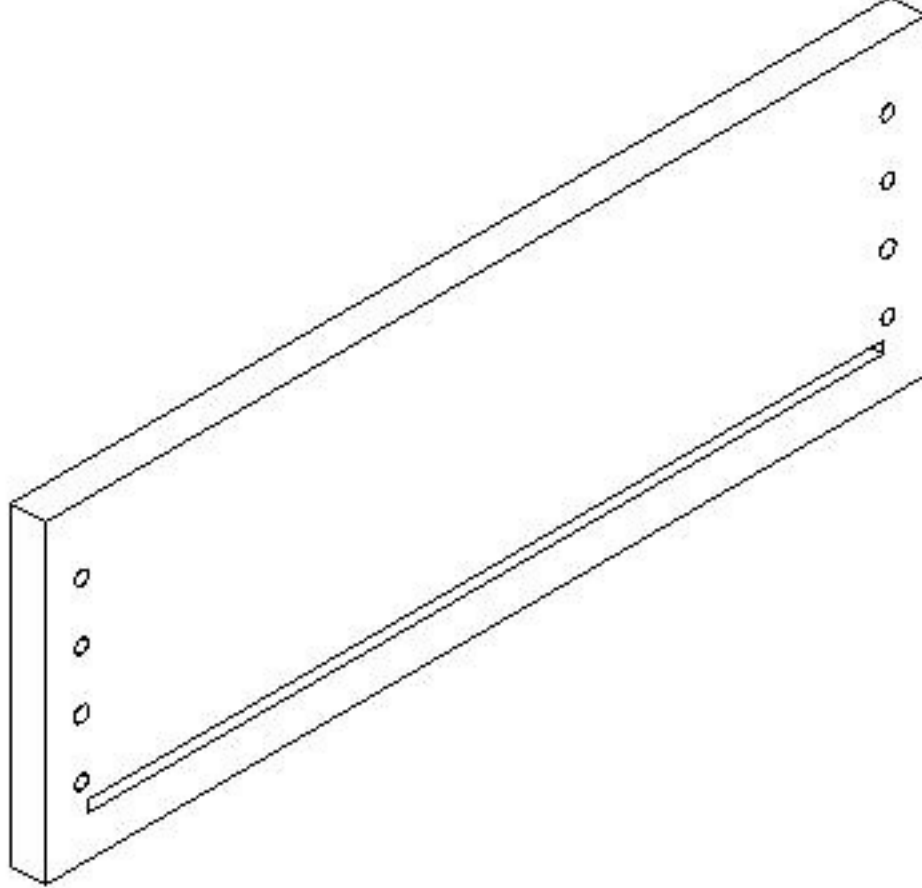 
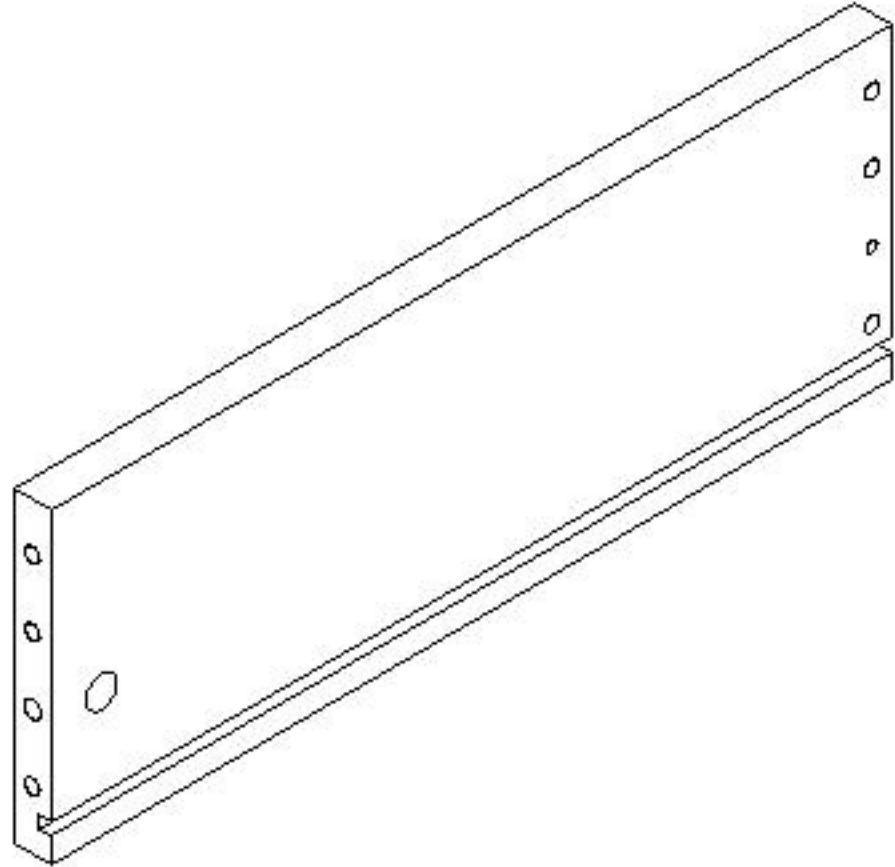 
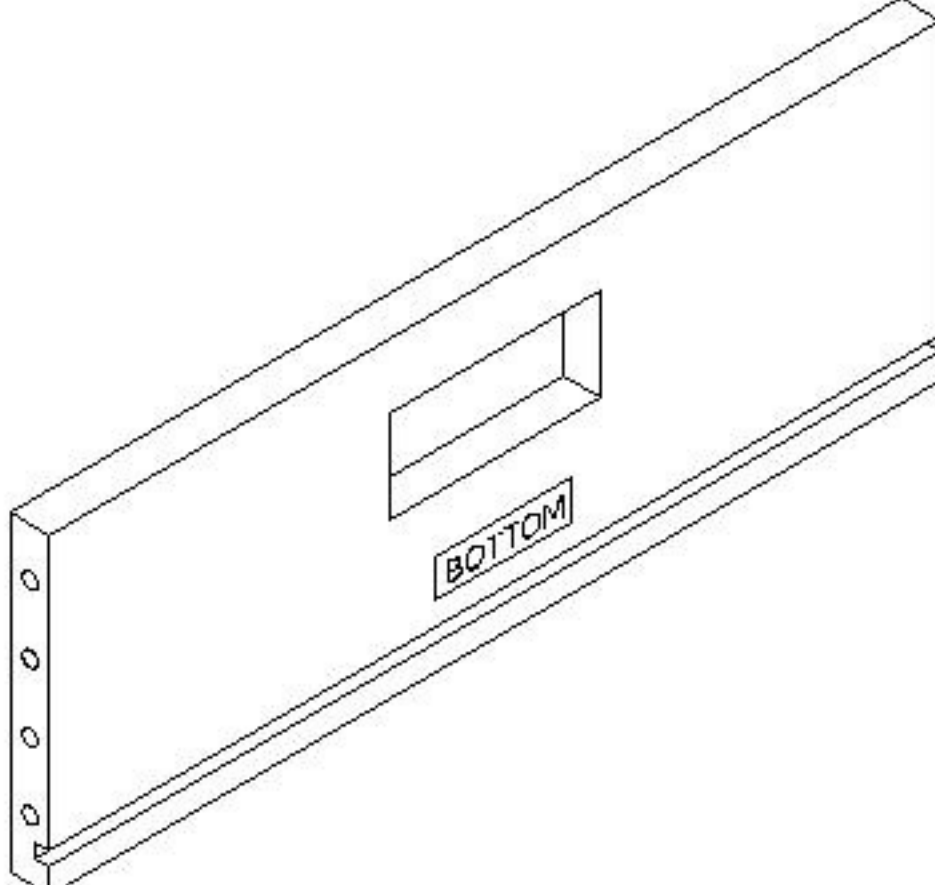 
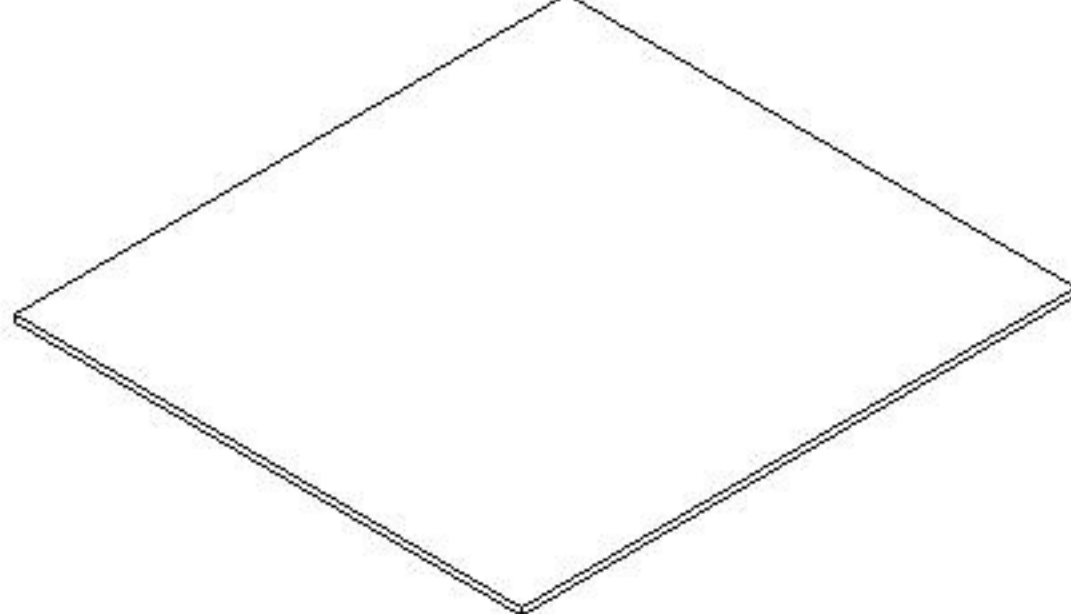 
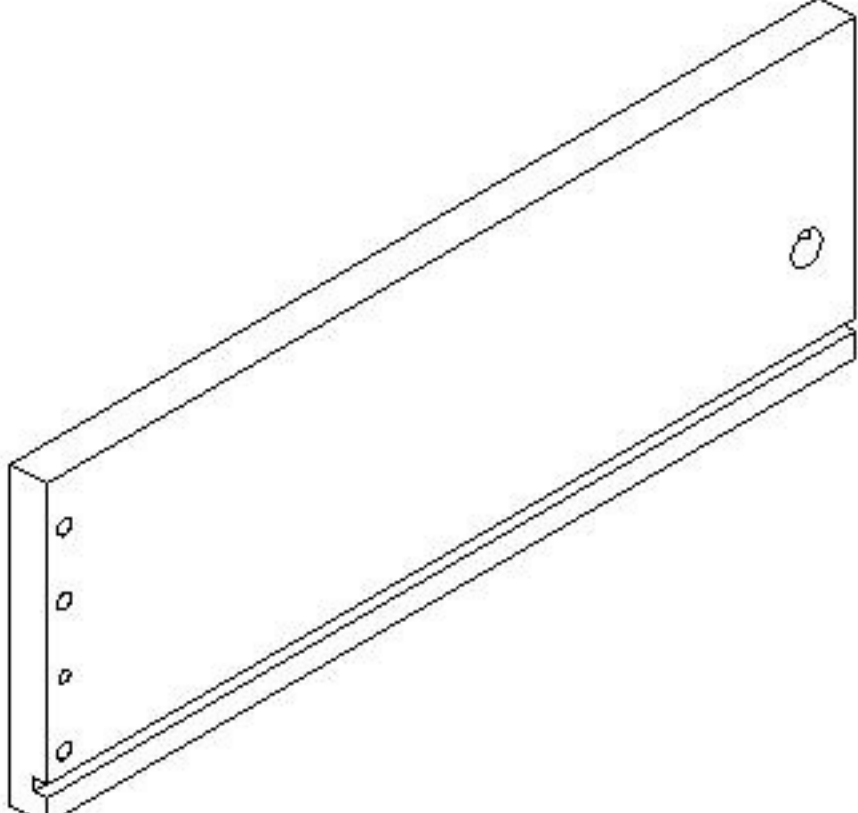 
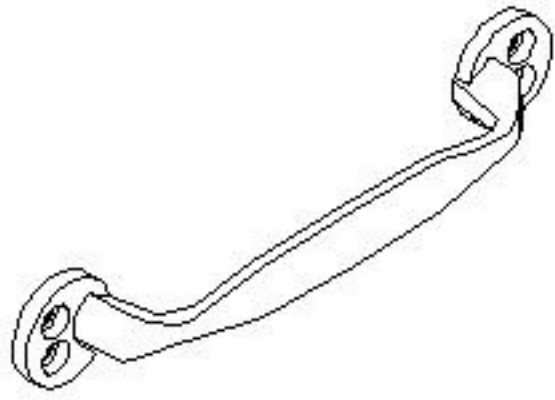 
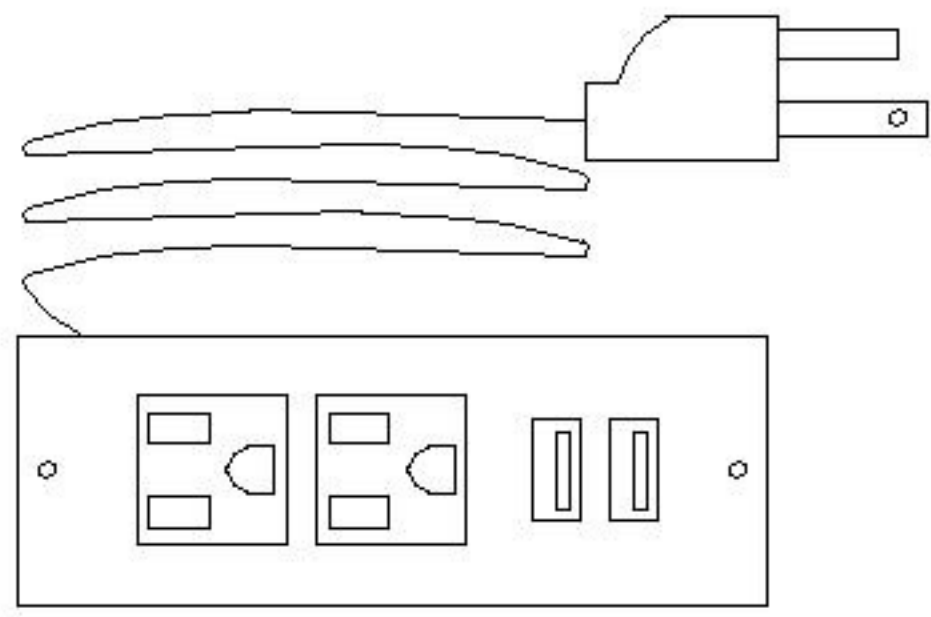 
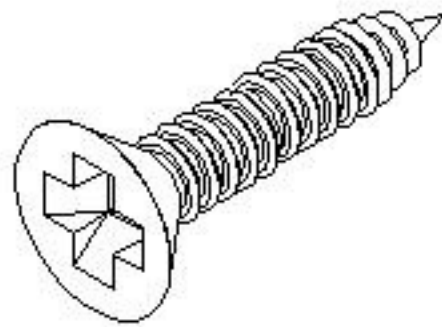 
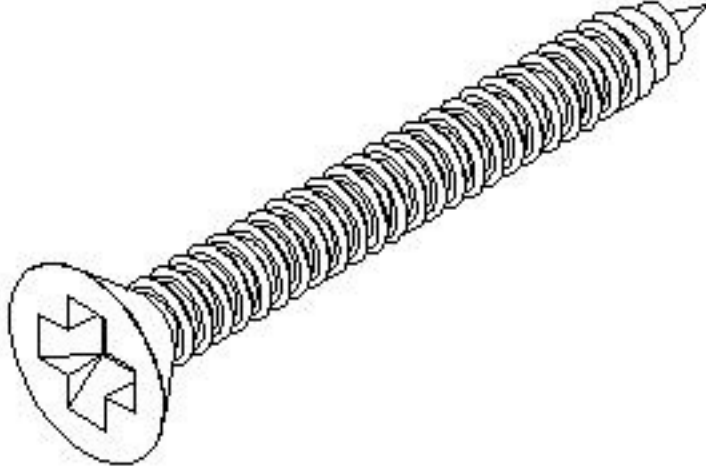 
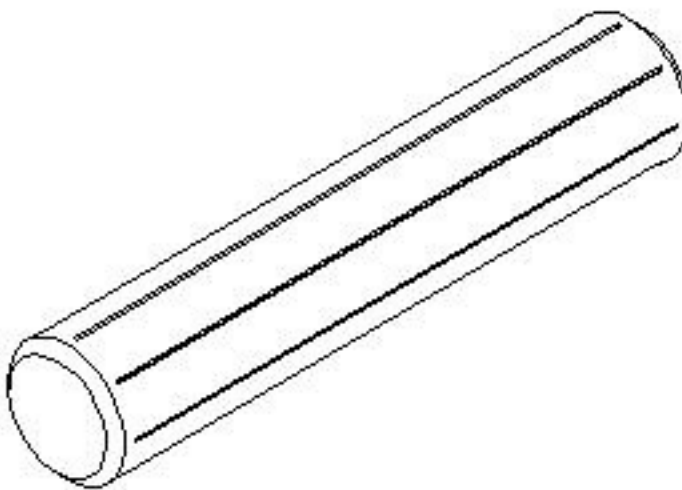 
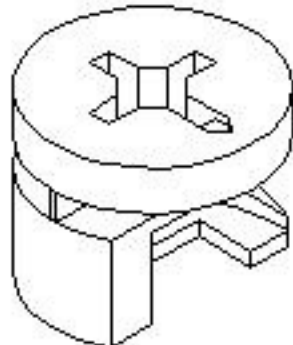 
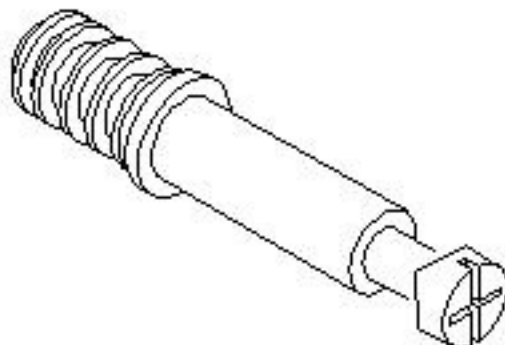 
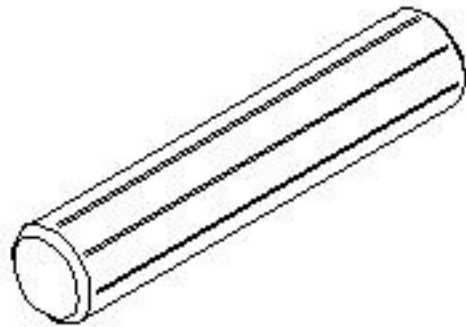 
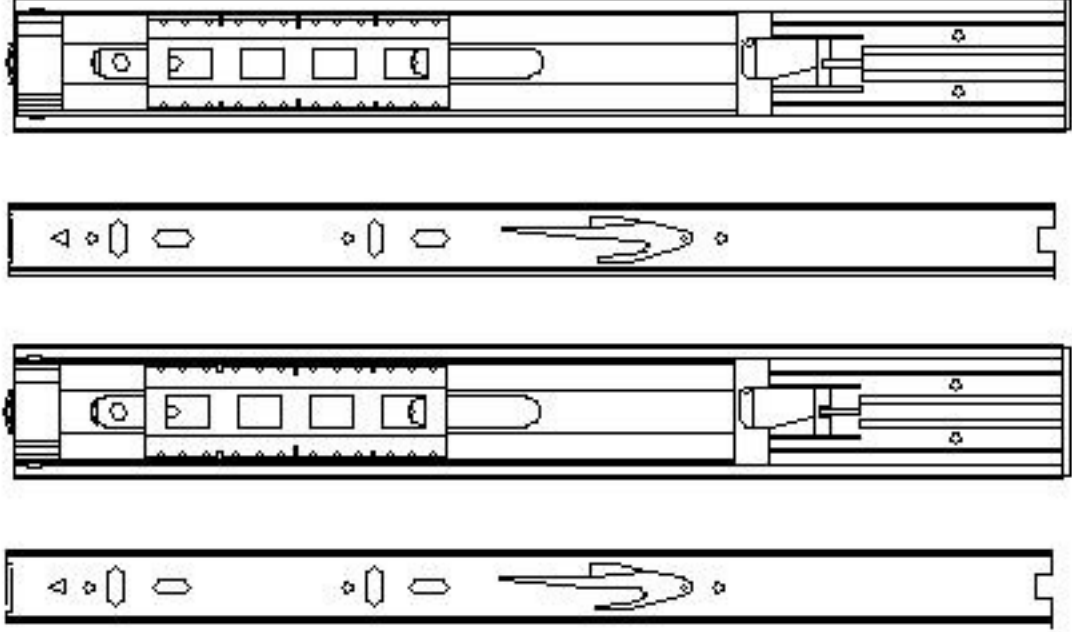 
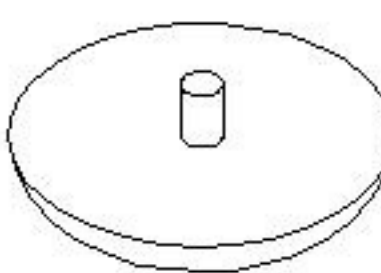 
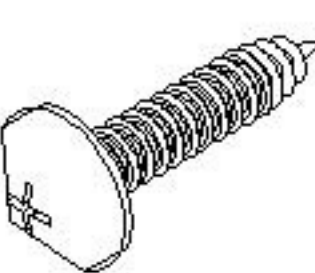 
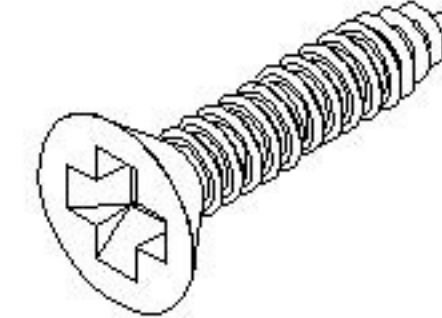 


# ASSEMBLY INSTRUCTION

## 1-DRAWER NIGHTSTAND WITH POWER OUTLET

<b>A</b> Top Panel	<b>B</b> Left Side Panel	<b>C</b> Right Side Panel	<b>D</b> Bottom Panel
			
1pc	1pc	1pc	1pc
<b>E</b> Top Bar	<b>F</b> Center Bar	<b>G</b> Back Plywood	<b>H</b> Drawer Front
			
1pc	1pc	1pc	1pc
<b>I</b> Left Drawer Side	<b>J</b> Drawer Back	<b>K</b> Drawer Base	<b>L</b> Right Drawer Side
			
1pc	1pc	1pc	1pc
<b>M</b> Handle	<b>N</b> Power Port	<b>O</b> Screw M3.5 x 16mm	<b>P</b> Screw M4 x 32mm
			
1pc	1pc	12pcs	1pc
<b>Q</b> Dowel M8 x 35mm	<b>R</b> Cam Lock 15 x 12mm	<b>S</b> Cam Bolt 5 x 25mm	<b>T</b> Dowel M6 x 30mm
			
12pcs	22pcs	22pcs	12pcs

 
<b>U</b> Runner 350mm	<b>V</b> Cam Lock Cover 17 x 5mm	<b>W</b> Panhead Screw M4 x 16mm-Black	<b>X</b> Screw M4 x 16mm
			
1set	22pcs	14pcs	4pcs

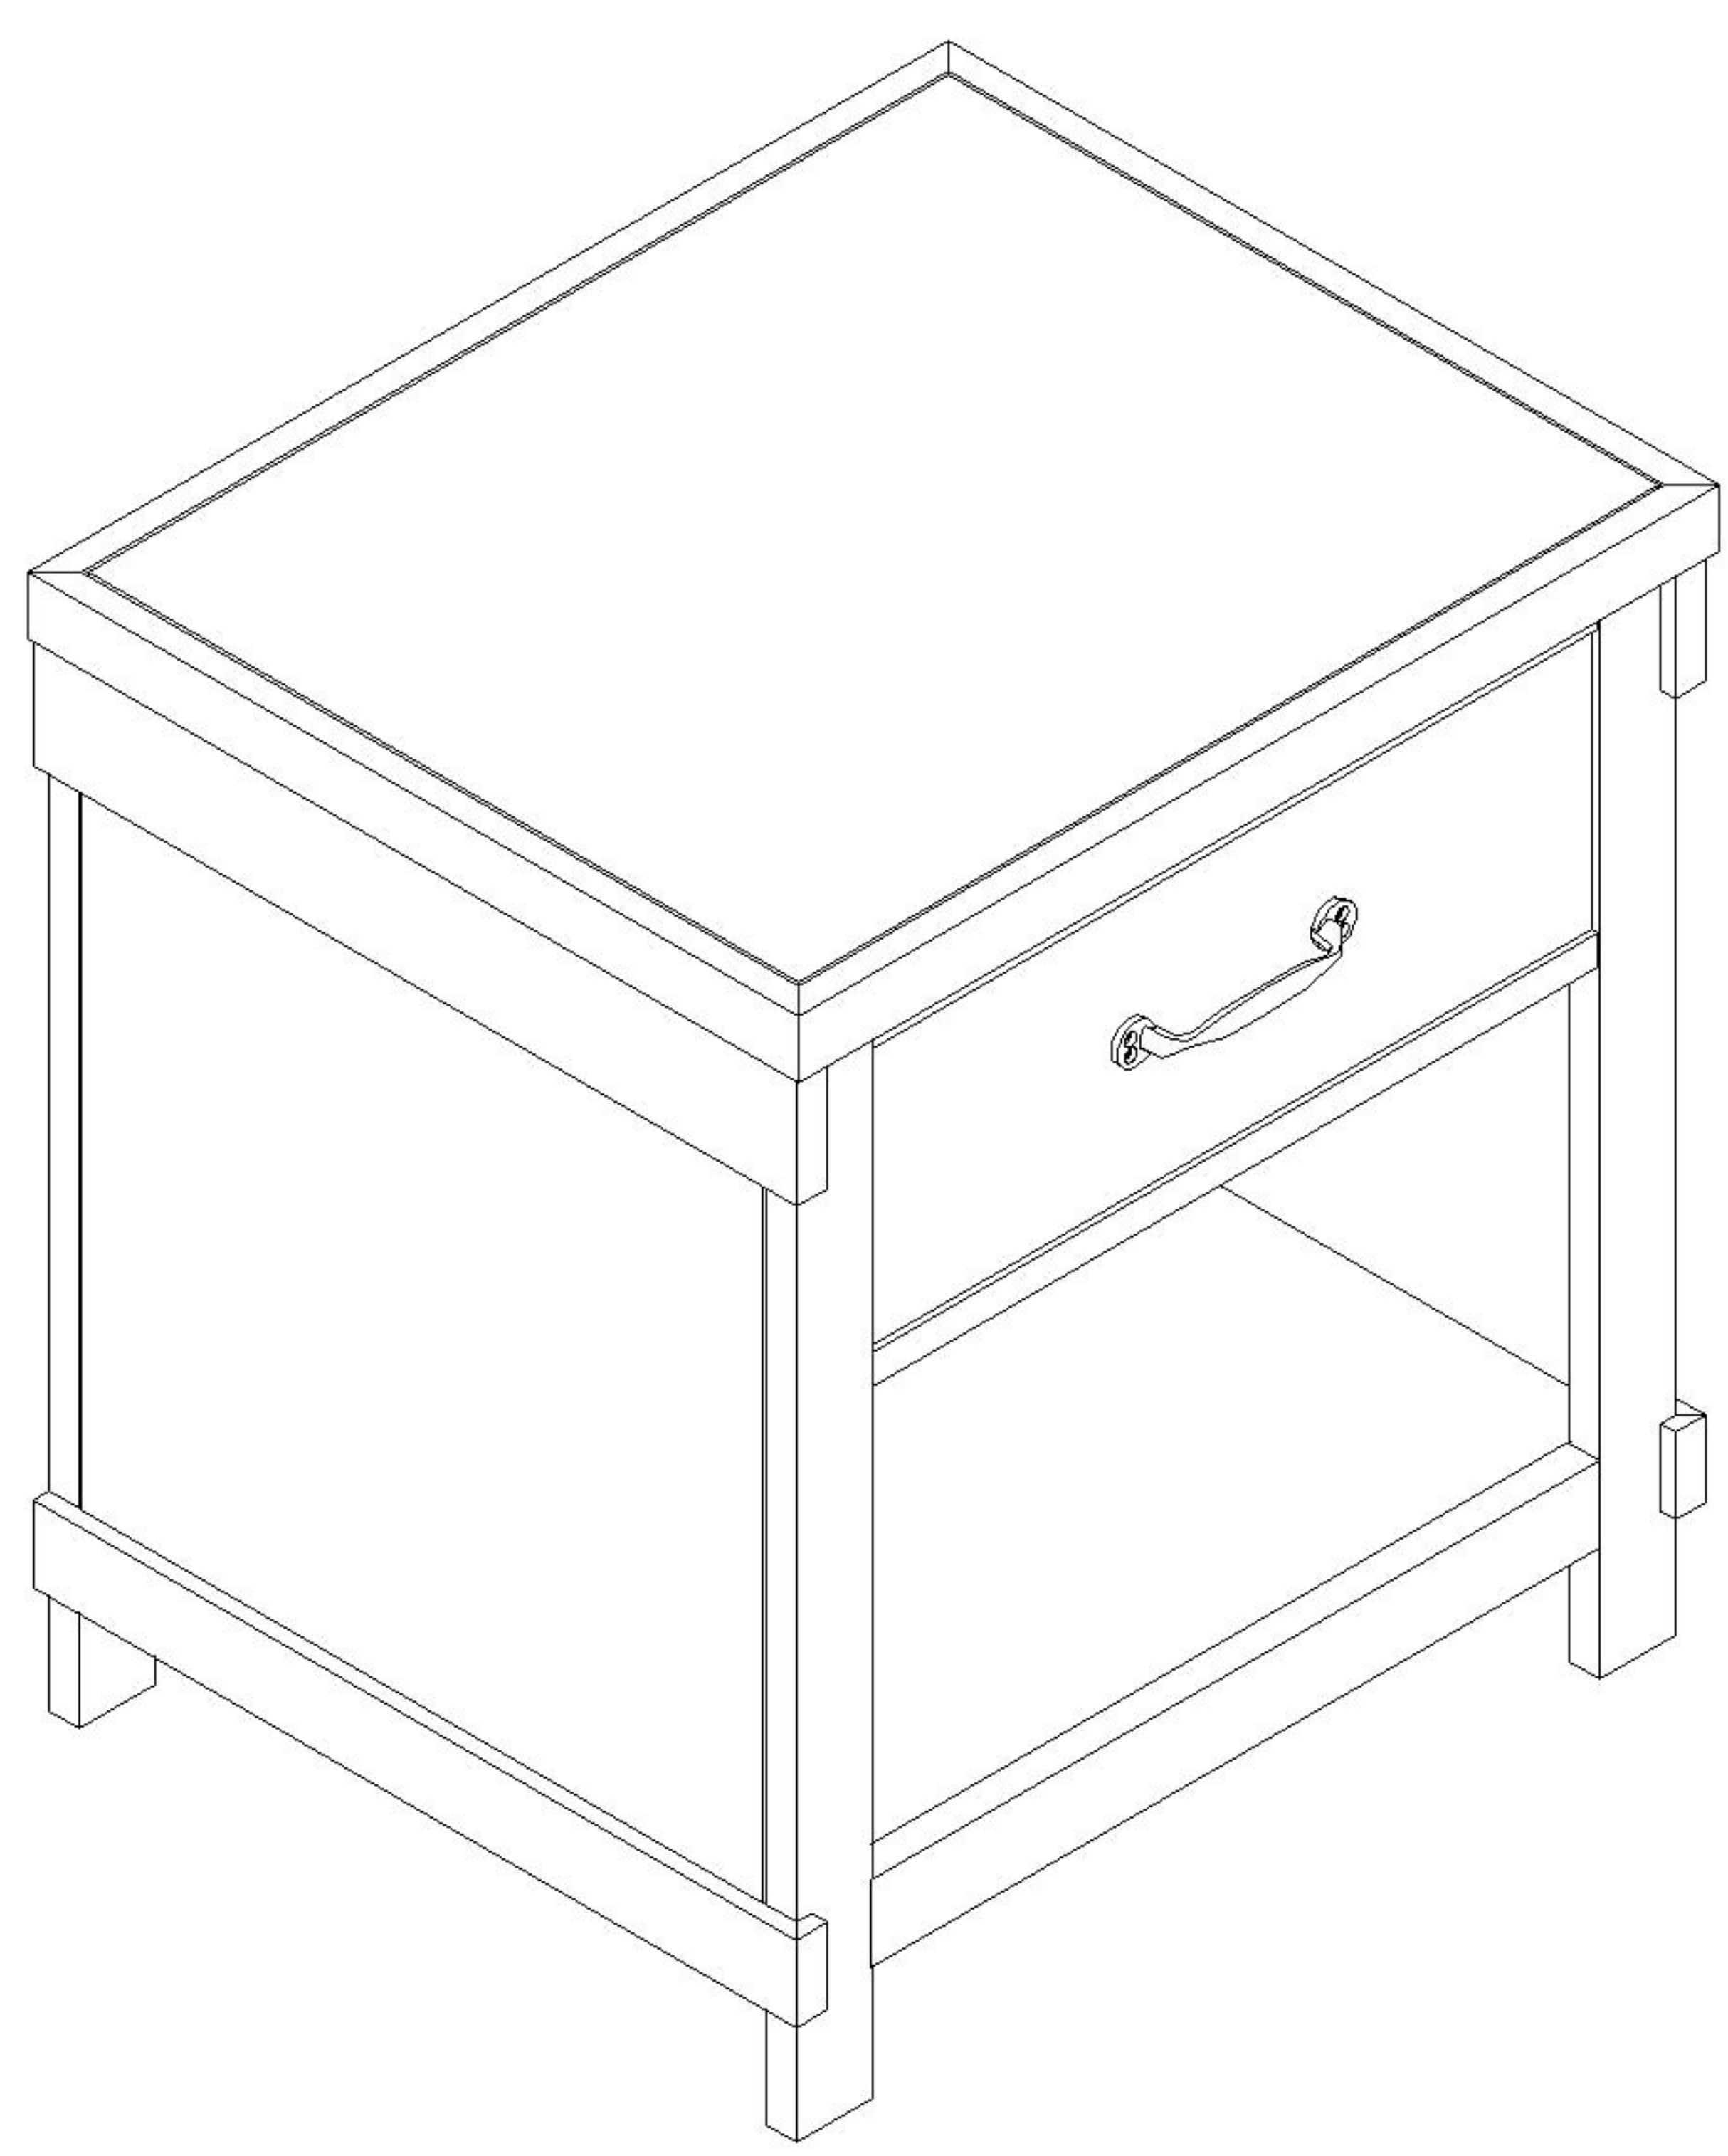

These pages list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.




**1** Attach Cam Bolt (S) to Top Panel (A).

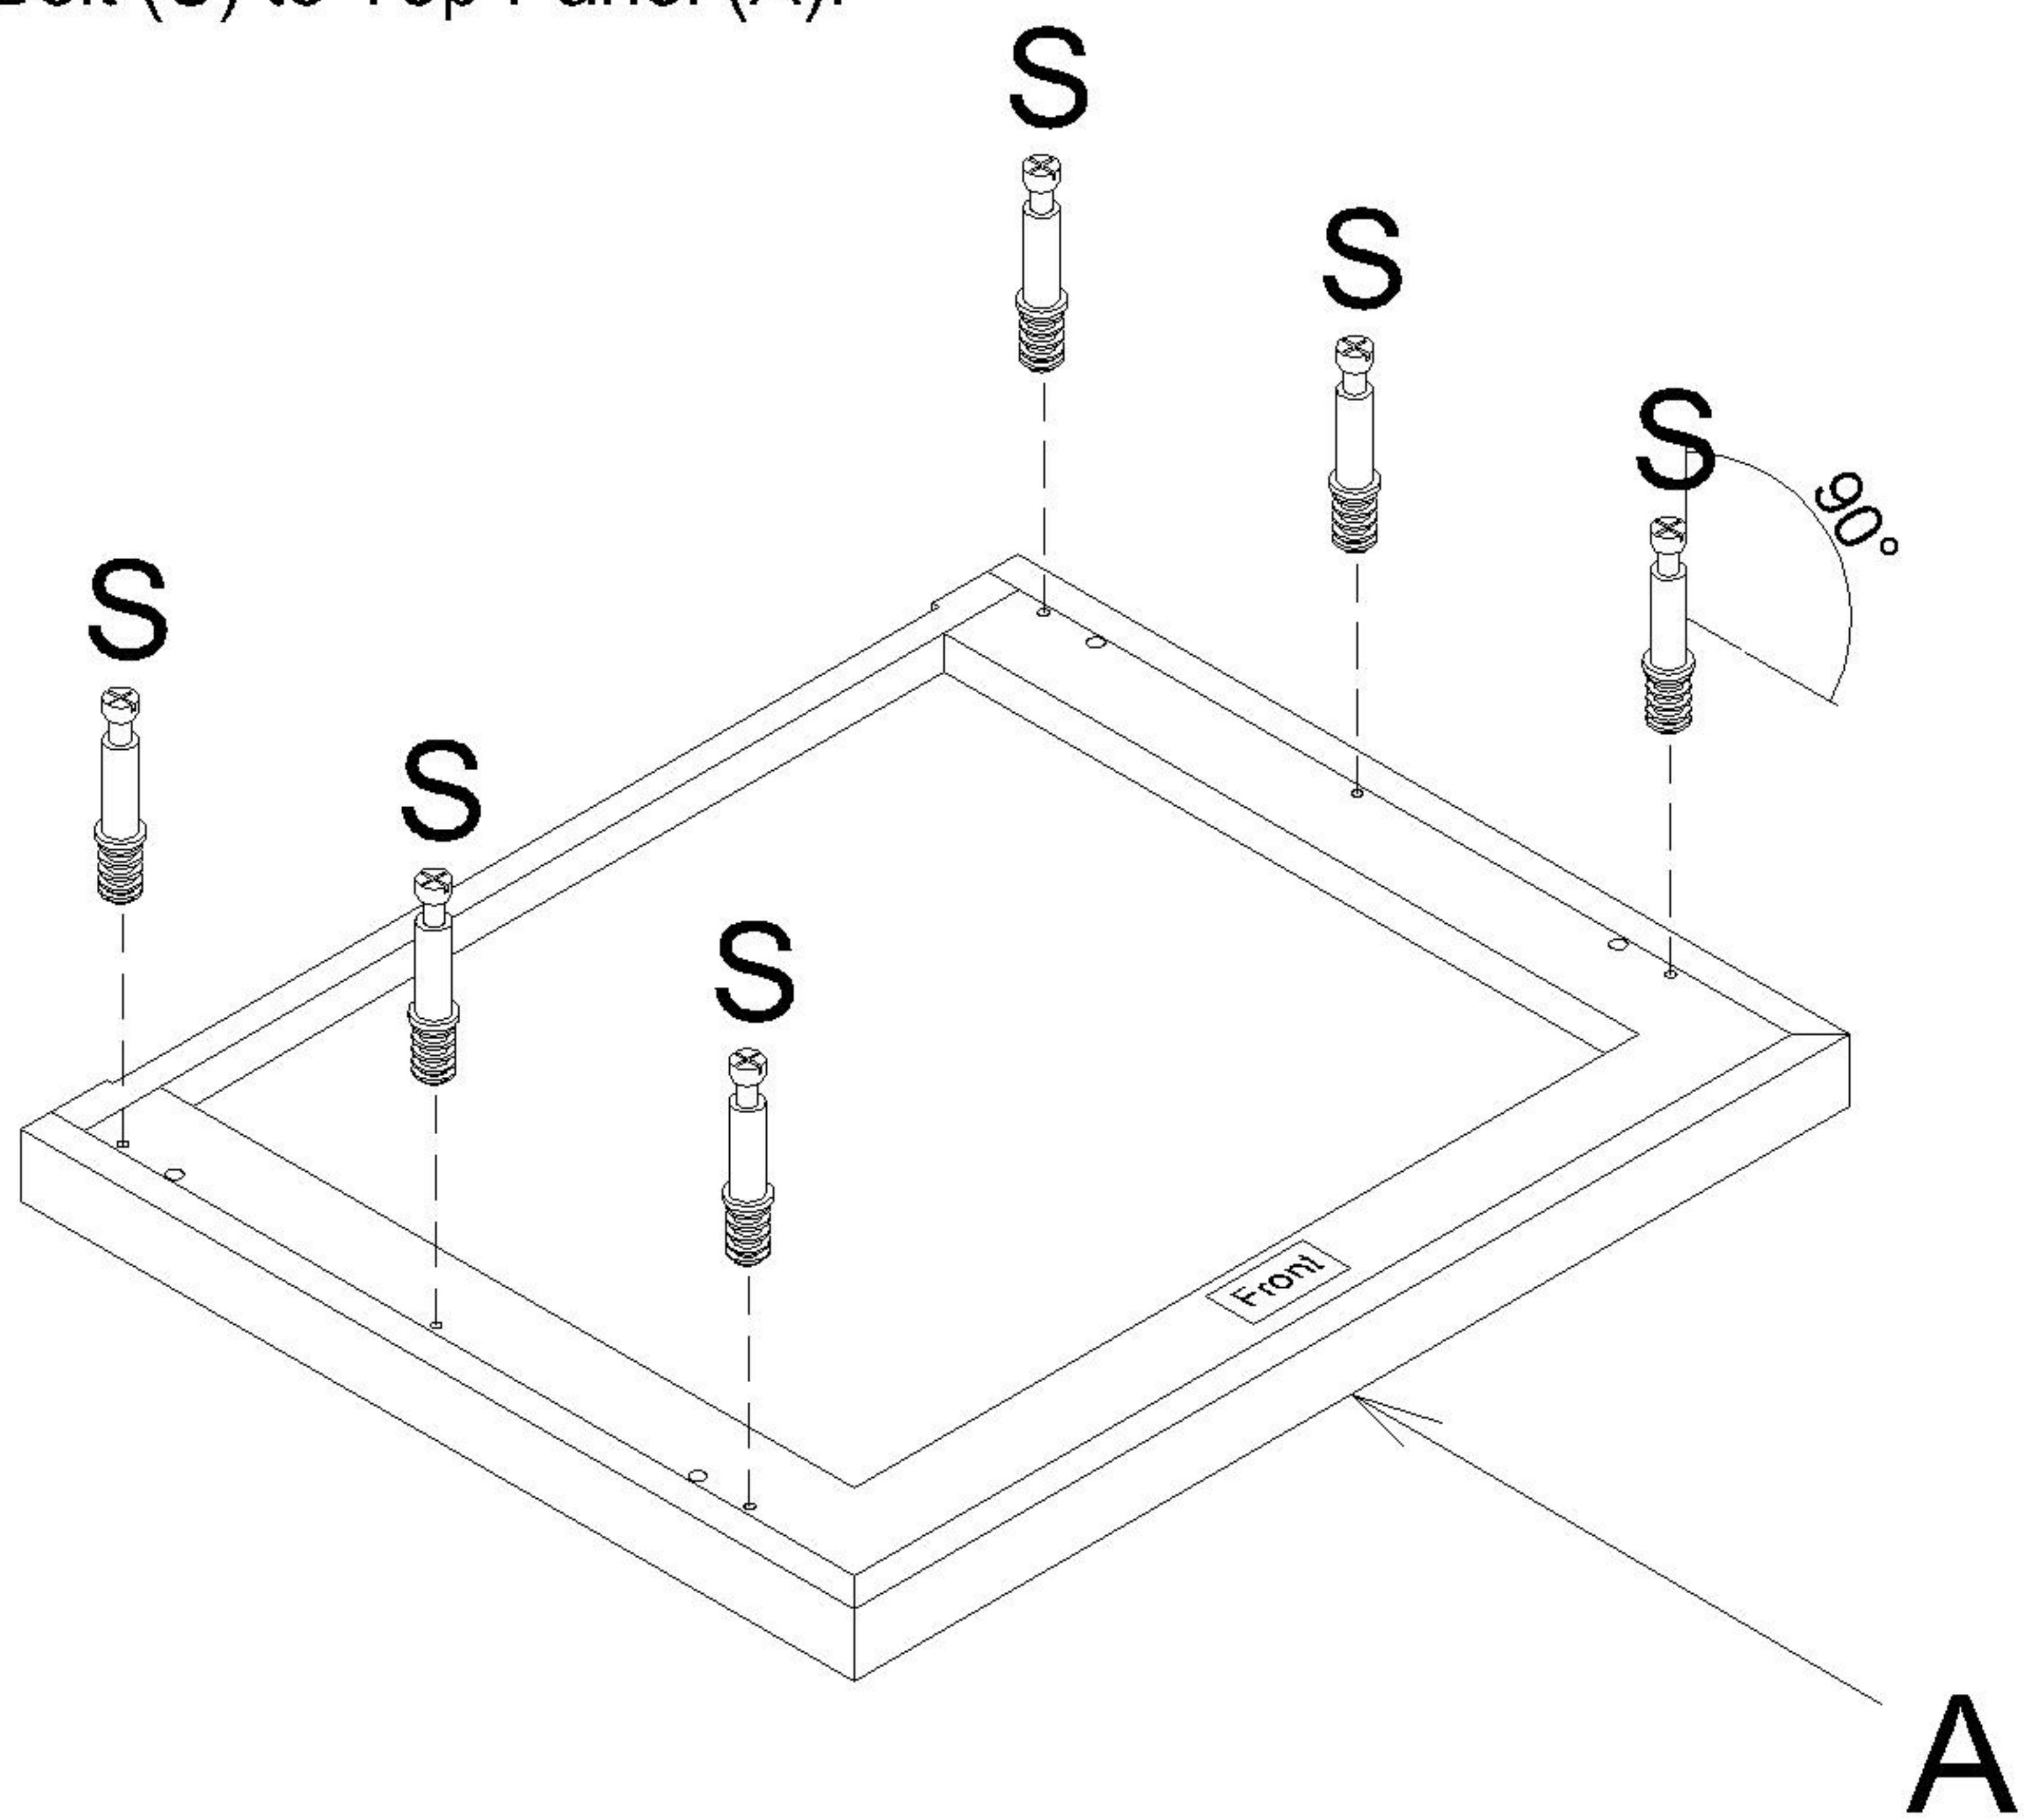

**2** Attach Dowel (Q), Cam Lock (R) and Cam Bolt (S) to Left & Right Side Panel (B & C).

 NOTE : - Make sure arrows on each Cam Lock (R) points towards nearest edge with holes.

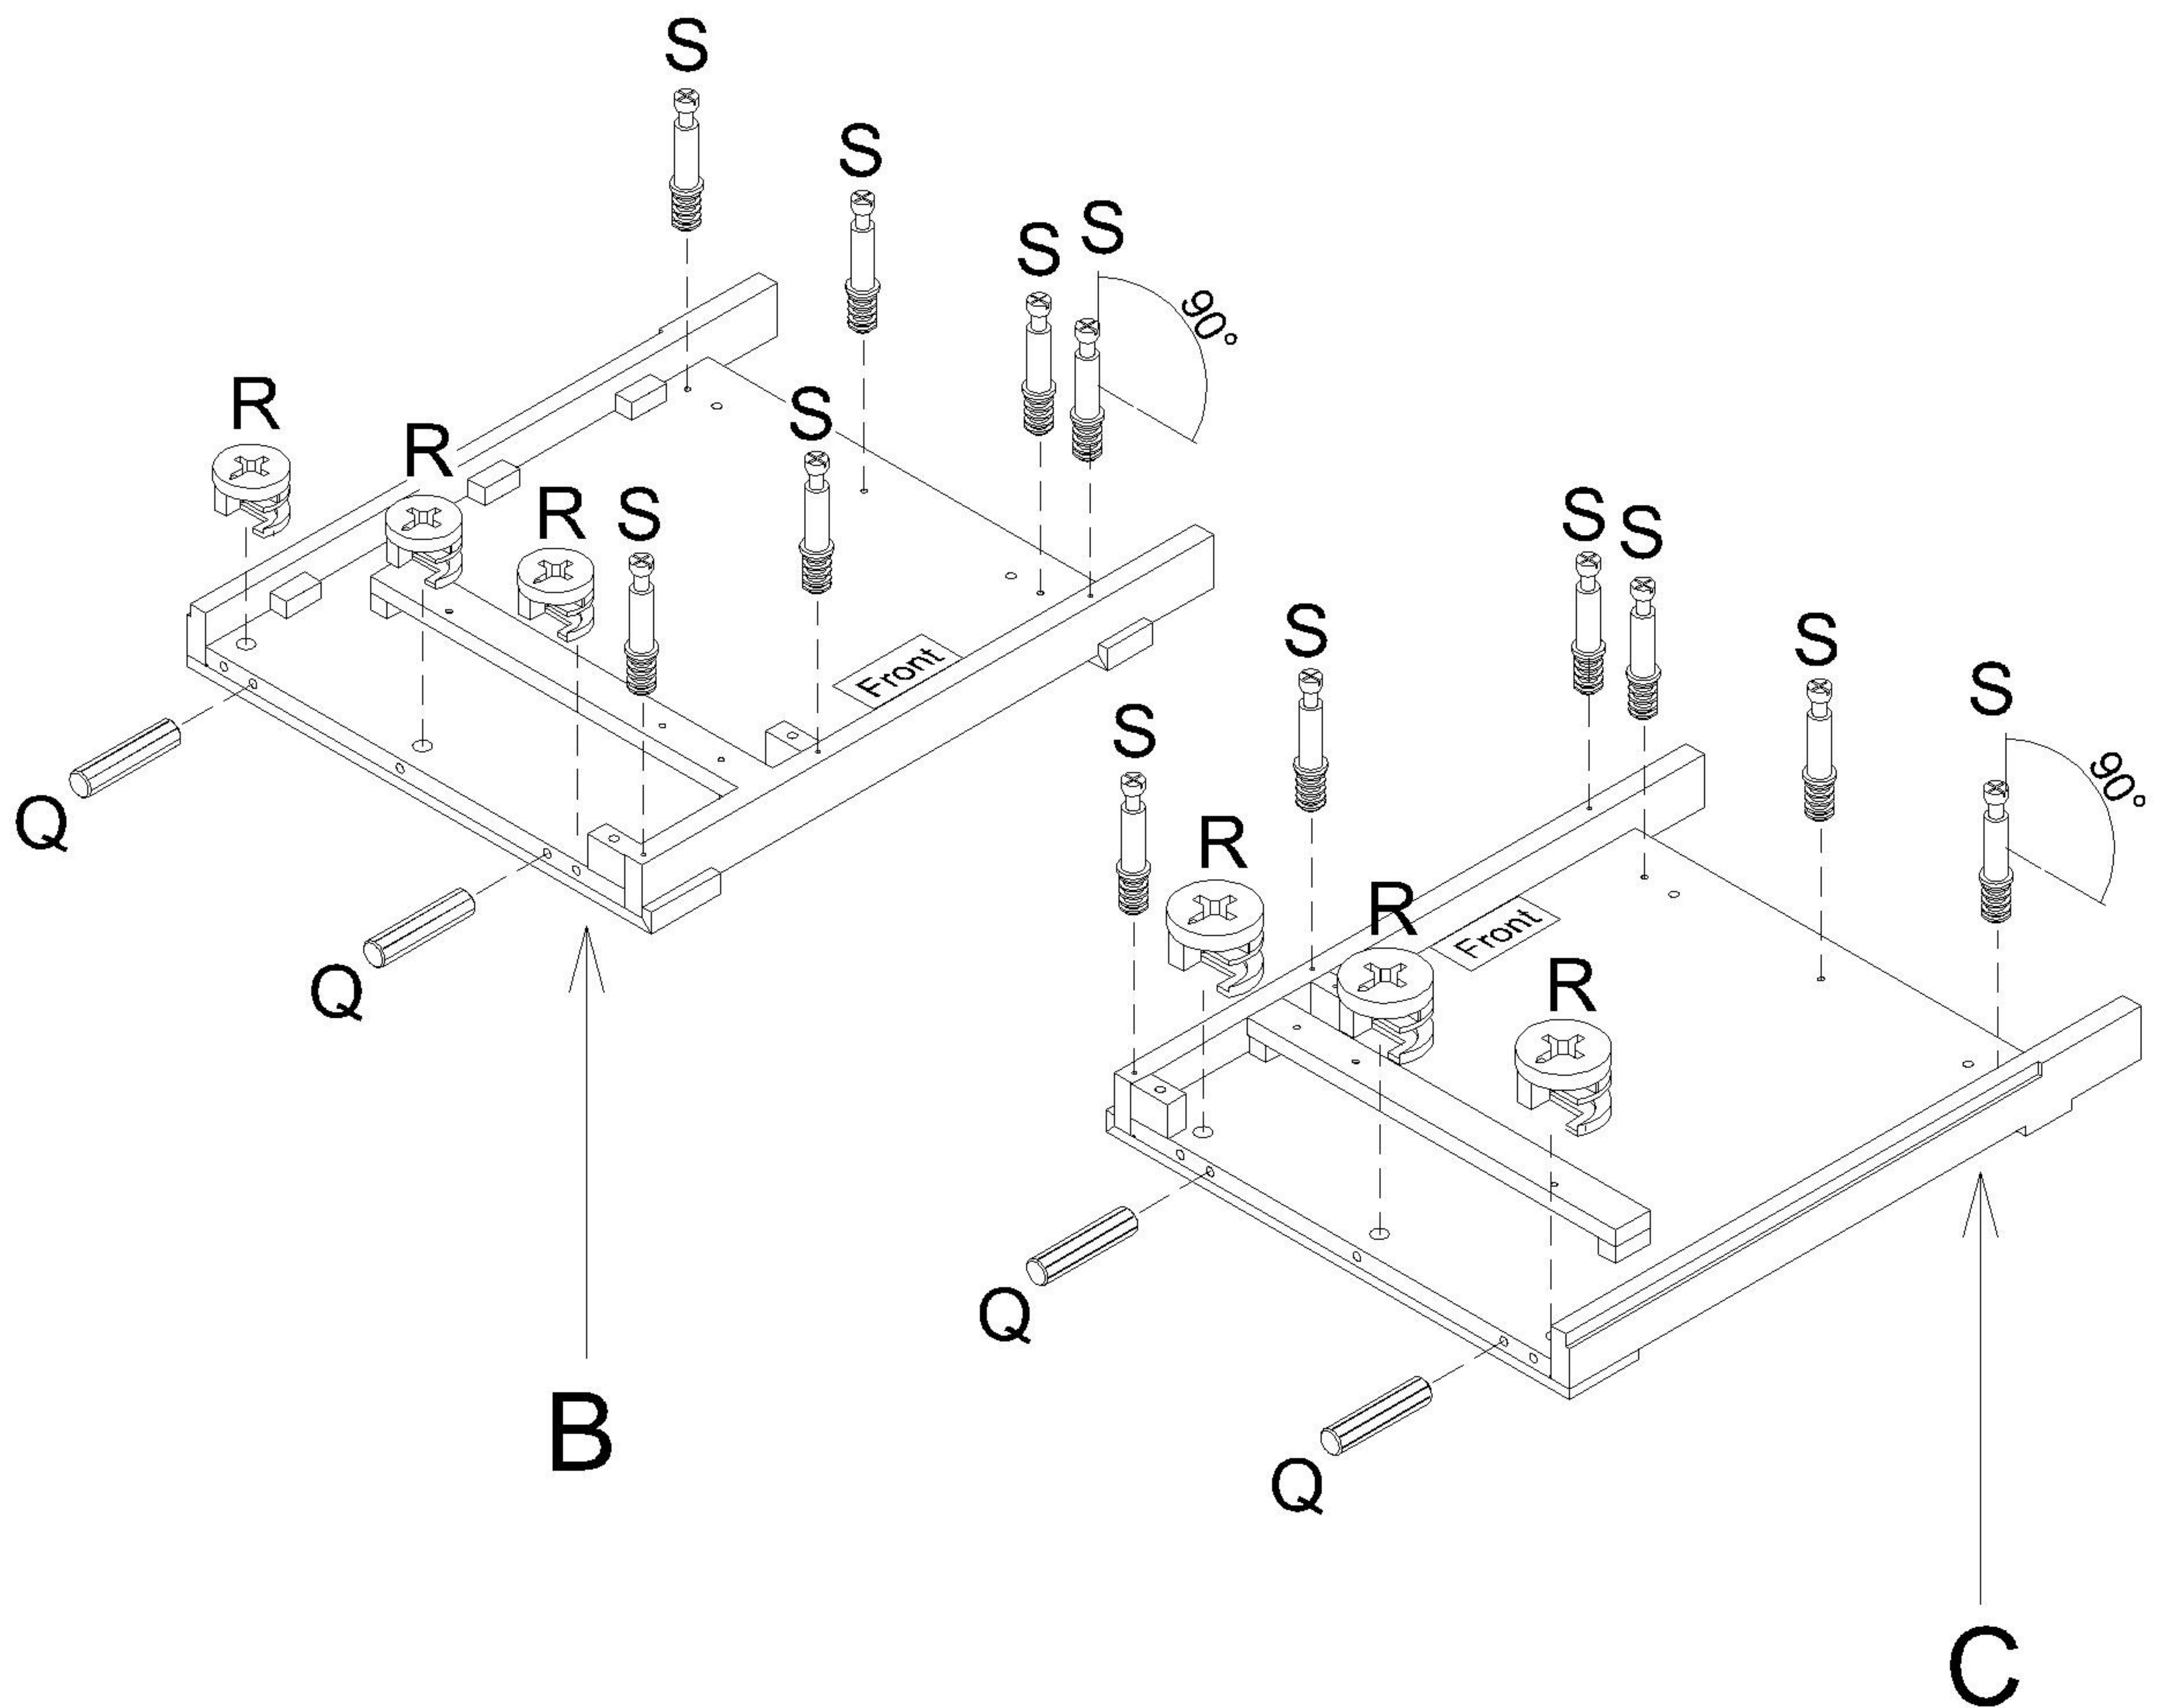





# 3

## Attach Runner (U) to Left & Right Side Panel (B & C) and secure with Screw (O).

 - NOTE : - Runner roller should be towards the front of the panel.
- Screw (O) should be assembled from the front of the runner. Start from O<sup>1</sup>, O<sup>2</sup> then O<sup>3</sup>.
  - Make sure the screws are installed vertically without slant to ensure screw sits properly in the hole.

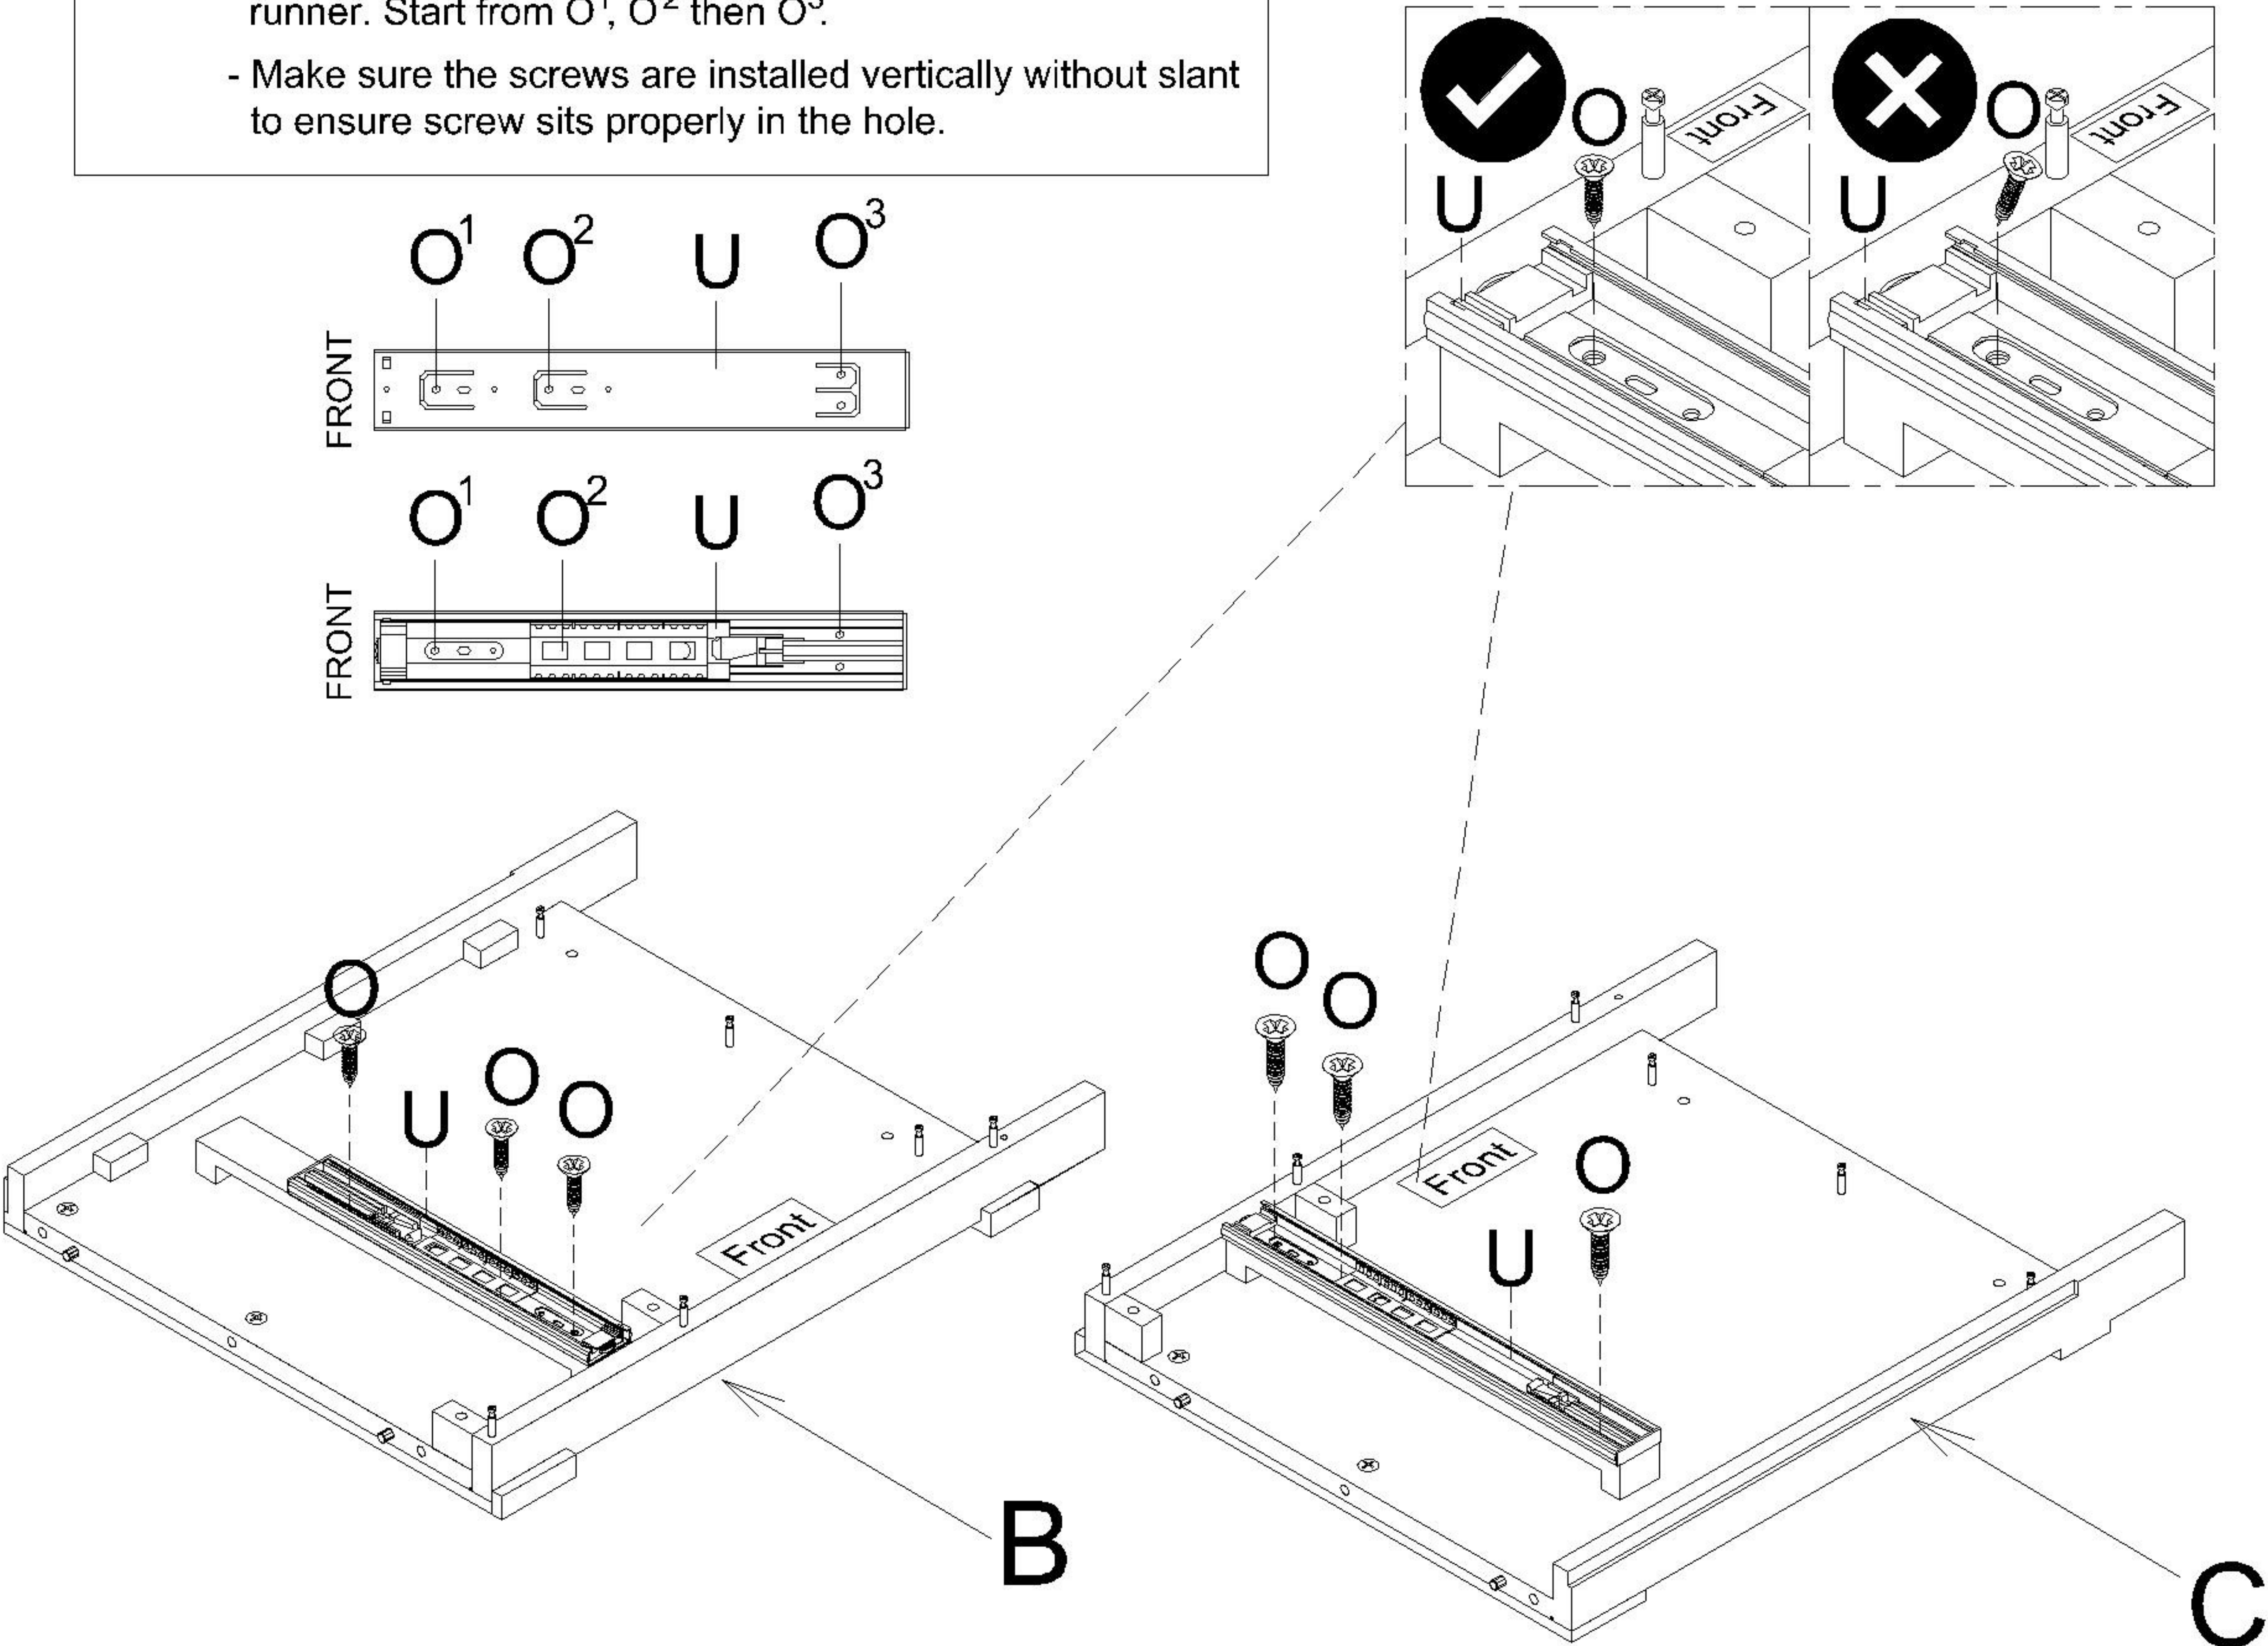

### EXTENSION RUNNER DISASSEMBLE STEPS:

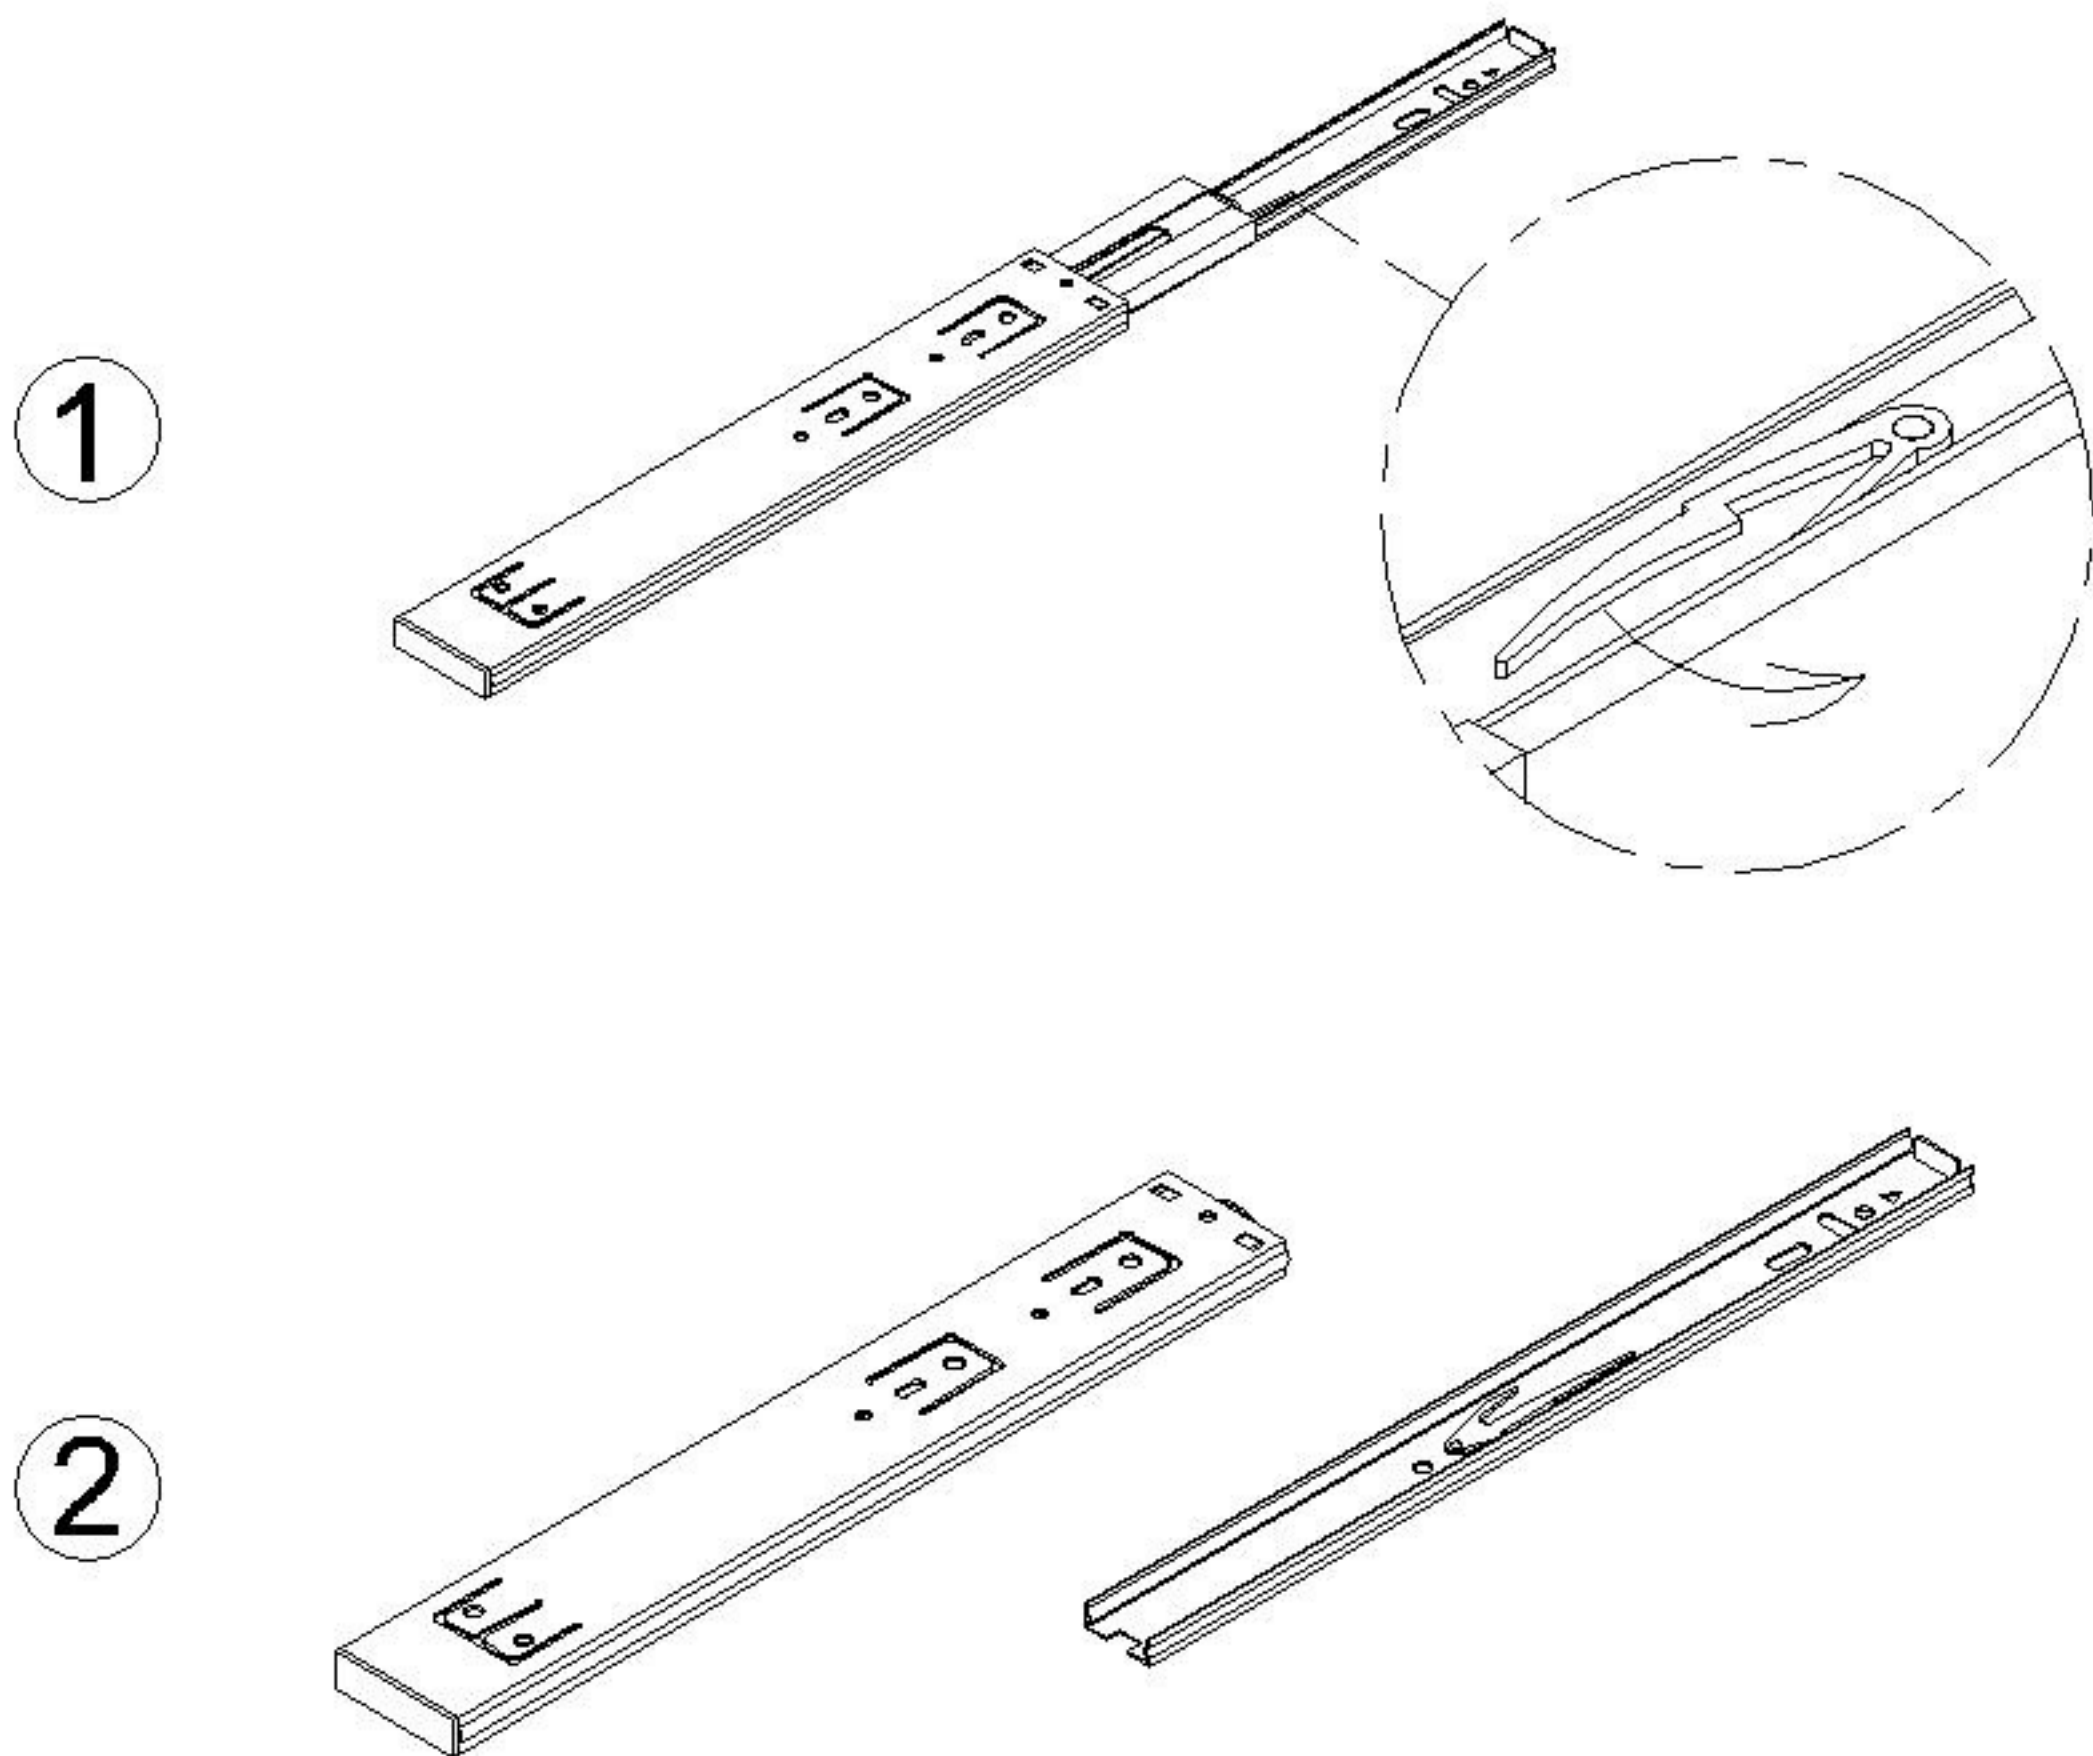 


Disassemble the Runner (U) to 2 parts. Fix 1 part on the Left & Right Side Panel (B & C) and fix the other part on the Left & Right Drawer Side (I & L).



4

Attach Dowel (Q) and Cam Lock (R) to Bottom Panel (D).

 
NOTE : - Make sure arrows on each Cam Lock (R) points towards nearest edge with holes.

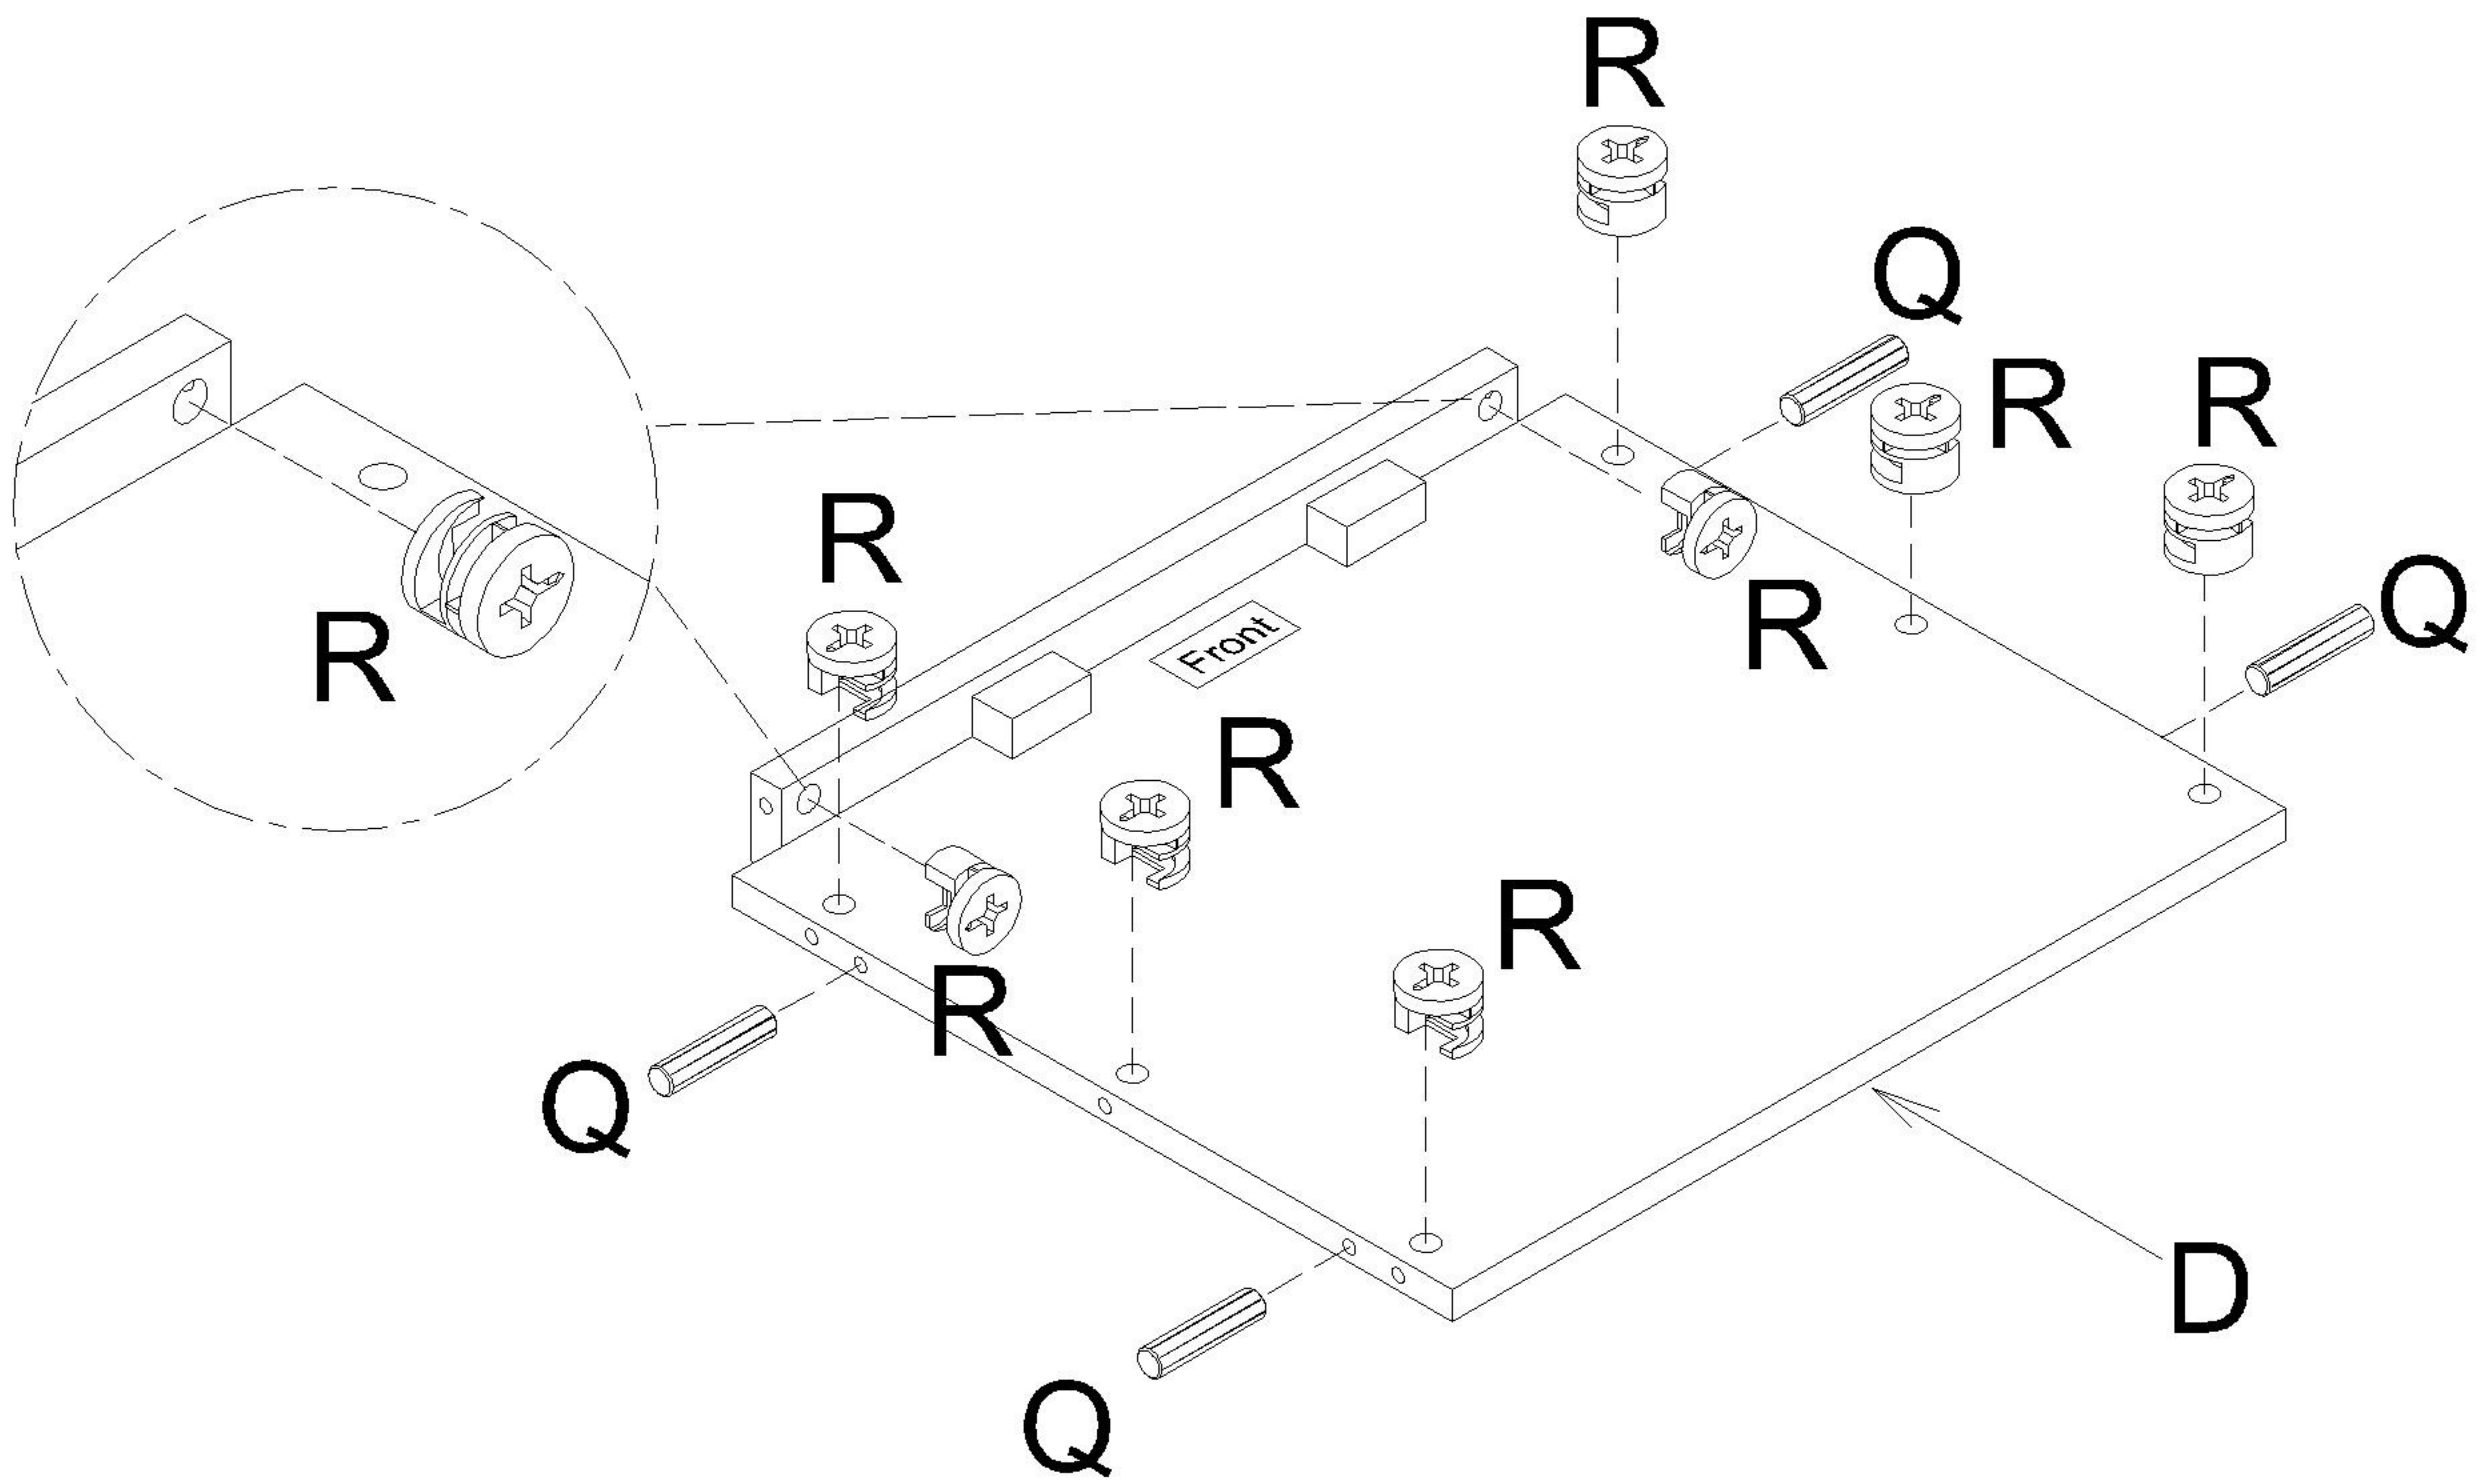

5

Attach Dowel (Q) and Cam Lock (R) to Top Bar (E) & Center Bar (F).

 NOTE : - Make sure arrows on each Cam Lock (R) points towards nearest edge with holes.

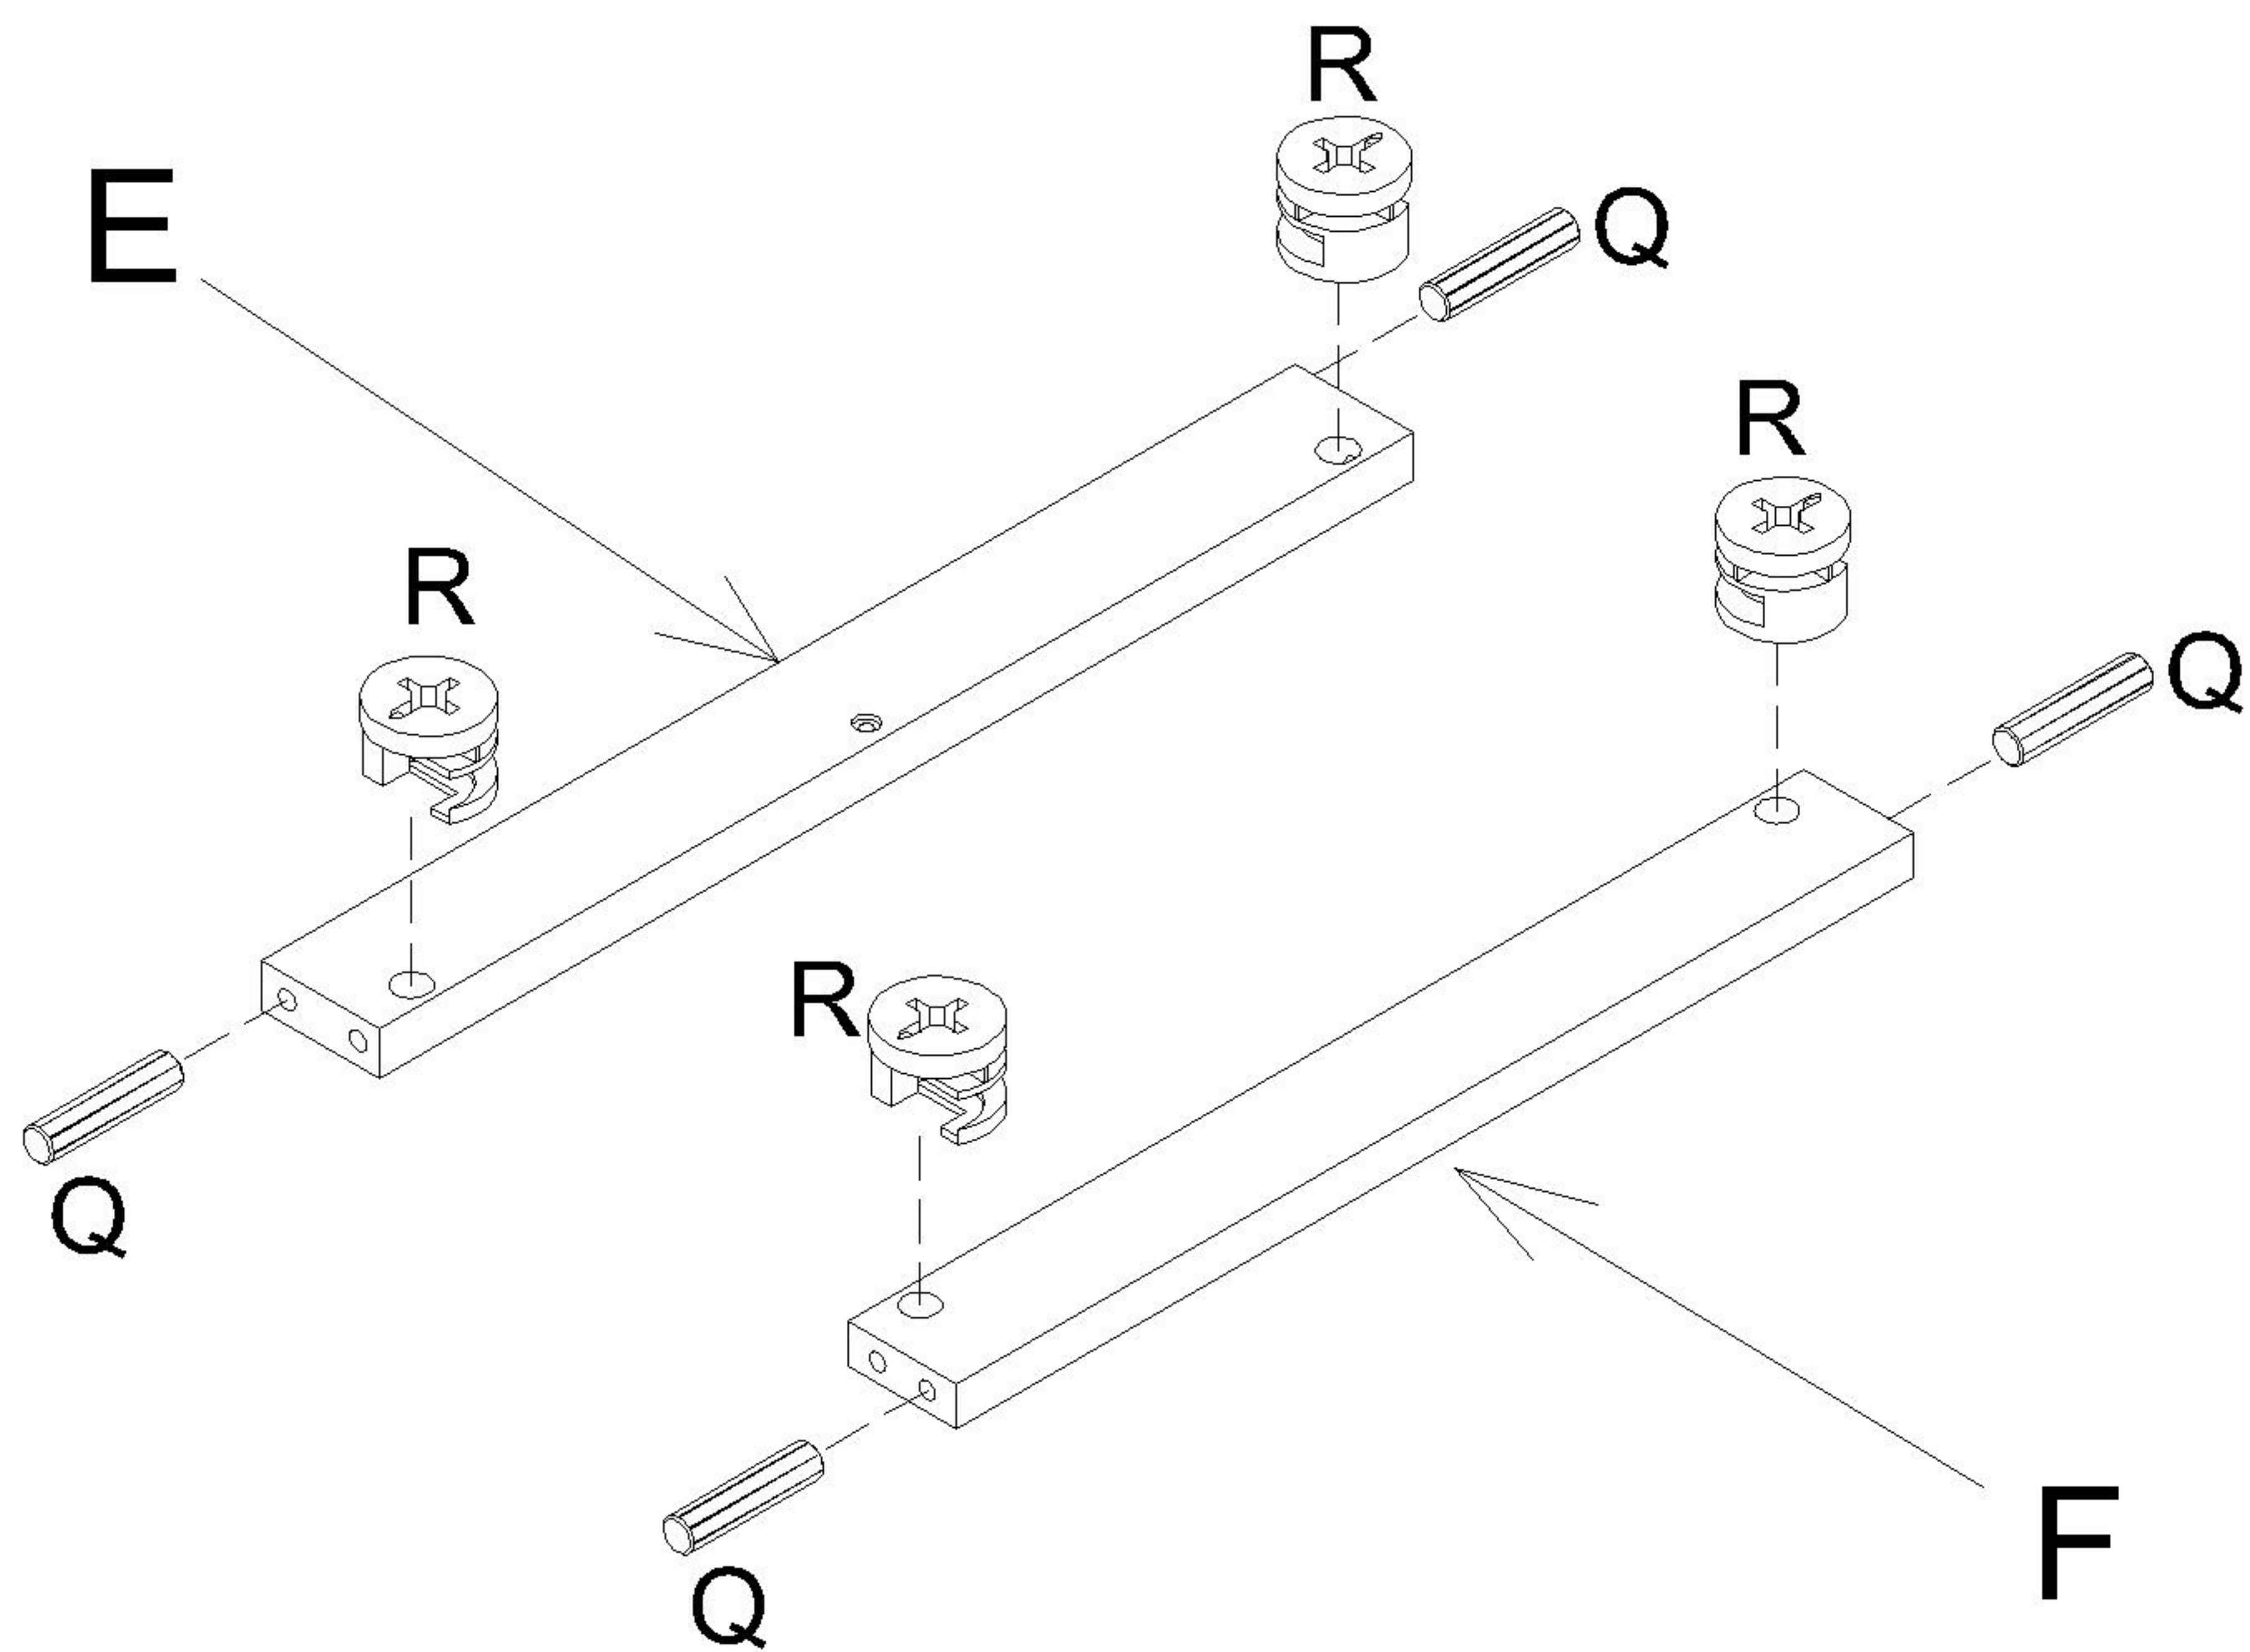




6

Attach Top Bar (E) & Center Bar (F) to Left Side Panel (B) and secure the Cam Lock (R) attached in the Step 5. Attach Bottom Panel (D) to Left Side Panel (B) and secure the Cam Lock (R) attached in Step 4. Cover Cam Lock (R) with Cam Lock Cover (V).

 
NOTE : - Do not over tighten the Cam Lock (R).

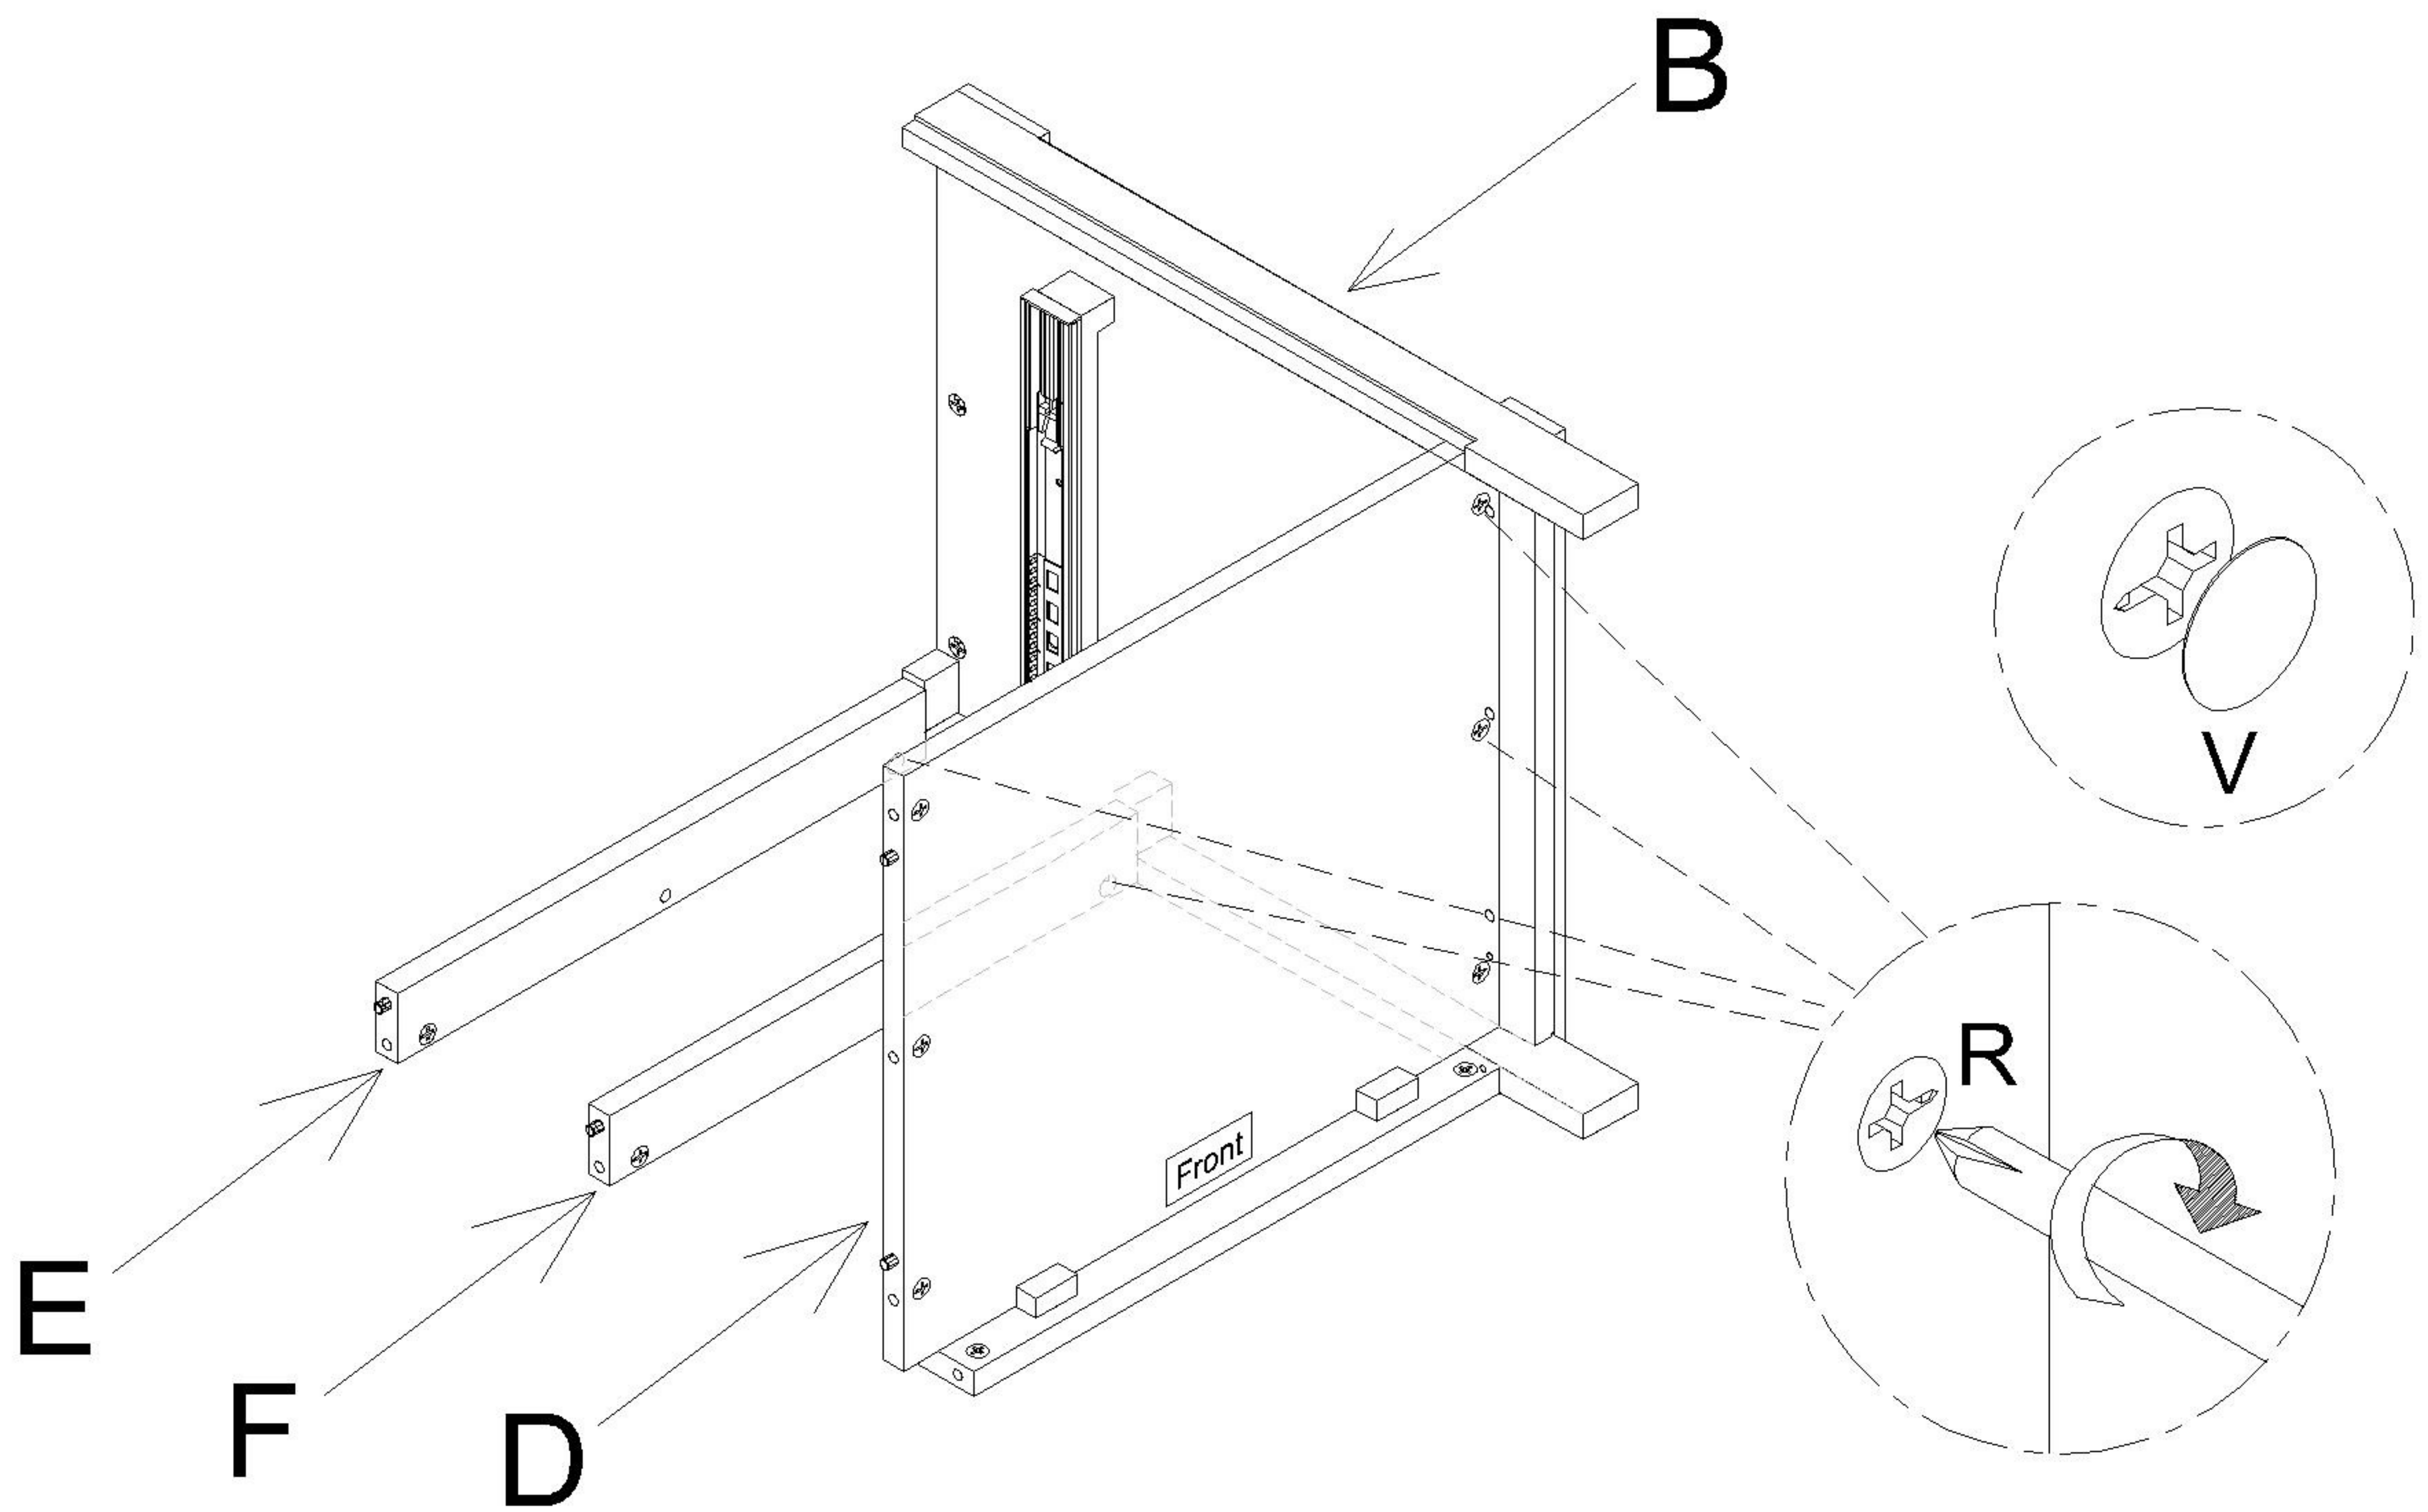

7

Attach Right Side Panel (C) to Top Bar (E), Center Bar (F) & Bottom Panel (D) and secure the Cam Lock (R) attached in the previous steps. Cover Cam Lock (R) with Cam Lock Cover (V).

 NOTE : - Do not over tighten the Cam Lock (R).

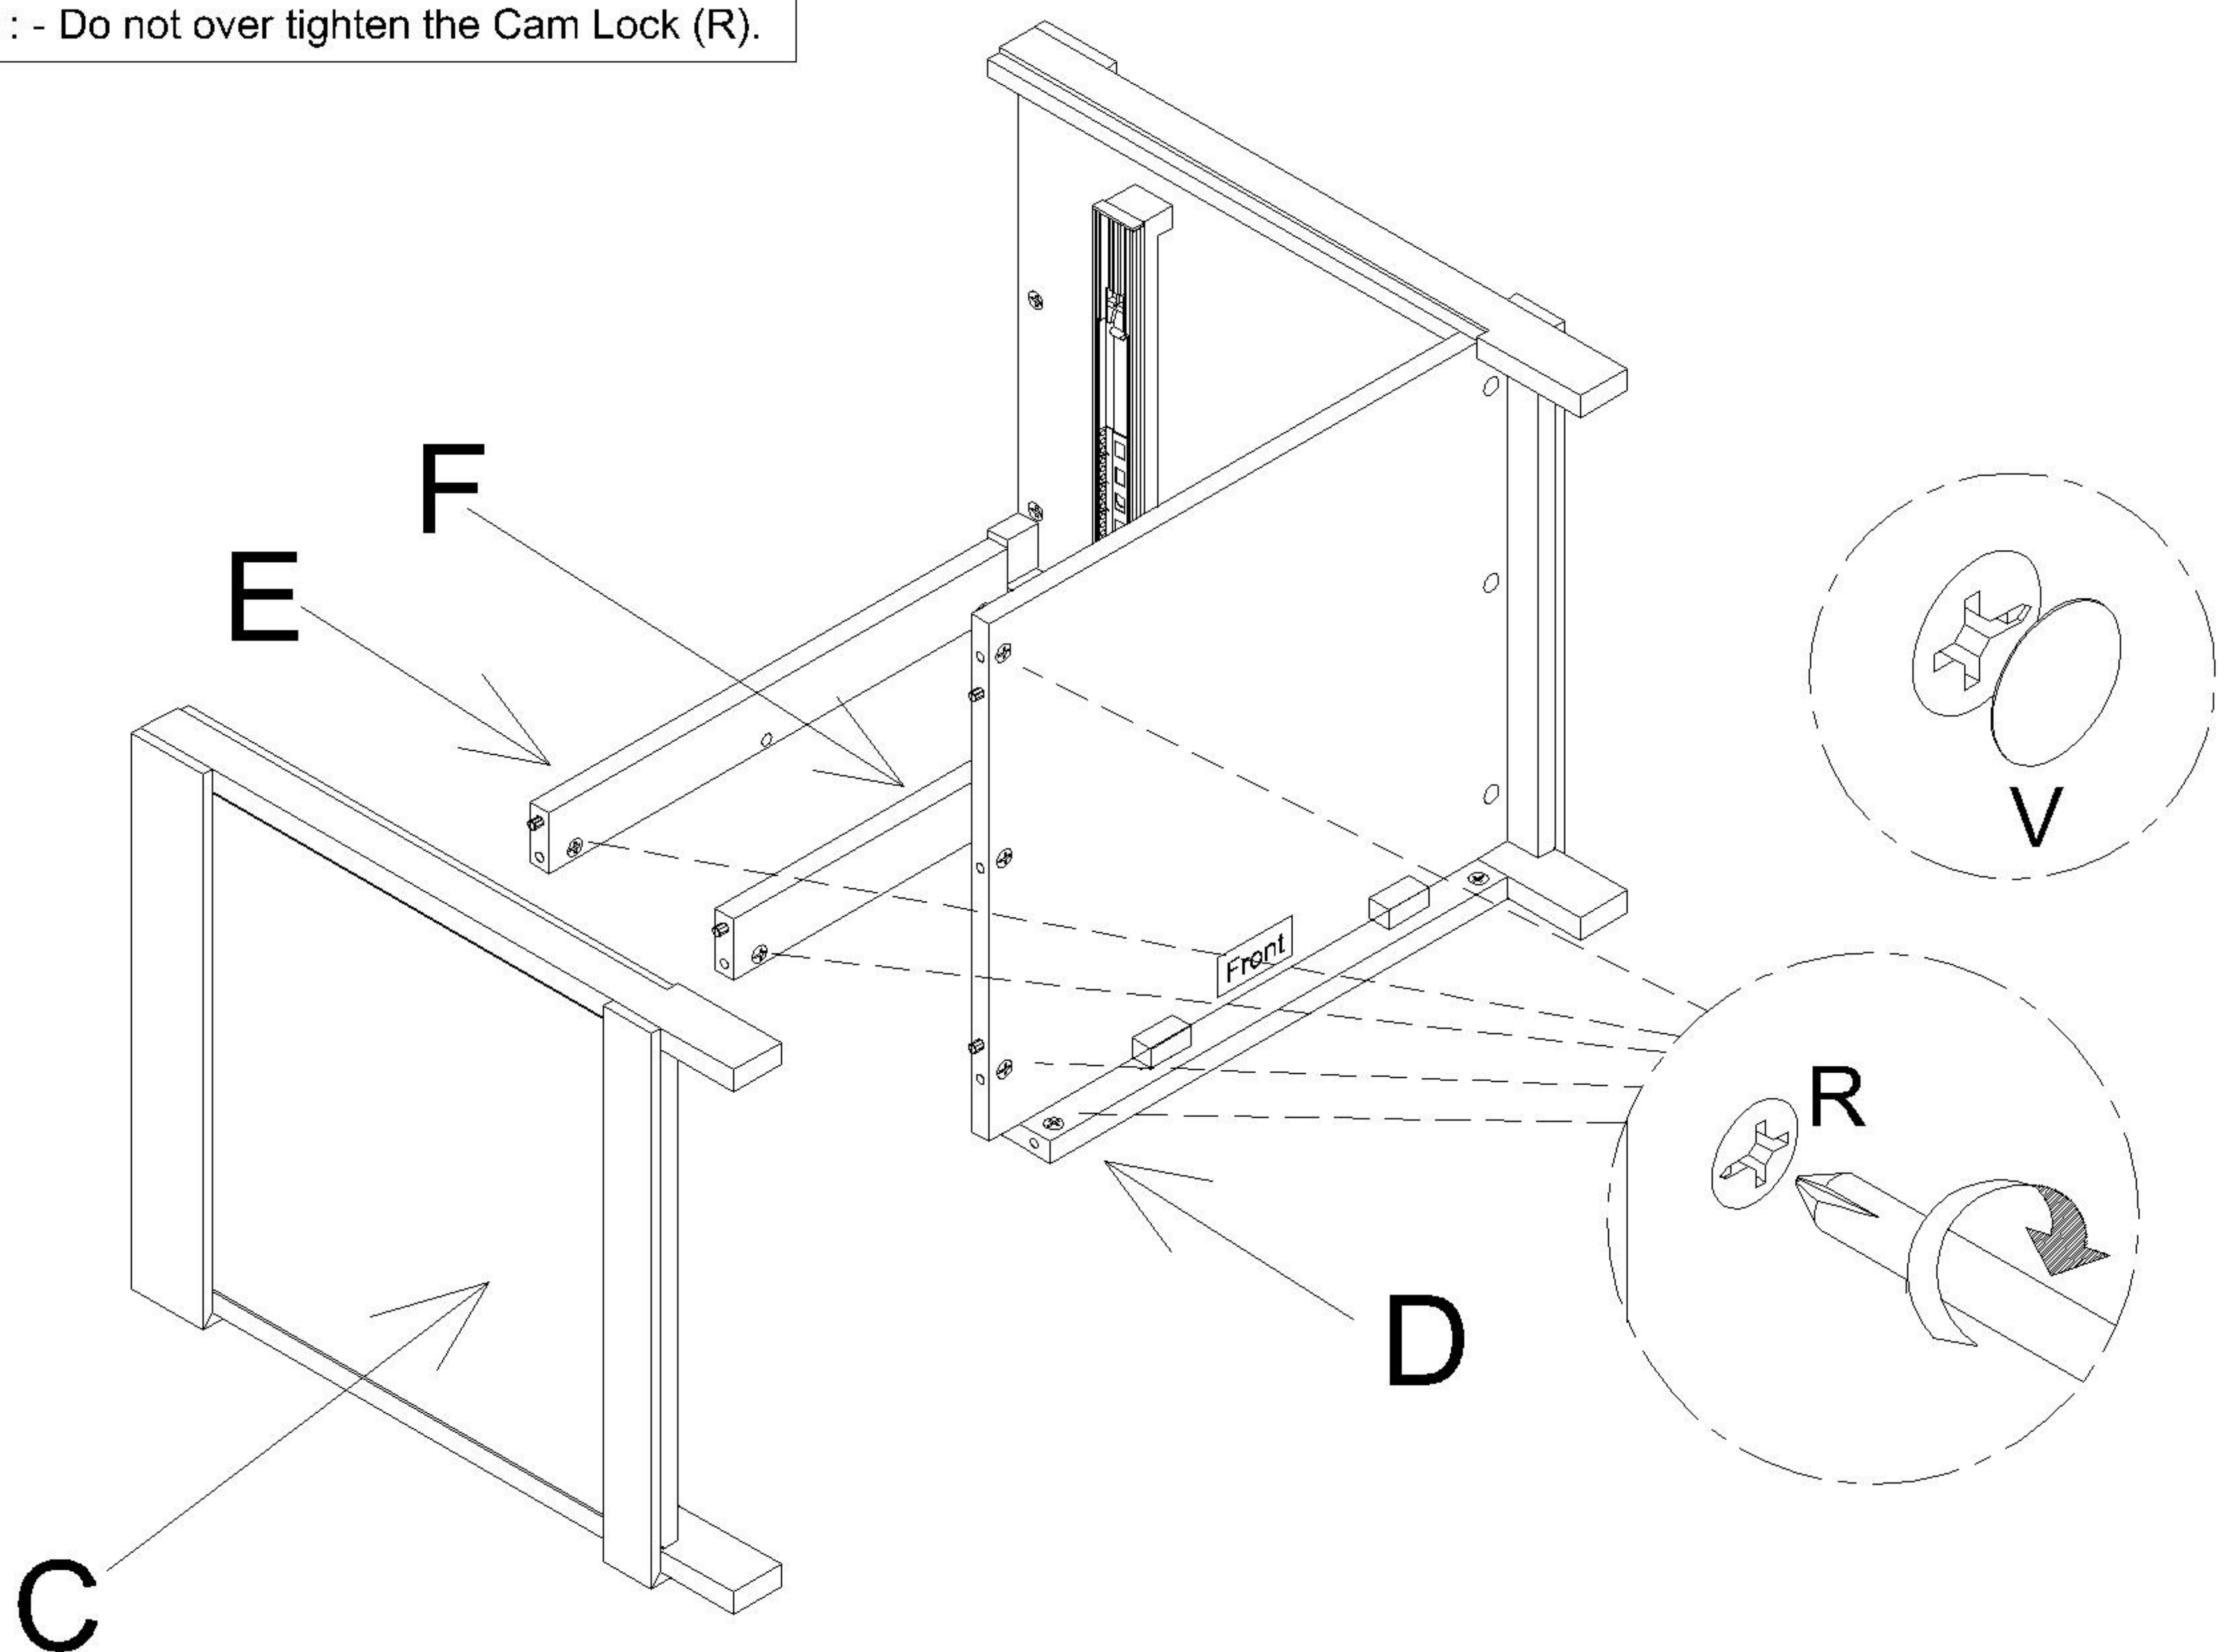




8

Attach Top Panel (A) to Left & Right Side Panel (B & C) and secure with the Cam Lock (R) attached in Step 2. Cover Cam Lock (R) with Cam Lock Cover (V).

 
NOTE : - Do not over tighten the Cam Lock (R).

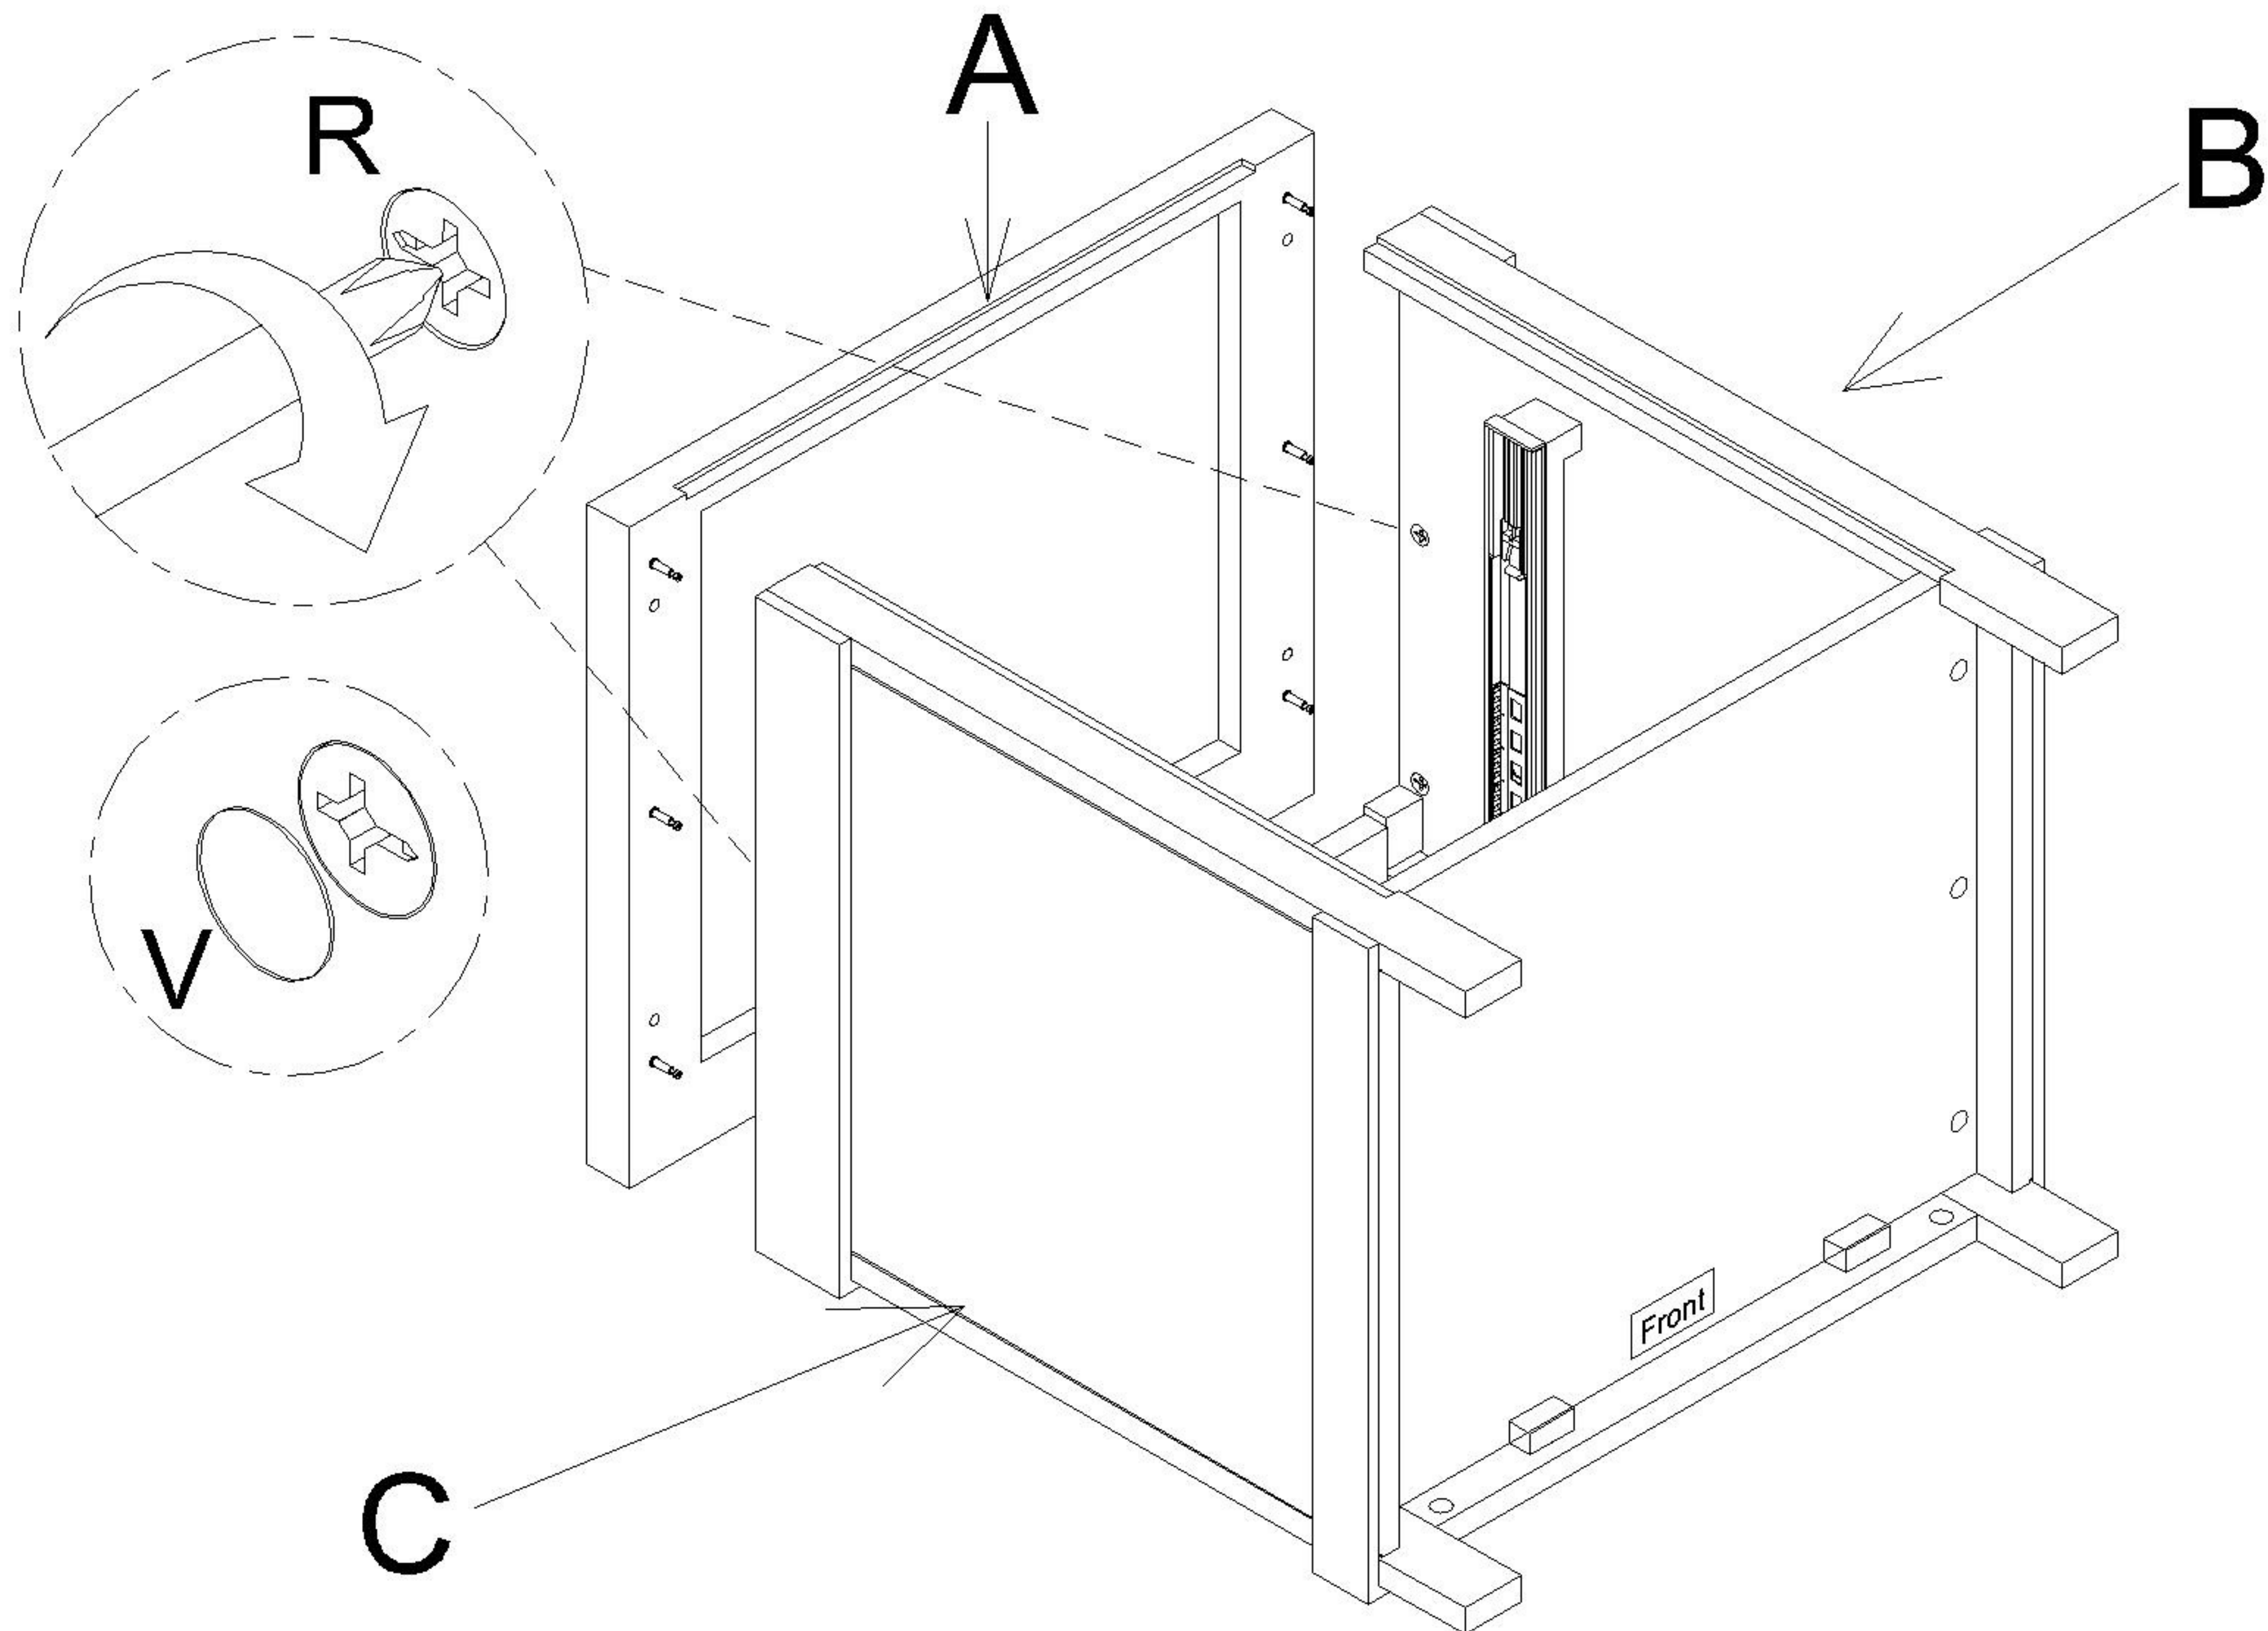

9

Attach Back Plywood (G) to assembled unit and secure with Panhead Screw (W).

 
NOTE : - Do not over tighten the Panhead Screw (W).

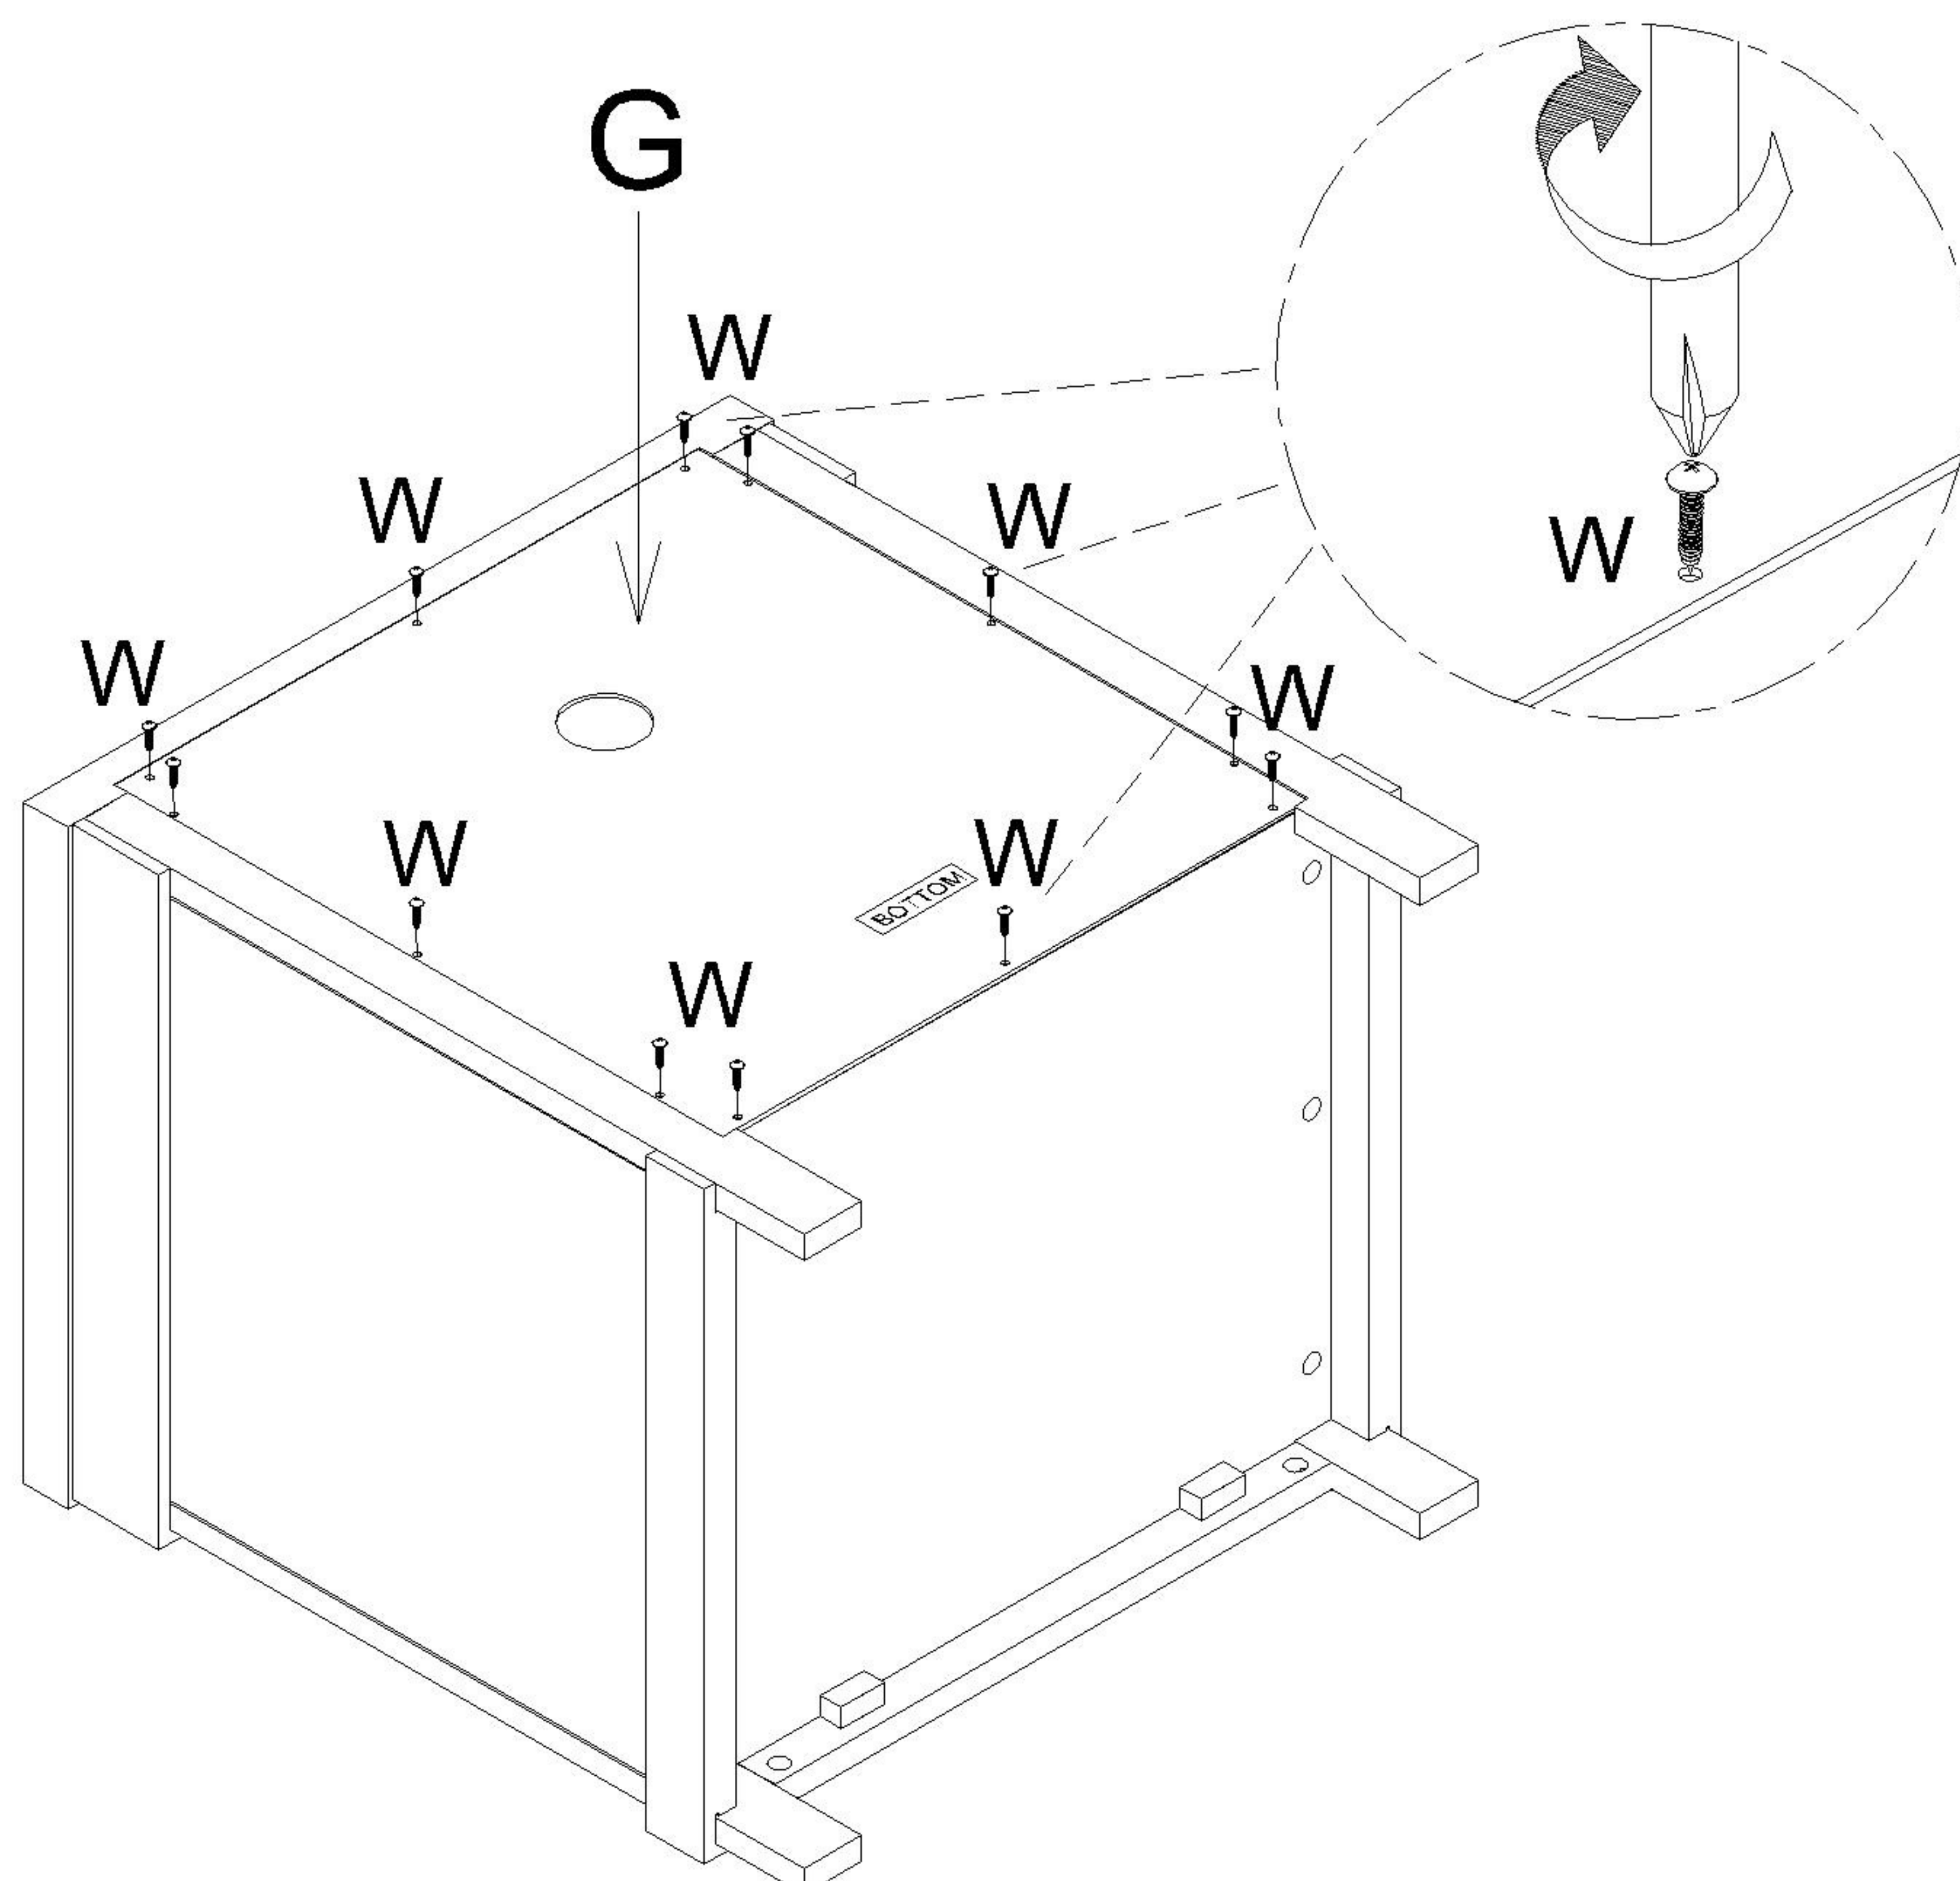




- 10** Turn over the assembled unit. Secure Top Panel (A) and Top Bar (E) with Screw (P).

 NOTE : - Do not over tighten the Screw (P).

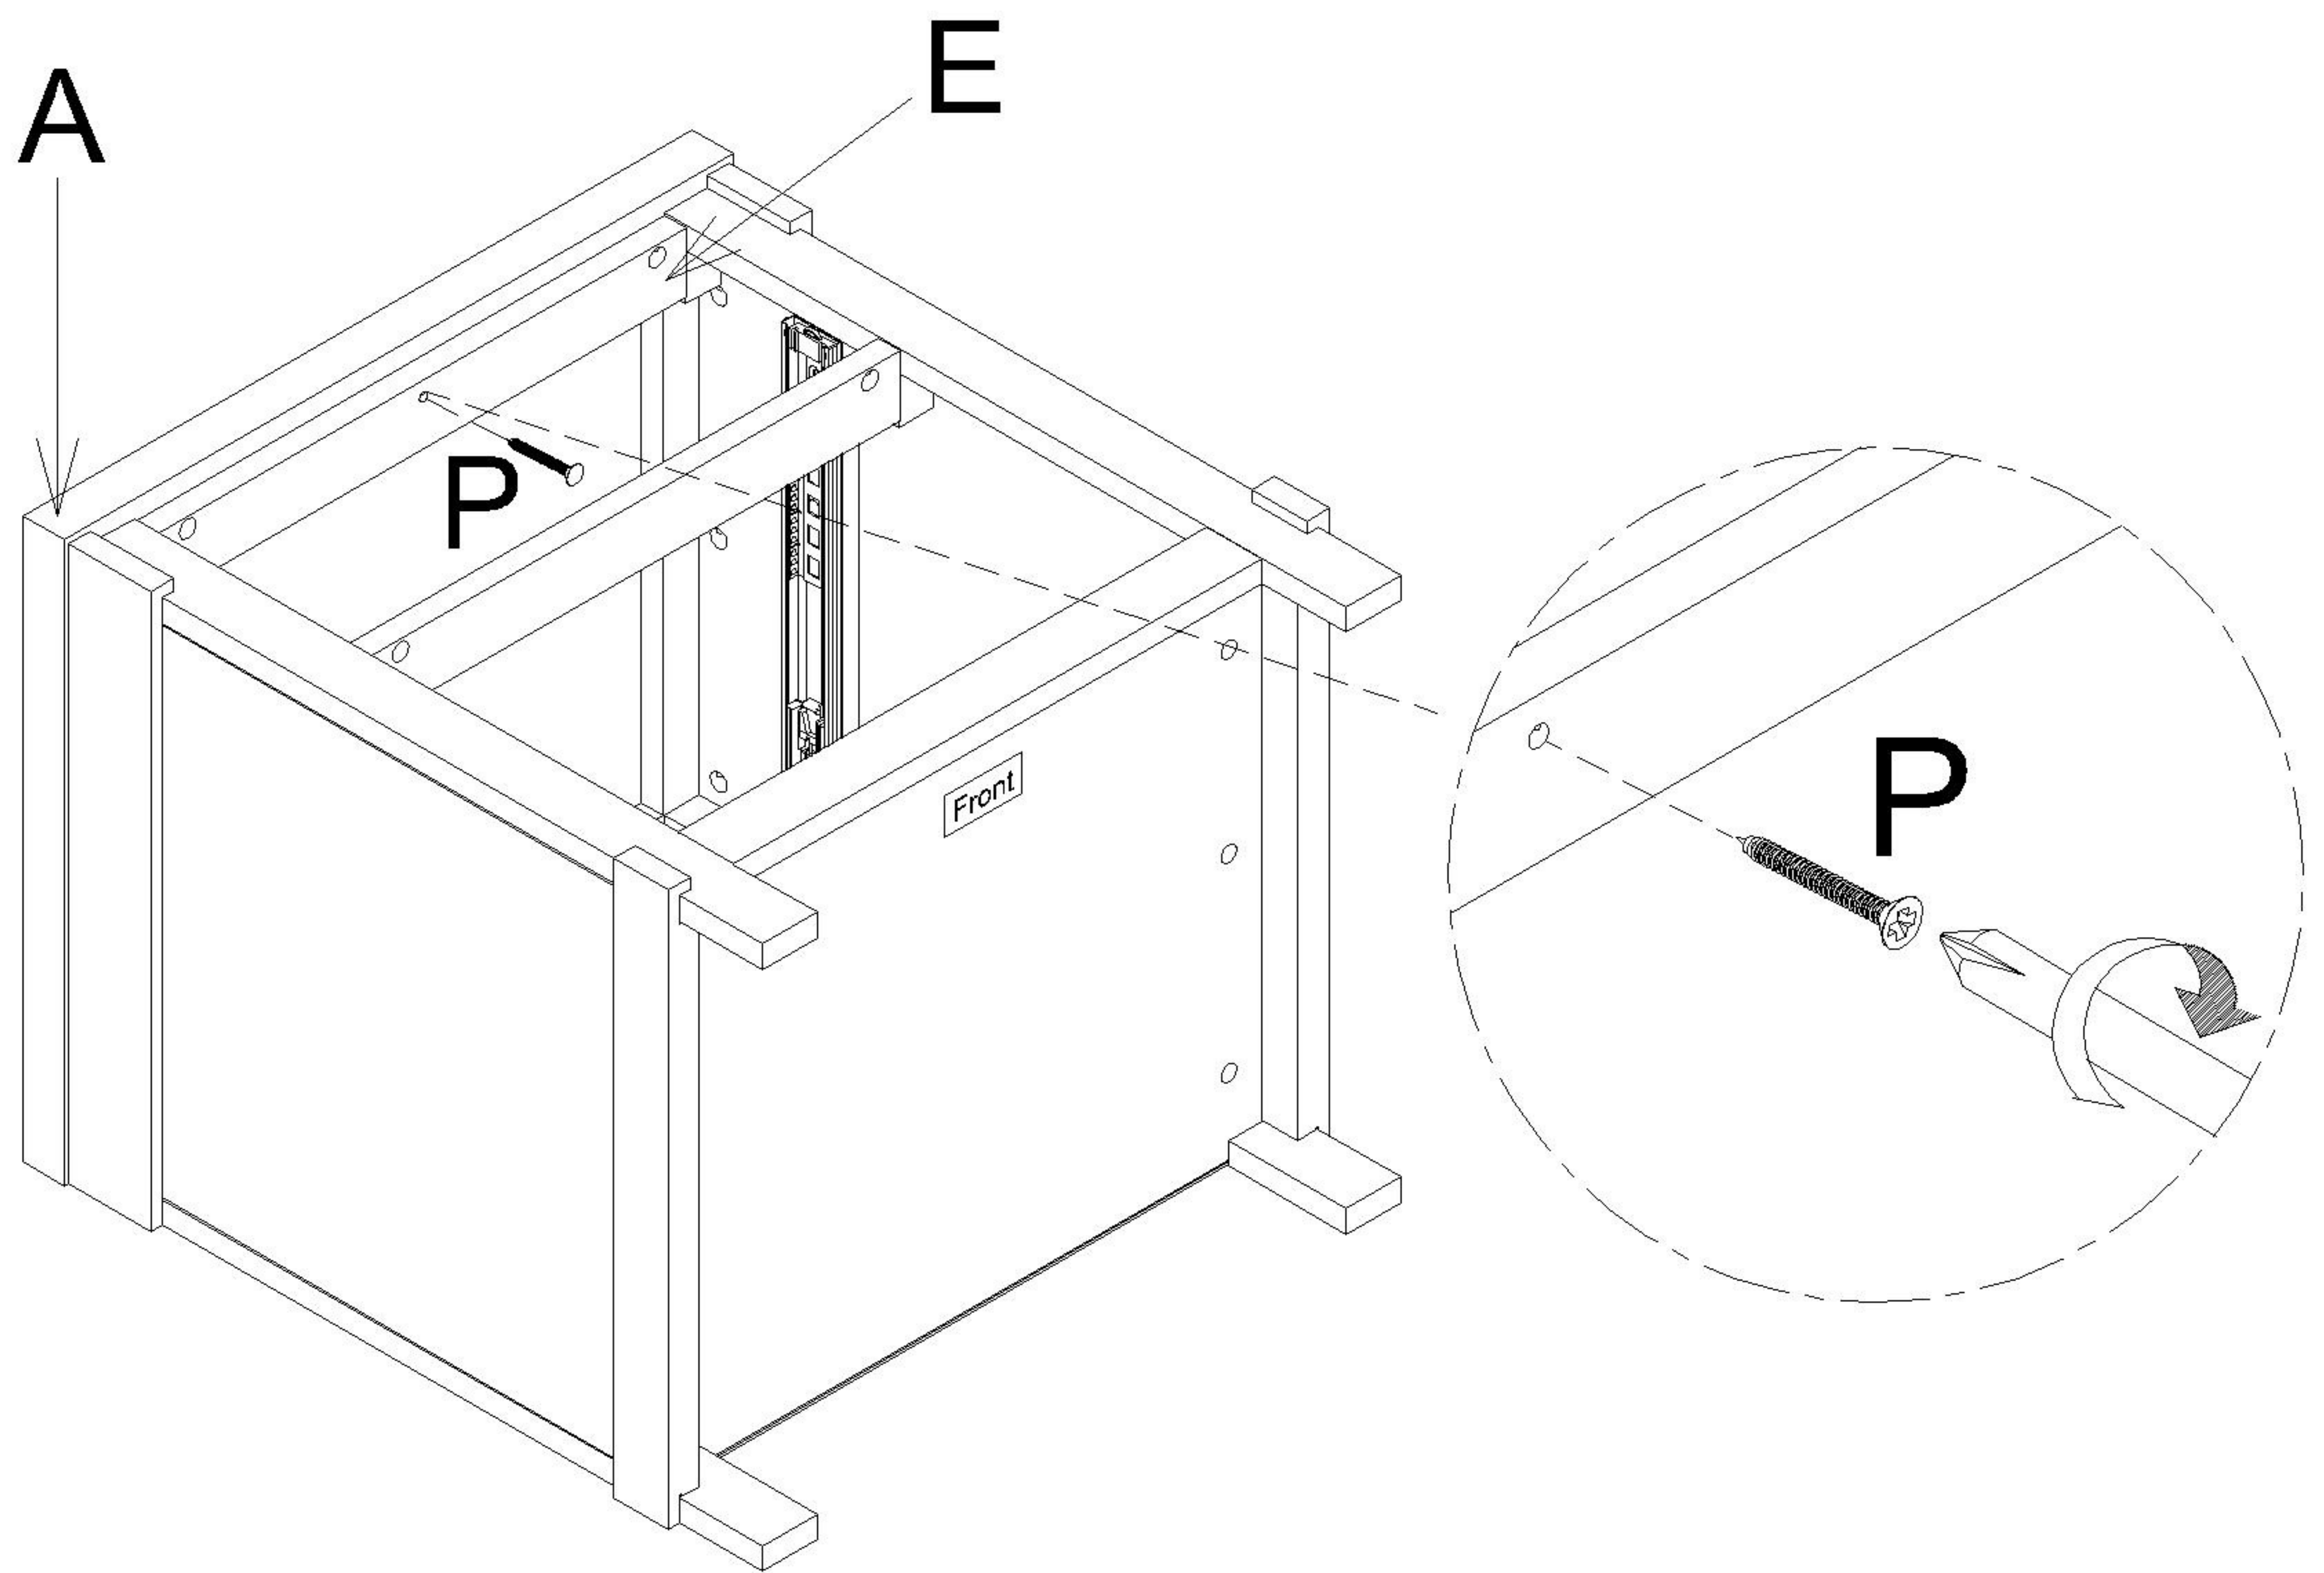

 
- 11** Attach Runner (U) to Left & Right Drawer Side (I & L) and secure with Screw (O).

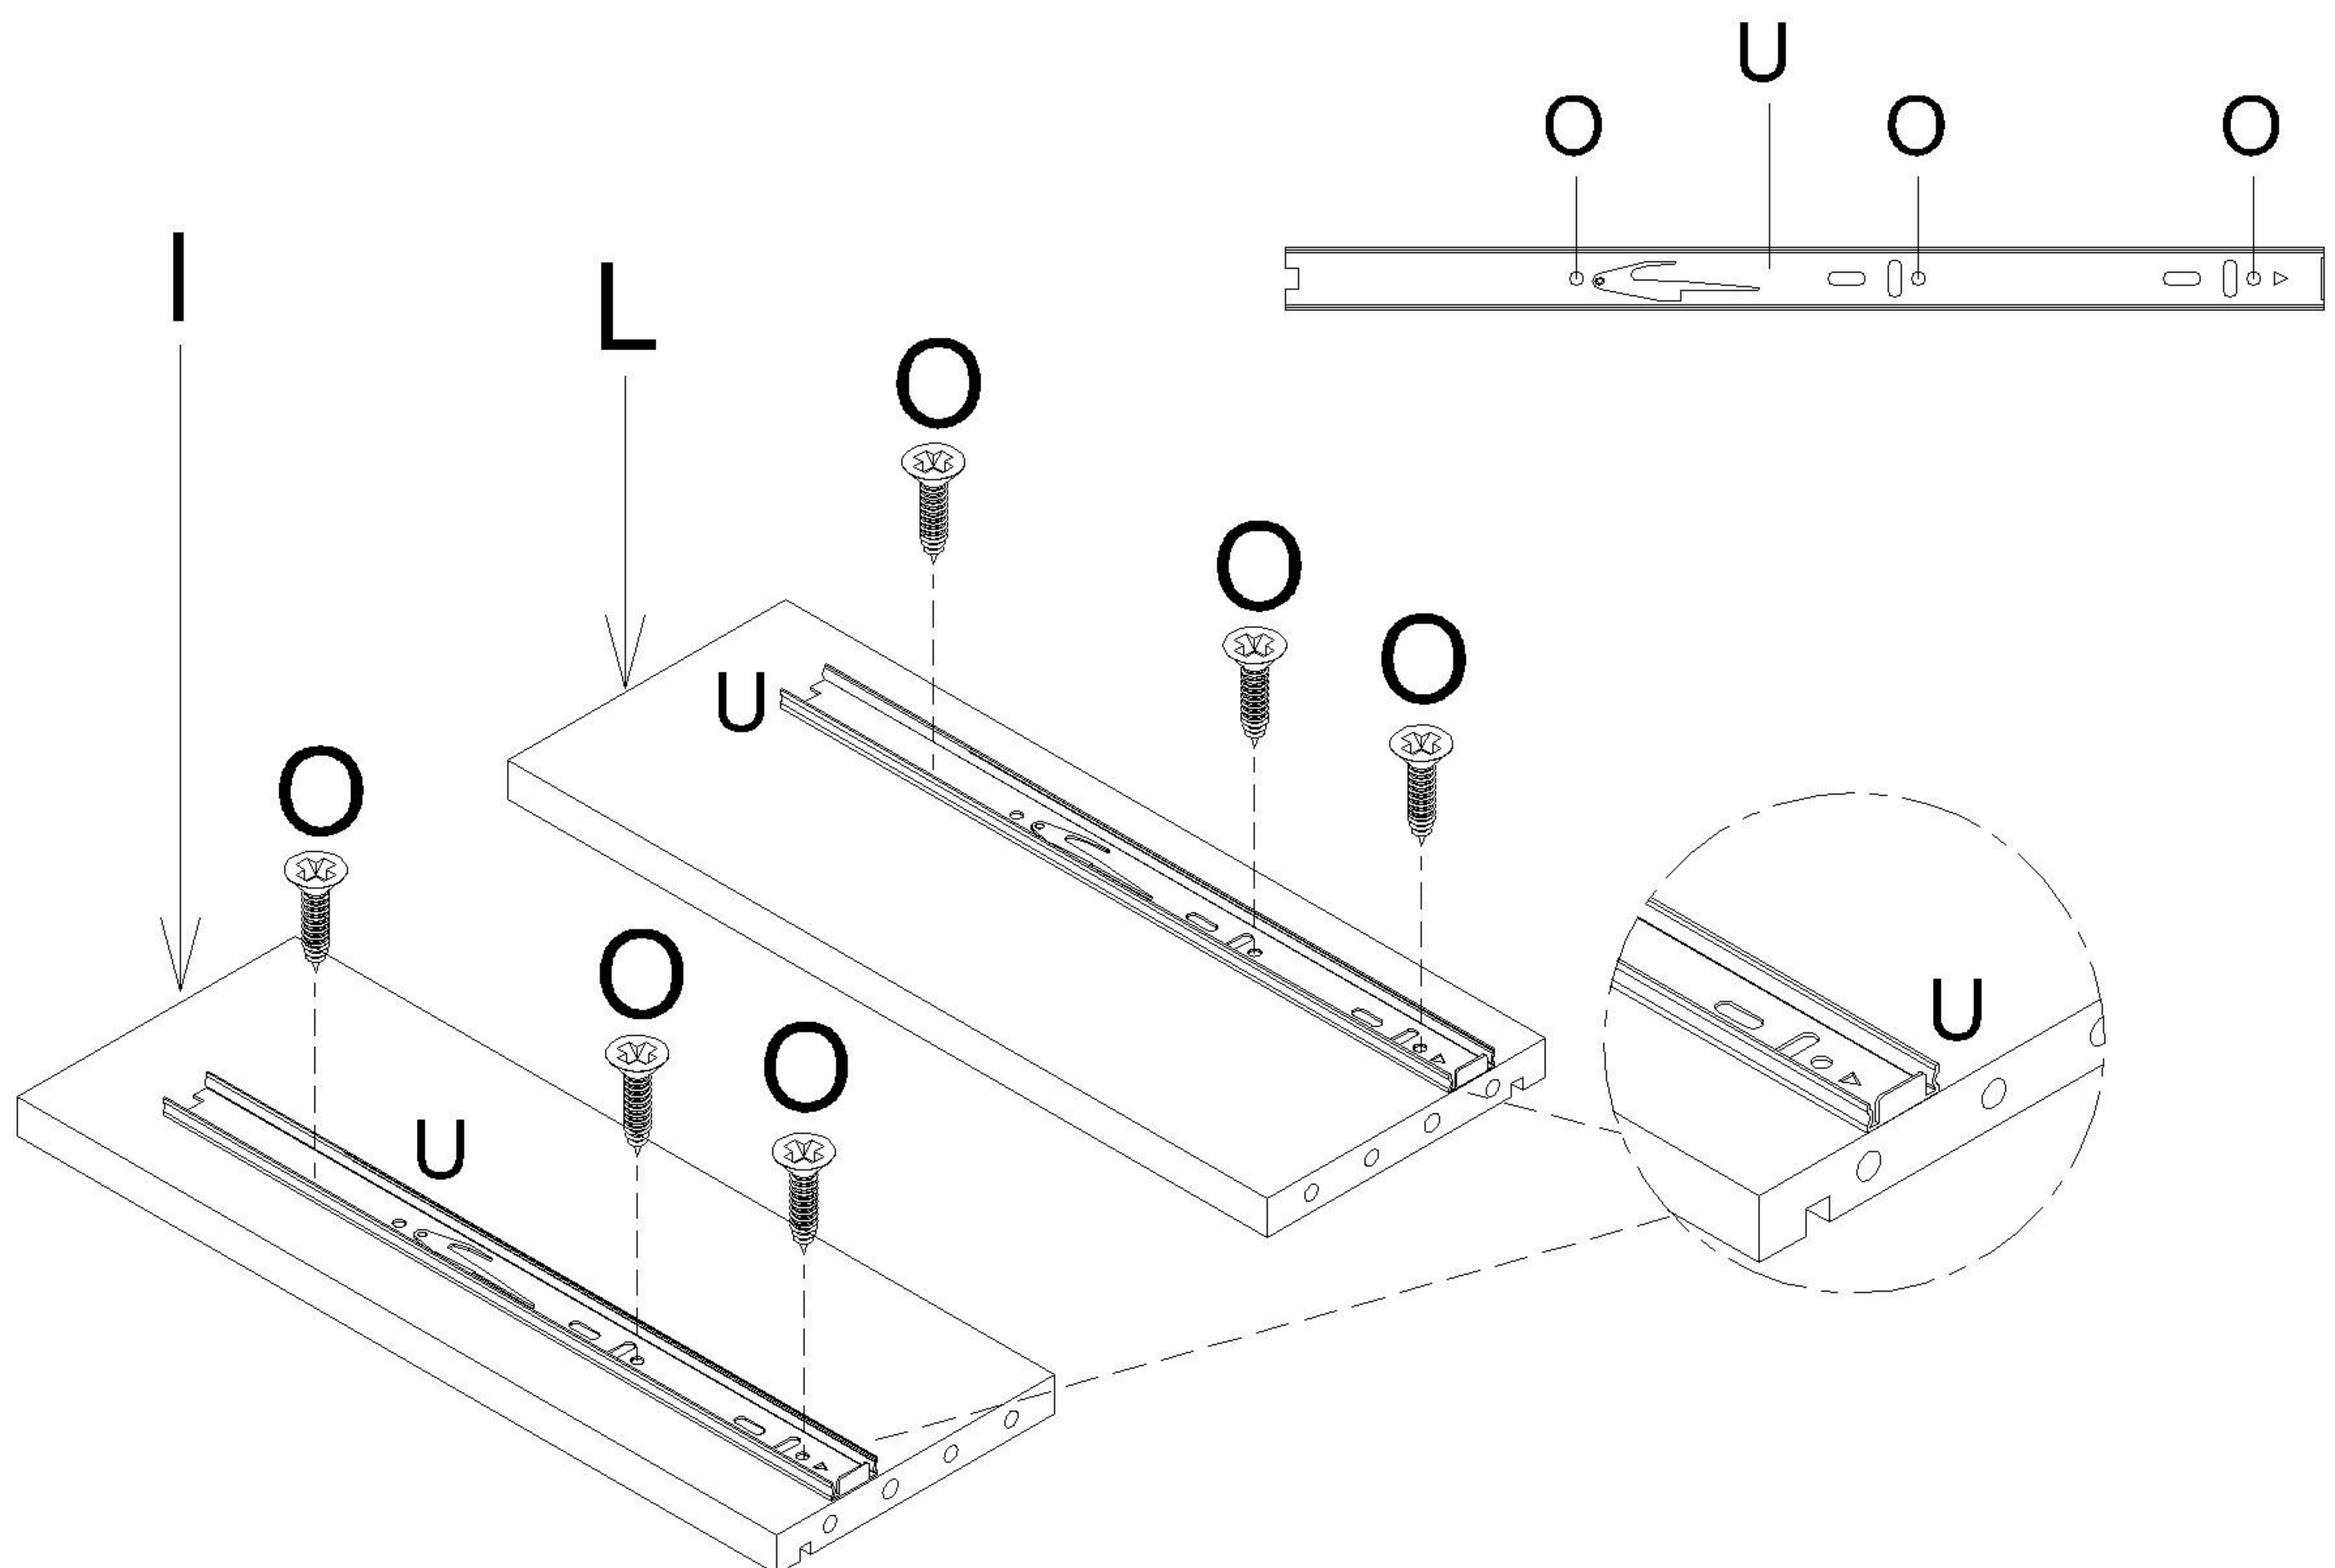




**12** Flip over Left & Right Drawer Side (I & L). Attach Dowel (T) and Cam Lock (R) to Left & Right Drawer Side (I & L) and Drawer Back (J). Attach Cam Bolt (S) to Left & Right Drawer Side (I & L) and Drawer Front (H).

 NOTE : - Make sure arrows on each Cam Lock (R) points towards nearest edge with holes.

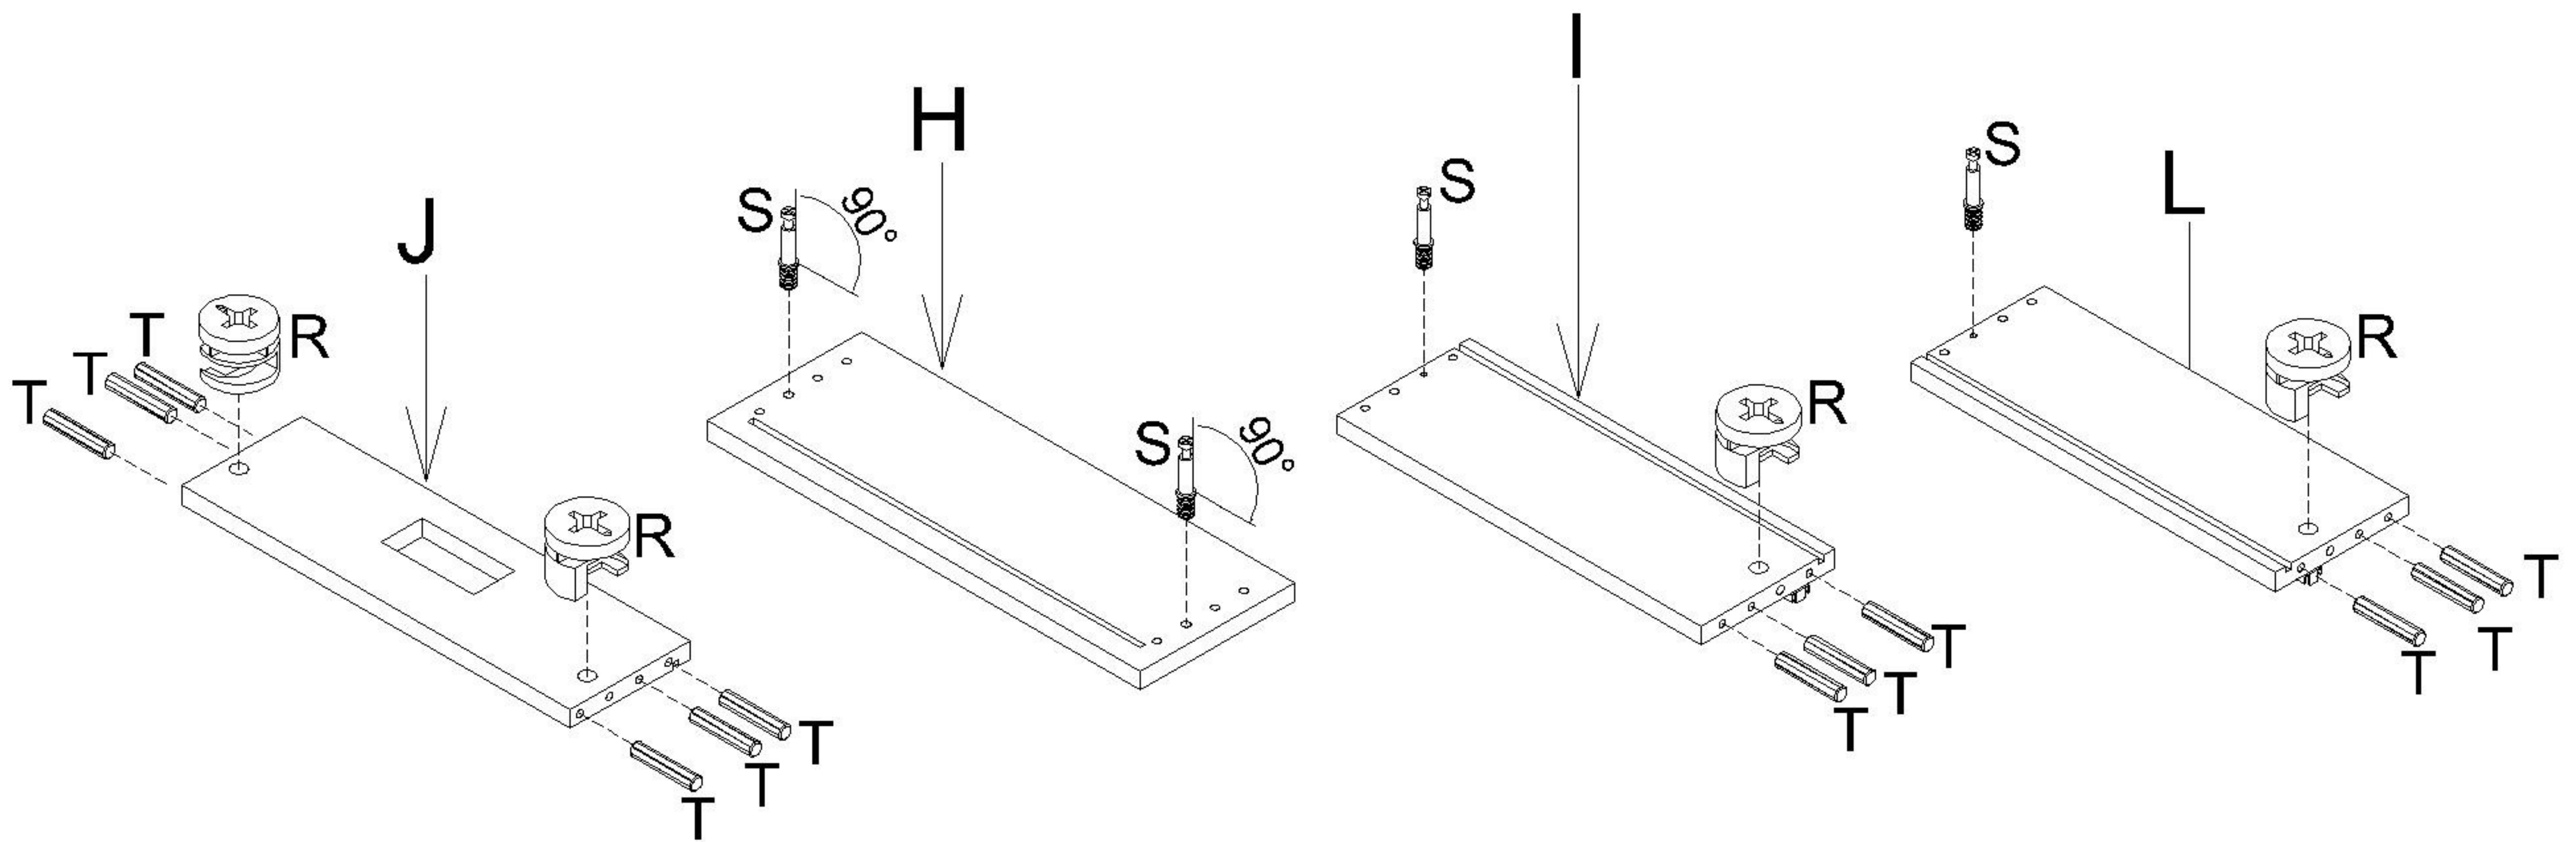

**13** Attach Drawer Back (J) to Left & Right Drawer Side (I & L) and secure with the Cam Lock (R) attached in the Step 12. Cover Cam Lock (R) with Cam Lock Cover (V).

 
NOTE : - Do not over tighten the Cam Lock (R).

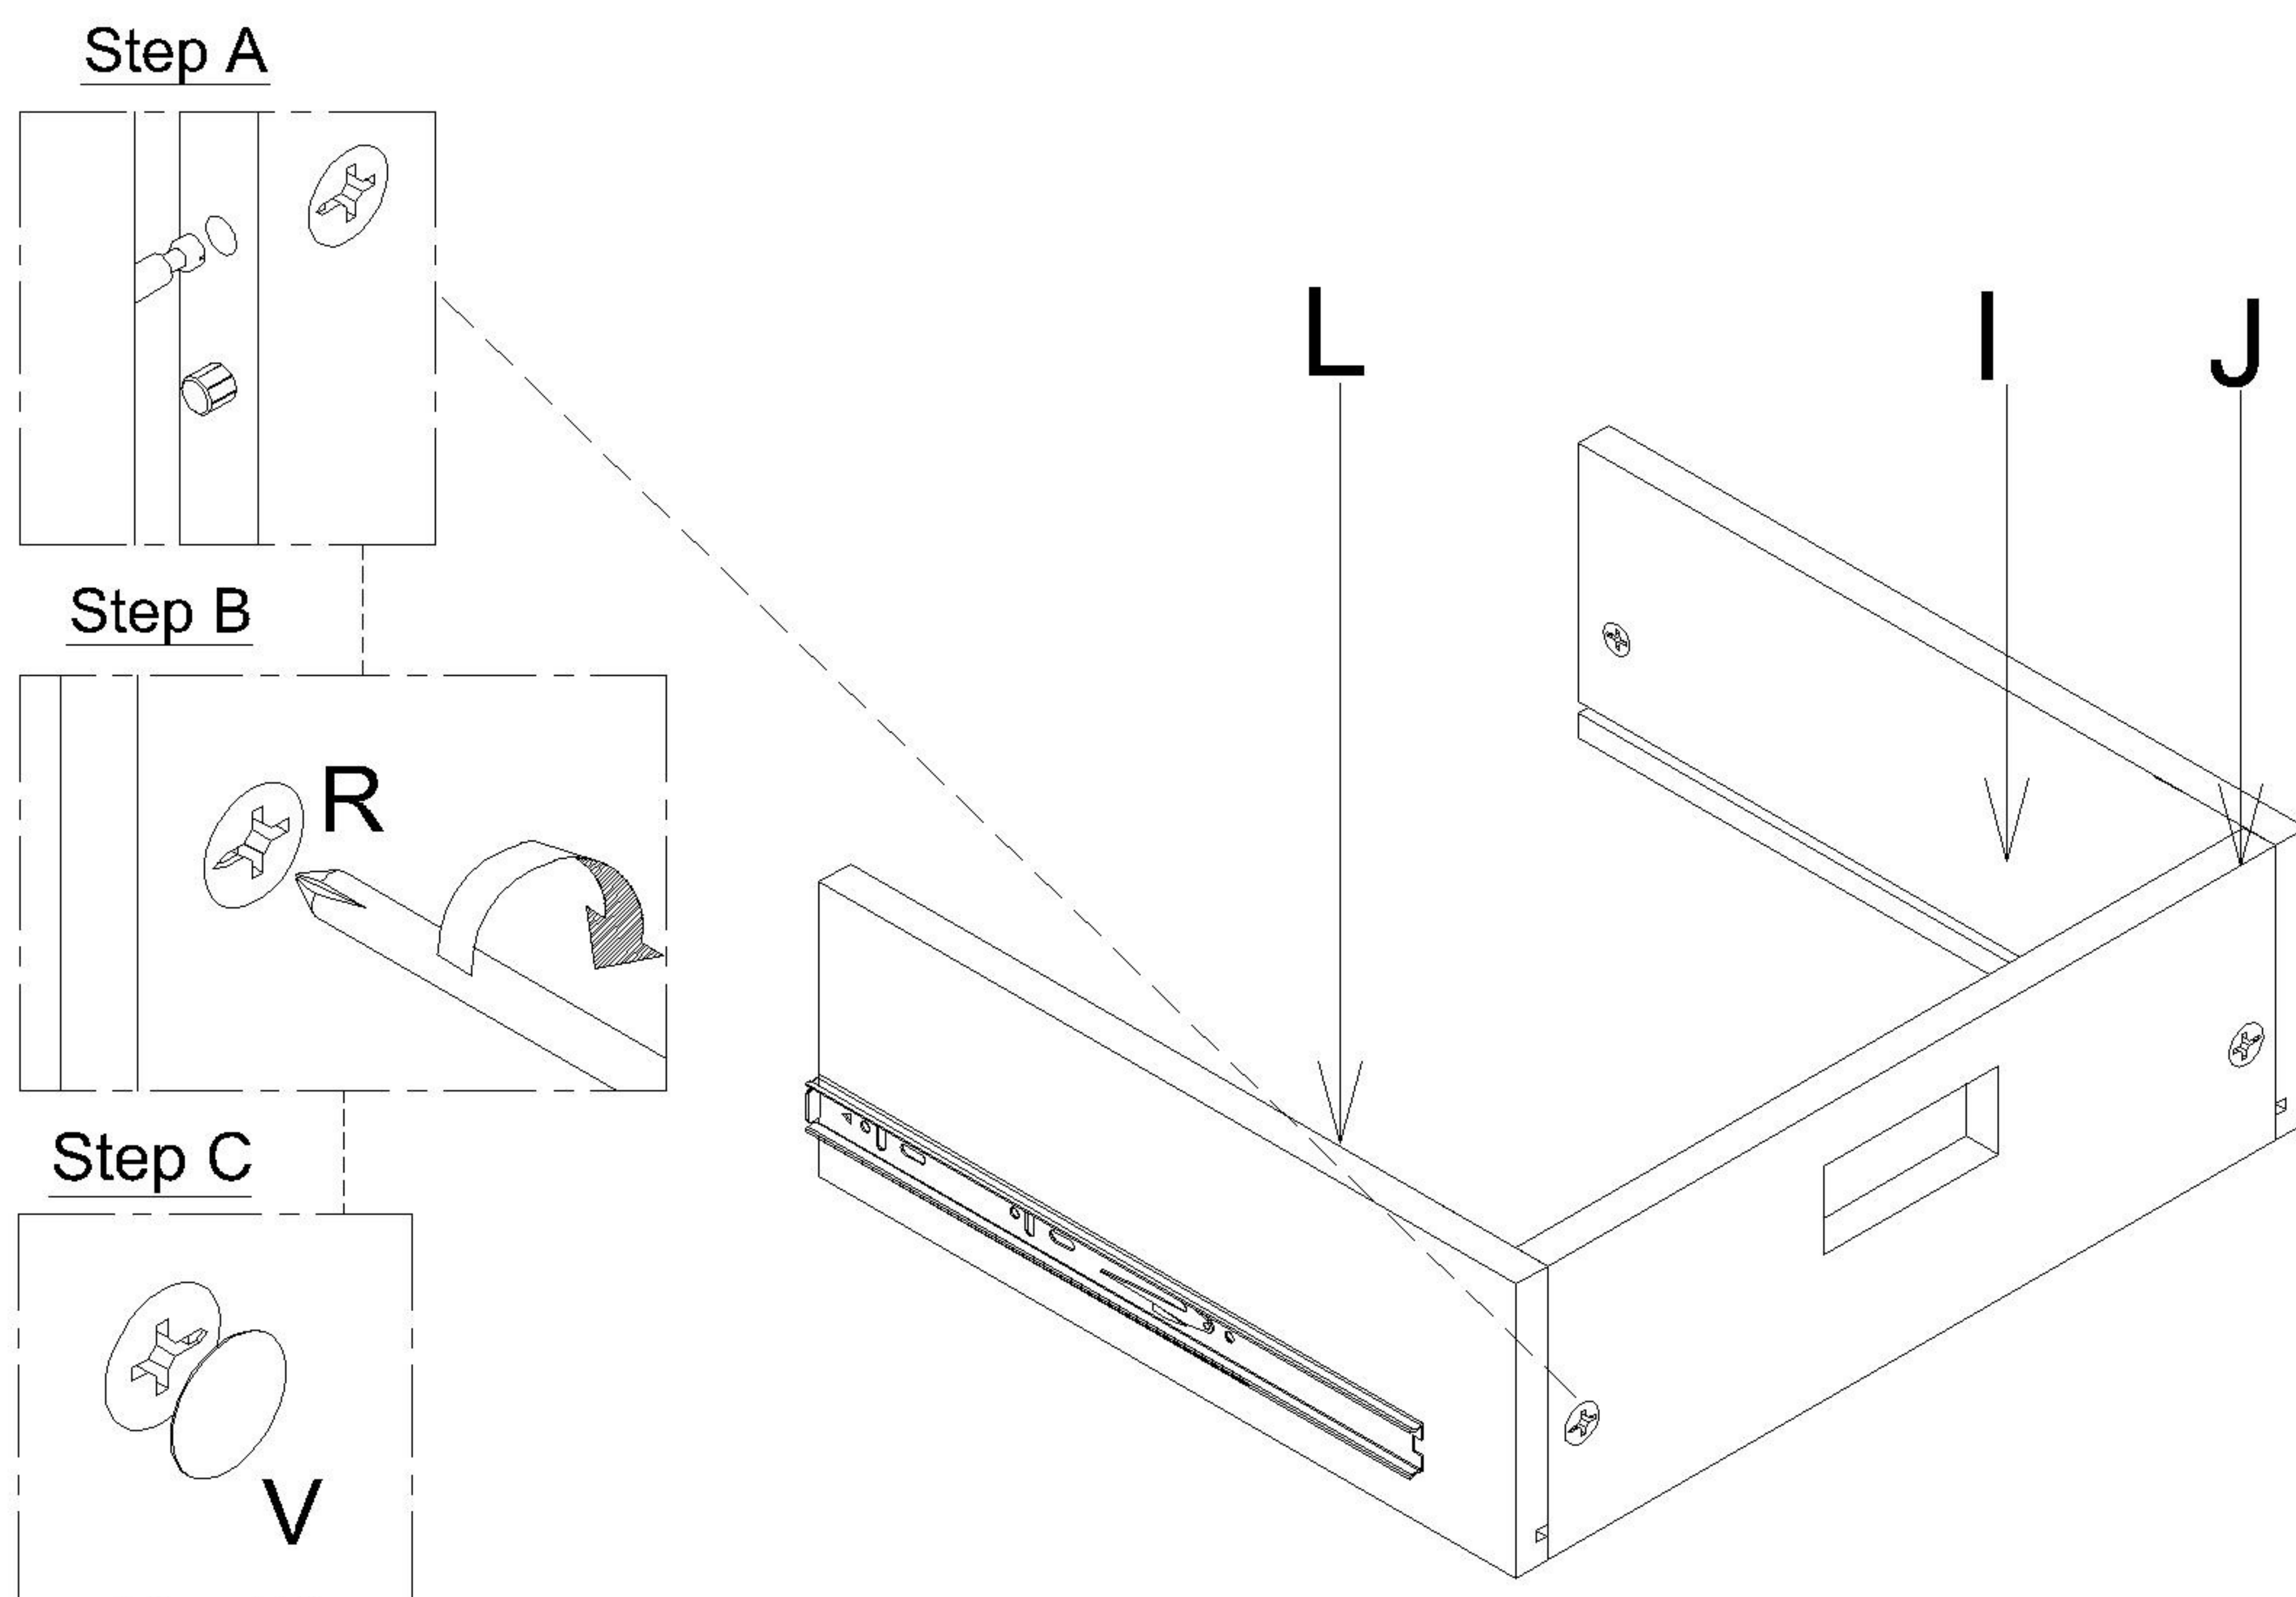




**14** Slot Drawer Base (K) into corresponding grooves. Attach Drawer Front (H) to Drawer Box and secure with the Cam Lock (R) attached in the Step 12. Cover Cam Lock (R) with Cam Lock Cover (V).

 NOTE : - Do not over tighten the Cam Lock (R).

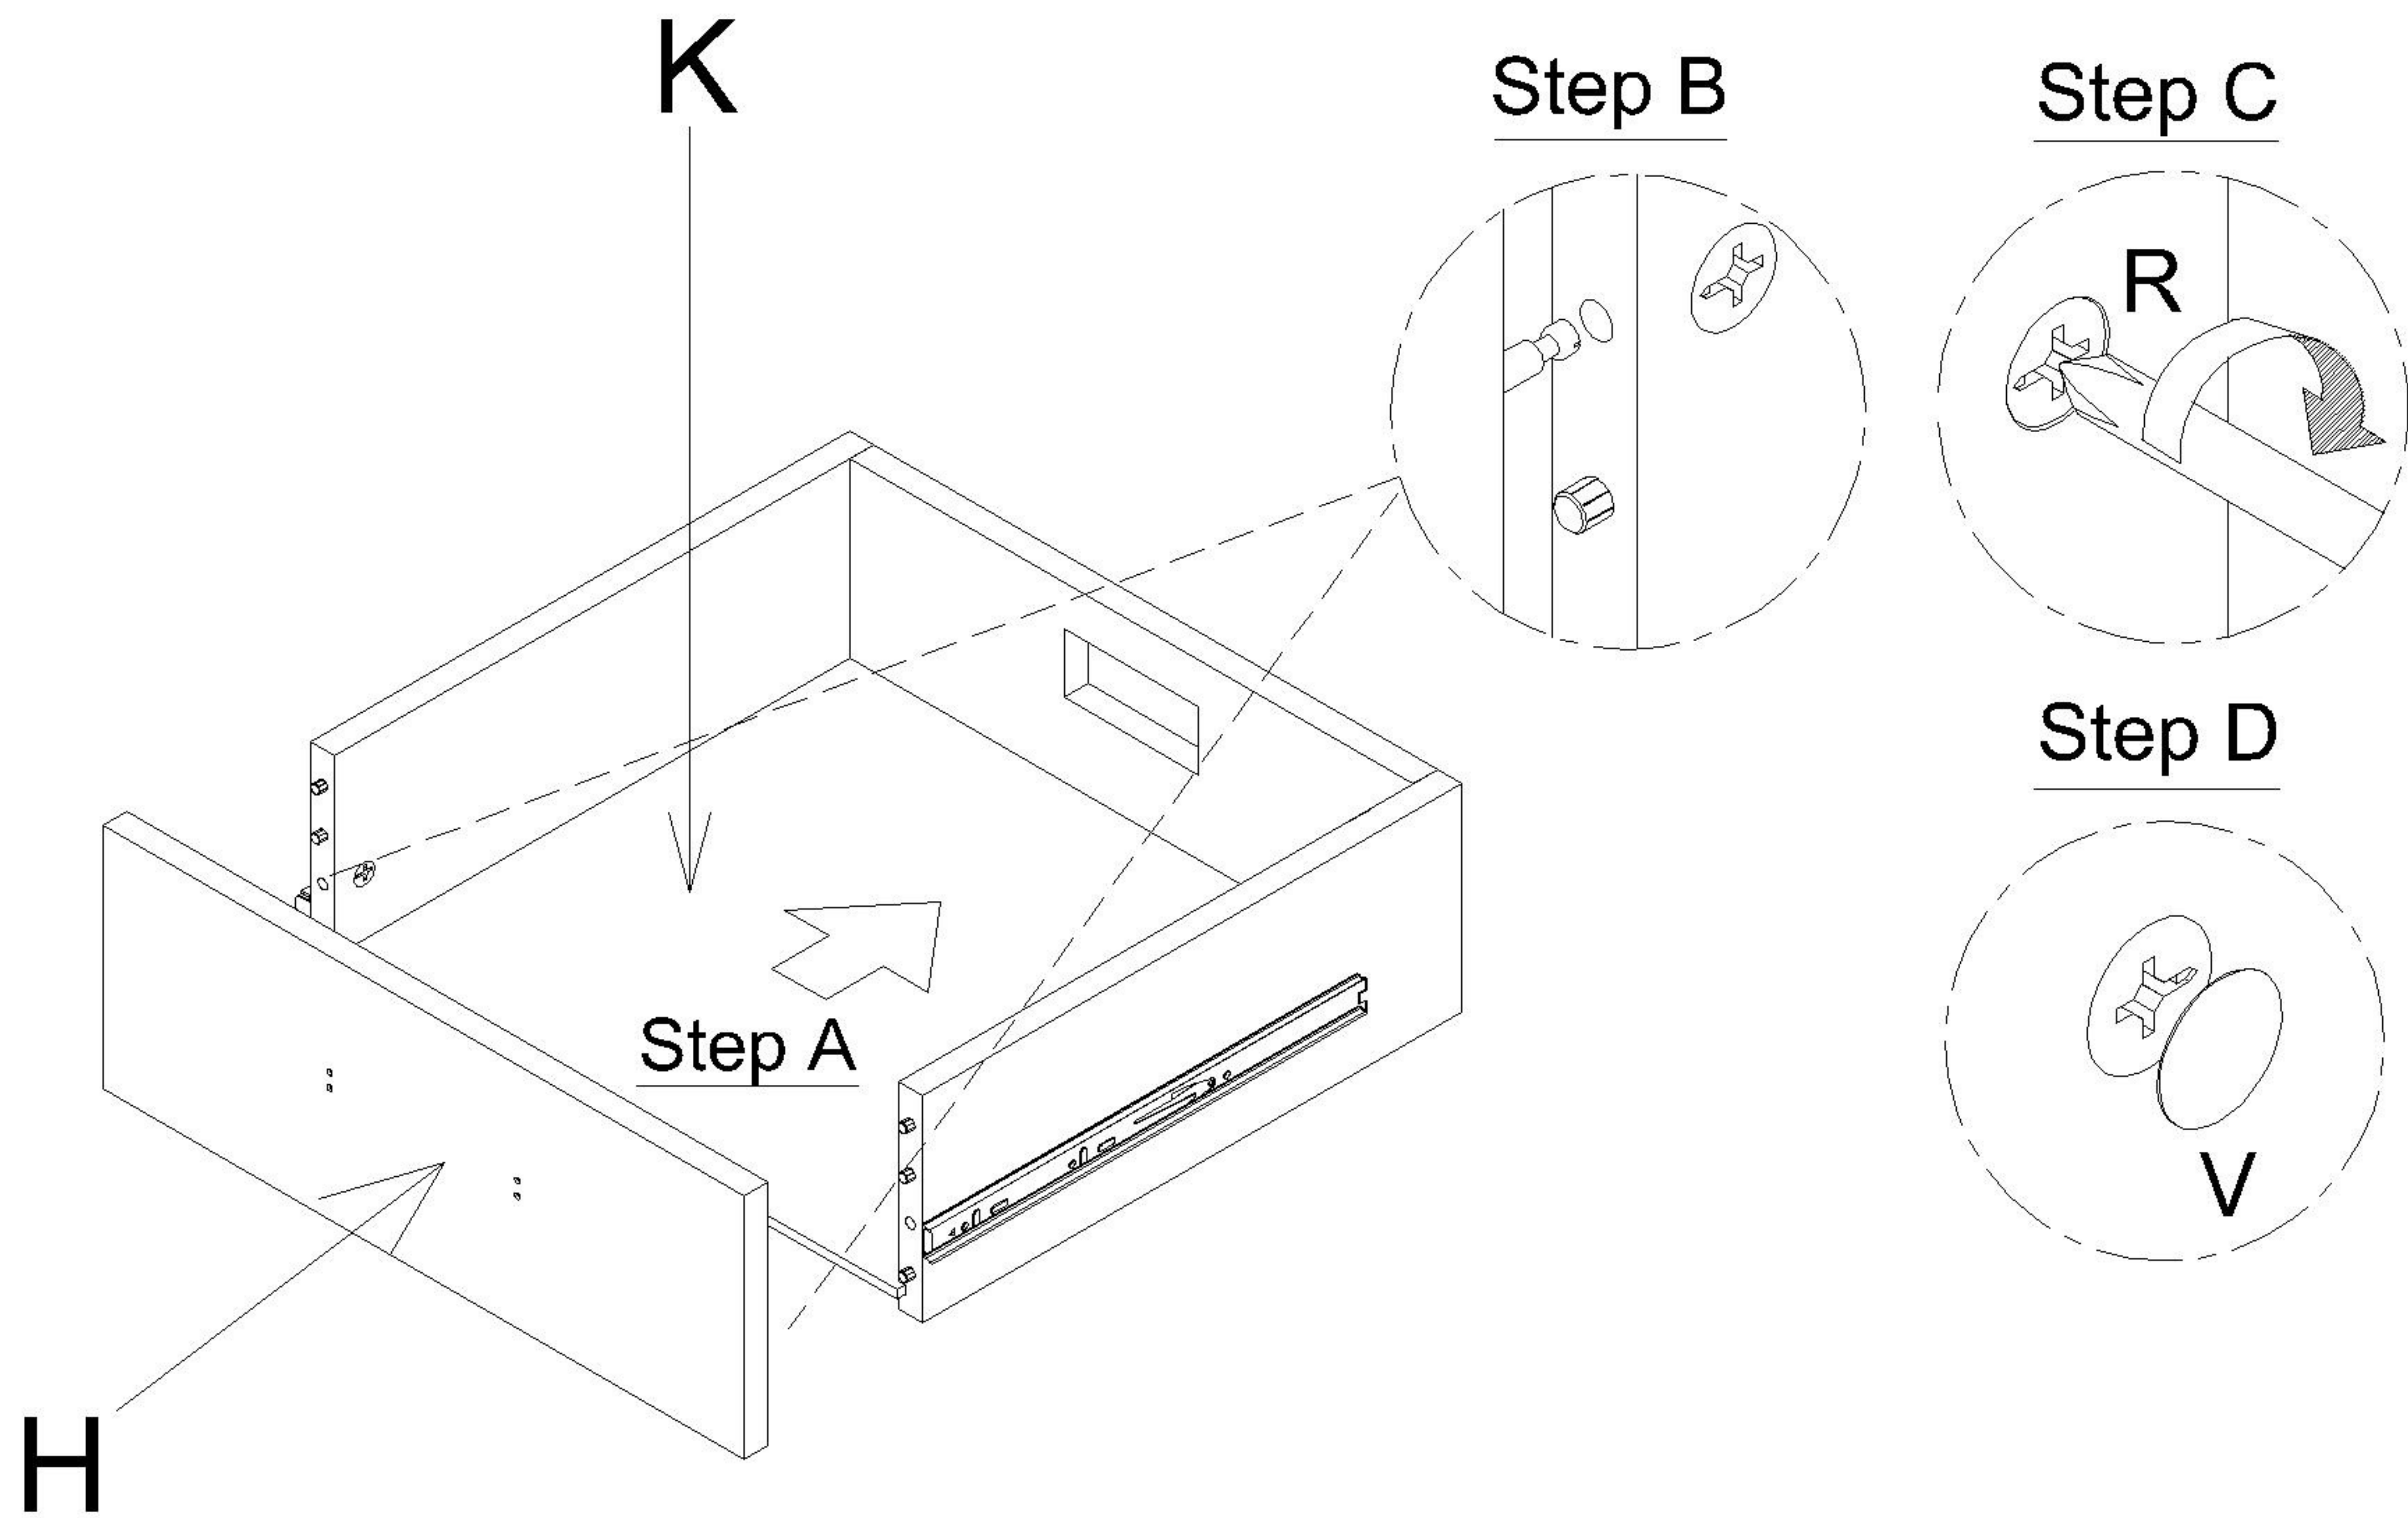


**15** Attach Handle (M) to Drawer Front (H) and secure with Screw (X). Attach Power Port (N) to Drawer Back (J) and secure with Panhead Screw (W).

 NOTE : - Do not over tighten the Screw (X & W).

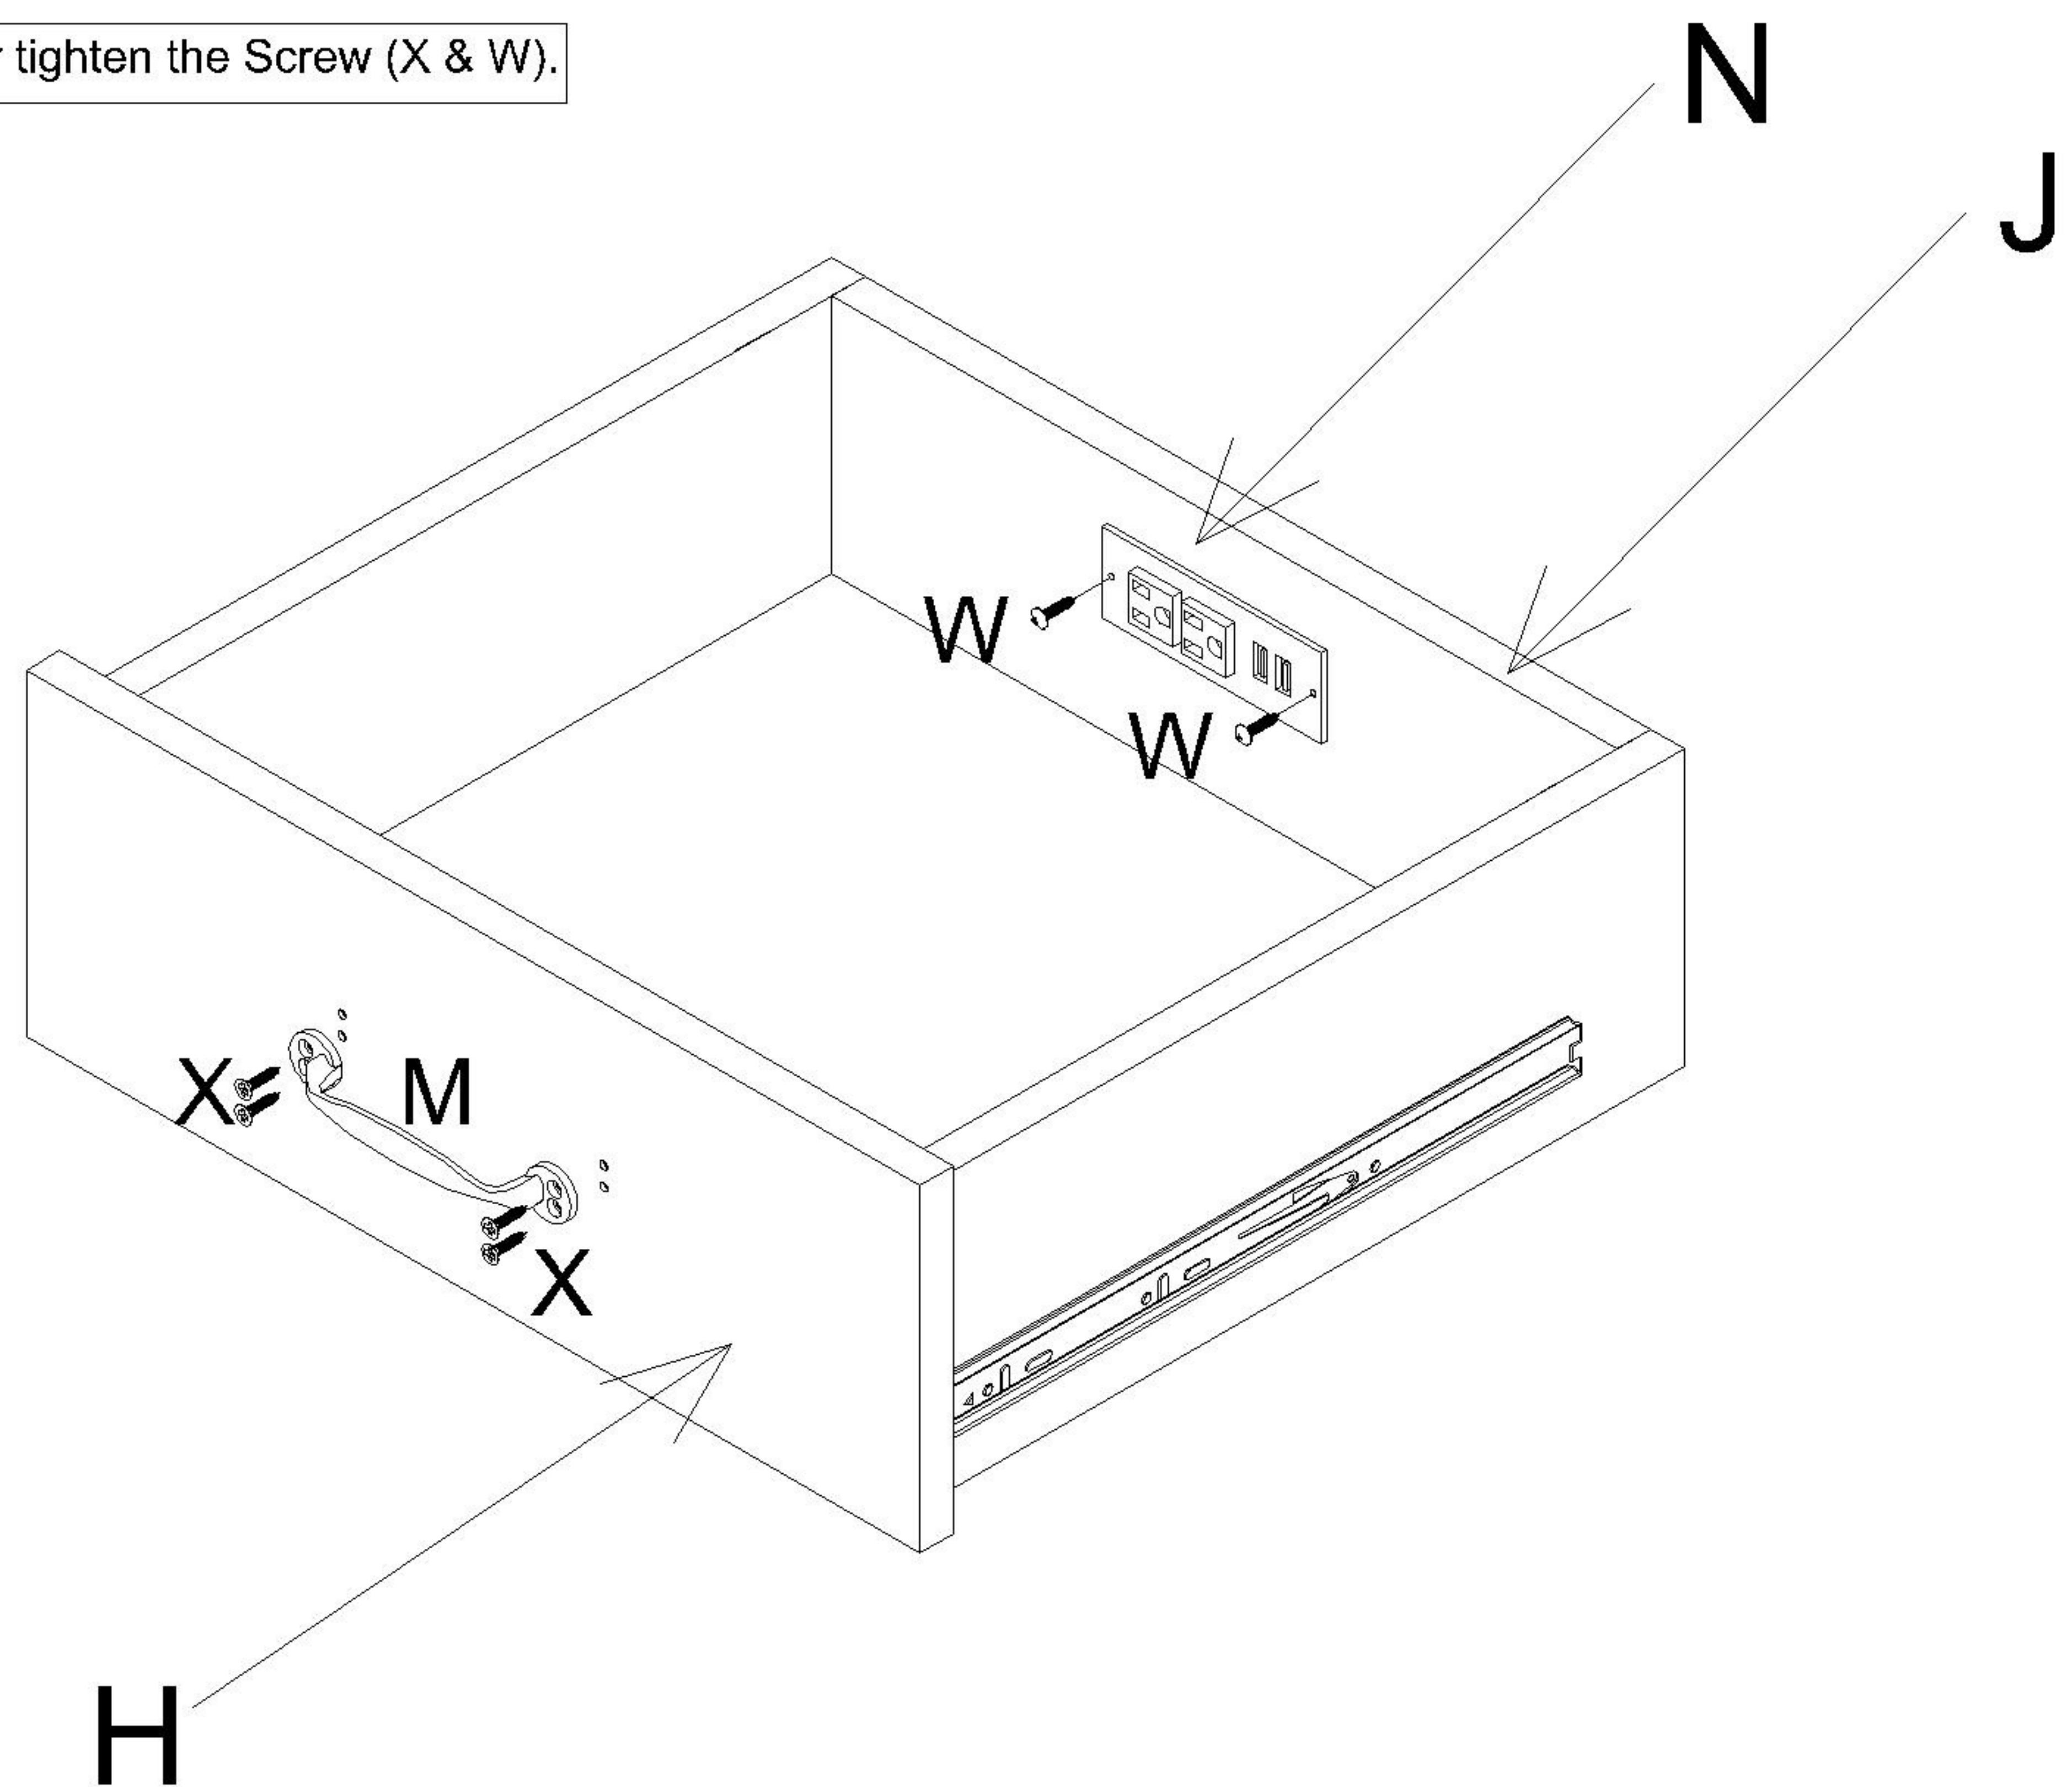




## 16 Slot Drawers into assembled unit.

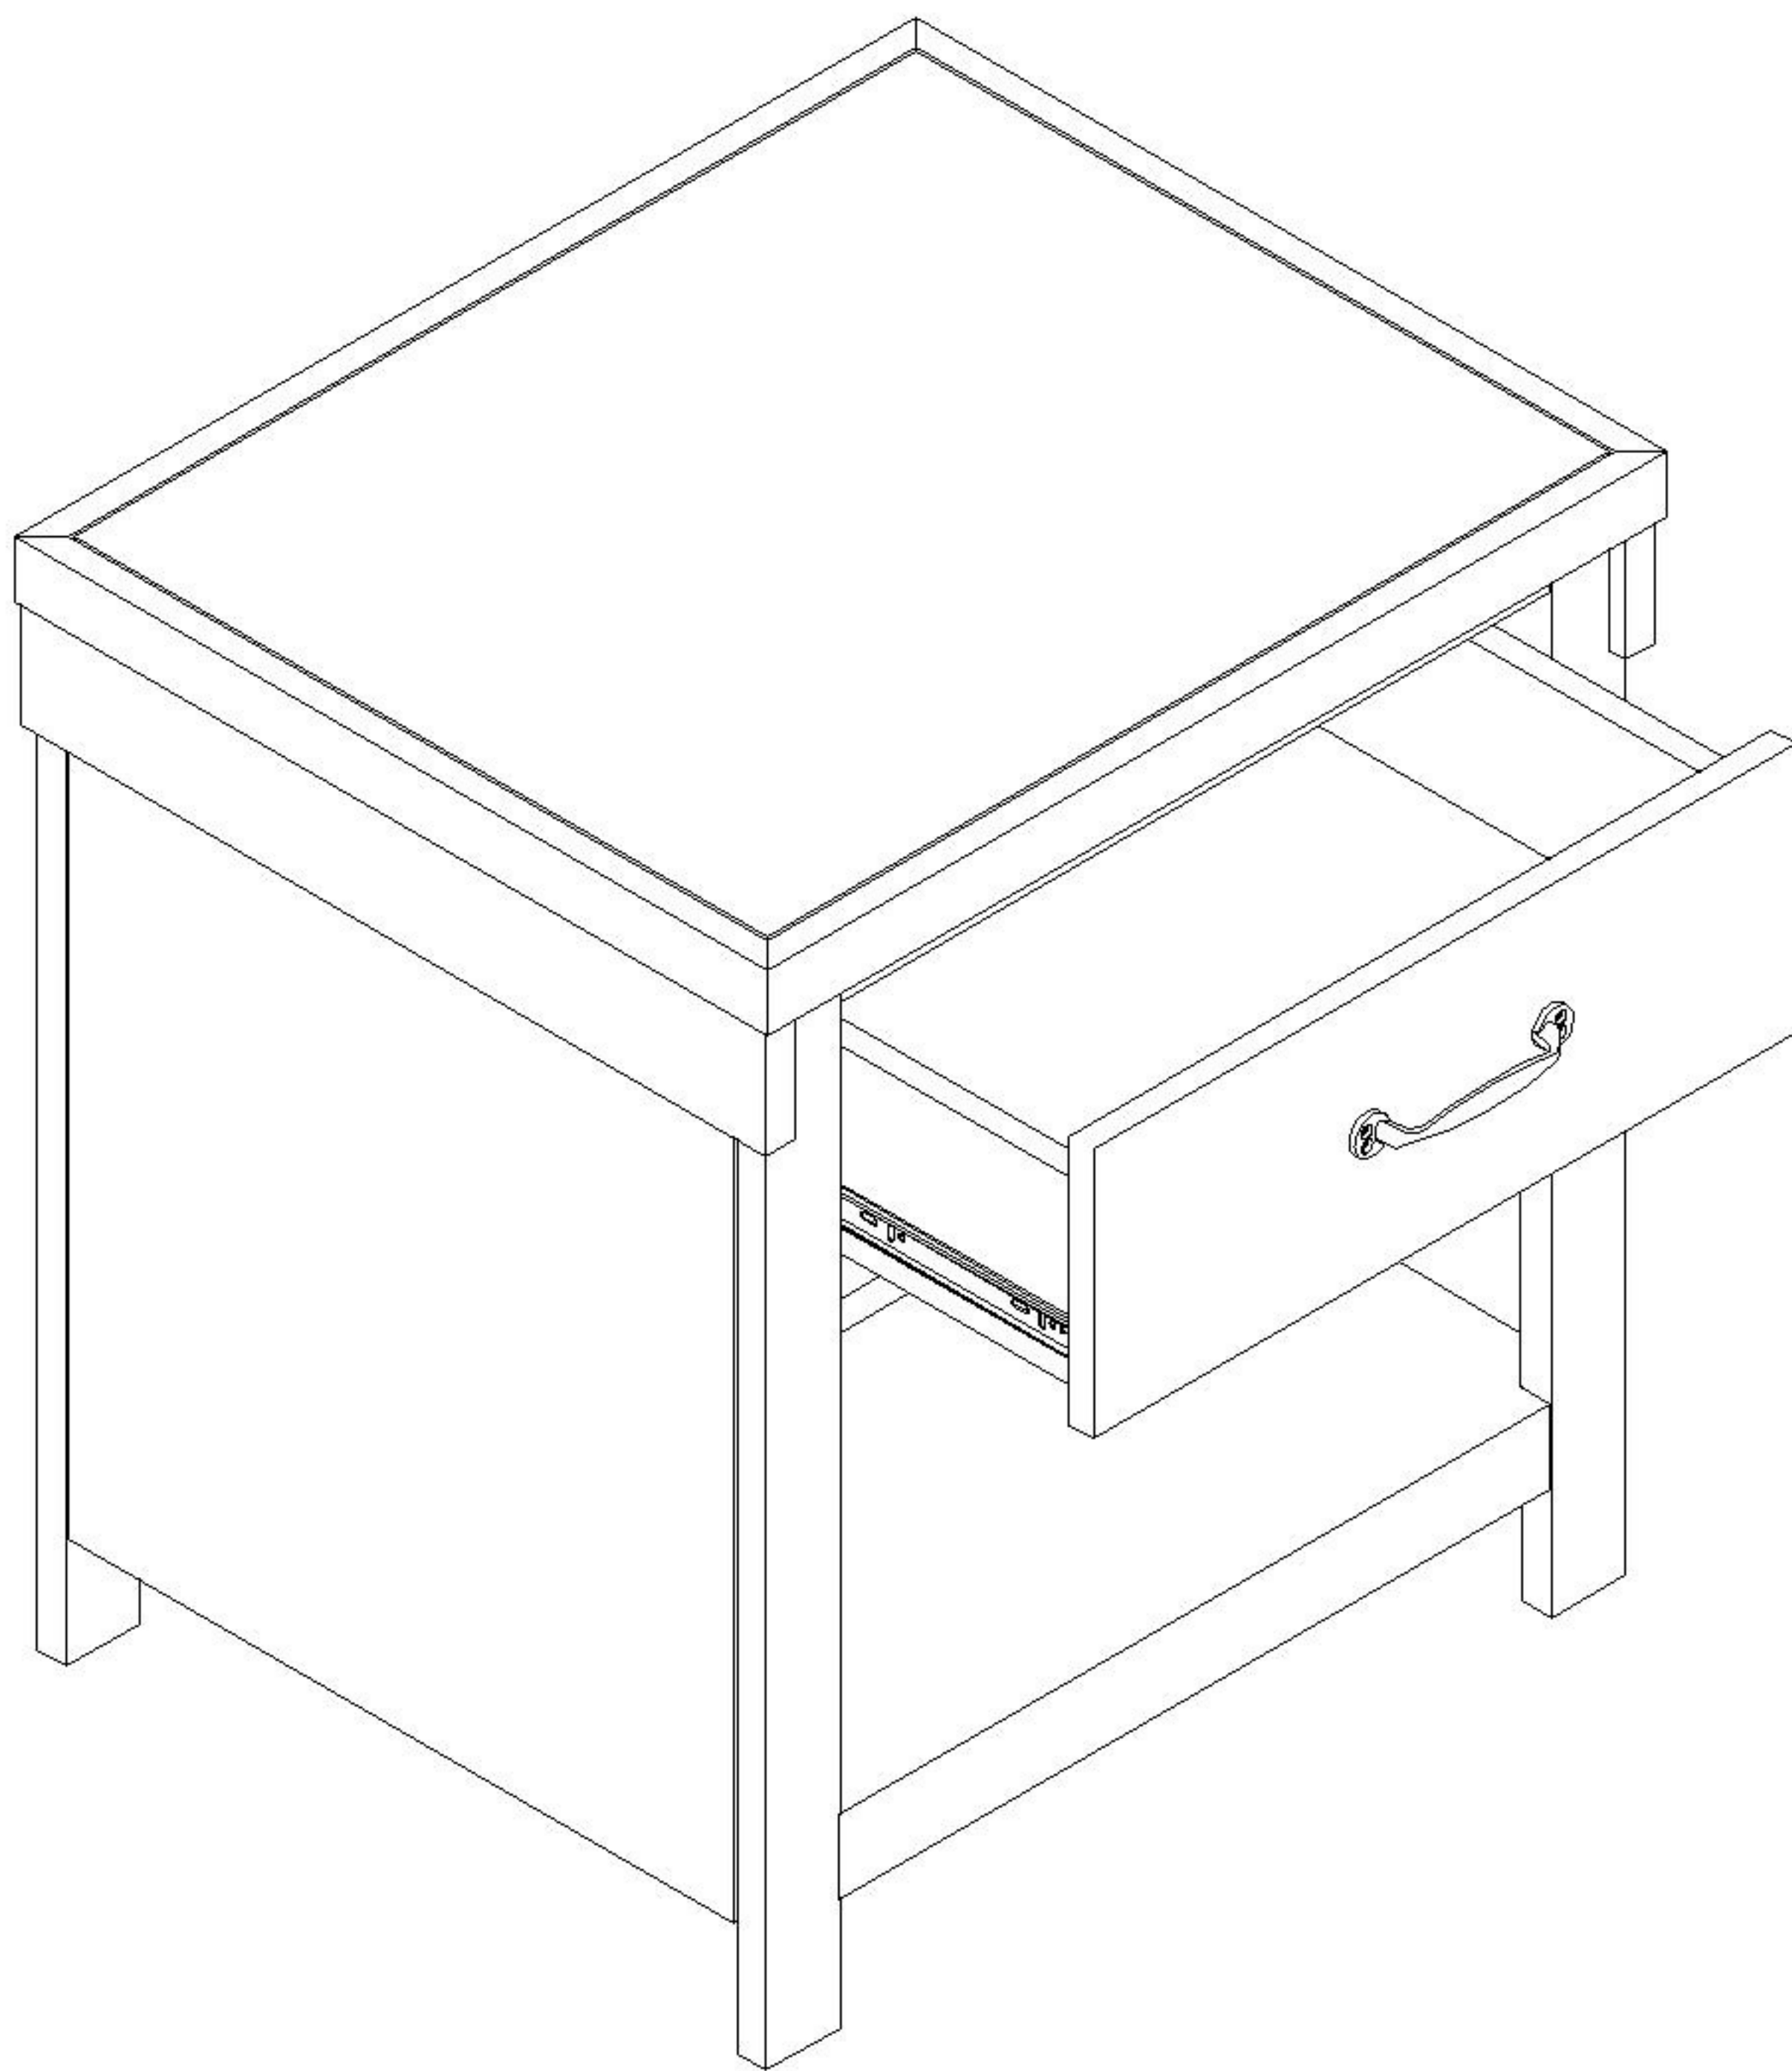 

### EXTENSION RUNNER ASSEMBLE STEPS:

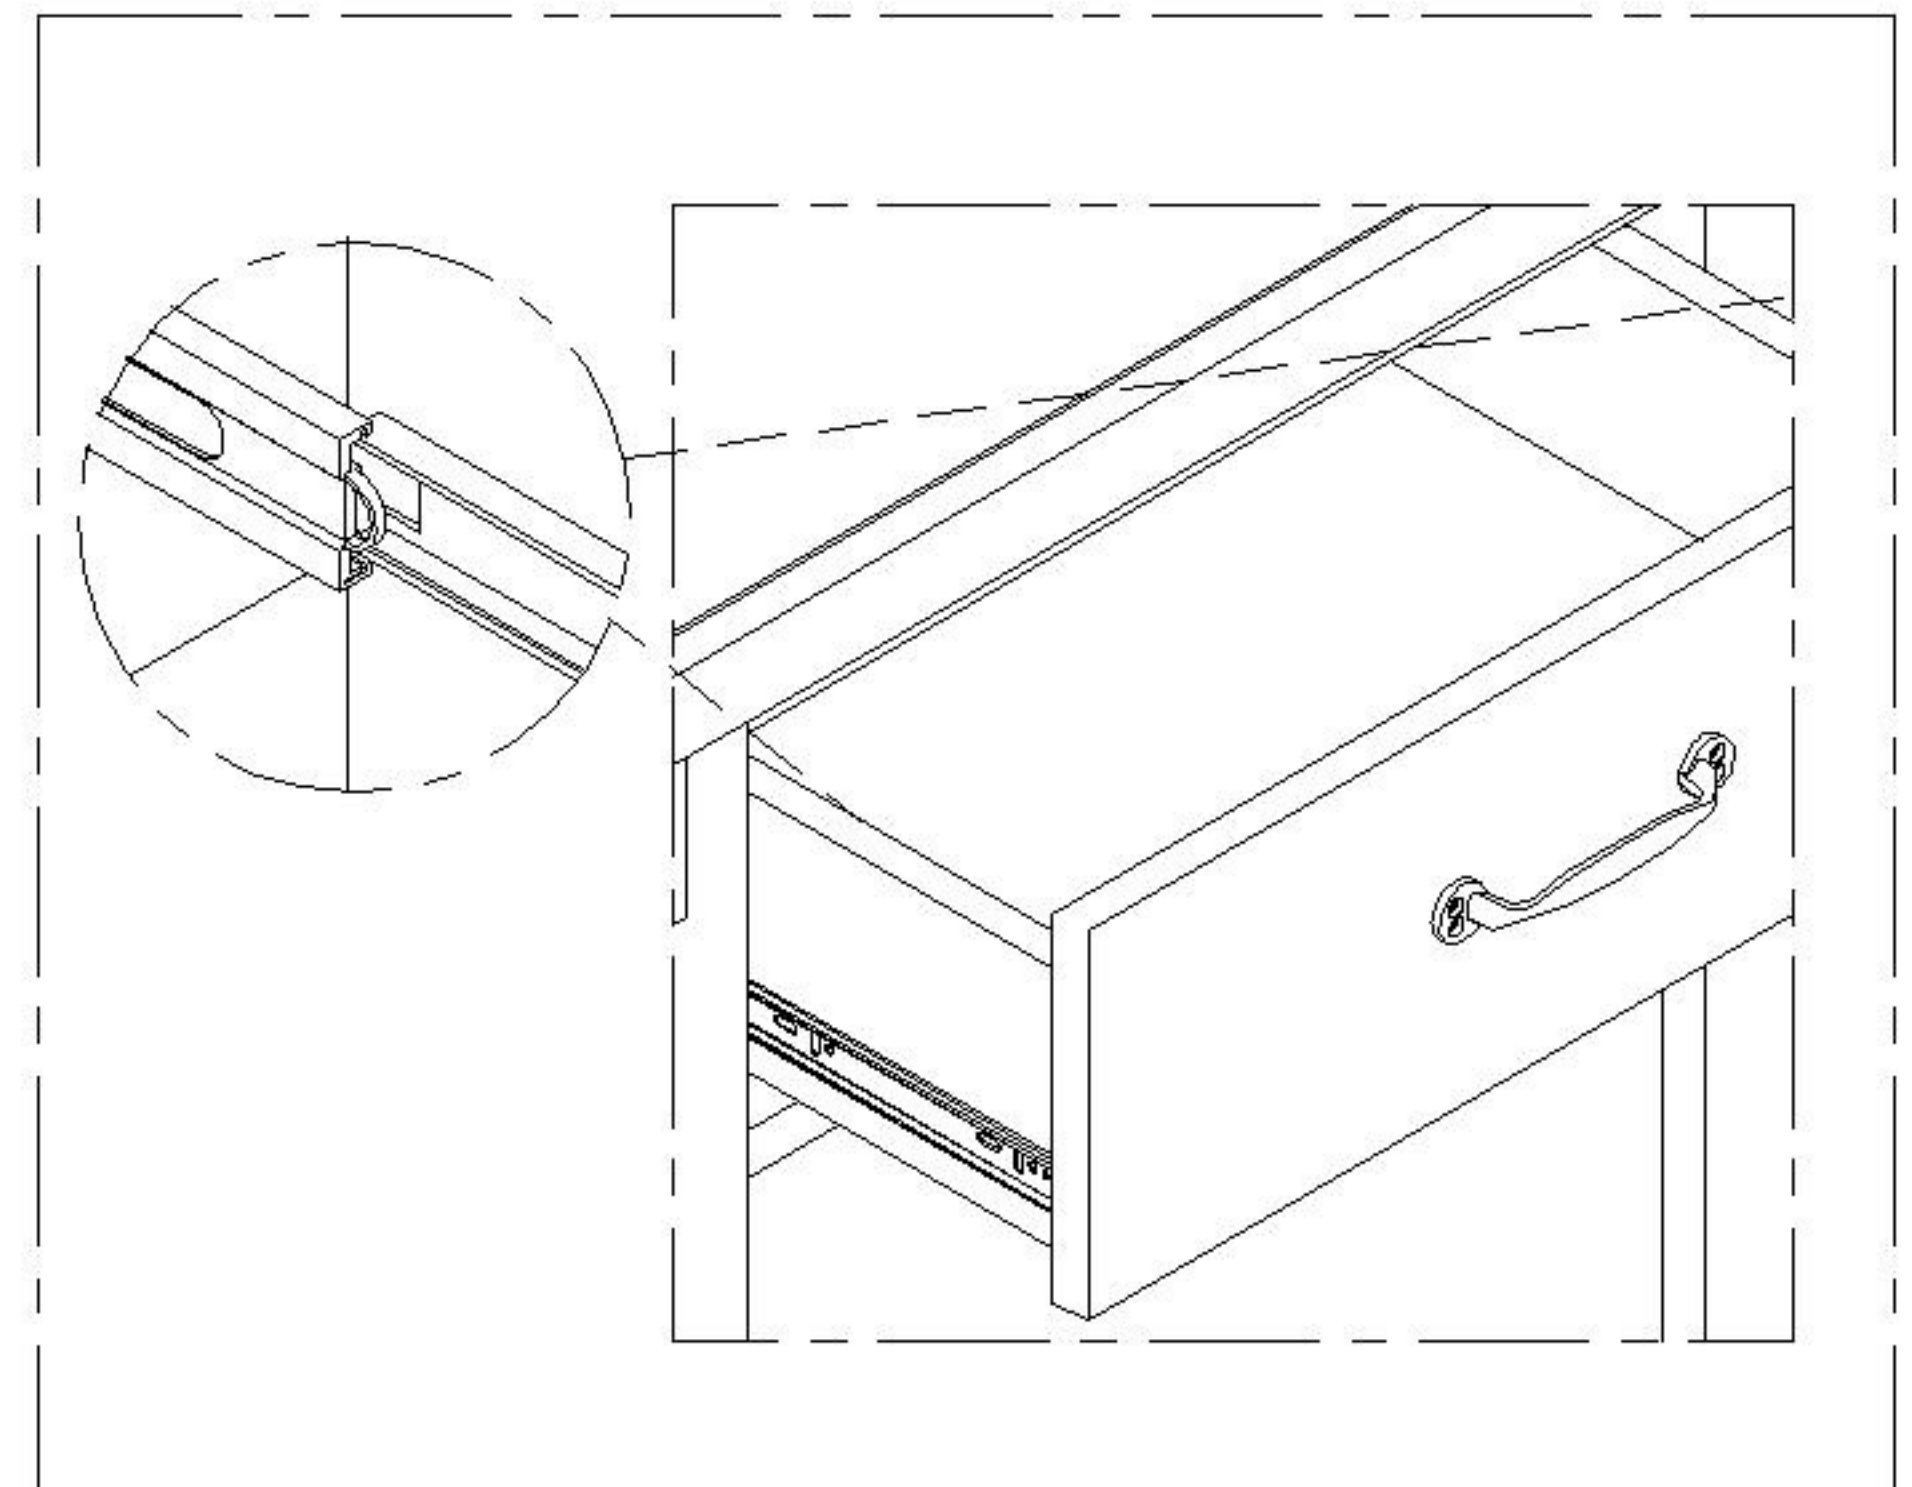 

NOTE : Align and pull/push the triggers on both sides of drawer box into the metal track on interior side of side panel.

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.