

ASSEMBLY INSTRUCTION



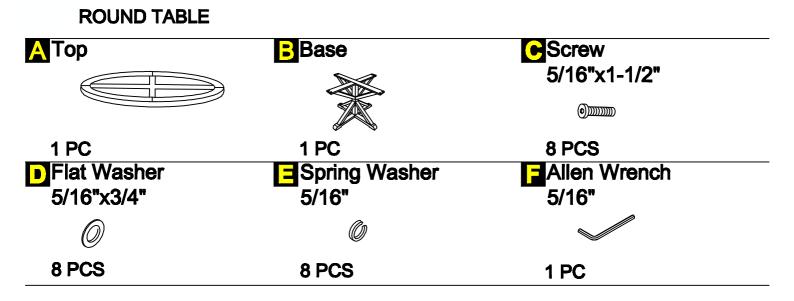


This page lists all the contents included in the box.

Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. *** Do not tighten screws & bolts until the entire unit is completely assembled.

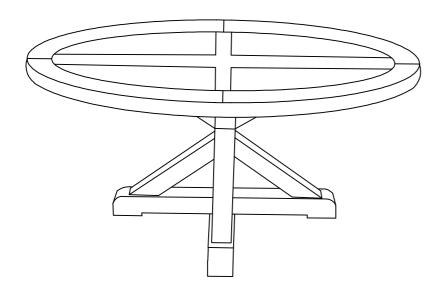


Attach Base(B) to Top(A) by using Screw(C), Flat Washer(D), Spring Washer(E) and Allen Wrench(F) as shown.

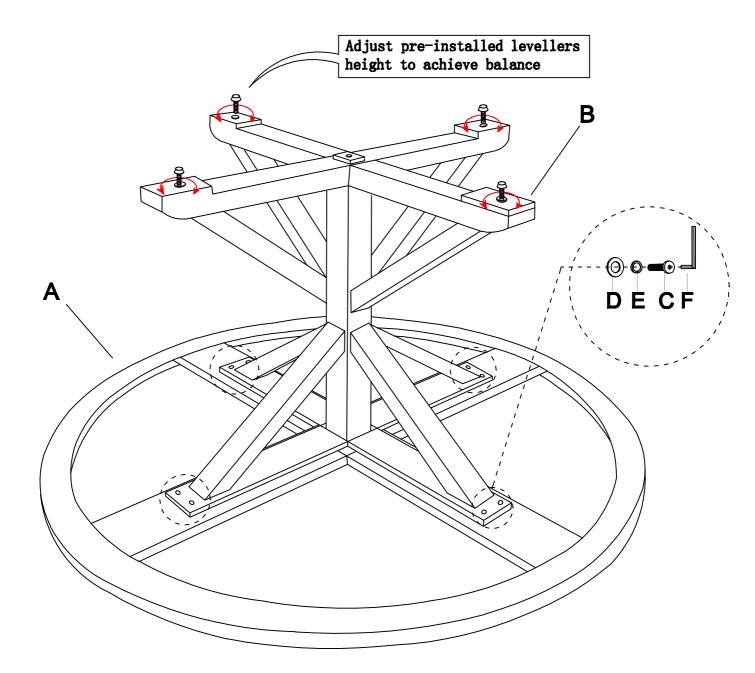


Cleaning & Care


Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION

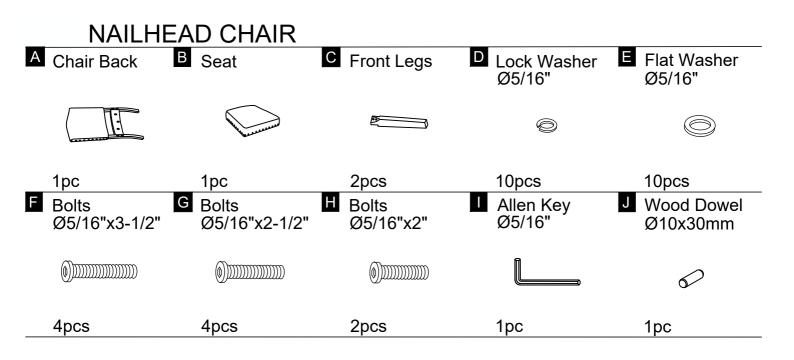


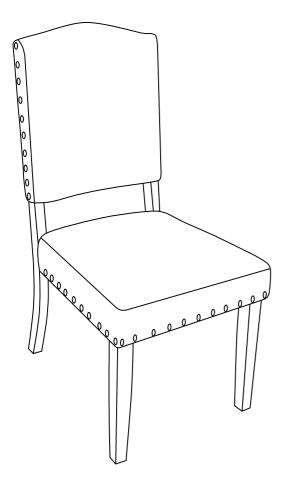

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Put the Seat (B) on a smooth flat surface, attached Front Legs (C) to the Seat (B) using Bolts (G), Lock Washer (D) and Flat Washer (E) in both holes of Seat (B). Turn the Allen Key (I) in Bolts (G). But not too tight. Attach Wood Dowel (J) to Seat (B) back.

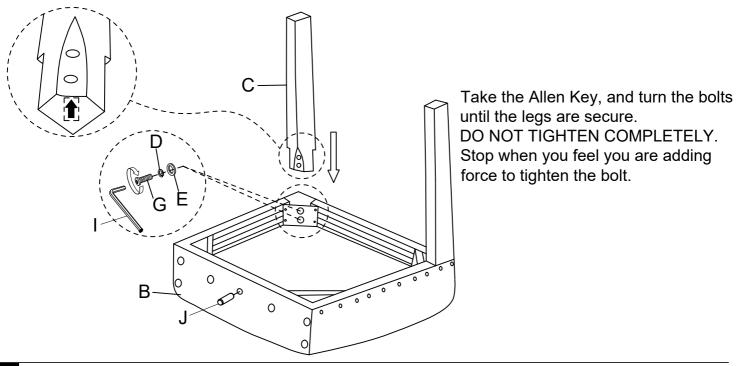

2 Put Chair Back (A) on a smooth flat surface, attached the Seat (B) to the Chair Back (A) using Bolts (F) & (H), Lock Washer (D), Flat Washer (E) in both holes of Seat (B) and Chair Back (A). Turn the Allen Key (I) in Bolts (F) & (H).

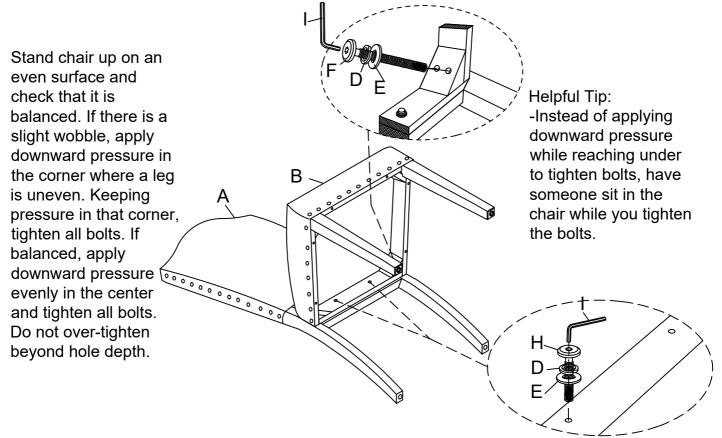

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.