

# INSTRUCTION MANUAL

Ceramic LED Christmas Tree

SKY5045 + SKY5046



Thank you for choosing us! Since 2002, Best Choice Products has been bringing customers high-quality products at the absolute lowest price. With everything ranging from instruments and toys to furniture and outdoor, we've got your everyday living essentials covered. We're centered around a customer-first philosophy – with free shipping, exceptional customer service, and a catalog sourced with you in mind.

#### REQUIRED





### **I**NOTICE

- This product is not intended for outdoor use.
- This product is seasonal and not intended for permanent installation or use.
- Do not use this product outside its intended use.
- Do not leave children unattended with this tree. This product is NOT a toy.
- Do not mount or place near sources of heat such as fireplaces, candles, or heaters.
- Do not cover this product with cloth, paper or other materials when in use.
- Do not use if there are cracks in lights or enclosures, loose connections, or visible/exposed copper wire.

#### INSTALLATION

- 1. Remove all contents from package.
- 2. Locate the battery compartment on the back of the stable, open the battery compartment cover and insert two "AA" batteries (Not Included). Batteries are to be inserted with the correct polarity.
- 3. To turn on the light, move the switch located on the battery compartment to the "ON" position. To turn off the light, move the switch to the "OFF" position.

#### **REPLACING BATTERIES**


- 1. Open the battery compartment cover. Remove all the old batteries.
- 2. Insert two "AA" batteries. For best results, use alkaline batteries.
- 3. Close the battery compartment cover.

#### WARNINGS REGARDING BATTERIES

- Do not mix alkaline, standard (carbon zinc) and rechargeable (nickel hydride) batteries.
- Do not mix old and new batteries.
- Non-rechargeable batteries should not be charged.
- Rechargeable batteries should be charged under adult supervision only.
- Exhausted batteries should be removed.
- The supply terminals should not be short-circuited.
- Do not put batteries next to or in a heat source (fire, electronic heating device, etc.).
- Do not hit batteries against hard objects.
- Do not submerge batteries in water.
- Batteries should be inserted with the correct polarity.

#### ASSEMBLY IS COMPLETE!



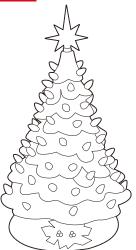

#### **PRODUCT WARRANTY INFORMATION**

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

CONTACT US; WE'RE HERE 7 DAYS A WEEK TO HELP YOU!



bestchoiceproducts.com



customerservice@ bestchoiceproducts.com





## 

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.