



BEST CHOICE
PRODUCTS



INSTRUCTION MANUAL

6ft Pre-Lit Lamp Post

! NOTICE

Please retain these instructions for future reference.

- This product is intended for outdoor use and should be assembled outdoors only.
- This item is not intended for permanent installation or use.
- Unplug item when not in use or if left unattended.
- Ensure that your voltage is consistent with specifications.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.



1 PERSON
ASSEMBLY



UP TO 30 MIN.
ASSEMBLY

! WARNING

- Do not plug into a wall outlet until item is fully assembled and lights are properly connected.
- Do not use in extreme weather conditions.
- Keep item away from all heat sources (fireplace, stove, heater, etc.).
- Please use the provided stakes to properly secure the figures.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.

HARDWARE

1

WINGNUT/
SCREW



8 SETS

2

ZIP TIE



2 PCS

3

U-STAKE



4 PCS

4

HOOK



2 PCS

5

ROPE



2 PCS

6

GROUND
STAKE




2 PCS

PARTS

A

BASE

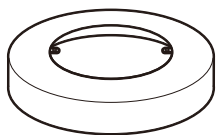

1 PC

B

LOWER POLE



1 PC

C

 
MIDDLE POLE



1 PC

D


UPPER POLE



1 PC

E


LAMP FRAME

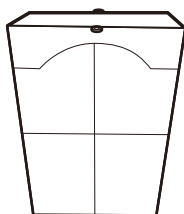

1 PC

F


LAMP CAP

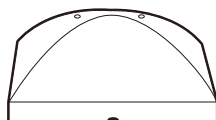

1 PC

G

FINIAL

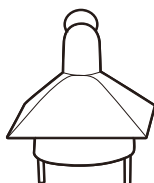

1 PC

H

BRACKET



2 PCS

I


BOW



1 PC

J

POWER ADAPTER

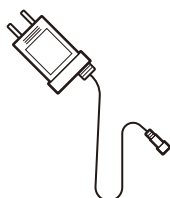


1 PC

PRODUCT ASSEMBLY

1

Locate the light cord on the **part B lower pole** and connect it to the cord within the **part A base**.


Attach the **part B lower pole** to the **part A base** with two **part 1 wingnuts/screws**.

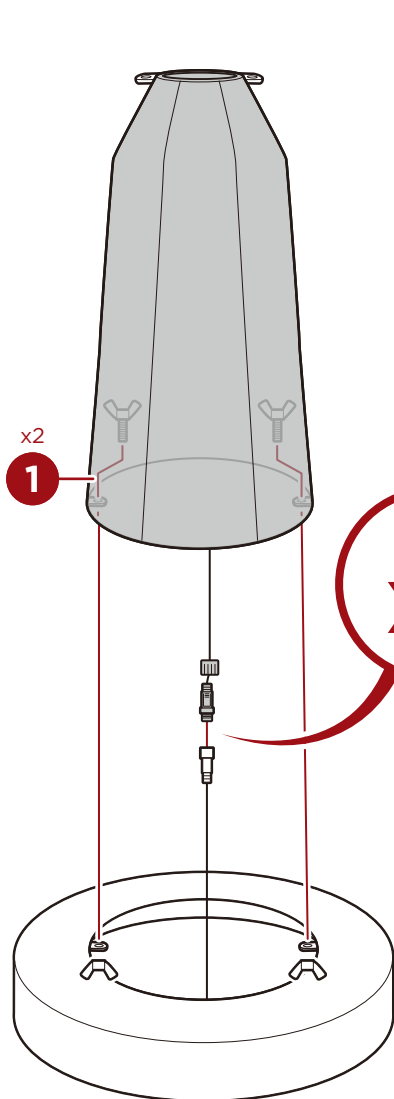

2

Locate the light cord on the **part C middle pole** and connect it to the cord within the **part B lower pole**.

Attach the **part C middle pole** to the **part B lower pole** with two **part 1 wingnuts/screws**.

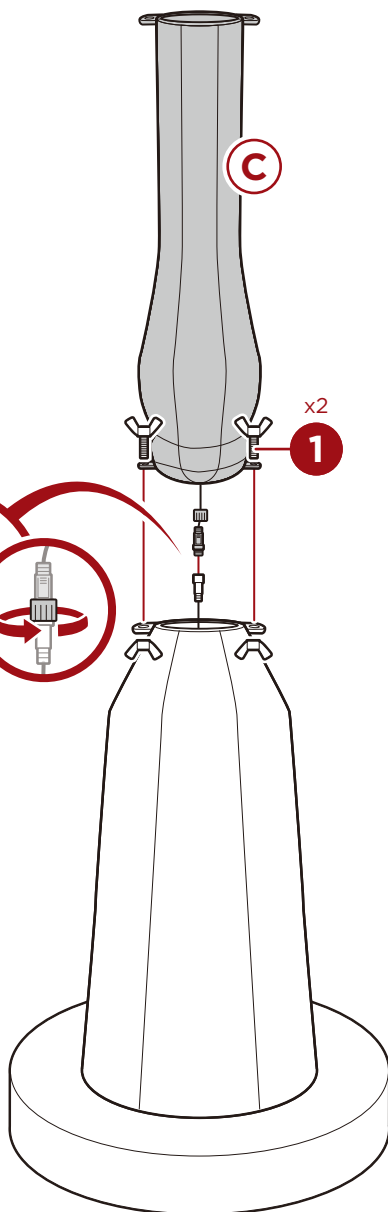


PRODUCT ASSEMBLY

3

Locate the light cord on the **part D upper pole** and connect it to the cord within the **part C middle pole**.


Attach the **part D upper pole** to the **part C middle pole** with two **part 1** wingnuts/screws.

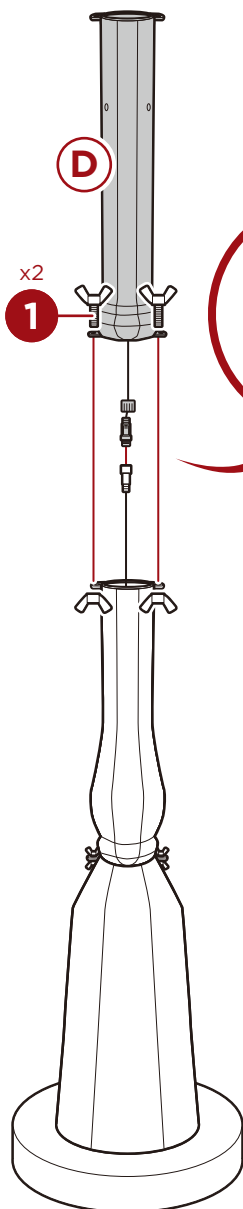

4

Locate the light cord on the **part E lamp frame** and connect it to the cord within the **part D upper pole**.

Attach the **part E lamp frame** to the **part D upper pole** with two **part 1** wingnuts/screws.

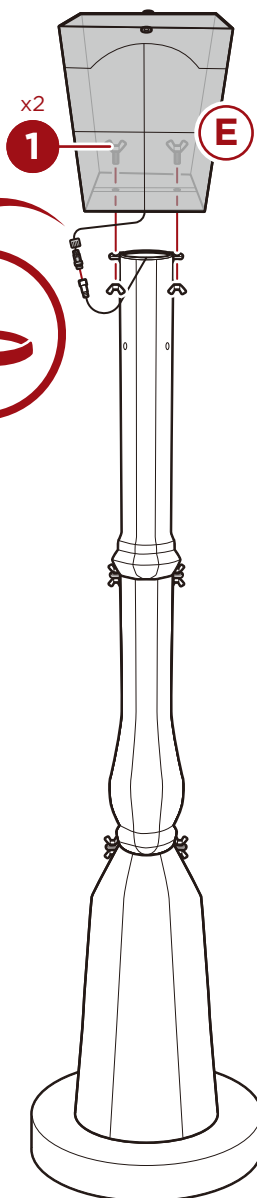


PRODUCT ASSEMBLY

5

Locate the light cord on the **part F lamp cap** and connect it to the cord within the **part E lamp frame**.

Attach the **part F lamp cap** to the **part E lamp frame** with two **part 2 zip ties**.

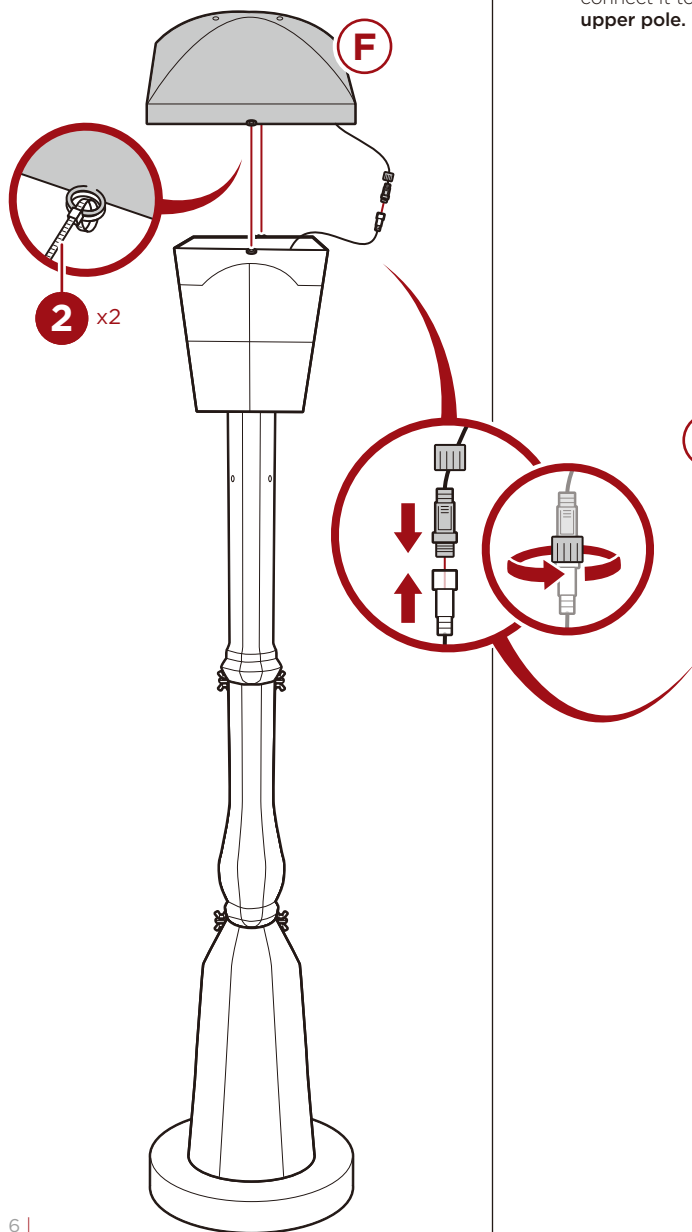


6

Attach the **part G finial** to the **part F lamp cap**.

Insert two **part H brackets** and then attach **part I bow** to the **part D upper pole**.

Locate the light cord on the **part I bow** and connect it to the cord within the **part D upper pole**.

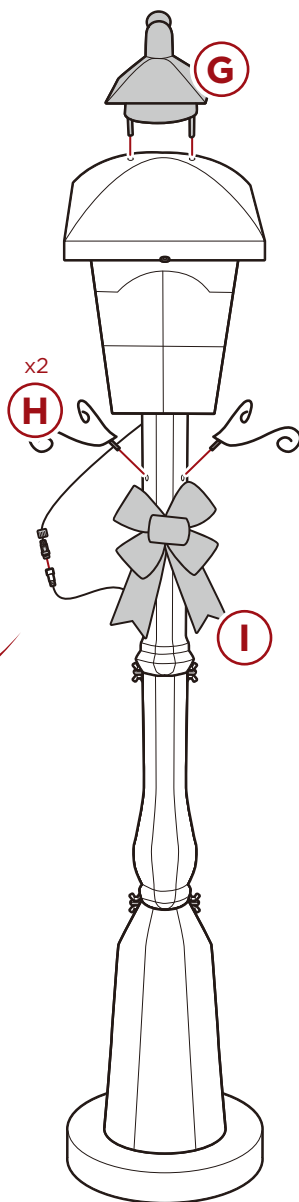

PRODUCT ASSEMBLY


7

Locate the light cord under the base of the lamp post and connect it to the the **part J power adapter**.

Secure the lamp post to the ground with four **part 3 u-stakes**.

Secure two **part 5 ropes** with two **part 4 hooks** around the the lamp post, then attach the ropes to the **part 6 ground stakes**. Drive the **part 6 ground stakes** into the ground to secure.

Plug into a wall outlet to turn on the lights.

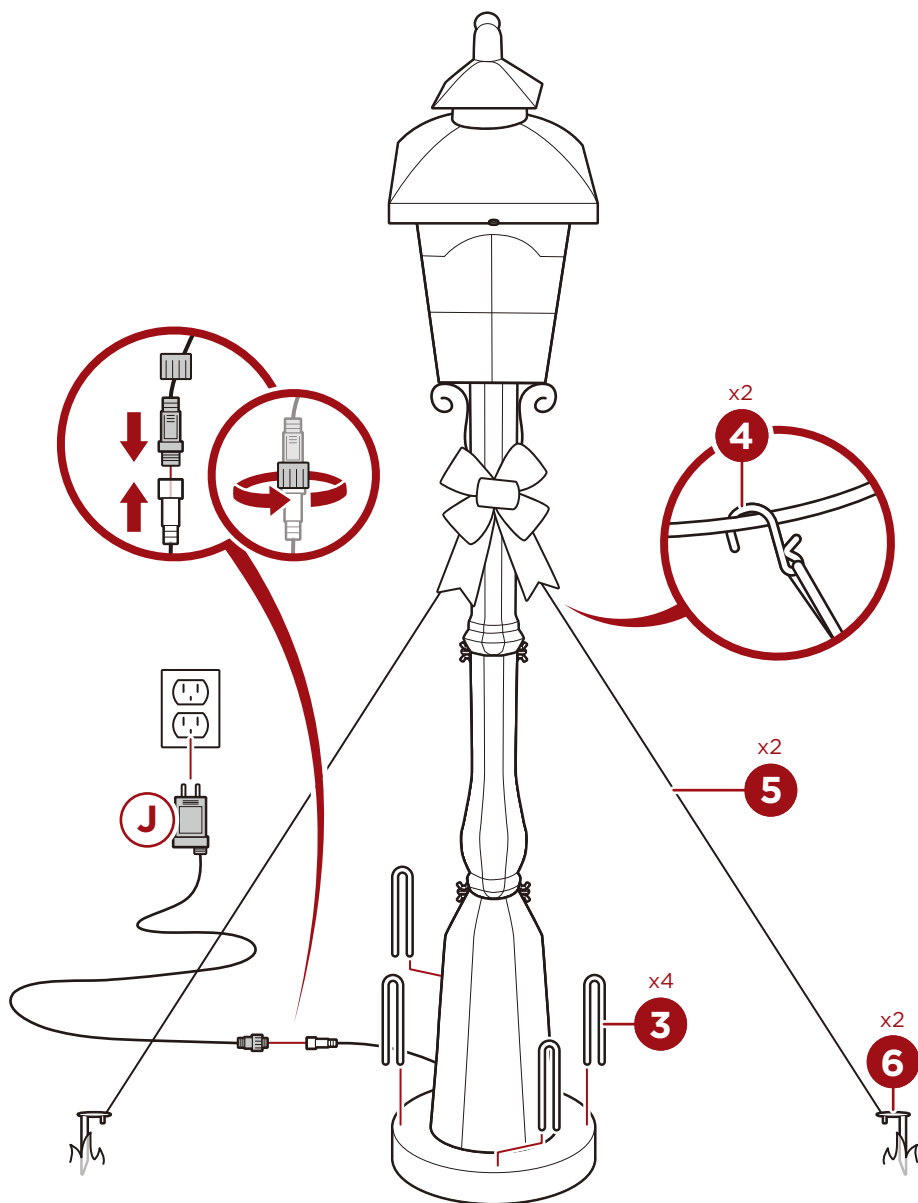



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.