 



 
 
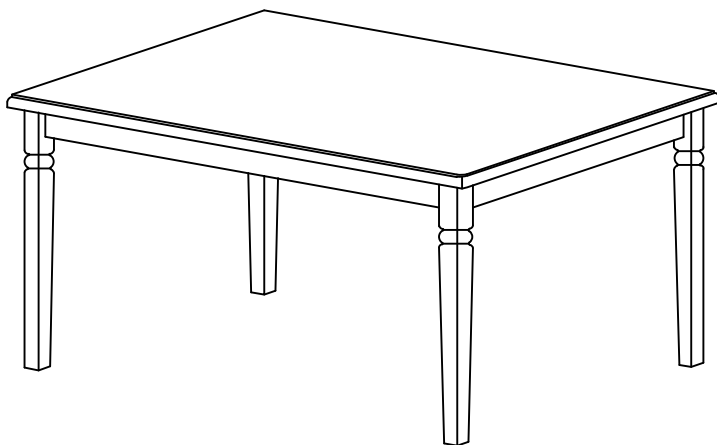


ASSEMBLY INSTRUCTION


2538-60(SPK) DINING TABLE

A Table Top  1pc	B Table Leg  4pcs	C Bolt 5/16" x 2-1/2"  8pcs	D Lock Washer 5/16"  8pcs
E Flat Washer 5/16"  8pcs	F Allen Key 1/4" x 2-3/8"  1pc		




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1 Put Table Top (A) on smooth flat surface. Remove the four Adjustable Shelf with Phillips Head Screw Driver (not Included).

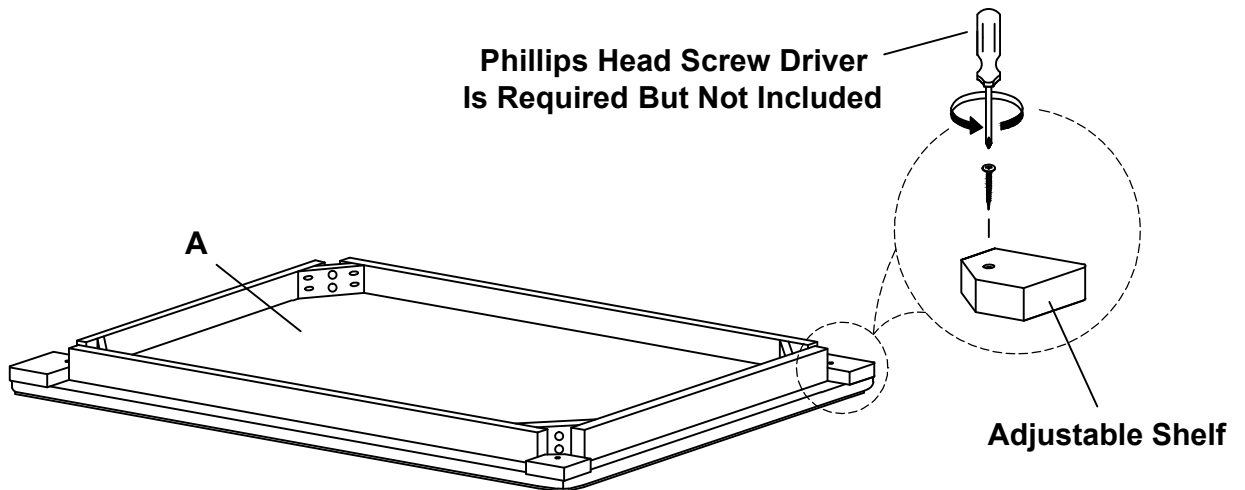

2 Attach the four Table Leg (B) to the Table Top (A) use Bolt (C), Lock Washer (D) and Flat Washer (E) on eight holes of the Table Top (A). Turn the Allen Key (F) in the Bolt (C). Hand tighten only at this moment by using Allen Key (F).

Take the Allen Key, and turn the bolts until the legs are secure.
DO NOT TIGHTEN COMPLETELY.
Stop when you feel you are adding force to tighten the bolt.

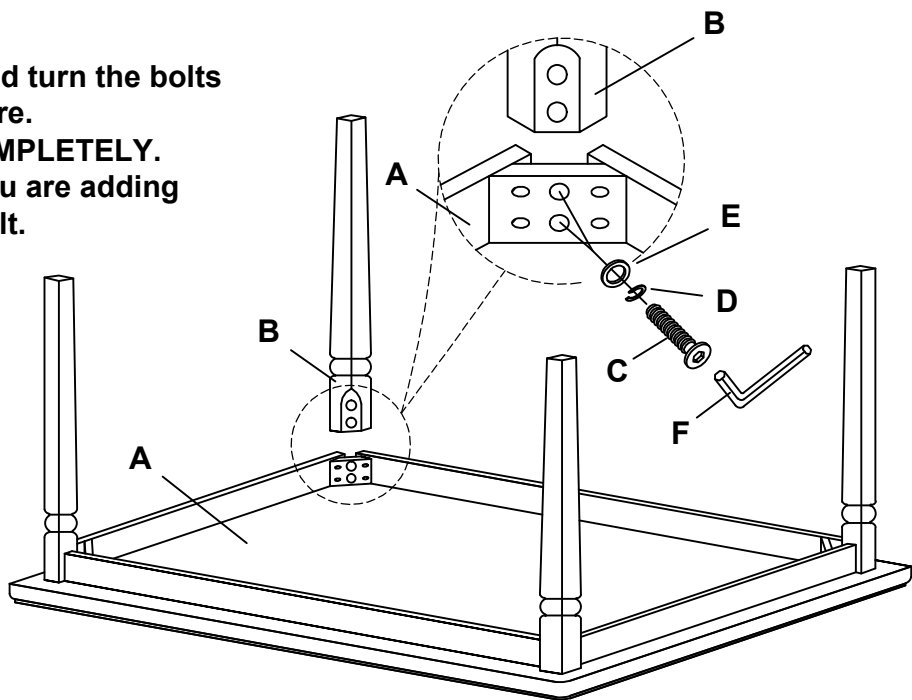

Stand table up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

Cleaning & Care:

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.