



BEST CHOICE
PRODUCTS



INSTRUCTION MANUAL

Standing Outdoor Joy
Nativity Set



**BEST CHOICE
PRODUCTS**

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

— Always. —

! NOTICE

Please retain these instructions for future reference.

- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all screws and additional hardware before use.
- Reconfirm that all screws and additional hardware are secure every 90 days.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.

TOOLS REQUIRED



PHILLIPS
SCREWDRIVER



RUBBER
MALLET








1 PERSON
ASSEMBLY




UP TO 60 MIN.
ASSEMBLY

HARDWARE

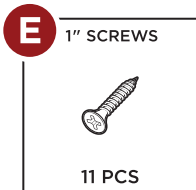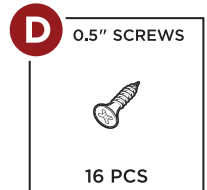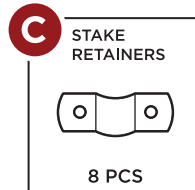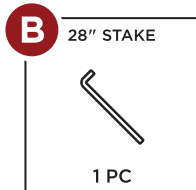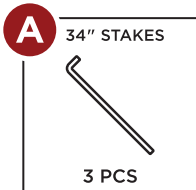

PARTS

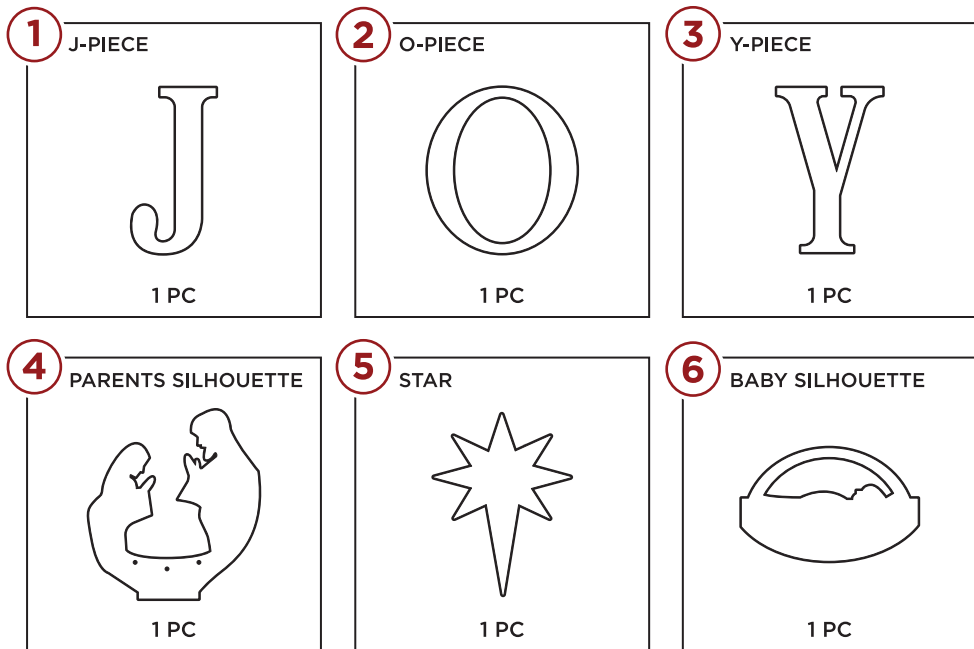


PRODUCT ASSEMBLY

1

Locate the pre-drilled holes on the **part 4 parents** and **part 6 baby silhouettes**. Overlap the holes and connect the two pieces with three **part E screws**.

NOTE: Insert the screws through the parents first and then through the baby silhouette.

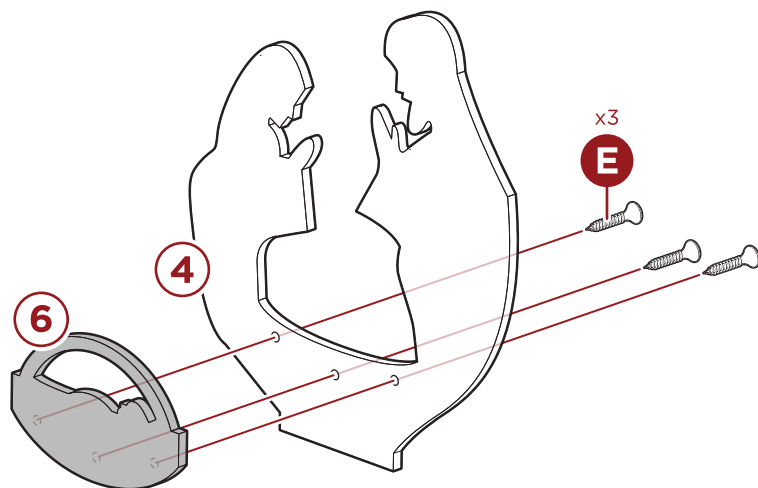


PRODUCT ASSEMBLY

2


Locate the pre-drilled holes on top of the **part 2 "O" piece**. Place **part 5 star** on the "front" of the "O" then secure with three **part E screws**.

Attach the screws through the "O" then the star.

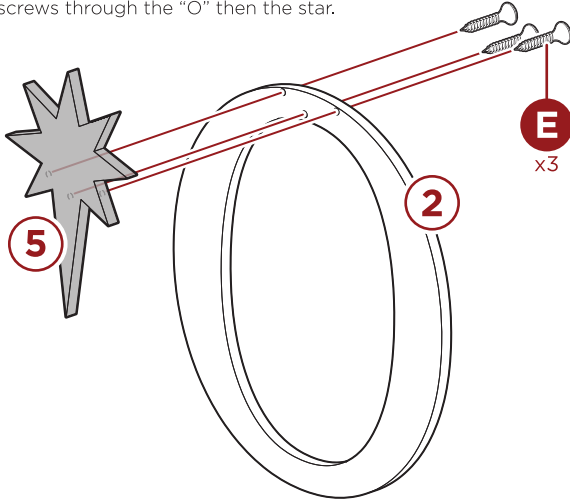

3

Attach the **part 4 parents silhouette** to the back of the **part 2 "O" piece** with five **part E screws**.

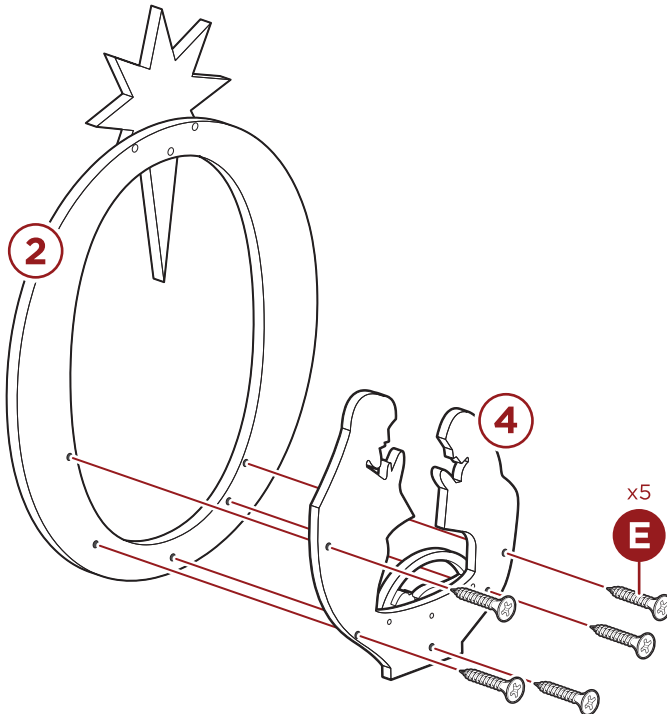

PRODUCT ASSEMBLY


4

Attach one **part A stake** to the **part 1 "J" piece** by placing two **part C stake retainers** and securing with four **part D screws**, two screws per retainer.

Attach two **part A stakes** to the **part 2 "O" piece** by placing four **part C stake retainers** and securing with eight **part D screws**, two screws per retainer.

Attach the **part B stake** to the **part 3 "Y" piece** by placing two **part C stake retainers** and securing with four **part D screws**, two screws per retainer.

NOTE: Do not attach the retainers before inserting the stakes.

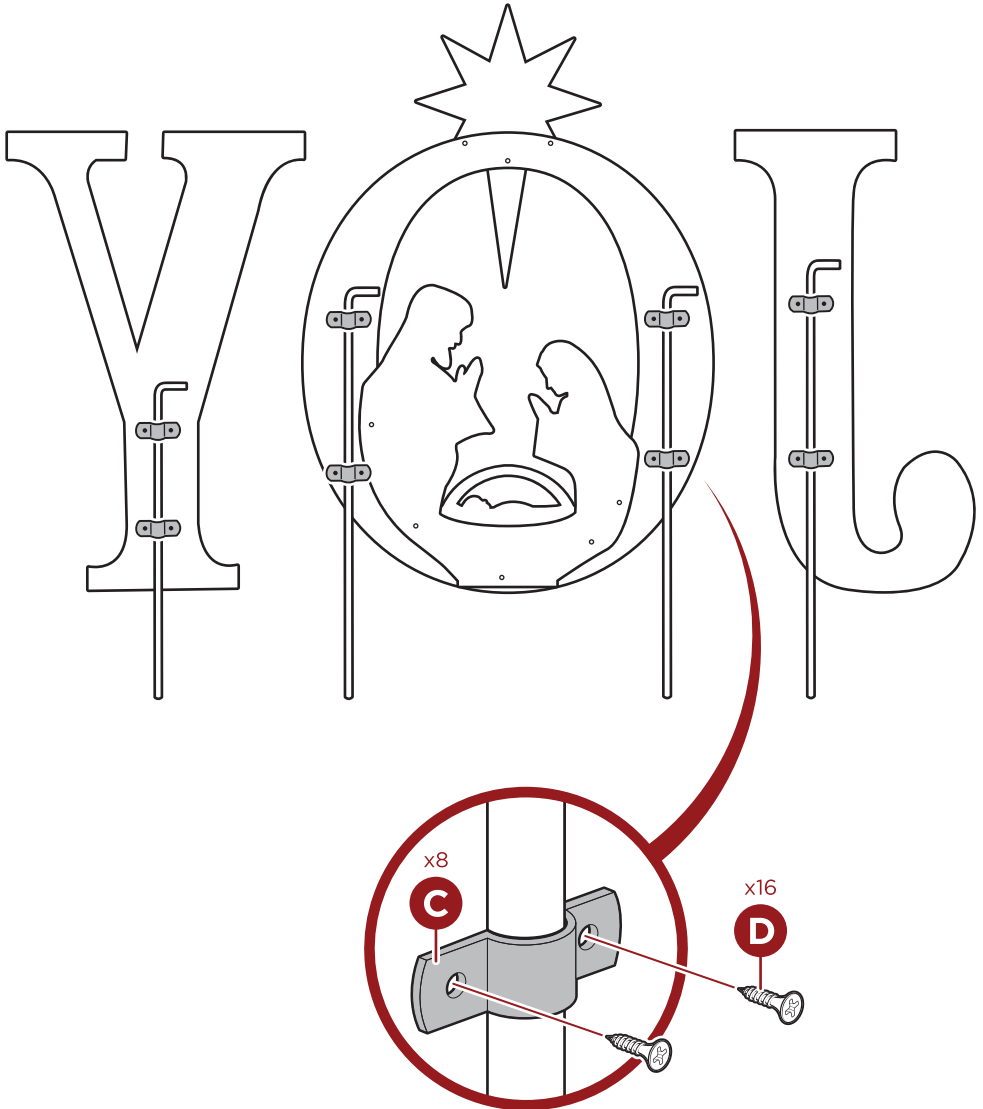


PRODUCT ASSEMBLY

5

Place the assembled set upright onto the ground and press down on the tops of the stakes.

NOTE: This product is intended for grass or dirt, do not attempt to sink into concrete.

If the ground is firm, use a mallet to tap the tops of the stakes to force them into the ground.

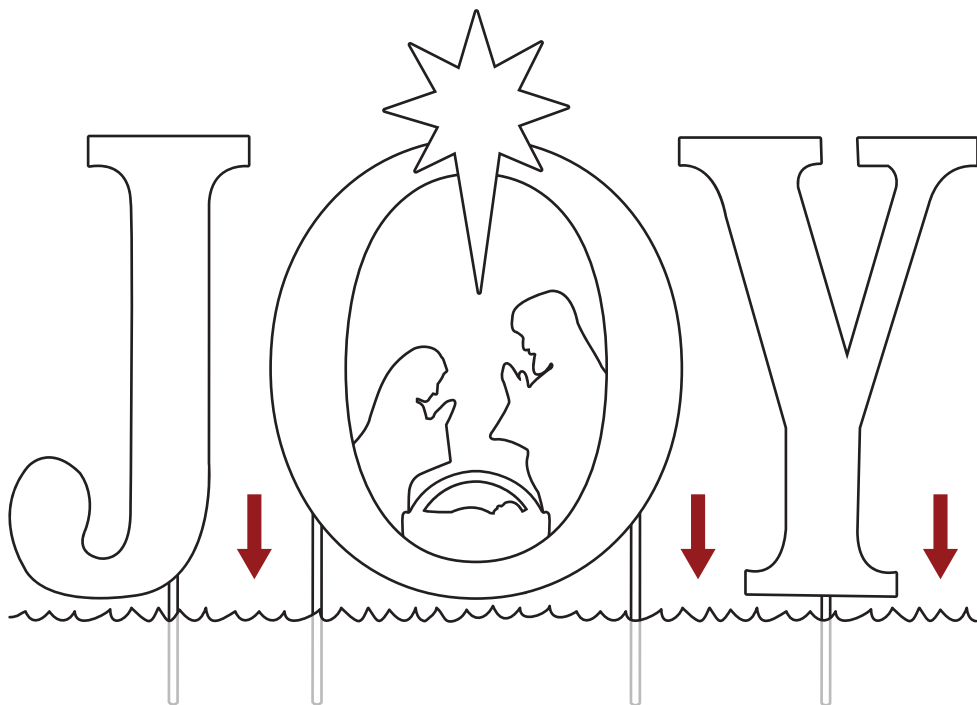



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.