

 

 

 
 
 



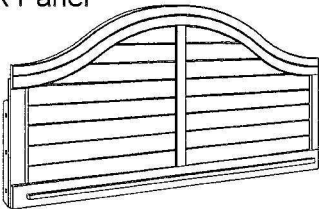


ASSEMBLY INSTRUCTION

PANEL DAYBED

A Back Panel  1 pc	B Side Frame (Left)  1 pc	C Side Frame (Right)  1 pc
D Front Rail  1 pc	E Slats  13 pcs	F JCBC Bolt M6 X 35mm  12 pcs
G Spring Washer 5/16"  12 pcs	H Flat Washer M8 x 16mm  6 pcs	I CSK Screw M4 X 32mm  20 pcs
J Allen Key M4 (Long)  1 pc	K 'I' Allen Key M4 (For power drill usage)  1 pc	Remark : You may need more than 2 person to assemble this.  2 person



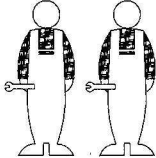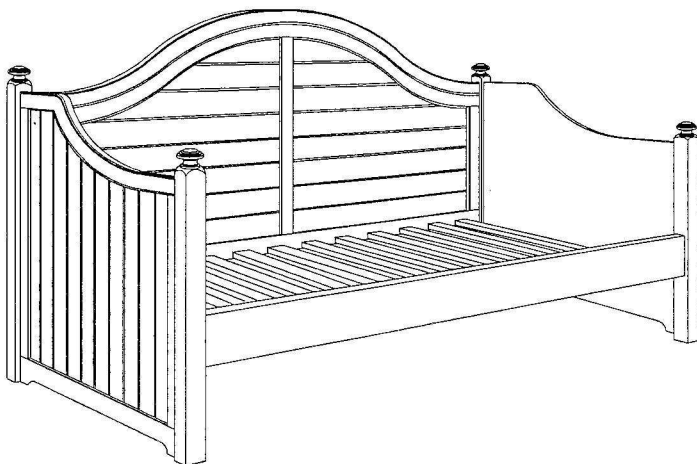This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

IMPORTANT NOTE :


1. Do not tighten all screws / bolts until all completely assemble.
2. Keep all hardware parts out of reach of children.

Remark :

You may need more than 2 person to assemble this.


1

Attached Side Frame (B) (Left) to Back Panel (A) by inserting JCBC Bolt (F) with Spring Washer (G) and Flat Washer (H) into provided holes. Tighten all bolts using Allen Key (J).

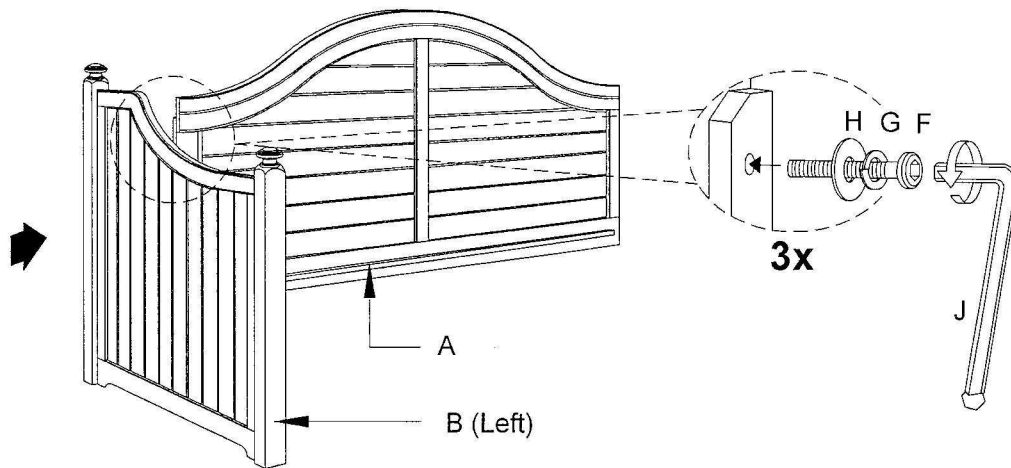


2

Attached Side Frame (C) (Right) to Back Panel (A) by inserting JCBC Bolt (F) with Spring Washer (G) and Flat Washer (H) into provided holes. Do not tighten the bolts. Insert Front Rail (D) to Side Frame (B) (Left). Repeat the same process to Side Frame (C) (Right). Then tighten all the bolts using Allen Key (J).

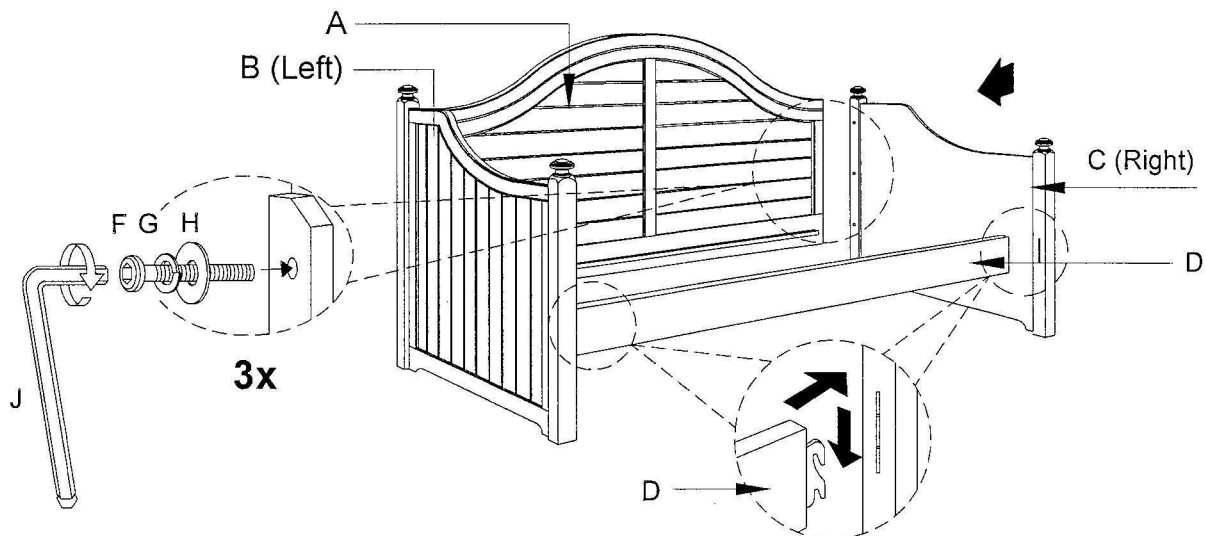

3

Place Slats (E) to the Back Panel (A) and Front Rail (D). Secure the Slats (E) with Spring Washer (G) and JCBC Bolt (F) and tighten using Allen Key (J) & CSK Screw (I) following the diagram below.

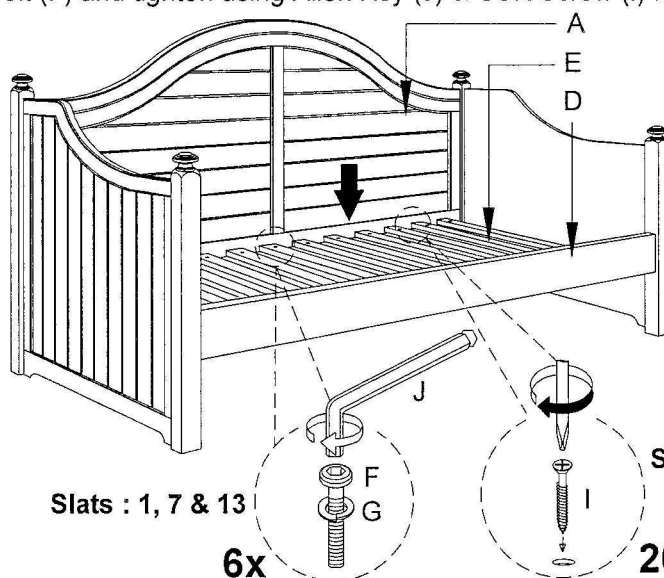

Slats : 1, 7 & 13

6x

Slats : 2, 3, 4, 5,
6, 8, 9, 10,
11 & 12

20x

1	•
2	•
3	•
4	•
5	•
6	•
7	•
8	•
9	•
10	•
11	•
12	•
13	•

*** Remark :**

Slats no. 1, 7 & 13 use JCBC Bolt (F) with Spring Washer (G).
Others use CSK Screw (I).

CLEANING & CARE

Treat surface with care. Surface is resistant to scratches but is not scratches resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.