

Important safety

Please read carefully

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



 
CAUTION: Hot surface – do not touch hot sections or heating components of the appliance.




WARNING: Keep the appliance away from flammable materials.

User manual

9 L dual air fryer

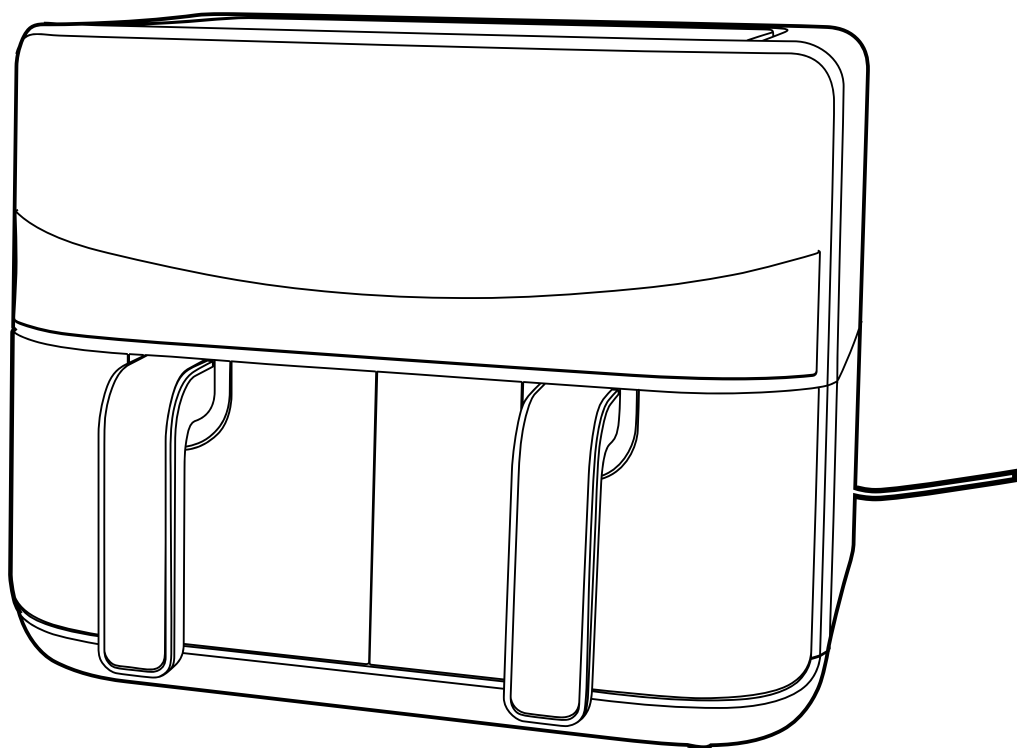

Description of parts

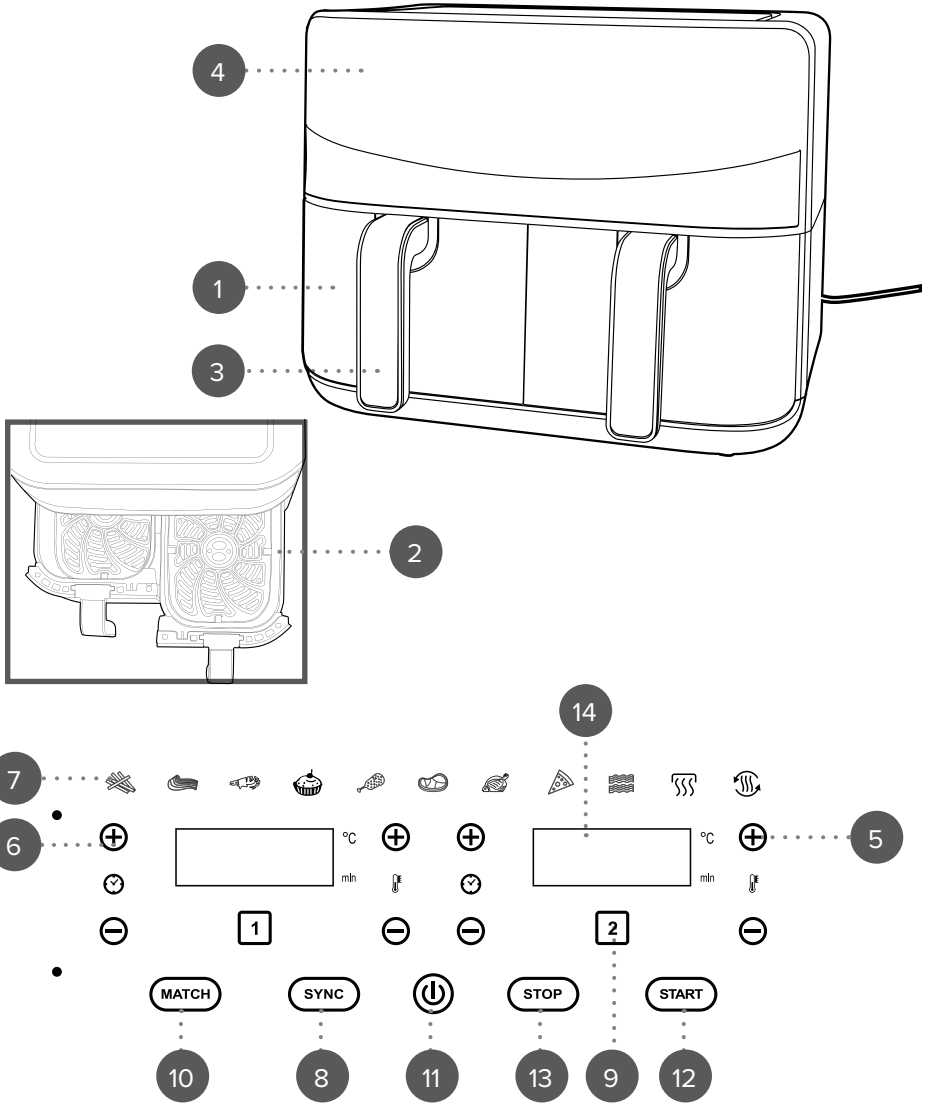 

1. Cooking compartment (qty. 2)
2. Non-stick coated cooking trays (qty. 2)
3. Cooking compartment handles (1 & 2)
4. Digital control panel
5. Temperature control buttons (+/-)
6. Time control buttons (+/-)
7. Function buttons
8. Sync Cook button
9. Compartment buttons (1 & 2)
10. Match Cook button
11. Power button
12. Start button
13. Stop button
14. LED display

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.

- Do not move the appliance whilst it is in use.
- Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.
- Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.
- Switch off the appliance and disconnect it from the mains power supply before changing or fitting attachments.
- Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote-control system, other than that supplied with this appliance.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- The outer surface or door may get hot during operation.



CAUTION: Hot surface – do not touch any sections or surfaces of the appliance that may become hot or the heating components of the appliance.



WARNING: Keep the appliance away from flammable materials.

Automatic switch-off

- The air fryer is fitted with an automatic switch-off. This may activate if the set cooking time has elapsed, causing the timer to sound and the automatic switch-off to activate, turning off the air fryer.



NOTE: If the air fryer needs to be turned off before the set cooking time has elapsed, switch off and unplug it from the mains power supply.

Dos and don'ts

 
DO:

Check that the cooking compartments are securely fitted before use. Only hold the cooking compartments by the cooking compartment handles. Take care when removing the cooking compartments, as steam may be emitted.

DON'T:

Invert the cooking compartments with the non-stick coated cooking trays still attached, as excess oil may collect at the bottom of the cooking compartment. Cover the air fryer or its air inlets, as this will disrupt the airflow and could affect the cooking results.

Fill the cooking compartments with oil or any other liquid.
Touch the cooking compartments during or straight after use, as they get very hot;

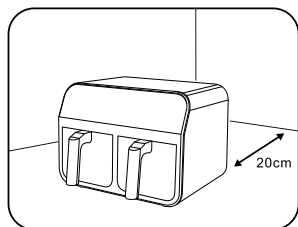

Care and maintenance

Before attempting any cleaning or maintenance, switch off and unplug the air fryer from the mains power supply and allow it to fully cool.

STEP 1: Wipe the air fryer main unit with a soft, damp cloth and dry thoroughly.

STEP 2: Clean the non-stick coated cooking trays and the cooking compartments in warm, soapy water, then rinse and dry thoroughly.

Do not immerse the air fryer main unit in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the air fryer or its accessories, as this could cause damage.



NOTE: The air fryer should be cleaned after each use.

Instructions for use

Before first use

STEP 1: Before connecting the air fryer to the mains power supply, wipe the air fryer main unit with a soft, damp cloth and dry thoroughly.

STEP 2: Clean the non-stick coated cooking trays and the cooking compartments in warm, soapy water, then rinse and dry thoroughly.

STEP 3: Place the air fryer main unit onto a stable, heat-resistant surface, at a height that is comfortable for the user.



NOTE: When using the air fryer for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the air fryer during use.

It is advised to run the air fryer without food for approx. 10 minutes before first use; this will prevent the initial smoke or odour from affecting the taste of the food.

Assembling the air fryer

 
STEP 1: Fit the non-stick coated cooking trays into the cooking compartments, checking that they are secure.

STEP 2: Slide the cooking compartments into the air fryer main unit, checking that the cooking compartment numbers match the display numbers.



NOTE: The air fryer comes preassembled. The cooking compartments should be closed securely before use, as not doing so will prevent the air fryer from working.

Using the control panel

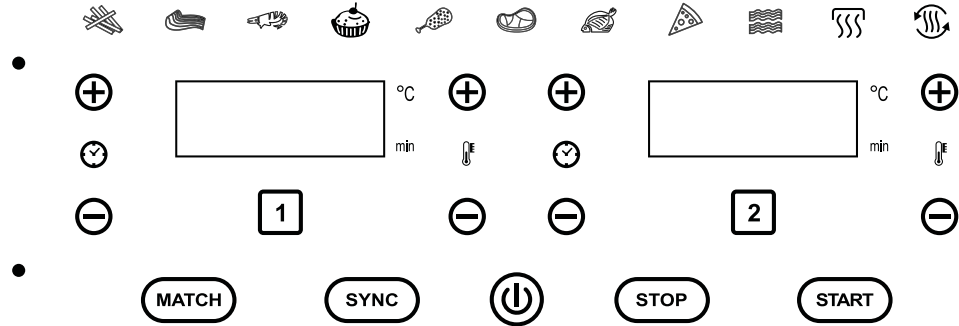

When the air fryer is plugged in and switched on at the mains power supply, the unit will beep and the power button will illuminate to indicate that it is being powered.

Tap the power button to switch on the air fryer. The LED display will show 'ON'.

Preset functions

To use a preset cooking function, first press '1' or '2' to select the cooking compartment, then press one of the function buttons. The display will cycle automatically between the preset time and temperature. These presets can then be adjusted using the time and temperature control buttons '+/-' as required. The time and temperature control buttons '+/-' may be held down in order to quickly adjust the time or temperature. Once time and temperature have been set, press **'START'** to begin heating. Time and temperature can be changed during use.

To stop the compartments, press **'STOP'**. To restart the program, press **'START'**.

Once cooking is complete and the preset time has elapsed, the timer will sound and the air fryer will switch off.

During cooking, the time and temperature can be adjusted at any time by tapping '1' or '2' and using the time and temperature control buttons '+/-'.

If the cooking compartment is removed during cooking, cooking will be paused; reinsert the cooking compartment to resume the cooking process.

To switch off the air fryer, press and hold the power button.

Manual function

The time and temperature can be set manually by pressing **'MANUAL'**. These settings can then be adjusted using the time and temperature control buttons '+/-' as required.

The control buttons may be held down in order to quickly adjust the time or temperature.

Once time and temperature have been set, press **'START'** to begin heating. Time and temperature can be changed during use.

Cooking functions

Icon	Function	Default temperature	Default time
	Chips	200 °C	30 mins
	Lamb	200 °C	15 mins
	Prawns	200 °C	20 mins
	Baking	180 °C	25 mins
	Chicken	200 °C	20 mins
	Steaks	200 °C	20 mins
	Fish	170 °C	25 mins
	Pizza	180 °C	15 mins
	Bacon	200 °C	12 mins
	Reheat	150 °C	20 mins
	Manual	200 °C	20 mins

Using the Sync Cook setting

When cooking different foods in each compartment with different times and temperatures, use the sync setting so that both compartments finish cooking at the same time.

Use the sync setting when using both cooking compartments to cook different foods; cooking will finish at the same time for both compartments.

STEP 1: Tap ‘1’ and set the required settings for the first cooking compartment, following the instructions in the section entitled ‘Using the control panel’.

STEP 2: Repeat for the second cooking compartment by tapping ‘2’.

STEP 3: Press ‘SYNC’; the button will illuminate to signal that the setting has been selected.

STEP 4: Press ‘START’ to begin cooking.

Using the Match Cook setting

Use the match setting when using both cooking compartments to cook the same foods; cooking will finish at the same time for both compartments.

STEP 1: Tap '1' and '2' then set the required settings for the second cooking compartment, following the instructions in the section entitled 'Using the control panel'.

STEP 2: Press 'MATCH'; the button will illuminate to signal that the setting has been selected.

STEP 3: Press 'START' to begin cooking.



NOTE: The power button will remain illuminated whilst the unit is plugged in.

Using the air fryer

STEP 1: Plug in and switch on the air fryer at the mains power supply; the air fryer will beep and the power button will illuminate to indicate that the unit is plugged in.

STEP 2: Tap the power button to switch on the air fryer; the LED display will show 'ON', indicating the air fryer is ready to be programmed.

STEP 3: Following the instructions in the section entitled 'Using the control panel'. Use the time and temperature control buttons '+/-' to increase or decrease the time or temperature as required.

STEP 4: Remove the cooking compartments by pulling them out of the air fryer using the handle. Position the cooking compartments onto a flat, stable, heat-resistant surface.

STEP 5: Place the ingredients into the non-stick coated cooking trays, then slide the cooking compartments back into the air fryer main unit to close it.

STEP 6: Use the digital control panel to set the cooking time and temperature as required for the ingredients. Time and temperature settings can also be set using the function buttons, which automatically cycle between time and temperature presets for cooking various foods when pressed. These presets can then be adjusted using the time and temperature control buttons '+/-' as required.

STEP 7: Some ingredients may require shaking halfway through the cooking time. Remove the cooking compartments from the air fryer main unit using the cooking compartment handles. Shake the cooking compartments gently, then slide back into the air fryer main unit to continue cooking.

STEP 8: Once cooking is complete and the preset time has elapsed, the air fryer will beep several times and switch off. Check whether the ingredients are ready; if the ingredients are not cooked, close the cooking compartments and replace back into the air fryer main unit. Use the digital control panel to adjust the cooking time accordingly. If the food is cooked, empty the contents into a bowl or onto a plate. Use a pair of heat-resistant tongs (not included) if the food is large or fragile.



NOTE: If the cooking time or temperature setting needs to be changed during use, use the time and temperature control buttons '+/-' as required. The air fryer will automatically adjust the settings.



CAUTION: Do not tip the food directly into a bowl or onto a plate, as excess oil may collect at the bottom of the cooking compartments and leak onto the ingredients or serving bowl. Exercise caution when opening and closing the cooking compartments during use, as they will become very hot.



WARNING: Nominal voltage is still present even when the air fryer is switched off. To permanently switch off the air fryer, switch off and unplug from the mains power supply.

Storage

Check that the air fryer is cool, clean and dry before storing in a cool, dry place.
Never wrap the cord tightly around the air fryer; wrap it loosely to avoid causing damage.

Specifications

Product code: EK6178

Input: 220–240 V ~ 50/60 Hz

Output: 2400 W



Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**
MADE IN CHINA.