 




bestchoiceproducts

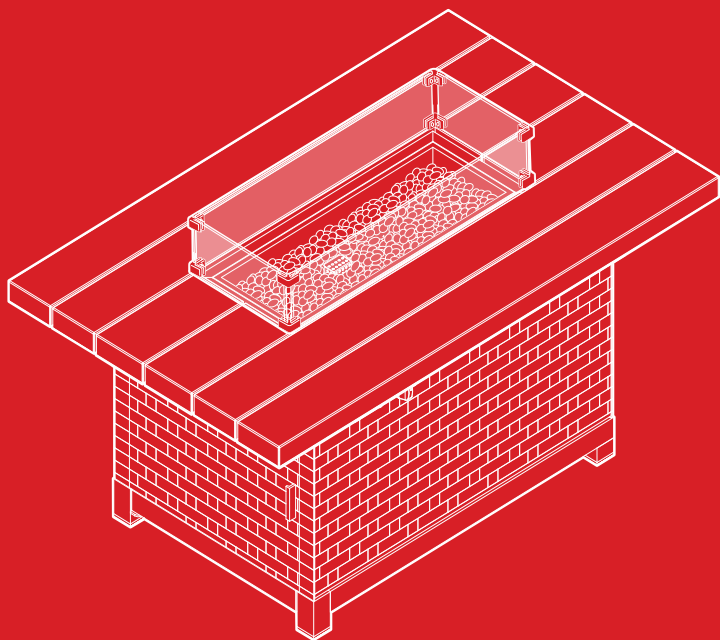

# INSTRUCTION MANUAL

---

Wicker Fire Pit Table



## **WARNING**

**Do not** use this product directly on a wood deck or near a side wall.

---

### **IF YOU SMELL GAS**

- Do not attempt to light appliance.
- Extinguish flames and disconnect tank.
- Move people away from the immediate area.

[bestchoiceproducts.com](http://bestchoiceproducts.com)



## **WARNING**

**Do not** allow the gas hose to contact the burner or fire bowl.

---

## **IF YOU SMELL BURNING RUBBER**

- Extinguish flames and disconnect the tank.
- Move people away from the immediate area.

[bestchoiceproducts.com](http://bestchoiceproducts.com)

## **NOTICE**

Please retain these instructions for future reference.

- For outdoor use only; do not use in a building, garage, or any other enclosed area.
- Fire pit operates at reduced efficiency in temperatures below 40°F or wind velocity higher than 10 mph.
- Only use this appliance on a hard and level surface such as concrete or rock.
- Do not use on plastic composite or artificial wood decks.
- Fire pit can be used with a propane tank or natural gas tank.
- Children are not allowed to operate this fire pit.
- Fire pit must be attended by adults at all times. Do not leave children and pets around a fire pit when in use.
- Do not stand on or use any part of this item as a step ladder.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Improper adjustment, installation, usage, and maintenance could result in an explosion and cause serious injury or property damage.
- Read and follow all warnings and instructions thoroughly before appliance assembly, service, and use.
- Failure to follow warnings and instructions may cause death, serious injury, or property damage.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

## **CALIFORNIA PROPOSITION 65**

 **WARNING:** This product can expose you to Carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

## **WARNING**

- This fire pit produces carbon monoxide which has no odor. Do not use in enclosed area.
- If you smell gas during operation, immediately shut off gas and extinguish flames.
- Do not use a flame to check for gas leaks.
- Do not use this fire pit under trees or near any other unprotected combustible area.
- Fire pit must have a minimum clearance of 72 inches above and 36 inches from the sides. Make sure area is clear and free from combustible objects/constructions.
- Do not connect to a remote gas supply.
- Do not use solid fuel or charcoal on this fire pit.
- Do not burn anything other than what is provided.
- Do not place clothing or flammable materials near the fire pit.
- Fire pit is not intended for cooking.
- Do not firmly tighten the screws until the item is completely assembled, this may result in damage to this product and personal injury.
- Do not place food or eat on the surface of fire pit.
- Be careful when igniting fire pit as flame may flare and cause injury.
- Do not pour water onto any part of the fire pit.
- Keep a safe distance from the fire pit when in use. Do not sit or rest hands/feet on fire pit.
- To avoid burns, do not touch or move any part of this fire pit when in use; wait until it has completely cooled.
- Do not breathe smoke from the fire pit and avoid getting smoke in your eyes.
- Do not alter this appliance. Any alteration can cause a safety hazard.
- Do not use any accessory or fitting other than original accessories and fittings.
- Do not allow the gas hose to contact the burner as this may result in a gas leak and possible explosion.
- Keep all electrical cords and hoses away from heated surfaces.
- Routinely check hoses for wear or abrasions. Do not use if hoses are damaged.
- Be aware that items stored under the fire pit will be subject to radiant heat and could be damaged.

## PROPANE TANK WARNINGS

- Make sure to organize fuel hose to prevent accidental tripping.
- Only use standard 20-pound propane tanks.
- Maximum gas supply pressure is 250 PSI.
- Do not fill tank more than 80% of its capacity.
- Do not use tank if any part of it is damaged; rust and dents can be dangerous.
- Propane tank must have a collar to protect the gas valve.
- Using too much propane gas may result in gas pooling and will not burn.
- Check for leaks by brushing a mixture of soap and water on all connections. If large bubbles form when gas is turned on, there may be a leak.
- If you smell gas:
  - Do not attempt to light appliance.
  - Extinguish flames and disconnect tank.
  - Move people away from the immediate area.
- Do not try to repair leaking tank. Contact a professional to repair or replace tank.

## TOOLS REQUIRED



ALLEN WRENCH  
(PROVIDED)



FLAT HEAD  
SCREWDRIVER



1 AAA BATTERY



1 PERSON  
ASSEMBLY



APPROXIMATELY  
45 MIN.  
ASSEMBLY

## HARDWARE

### 1 M6 WASHER



22 PCS

### 2 PLASTIC SPACER



1 PC

### 3 M6 x 15mm SCREW



4 PCS

### 4 M6 x 20mm SCREW



6 PCS

### 5 M6 x 25mm SCREW



2 PCS

### 6 M6 x 35mm SCREW



10 PCS

### 7 BRACKET



4 PCS

### 8 BRACKET WITH FOOT



4 PCS

### 9 BURNER SCREW



4 PCS

### 10 BURNER WASHER

 


4 PCS

## PARTS

**A**


LID



1 PC

**B**

 
TABLETOP



1 PC

**C**

 
LEFT PANEL

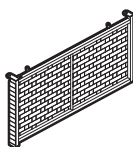

1 PC

**D**

 
BACK PANEL



1 PC

**E**

 RIGHT PANEL

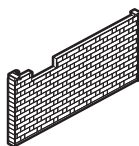

1 PC

**F**


SUPPORT



1 PC

**G**

 
TABLE FRAME



1 PC

**H**

 
TANK SEAT  
FRAME



1 PC

**I**

 DOOR



1 PC

**J**

GLASS BEADS



1 SET

**K**

 
COVER



1 PC

**L**


GLASS SHORT  
PANEL

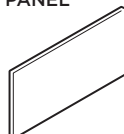

2 PCS

**M**

 
GLASS LONG  
PANEL



2 PCS

**N**

 BURNER UNIT

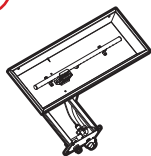


1 PC

## PRODUCT ASSEMBLY

 
1

Attach part D back panel to part E right panel with two part 6 screws and two part 1 washers.

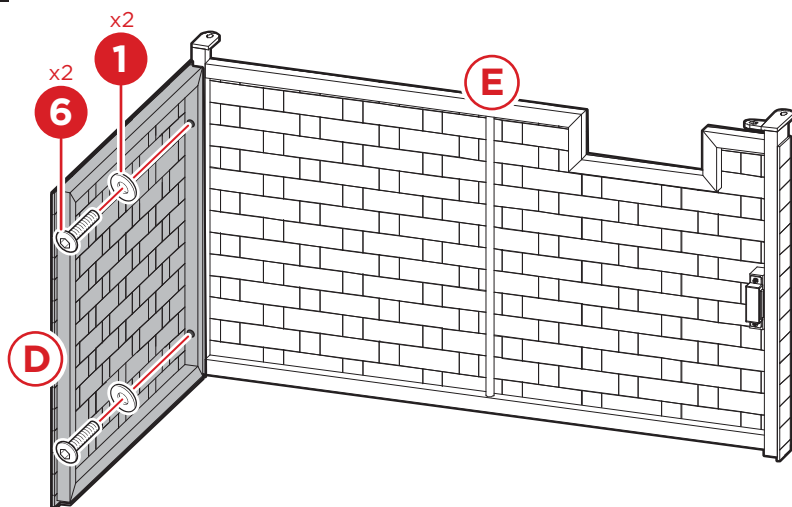

2

 
Attach one side of the part G table frame with two part 6 screws and two part 1 washers.

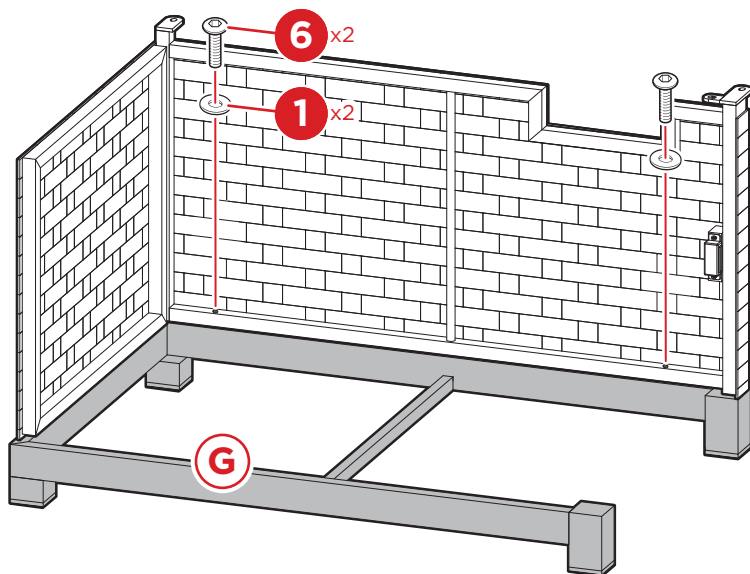

## PRODUCT ASSEMBLY


3

 Attach part C left panel with four part 6 screws and four part 1 washers.

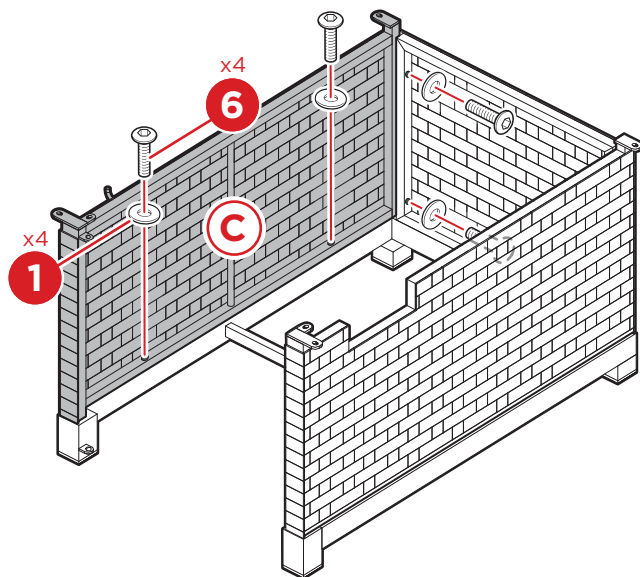

4

 Attach part F support with four part 3 screws and four part 1 washers, two screws/washers per side.

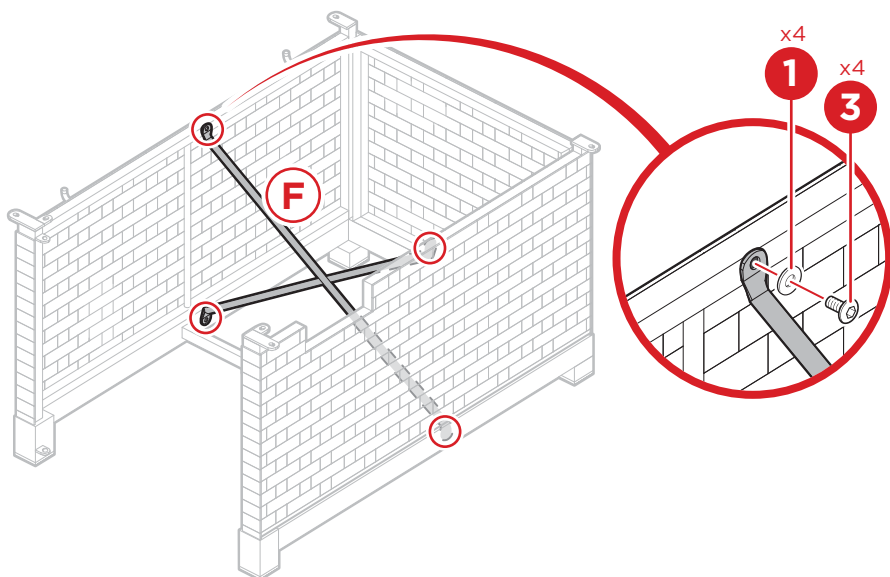




## PRODUCT ASSEMBLY


5

 Attach part H tank seat frame to the part I door with two part 6 screws and two part 1 washers.

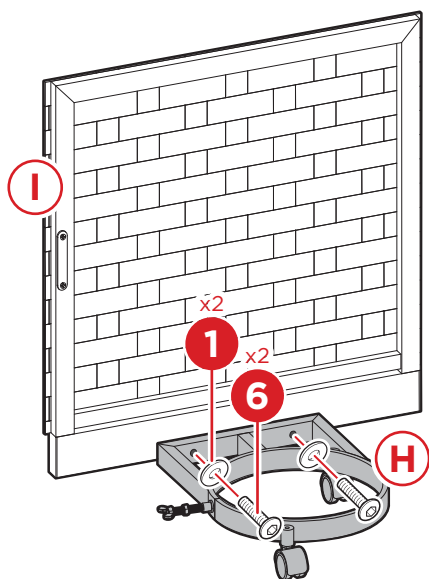

6

 Attach the top of the door with a part 5 screw and part 1 washer. Attach the bottom of the door with a part 2 spacer, part 5 screw, and part 1 washer.


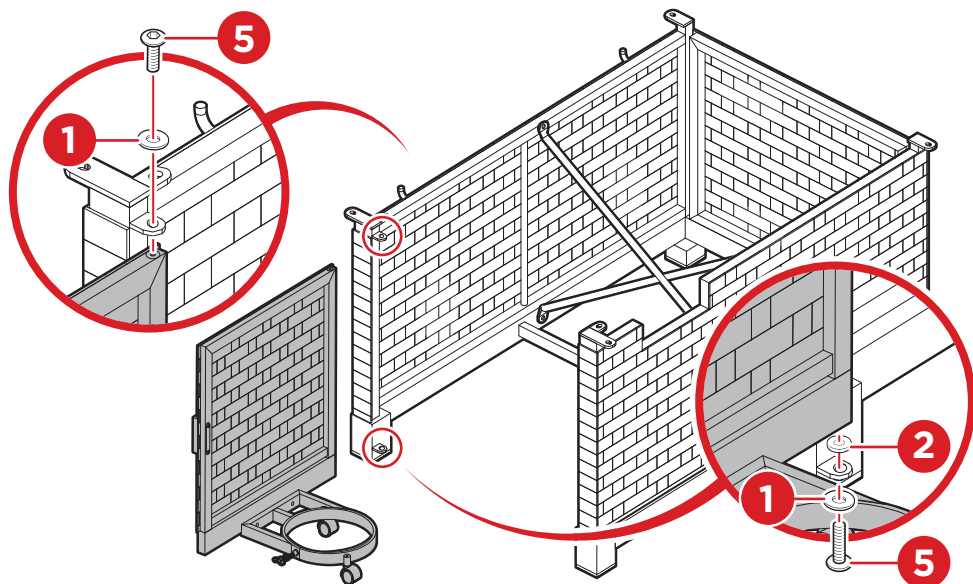


## PRODUCT ASSEMBLY

7

Carefully flip the table base over and attach it to the part B tabletop with six part 4 screws and six part 1 washers.

  Flip table onto its base.

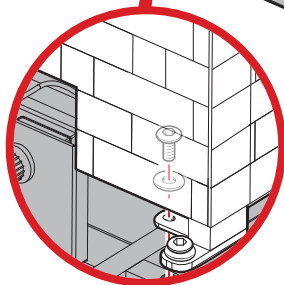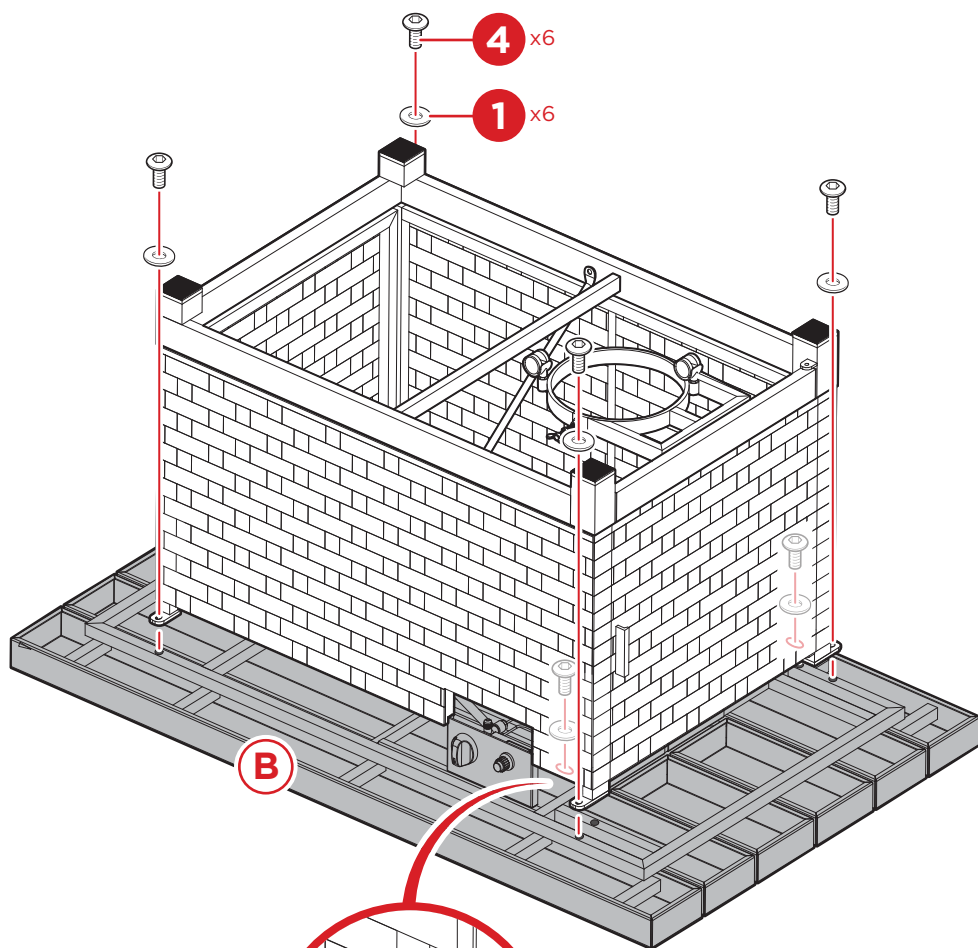

UNDERNEATH




If necessary, open door to fasten screws inside the table base.

## PRODUCT ASSEMBLY

 
8

Locate the part N burner unit and insert into the tabletop cavity. Make sure the burner control panel fits in the opening on the side of the table (see diagram below)

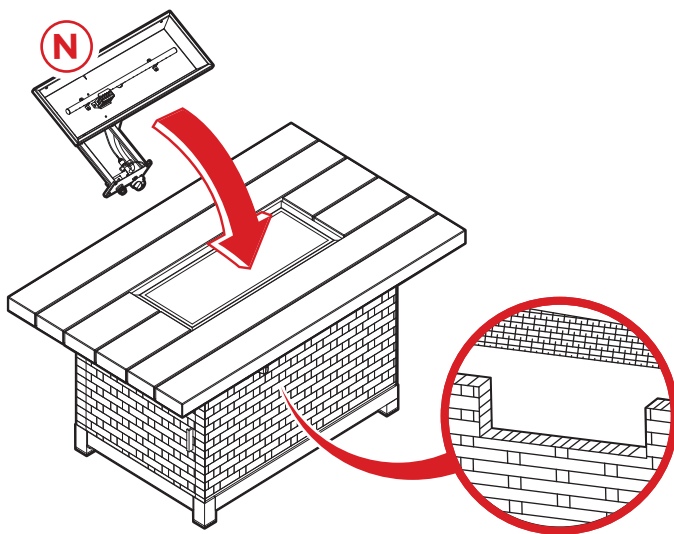

9


 
Secure the burner unit with four part 9 burner screws and four part 10 burner washers.

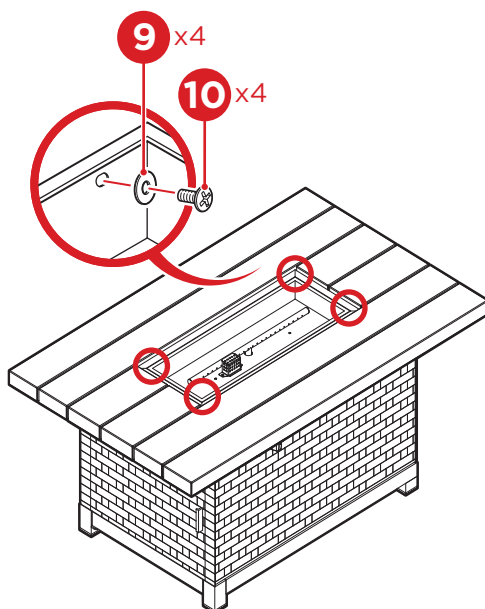

## PRODUCT ASSEMBLY



10

  Slide four part 8 brackets with feet onto two part L glass short panels. Secure the brackets to the short panels by tightening four attached screws.

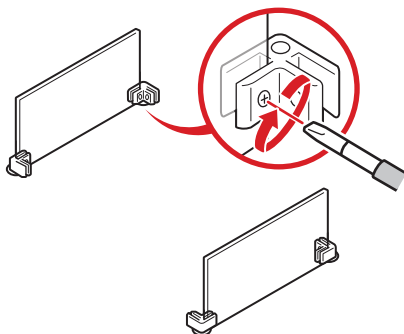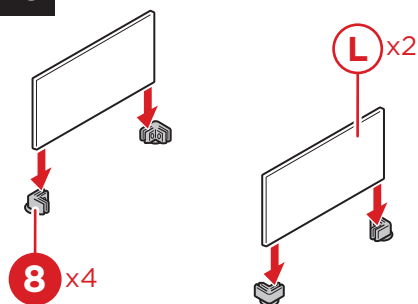



11

  Slide two part M glass long panels onto the brackets. Secure the brackets to the long panels by tightening four attached screws.

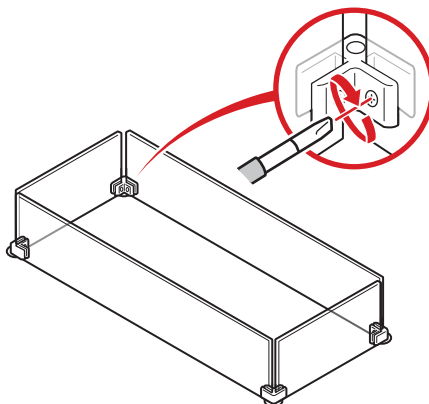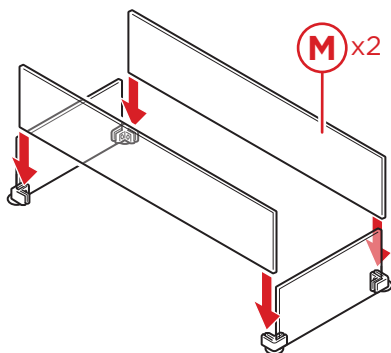

12

  
Slide four part 7 brackets onto the top of the glass panels. Secure the brackets by tightening eight attached screws.

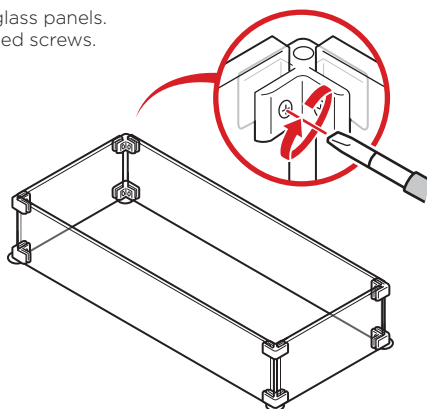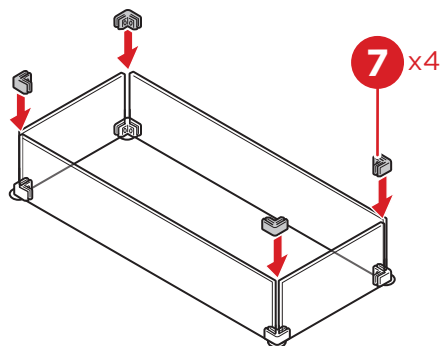

## PRODUCT ASSEMBLY

13

 
Place the part J glass beads (see Placing Glass Beads section) and glass panels.

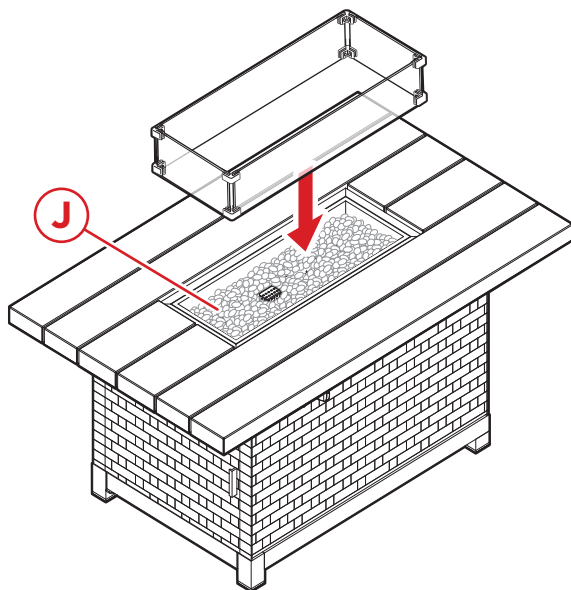

14


Place part A lid.

 **NOTE:** Hang lid on hangers when not in use.

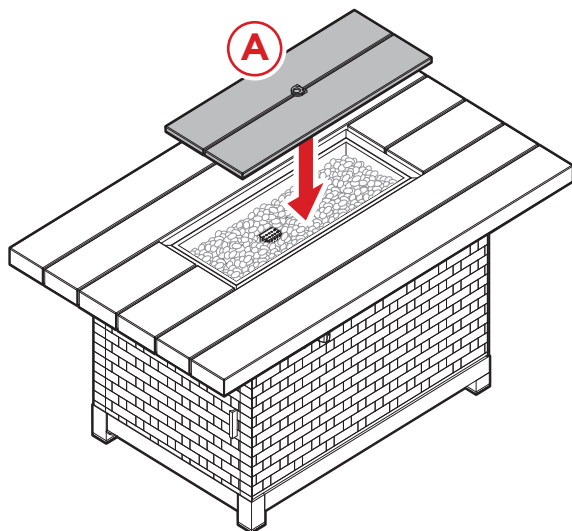


## DIAGRAM

 **NOTE:** Hang lid on hangers when not in use.

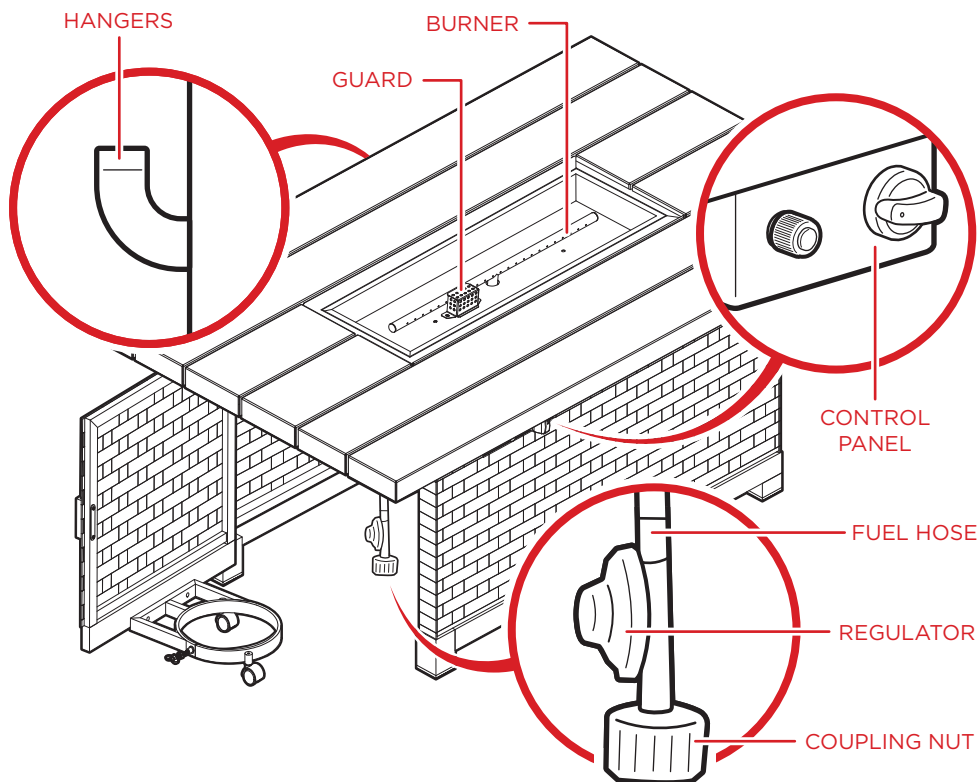

## PLACING FIRE GLASS

 - Place fire glass in fire pit and spread them according to your preference.
  - You may place fire glass on burner but do NOT cover the guard.
- Excessive fire glass will suffocate the flame.

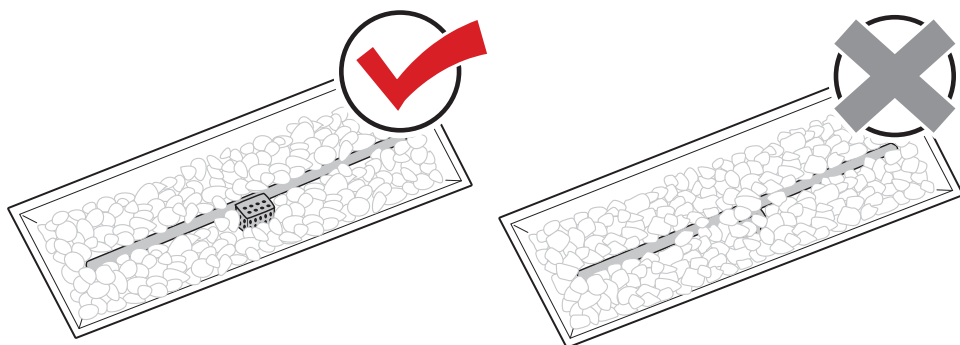


## INSTALLING PROPANE TANK

1

**NOTE:** Only use standard 20-pound propane tanks.


Open door and place propane tank on the tank seat frame. Turn wingnut clockwise to secure tank.

 Make sure release valve on tank is firmly screwed shut.

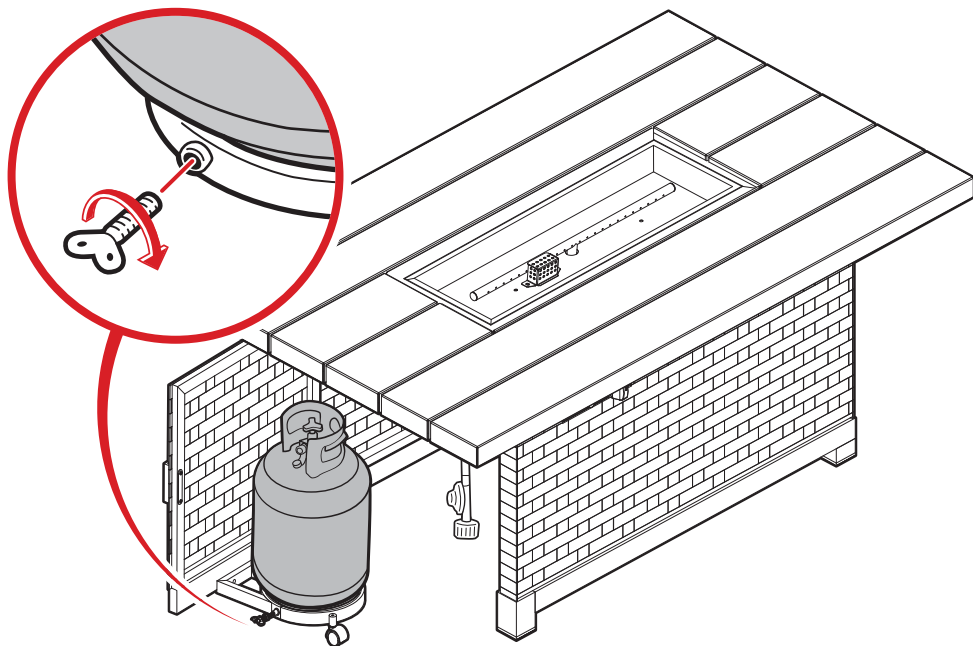

2

 
Attach fuel hose regulator to the output of the tank by turning the coupling nut clockwise.

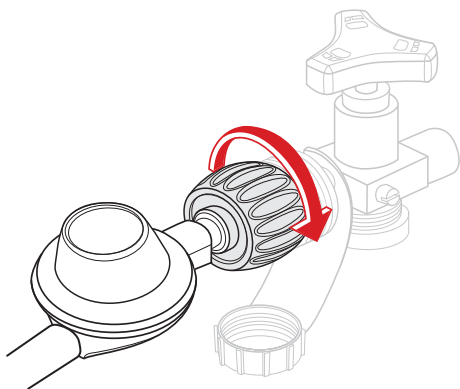

3

Turn release valve on tank counterclockwise to release gas.

 
Close door. If door does not close, readjust position of tank and hose until door closes.

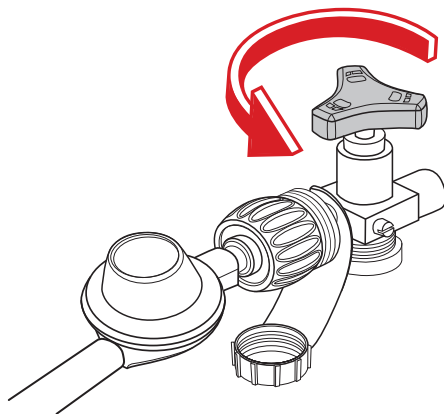


## INSTALLING BATTERY

1. Unscrew igniter button.
2. Insert AAA battery with the positive side facing outwards.
3. Replace igniter button.

 **NOTE:** If the burner is not lighting, you may need to replace the battery in the igniter.

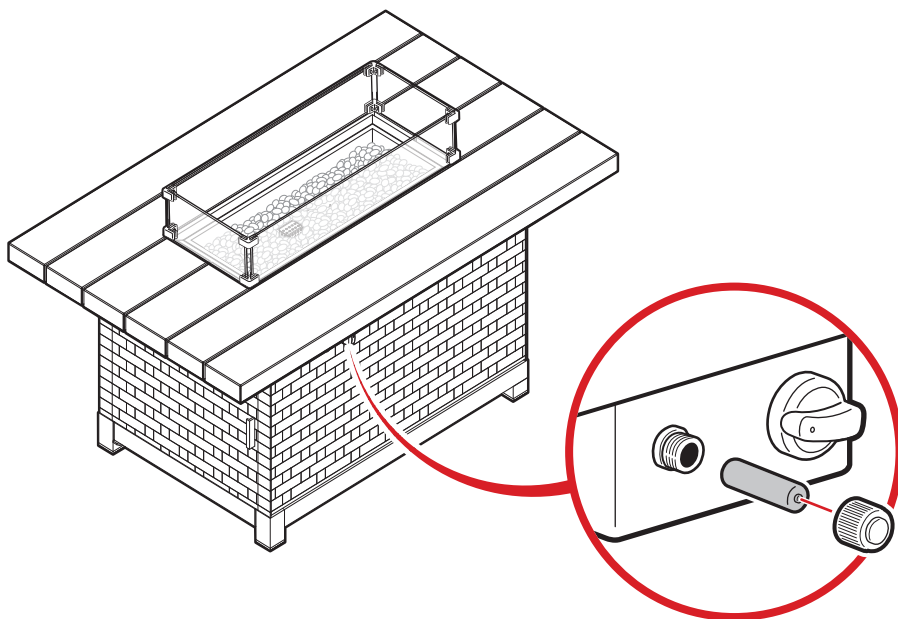

## CONTROL PANEL

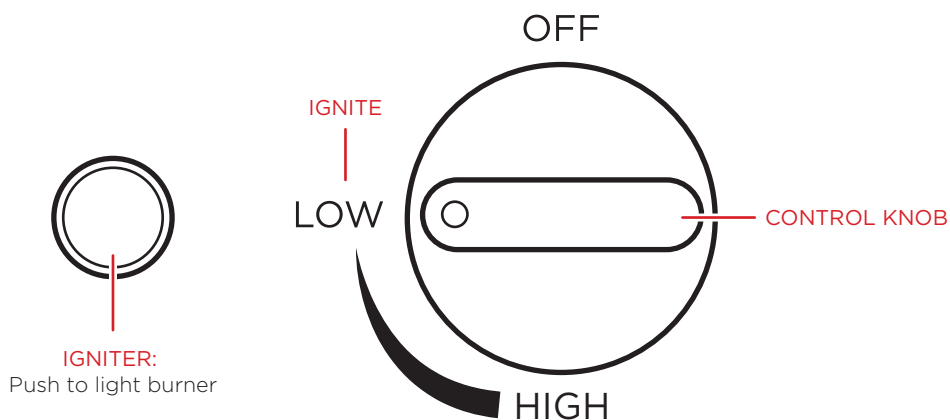 



## OPERATING INSTRUCTIONS

**NOTE:** Before use, inspect burner, propane tank, and connectors for damage, debris, obstructions, or dirt. Do not operate if there is any blockage.

1. Push and turn control knob counterclockwise to low/ignite.
2. Press the ignitor button repeatedly to light burner.
  - If flames do not ignite after 45 seconds, turn off, wait 5 minutes, and try again.
  - If necessary, keep control knob pushed in while pressing ignitor button.
  - If necessary, carefully light burner with a match or lighter. When lighting, do not push and hold control knob for more than 10 seconds.
3. Adjust flames with the control knob.
4. When finished, push and turn control knob clockwise to off position. Place lid to cover glass beads.
5. Turn valve on propane tank clockwise to turn off gas flow.

## CLEANING

- Make sure fire pit is completely cool before cleaning or storage.
- Use a soft brush or cloth to wipe stains and dirt.
- If necessary, clean with mild detergent and a soft cloth/sponge.
- Thoroughly dry fire pit after cleaning.
- Do not submerge control panel or burner assembly in water.
- Do not use petroleum-based or abrasive cleaners as it may damage the finish.
- Do not use rough or harsh sponges/brushes.
- Do not clean fire pit in a self-cleaning oven.
- Do not enlarge burner holes when cleaning burner.

## STORAGE

- Allow fire pit to cool 10 minutes before storage.
- Disconnect propane tank when putting fire pit in storage. Do not store propane tank in the vicinity of the fire pit.
- Do not store propane tank in temperatures over 120°F.
- Place cover on fire pit to protect from harsh weather.
- Do not store in direct sunlight.
- Do not store/use gasoline, or any other flammable vapors or liquids, in the vicinity of the fire pit.
- It is recommended that the fire pit is stored indoors during winter.
- If fire pit is stored indoors, disconnect and leave propane tank outdoors.
- For extended storage, remove the battery from the ignitor.

## TROUBLESHOOTING

| PROBLEM   | REASON  | SOLUTION                           |
|---|---|------------------------------------|
| Burner not lighting with igniter                          | Guard obstructed                                  | Clear guard of obstructions        |
|   | Burner wet  | Dry burner                         |
|   | Igniter battery dead                              | Replace battery in igniter         |
| Burner does not light                                     | Propane tank is empty                             | Replace/refill tank                |
|   | Coupling nut loose                                | Fully tighten coupling nut         |
|   | Bent hose   | Straighten hose                    |
|   | Burner holes obstructed                           | Remove obstructions or clean holes |
|   | Control knob off                                  | Turn control knob on               |
| Emits a lot of black smoke                                | Bent hose   | Straighten hose                    |
|   | Burner holes obstructed                           | Remove obstructions or clean holes |
|   | Dirt or film on burner                            | Clean burner                       |
| Drop in gas flow, reduced flame height                    | Propane tank is empty                             | Replace/refill tank                |
|   | Temperature less than 40°F, tank less than ¼ full |                                    |
| Irregular flame pattern, or does not run length of burner | Burner holes obstructed                           | Remove obstructions or clean holes |
| Flames blow out   | Propane tank is empty                             | Replace/refill tank                |
|   | High winds  | Turn control knob to high          |
| Flames lose heat in cold weather                          | Ice buildup on propane tank                       | Replace tank                       |

Earn points while you shop. Join today!

# bestchoiceproducts **rewards**

**Join | Earn | Redeem**

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

[bestchoiceproducts.com](https://bestchoiceproducts.com)



# HELP CENTER



Question about your product? We're here to help. Visit us at:

[help.bestchoiceproducts.com](http://help.bestchoiceproducts.com)



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

## PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.



## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.