

# INSTRUCTION MANUAL

4-Door Elevated Storage Cabinet



145.3 LBS TOTAL CAPACITY



61.7 LBS (EACH) CAPACITY CAPACITY



26.4 LBS

15.4 LBS CABINET TOP BOTTOM BOARD SHELF (EACH) CAPACITY



**ASSEMBLY** 



(!) NOTICE

Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- To prevent swelling or warping, wipe away any excess water on the surfaces of the product
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for indoor use only.
- This product is intended for residential use only.

#### **TOOLS REQUIRED**



 




 
#### **HARDWARE**

















## HARDWARE




























#### **PARTS**

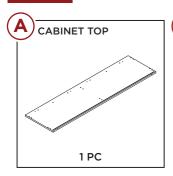


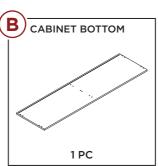

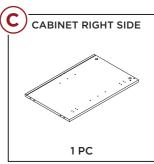


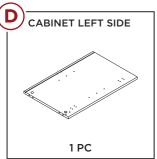

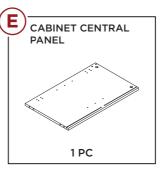

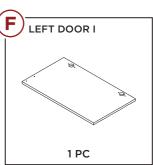


## PARTS

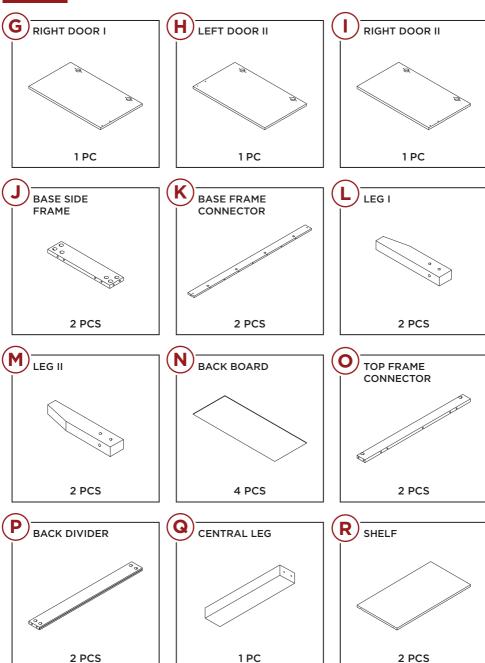

1


Locate the part A cabinet top and insert six part 1 cam bolts, set aside.


Locate the part  $\bf C$  and part  $\bf D$  cabinet sides and insert three part 1 cam bolts into each, six cam bolts total.

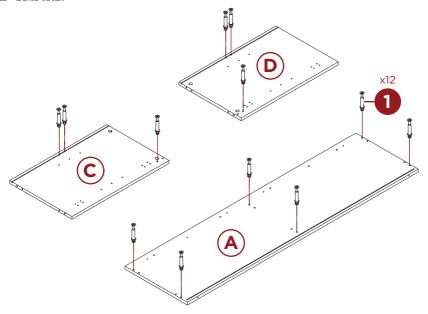



2

Locate the **part E cabinet central panel** and insert three **part 1 cam bolts** into each side of the panel, six cam bolts total.

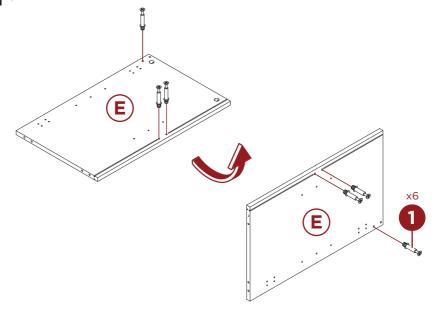

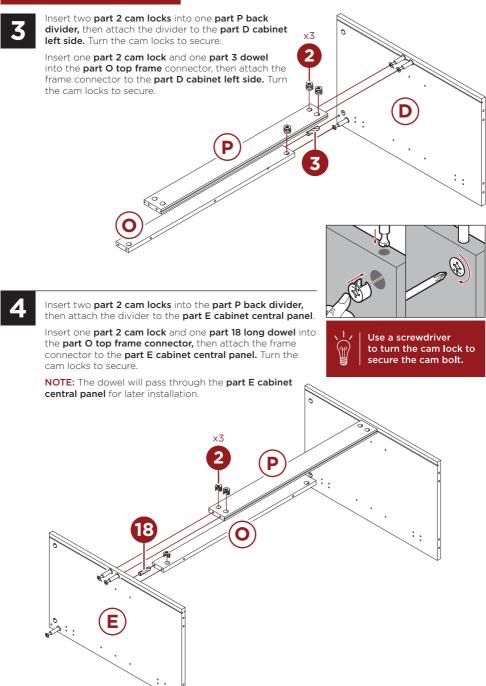

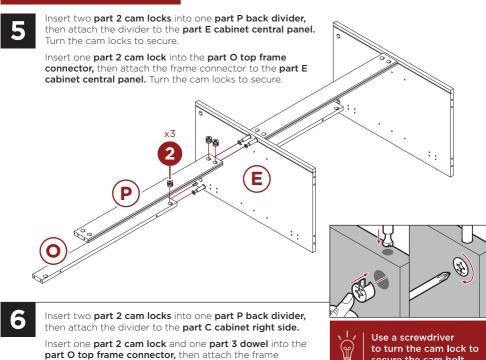


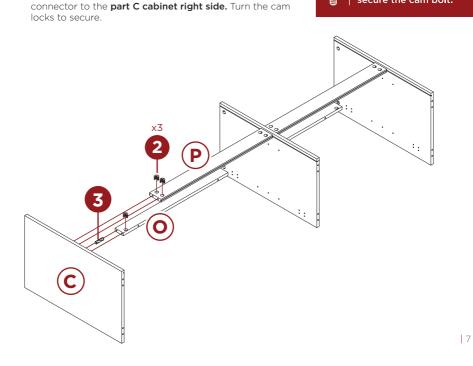

secure the cam bolt.


7

Slide two part N back boards into the designated slots between the part E cabinet central panel and the part D and part C cabinet sides.

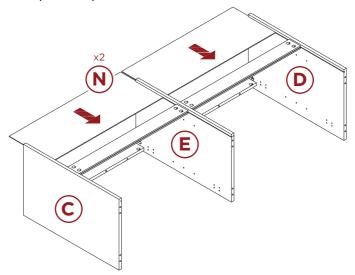

8

Insert two part 3 dowels each into the part D cabinet left side, part C cabinet right side, part E cabinet central panel, and both the part O top frame connectors, ten dowels total.

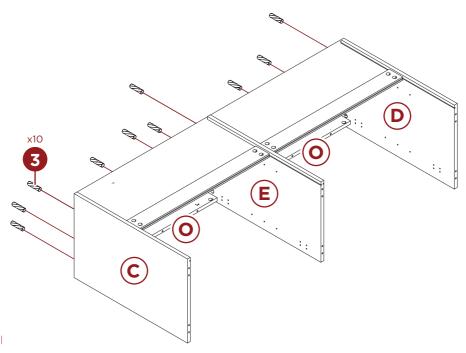




Insert six part 2 cam locks into the part D and part C cabinet sides and the part E cabinet central panel, two cam locks per side.

Attach the part A cabinet top to the part D and part C cabinet sides, and part E cabinet central panel, then turn the cam locks to secure.

Attach the part A cabinet top to the part O top frame connectors with six part 17 screws, three screws per frame connector.

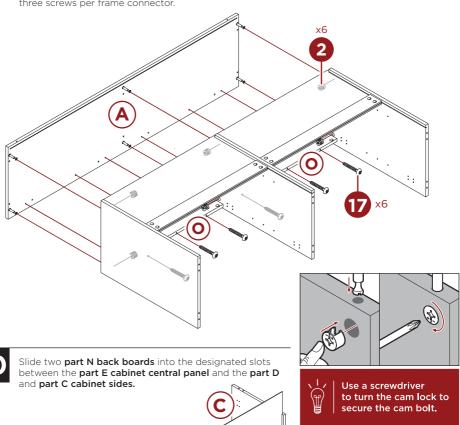


D C Cabinet sides.

11


Locate the part L and part M legs and insert two part 1 cam bolts each, eight cam bolts total.

Locate the part B cabinet bottom and insert twelve part 1 cam bolts.

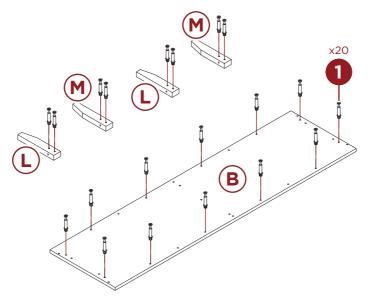

12


Locate the part Q central leg, then screw the part 13 central leg foot into the bottom. Attach the part Q central leg to the part B cabinet bottom with two part 11 screws.

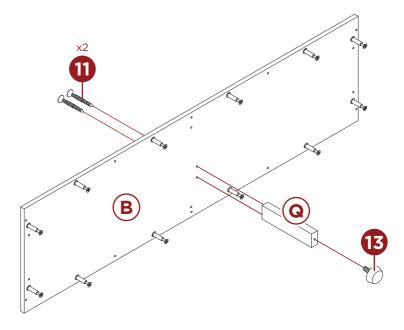


13

Flip the assembly upside down, then insert two part 3 dowels each into the part D and part C cabinet sides, and the part E cabinet central panel, six dowels total.

Attach the part B cabinet bottom to the part D and C cabinet sides and the part E cabinet central panel with six part 4 screws.

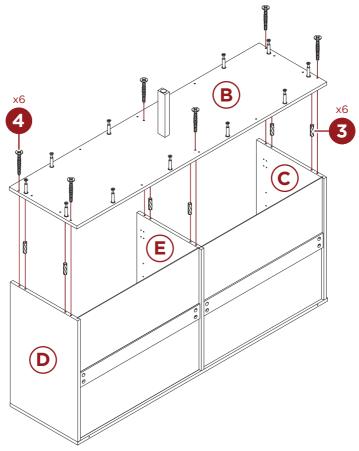


Insert four part 2 cam locks into one part J base side frame, then attach one part L and one part M leg. Turn the cam locks to secure, then repeat to assemble a second leg set.

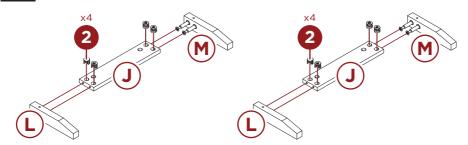


15

Locate the two part K base frame connectors then insert four part 9 barrel nuts, two nuts per connector, taking care to align the fastener hole with the predrilled holes in the sides of the frame connector.

Attach the part L and part M legs to the part K base frame connectors with four part 9 barrel bolts. Cover each barrel bolt with one part 19 barrel bolt covers.

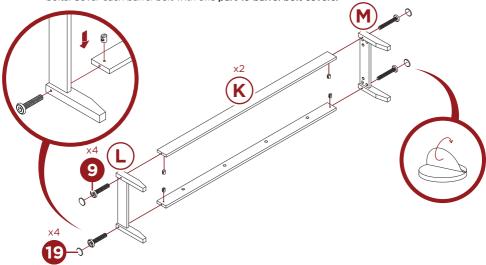



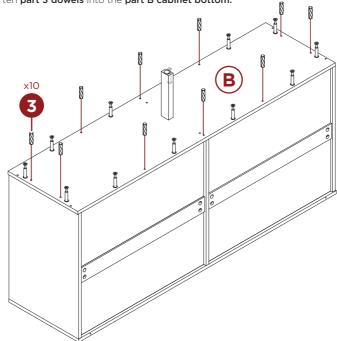



Insert four part 2 cam locks each into the part K base frame connectors, eight cam locks total.

Insert two part 2 cam locks each into the part J base side frames, four cam locks total.

Attach the base frame assembly to the part B cabinet bottom, then turn the cam locks to secure.

Place four part 16 foot sliders onto the bottom of the part L & M legs.


x12 Use a screwdriver

to turn the cam lock to secure the cam bolt.

18

Locate the part F & I doors, then attach two part 15 door handle with four part 6 screws, two screws per door handle.


Attach two part 7 hinges to each door with eight part 12 screws, two screws per hinge.

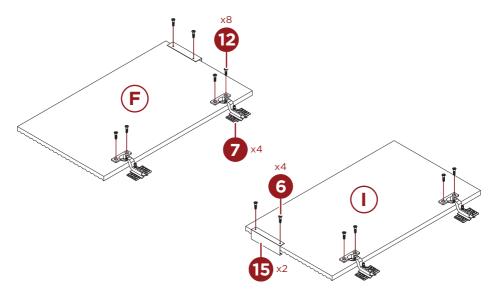

19


Locate the part G & H doors, then attach two part 15 door handle with four part 6 screws, two screws per door handle.

Attach two part 8 hinges to each door with eight part 12 screws, two screws per hinge.

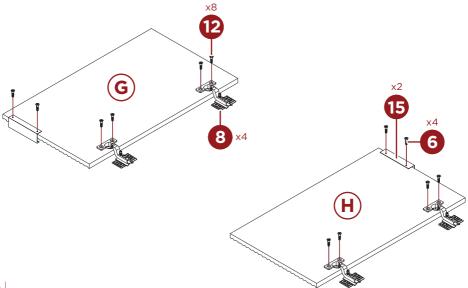



Stand the cabinet assembly upright, then attach **part F & I doors** by securing the **part 7** hinges to the cabinet side with sixteen **part 12 screws**, four screws per hinge. Repeat to attach the **part G & H doors**.

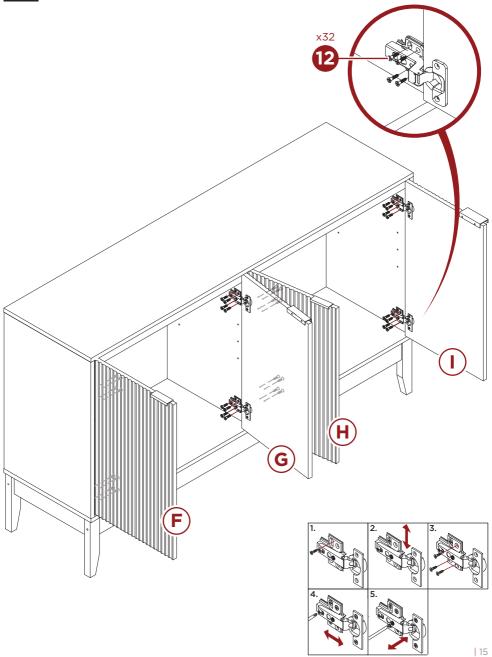




Insert eight part 5 shelf supports into the part D & part C cabinet sides and part E cabinet central panel at your desired height.

**NOTE:** Be sure the shelf supports sit parallel to properly install the shelf.


Slide two part R shelves onto the part 5 shelf supports.

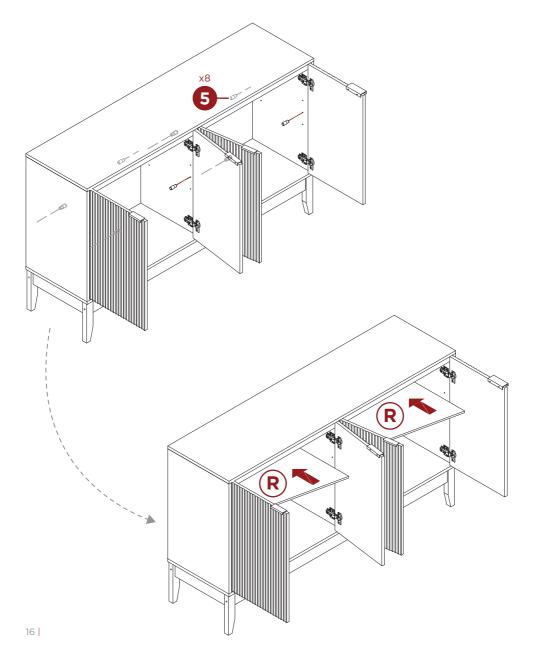




Secure the part N back boards with sixteen part 14 back screws and guides.

Attach the part 10 mounting straps to the part A cabinet top with the included mounting screw.

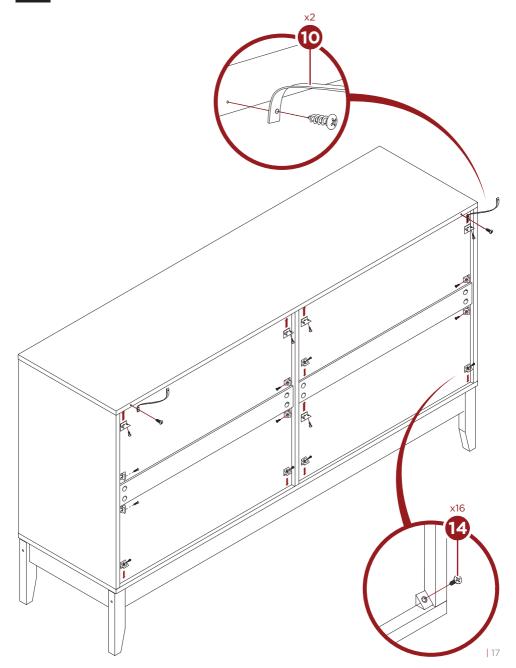

#### **WALL MOUNTING**


- 1. Select an appropriate location, then mark two spaces on the wall using the **part 10 mounting straps** as guides. Use a drill on the marked spaces.
- 2. Insert two included wall anchors into the new holes in the wall. Overlap the holes with the mounting straps, then attach the cabinet to the wall by drilling two part 4 wood screws through the part 10 mounting straps and into the wall anchors.

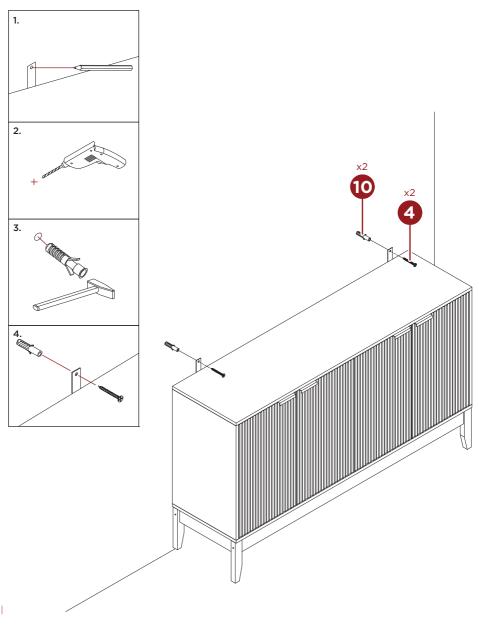


## DOOR ALIGNMENT
  
#### If your door is too low or too high...









Loosen the height screws, then move the door up or down to make it level.

#### If you need to adjust the depth of the doors...



 


 


Adjust the in-and-out screws until the door is aligned with the side of cabinet.

#### If the space between your doors is off...



 

 

Loosen the side-to-side screws, then screw counter-clockwise to make the gap wider or clockwise to close any gaps.



Question about your product? We're here to help. Visit us at:

#### help.bestchoiceproducts.com







**Product Inquiry** 







Returns & Refunds

#### PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

# **△WARNING**

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.