


# QUICK START

## SETUP GUIDE

### 1. Remove Shipping Bolts

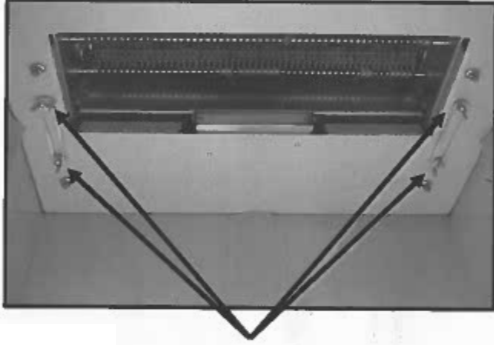

The shipping wing-bolts must be removed before operation. To access the wing-bolts, open the cabinet door and remove the waste bin(s). Make sure the machine is unplugged from any wall outlet before proceeding:

The wing-bolts are fixed to the underside of the cutting head for shipping, and must be removed by turning them out by hand.

Four wing-bolts are used on the 727 CS, 717 OS, 707 PS, 818 HD, 808 MS shredders and six wing-bolts are used on the 747 CS.

### 2. Prepare Automatic Oiler



This shredder is equipped with an automatic oiling system. It is designed to pump oil onto the cutting blades at specific intervals. Please make sure the oil bottle does not run out of oil.

#### Preparing the Oiler:

Mount the metal holder containing a prefilled oil bottle to the side of the shredder. Insert the clear hose into the top of the bottle and turn the shredder on.

#### Priming the Oiler

Priming must be done before the first use, and whenever the shredder runs out of oil. To begin, press and hold the reverse (REV) button for 5 seconds, then release it. The shredder will begin the priming process and after 1 minute, it will be ready for use.

