


WALL SCONCE

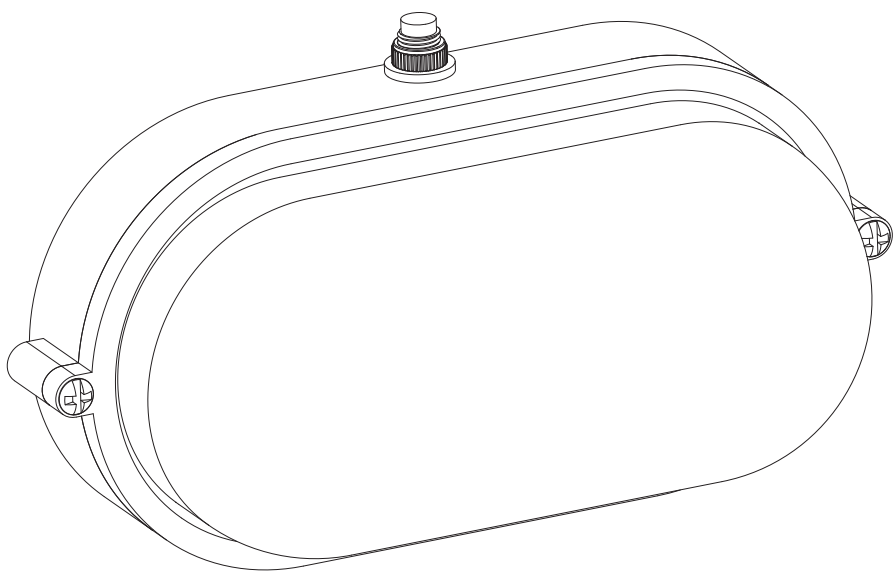

Model No.	Dimension (W*H*E)	Finish	Input Volt.
8401-8-PC	8-1/4"*4-5/8"*3-1/8"		120V 60HZ
8401-11-PC	11"*6-3/4"*4-1/4"		120V 60HZ

READ AND FOLLOW SAFETY INSTRUCTIONS

WARNING: Turn off the main power at the circuit breaker before installing and servicing the fixture to prevent possible injury from electric shock.

CAUTIONS:

1. All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards.
2. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.
3. Use minimum 90°C supply conductors.
4. All parts must be used as indicated in these instructions. DO NOT substitute any parts, leave parts out or use any parts that damaged. Failure to follow instruction could invalidate safety listing and warranty of this fixture.
5. Carefully hold the fixture, do not apply pressure to the fixture body, glass shade is fragile handle with care.

Hardware Included:



PREPARATION

1. Turn off the power at circuit breaker and remove existing fixture and mounting crossbar.
2. Unpack new fixture and remove all parts on a clean area. Be sure not to lose any small parts and mounting screws necessary for installation.

INSTALLATION

Step 1. Making wire connections

- Thread the dental tube(11) into the appropriate threaded holes of the mounting plate(3) with hex nut(19), but do not tighten the hex nut(19).
- Feed the fixture lead wires all the way through the center of the dental tube(11) on the mounting plate (3).
- Pull the power supply wires out from the outlet box(1).
- Make wire connections by using the provided wire nuts(7).
Black(L) supply wire (5) to the black fixture wire (9).
White(N) supply wire (4) to the white fixture wire(8).
Connect the fixture ground wire(10) to the supply ground wire(6).
Wrap all wire connections with electrical tape for secure connection if needed.
- Tuck wire connections neatly back into the outlet box.

Step 2. Attaching mounting plate

- Attach the mounting plate(3) with the mounting screws(2) to the outlet box(1). The green ground screw must face out.

Step 3. Mounting the fixture

- Place the canopy (18) over the mounting plate(3), pass the dental tube(11) through the hole in canopy(18), then adjust the dental tube(11) by threading inward or outward till it protrudes 1/4" from the canopy(18) secure with hex nut(19).
- Make sure the dental tube(11) feed through the hole on canopy(18). Secure the fixture into place using the provided decorative nut(12).


Step 4. Installing shade and light bulb

- Screw the bulb(13) into the socket. Do not exceed the maximum recommended wattage.
- Place the shade(14) [The waterproof gasket(20) has been installed on the shade(14).] over the canopy(18), then use the screws(16) to secure the frame(15) to the canopy(18) .
- Installation is completed, restore power at the circuit breaker and turn light switch on to activate the lighting fixture.

For outdoor installation: after mounting the fixture, caulk the top and side edges between the canopy(18) and the mounting surface. Leave the bottom edge uncaulked for drainage. Use caulking material rated for exterior use.

WARNING: This outdoor lantern has been permanently installed a photocell(17) switch, photocell turns lantern ON at dusk and automatically turns OFF at dawn.

Note: Don't cover the photocell switch at anytime.

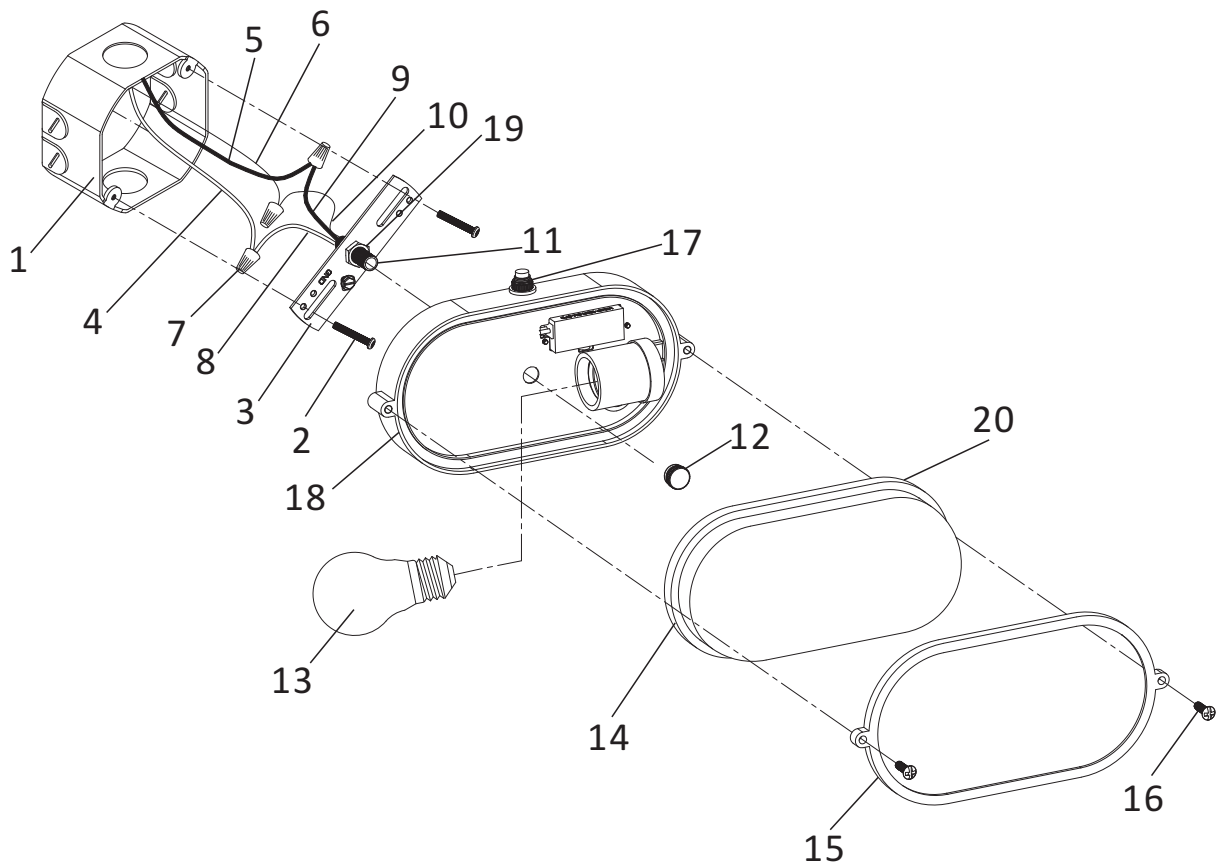

1. OUTLET BOX (NOT INCLUDED)

2. MOUNTING SCREW

3. MOUNTING PLATE

4. WHITE SUPPLY WIRE

5. BLACK SUPPLY WIRE

6. SUPPLY GROUND WIRE

7. WIRE NUT

8. WHITE FIXTURE WIRE

9. BLACK FIXTURE WIRE

10. FIXTURE GROUND WIRE

11. DENTAL TUBE

12. DECORATIVE NUT

13. BULB (NOT INCLUDED)

14. SHADE

15. FRAME

16. SCREW


17. PHOTOCELL

18. CANOPY

19. HEX NUT

20. WATERPROOF GASKET

General Wiring Diagram

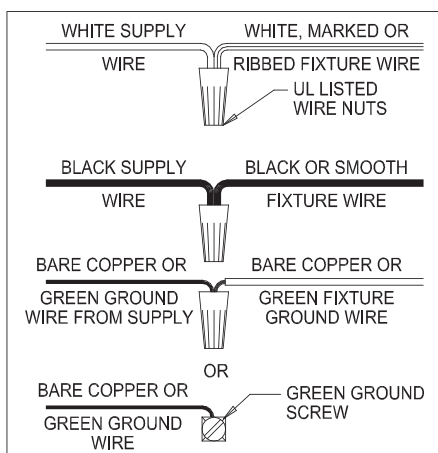

WARNING



To avoid possible fire or electrical shock, make certain no bare wire strands are exposed outside wire connectors.

CARE AND MAINTENANCE

CAUTION- Be certain the power is turned off and ensure fixture surface temperature is cool enough to touch before cleaning the fixture.

- DO NOT clean or perform maintenance while fixture is energized.
- Clean the surface of the LED fixture periodically with a soft, dry cloth to remove the dust.

Five Years Limited Warranty

RP Lighting warrants this product to be free from defects in material and workmanship for five years from the original date of purchase by the consumer. This warranty is limited to the counter replacement at the time of purchase with the original receipt. We will not be liable for the loss or damages of any kind, incidental or consequential damages of any kind, whether based on negligence and/ or arising in connection with the sale, use or repair of the product claimed to be defective.

Some states do not allow the exclusion or limitation of incidental or consequential damages so above limitation may not apply to you. This warranty gives you specific legal right and you may also have other rights, which vary from state to state. Misuse, improper installation, accidental damages or modifications will void warranty.