

2 In 1 Sock Airing

Please retain instructions for future reference.

CARE AND USE

Please retain instructions for future reference.

Directions for use 1. To hang the sock ailer independently on a washing line or indoor ailer, unclip the hanging hook until it clicks into place and hang.

Ensure the rotary ailer is fully opened and secure before attaching the sock ailer.

Attach the sock ailer before adding any items to the rotary ailer.

2. To attach the sock ailer to the rotary ailer, first remove the clip.

The sock ailer is designed to attach to a rotary ailer that has a centre pole diameter of either 32, 35, 40 or 50 mm - check the sizing before use.

3. Place the sock ailer around the pole and hold in place.

Ensure the pegs are hanging in the downward position.

4. Use the clip to secure the sock ailer to the pole by selecting a suitable groove to slot the clip in place.

Take care to ensure the clip is the correct way up and the pressure lock mechanism is open (in the horizontal position).

5. Secure the ailer in position by pushing down the lever, activating the pressure lock mechanism.

To unlock, raise the lever to deactivate the pressure lock mechanism.

Lift the clip to remove the sock ailer from the rotary ailer pole.

Caution Maximum load is 2.4 kg.

Do not overload the sock ailer.

Distribute weight evenly across the sock ailer.

Remove the sock ailer from the rotary ailer pole before closing the rotary ailer.

Take care not to trap hands when using the sock ailer.

If the sock ailer appears loose on the rotary ailer, unlock the clip and select a different groove, relock before continuing.

Made in China

Manufactured by: UP Global Sourcing UK Ltd, Victoria Street, Oldham, Manchester OL9 0DD. UK
Ultimate Products Europe Ltd, 19 Baggot Street Lower, Dublin, D02 X658. ROI