



We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-888-996-2729

FAX: 1-866-873-3531

arcadegames@escaladesports.com

Or write to:
Escalade Sports
Customer Service Department
P.O. Box 889
Evansville IN 47706

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Model Number: **45-6082F**

Date Code: **CPSIA#2-45-6082F - -SM**

Purchase Date: _____

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADESPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADESPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-888-996-2729 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

customerservice@escaladesports.com

 
Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

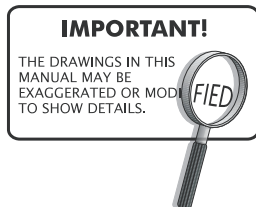

Assembly Tips

Make sure you understand the following tips before you begin to assemble your mini hoop:

1. Start all bolts by hand before tightening.
2. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.



WARNING:

READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND SAFETY INSTRUCTIONS CAREFULLY.



 
CAUTION:

- THIS PRODUCT IS NOT DESIGNED TO SUPPORT A PLAYER HANGING FROM THE RIM OR ANY OTHER COMPONENT.
- WEAR MOUTH GUARD WHEN PLAYING TO AVOID DENTAL INJURIES.
- USE ONLY BALL PROVIDED - OTHER BALLS CAN DAMAGE PRODUCT AND RISK INJURY TO PLAYER.


CARE AND USE OF YOUR MINI HOOP

1. This product is intended for **INDOOR** use only.
2. Wash Backboard gently with a 100% Cotton Soft Cloth. The soft cloth can be dampened with lukewarm water (no excess water in cloth) . A very mild soap can be used . **DO NOT SCRUB BACKBOARD !**
Gently clean Backboard . Rinse cloth with Luke warm water and gently wipe backboard clean – Dry Backboard with a 100% soft cotton cloth . To minimize scratches and minor abrasions to your backboard , apply a mild polish such as NOVUS PLASTIC POLISH #1 or MIRROR GLAZE PLASTIC POLISH. Strong cleaners and waxes with cleaner will damage the backboard and void the warranty .


Parts List

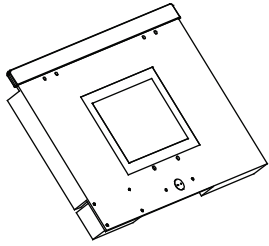


P1- Backboard
1 pc

 

 
**P2- Metal Support
Brace for Rim**
1 pc




P3- Hanger Bracket
2 pcs

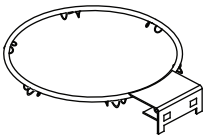 


P4- Rim
1 pc

 

P5- Rim Net
1 pc

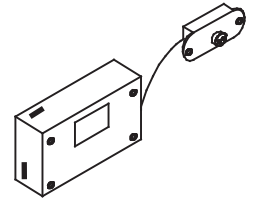 

 
**P6- Electronic Scorer
& Scoring Sensor**
1 pc



**P7- EVA Pad for
Hanger Bracket**
4 pc



 **A1- Air Pump
with Needle**
1 pc

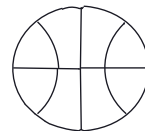


A2- Mini Basketball
1 pc



H1- M6 Nut
2 pcs



 H2- M5 x 12mm Bolt
4 pcs




H3- M6 x 12mm Bolt
2 pcs




H4- M5 Nut
4 pcs



 **H5- M3 x 8mm Round
Head Screw**
6 pcs




**T1- Phillips Allen
Wrench**
1 pc

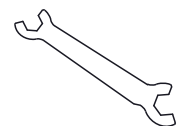 

T2- Wrench
1 pc


STEP 1

 Peel and stick the EVA Pads **P7** onto the Hanger Brackets **P3** as per diagram. Attach the Hanger Brackets **P3** to the Backboard **P1** using Bolts **H2** and Nuts **H4**. Tighten, but **DO NOT** over tighten.

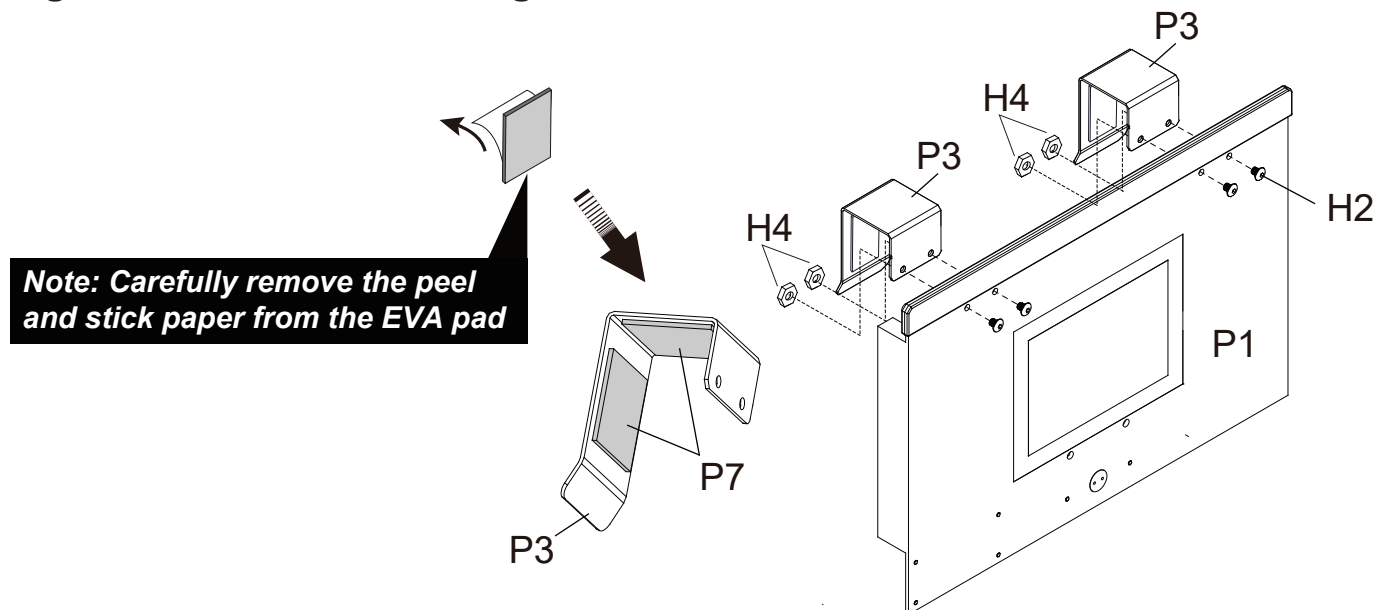

STEP 2

 Attach the Rim **P4** to the Backboard **P1** using two Bolts H3, the Metal Support Brace **P2** and two Nuts **H1**. Tighten, but **DO NOT** over tighten.

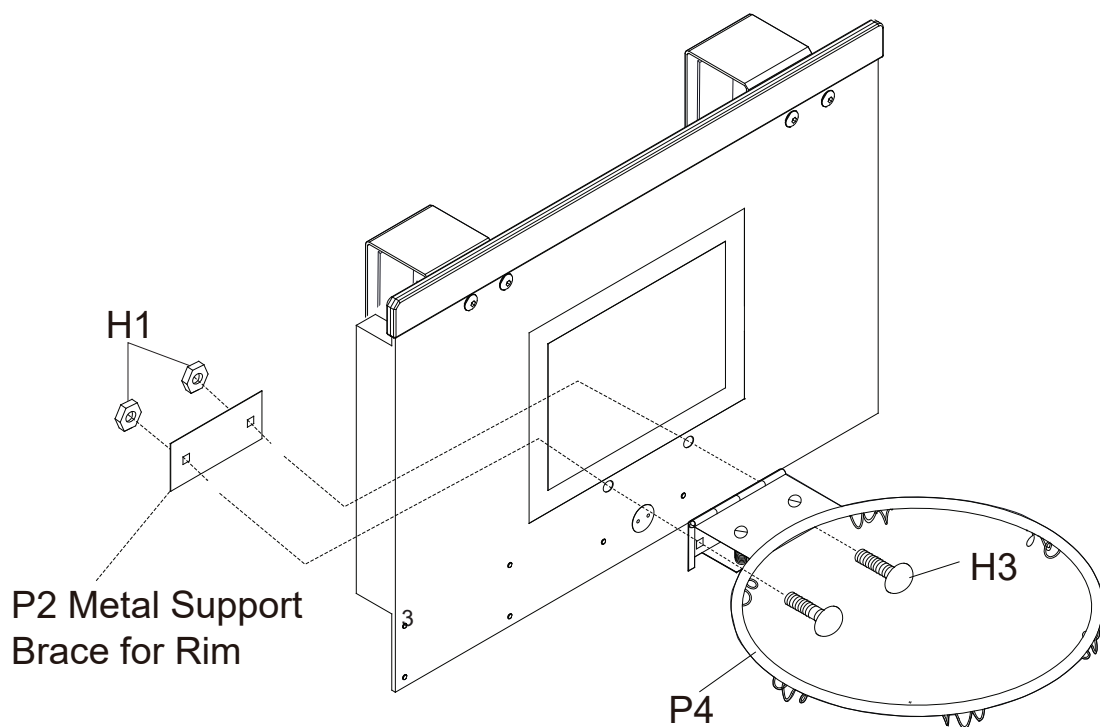


STEP 3

Carefully Insert the male wire connector from the LED Light into the Female socket on the Electronic Scorer **P6**. See **Detail A**.

Attach both the Electronic Scorer & Scoring Sensor **P6** to the back of the backboard using Screws **H5**. Tighten until Screws **H5** are snug and Electronic Scorer & Scoring Sensor **P6** are securely attached using Phillips Allen Wrench **T1**. **Do not over-tighten**. Open the battery box, Insert 3 pcs AAA batteries (not included) in the correct order of polarity as shown on the inside of the battery box.


Turn on the power by pushing the on/off switch on the battery box to the “ON” position. (If the game will not be used for a long period of the time, we recommend that the batteries be removed).

 See “ FIRST TIME BATTERY INSTALLATION AND NOTICE ”, before installing batteries, located on page 6.

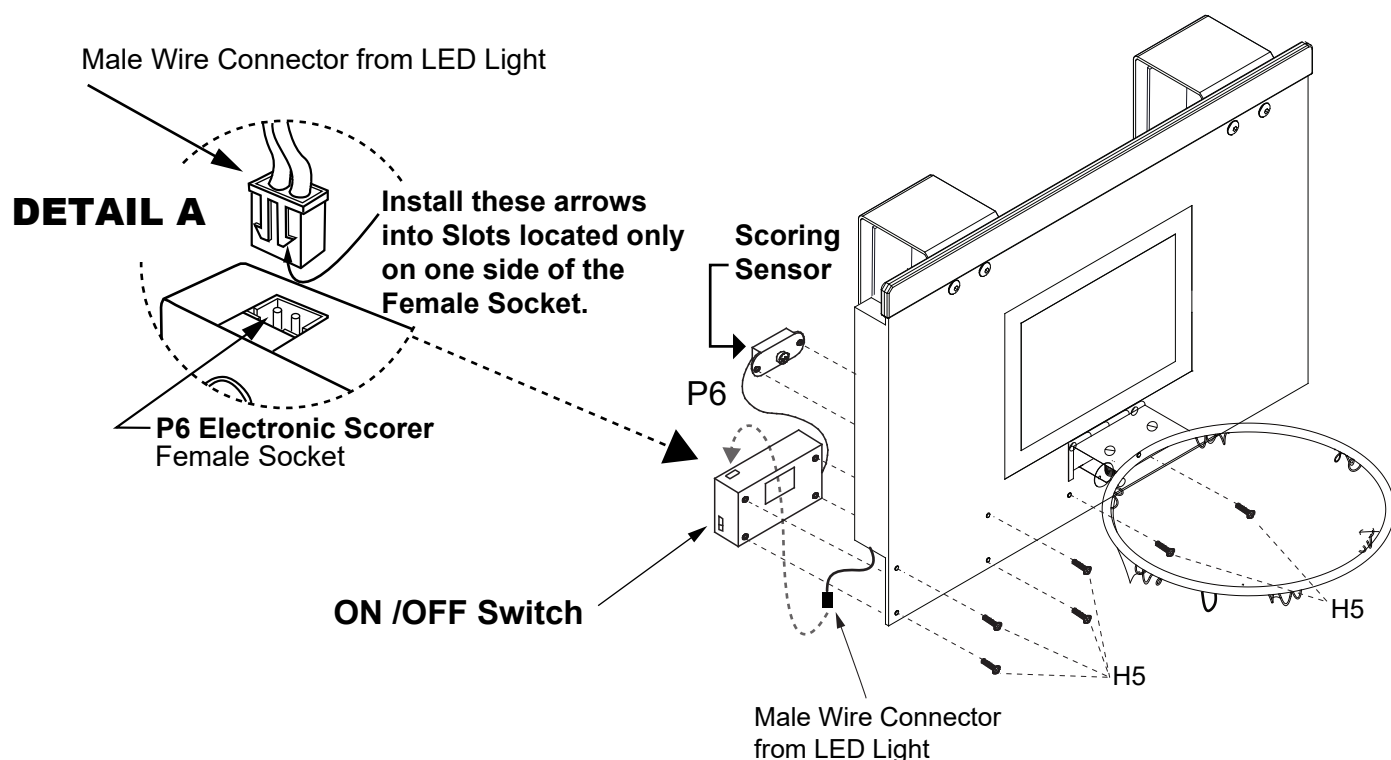

STEP 4

 Attach the Net **P5** to the Rim **P4**.

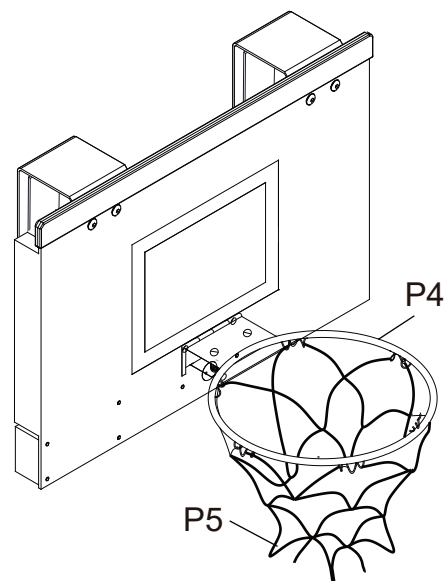

First Time Battery Installation:

Locate battery compartment for this product .

Use alkaline batteries for maximum performance .

Using a small Phillips head screwdriver – loosen and remove the battery compartment cover screw(s).

Remove battery compartment cover .

Install new batteries only after reading the “ Battery Information NOTICE“ !

Replace compartment cover and secure cover with the cover screw . Do not over tighten and strip out the screw .

IMPORTANT: BATTERY INFORMATION

 
Please retain this information for future reference. Batteries must be installed / replaced by an adult .

Notice:

1. Remove and replace batteries when the electrical features of this product work slowly or are not functional .
2. Do not mix old and new batteries .
3. Do not mix different types of batteries : Alkaline , Standard (Carbon-Zinc) , or rechargeable (Nickel-Cadmium batteries) .
4. Use Alkaline Batteries for maximum performance .
5. Do not use damaged batteries .
6. Use only batteries of the same or equivalent type as recommended.
7. Install new batteries as per matching the battery polarity guide (+ & - , positive and negative) inside of the battery compartment . Correct battery polarity installation is critical as to not damage the internal electrical components as well as insuring the correct functionality of the product .
8. Do not short circuit the battery terminals .
9. Always remove exhausted , leaking, weak , and batteries from long periods of nonuse from the product . Battery leakage and corrosion can cause damage .
10. Check the battery terminals are clean and bright before installing new batteries.
11. Dispose of old batteries safely and per local battery disposal codes .
12. Do not dispose of batteries into a fire as they may explode or leak.
13. If removable rechargeable batteries are used , they are to be charged under adult supervision .
14. Rechargeable batteries are to removed from the product before they are charged .
15. If you use a battery charger, it should be examined regularly for damage to the cord , plug, enclosure, and other parts. Do not use a damaged or malfunctioning charger until it is properly repaired.
16. Non rechargeable batteries must not be recharged .
17. Always remove batteries from this product for extended storage and or non-use .
18. Should this product cause , or be affected by, local electrical interference , move it away from other electrical equipment . Reset (switching off and back on again and or removing and reinserting the batteries) if necessary .

To Safely inflate the Basketball

1. Moisten Needle
2. Insert needle straight into the air inflate valve on the basketball.
3. Inflate Basketball to 5" to 5 1/2" diameter . Remove needle quickly.
4. Do not "OVER INFLATE" basketball past 5 1/2" diameter .

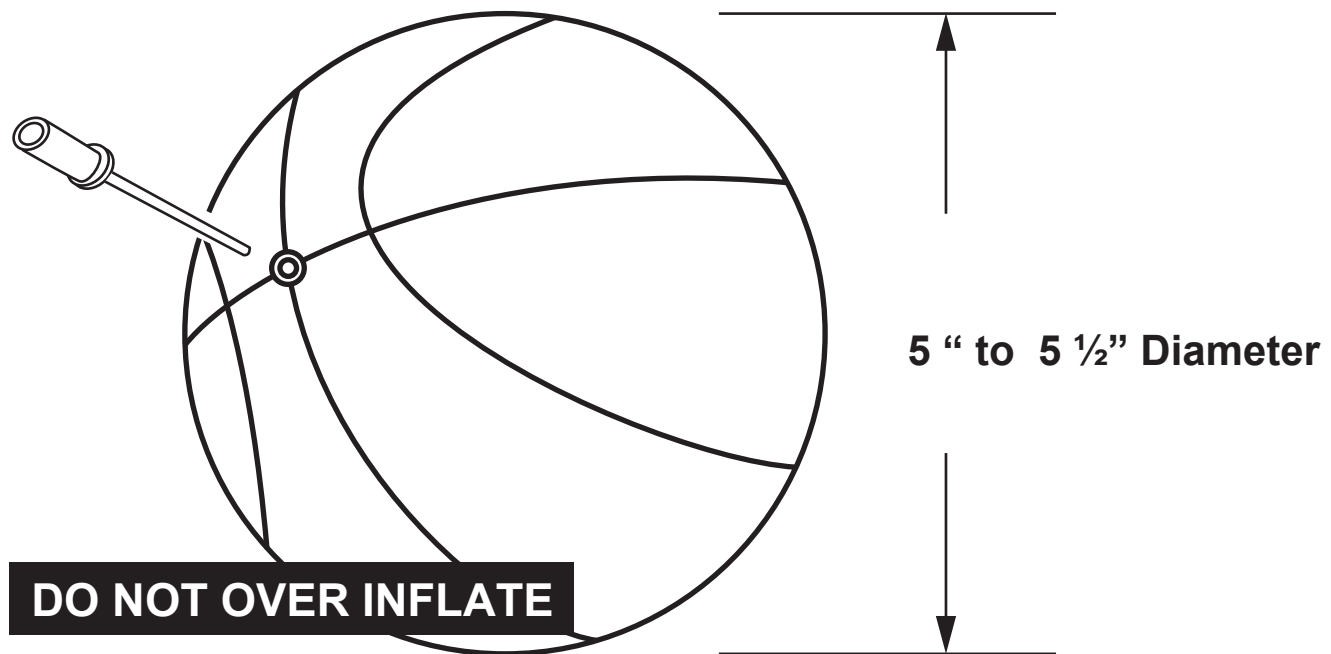

PART#	DESCRIPTION	QTY
45-6082SMP1	Backboard	1
45-6082SMP2	Metal Support Brace for Rim	1
45-6082SMP3	Hanger Bracket	2
45-6082SMP4	Rim	1
45-6082SMP5	Rim Net	1
45-6082SMP6	Electronic Scorer & Scoring Sensor	1
45-6082SMP7	EVA Pad for Hanger Bracket	4
45-6082SMA1	Air Pump w/ Needle	1
45-6082SMA2	Mini Basketball	1
45-6082SMH1	M6 Nut	2
45-6082SMH2	M5 x 12 mm Bolt	4
45-6082SMH3	M6 x 12 mm Bolt	2
45-6082SMH4	M5 Nut	4
45-6082SMH5	M3 x 8mm Round head screw	6
45-6082SMT1	Phillips Allen Wrench	1
45-6082SMT2	Wrench	1