


User manual

Steam cleaner

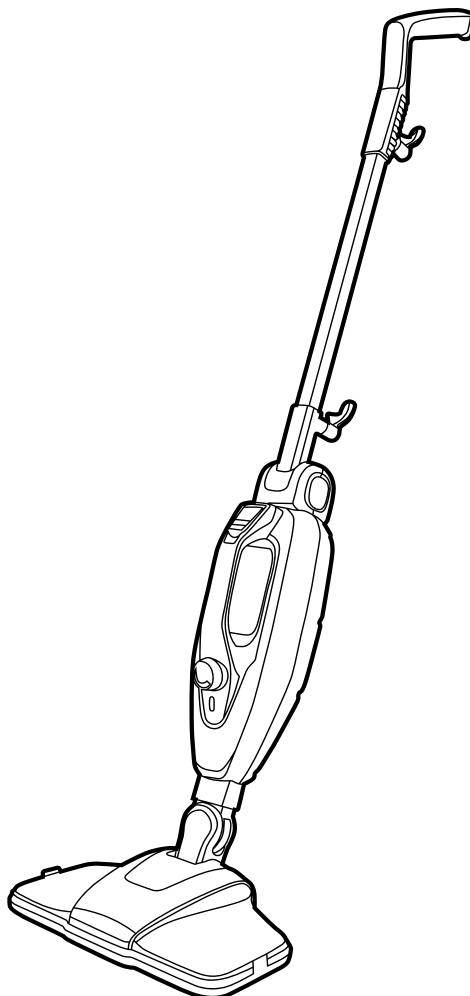

To register for your extended guarantee, scan the QR code or visit guarantee.uppc.com/beldray and register your product within 30 days of purchase. For any further queries, visit www.beldray.com.

beldray[®]
Est.1872

Important safety

Please read carefully

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Do not immerse the appliance in water or any other liquid.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any parts/accessories or adaptors other than those supplied with this appliance.
- Do not use this appliance outdoors.
- Do not use the appliance on leather, wax polished furniture or floors, vinyl or laminate floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.
- Do not use the appliance on any unsealed hard floor surfaces or surfaces that have been treated with wax, as the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding.
- Do not touch any sections of the appliance that may become hot during use, as this could cause injury.
- Do not direct steam at people or animals or towards equipment containing electrical components, such as the interior of ovens.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.




CAUTION: The appliance emits very hot steam; always exercise extreme caution during use.



WARNING: Danger of scalding.

Description of parts

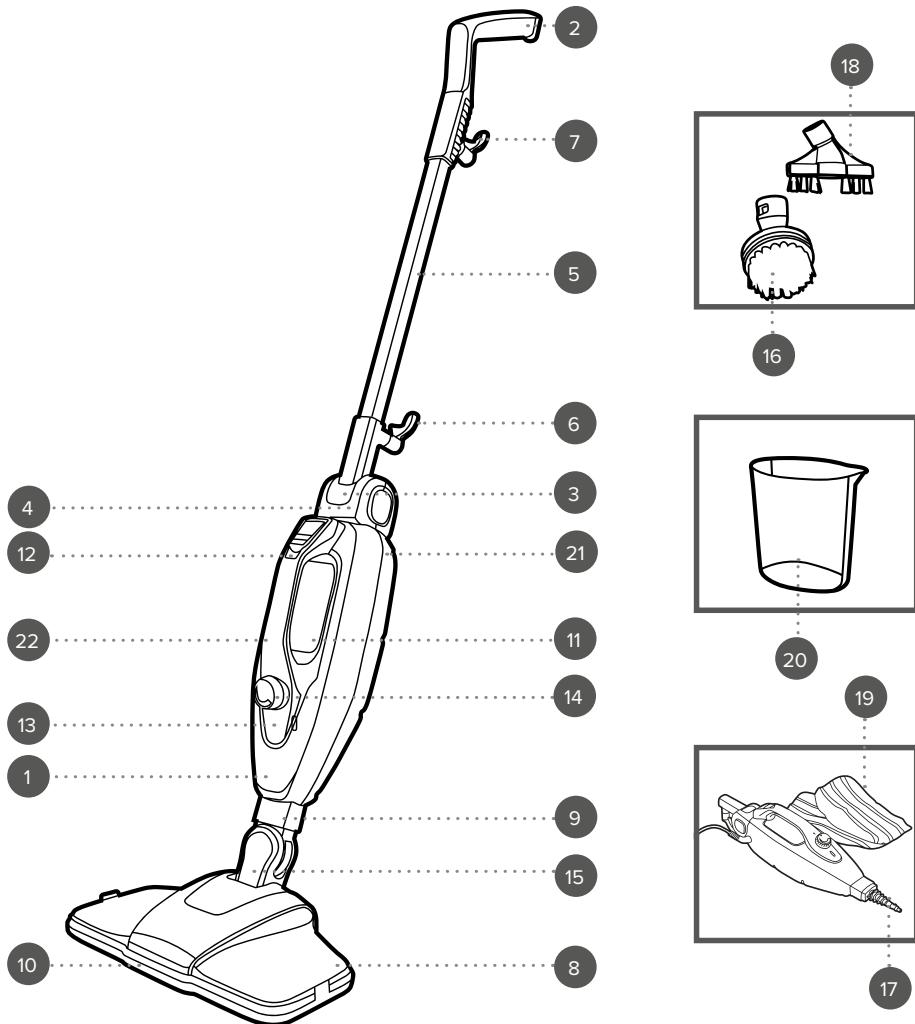

Please retain instructions for future reference.

Dos and don'ts



Switch off the steam cleaner and disconnect it from the mains power supply before changing or fitting attachments.

Allow the steam cleaner to cool thoroughly before adding or removing accessories.



Do not open the water tank cap whilst the steam cleaner is still turned on.

Do not use attachments if they are loose, damaged or broken.

Do not use the steam cleaner on frosted or cold glass, as this may damage or crack the glass.

Additional risks

Additional risks may arise when using the steam cleaner, which may not be stated in the previous safety instructions. These risks can arise from misuse or prolonged operation of the steam cleaner.

Care and maintenance

Before attempting any cleaning or maintenance, always unplug the steam cleaner from the mains power supply and allow it to cool sufficiently.

Drain any remaining water from the water tank.

Wipe the steam cleaner main body with a soft, damp cloth and allow to dry thoroughly.

Clean the rectangular mop head in warm, soapy water; rinse and dry thoroughly.

The accessories are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners or detergents.

The microfibre mop head pads are machine washable on a low heat setting.

Always use a mild detergent and lay it flat to dry.

Never use bleach or fabric softener when washing the microfibre mop head pad.



WARNING: Do not turn on the steam cleaner during cleaning.

Descaling the water tank and removing limescale

If living in a hard water area, calcium deposits may begin to build up inside the water tank or accessories. If this occurs, it is recommended to use demineralised water with the steam cleaner.

Limescale can develop over time and can affect the performance of the steam cleaner. It is recommended to remove limescale at least once a month. Use a limescale removing solution that is suitable for use with a steam cleaner. Always follow the manufacturer's instructions.

Cleaning the anti-calc filter

The anti-calc filter is located at the back of the steam cleaner, below the flexi-hinge release button.

Carefully lift out the anti-calc filter.

Soak the anti-calc filter in a limescale-removing solution that is suitable for use with a steam cleaner for up to 4 hours, to make sure that all of the impurities are removed.

Once the anti-calc filter has been soaked, reinsert it back into the main body and then run a continuous jet of steam to clear any remaining impurities.



NOTE: Do not use the steam cleaner without the anti-calc filter in place.

Instructions for use

Before first use

Before using the steam cleaner for the first time, clean the exterior surface with a soft, damp cloth and dry thoroughly.

Assembling the steam cleaner

Attaching the upright handle to the tube

Insert the upright handle into the tube, until it clicks into place.

Attaching the tube to the steam cleaner

Insert the assembled tube and upright handle into the steam cleaner main body, until it clicks into place.

The assembled tube and upright handle can be removed from the steam cleaner main body by pressing the tube release button.

Attaching the mop head

Slide the bottom end of the steam cleaner main body onto the mop head, until the mop head spindle clicks into place.

To remove the mop head, press the accessory release button while pulling the steam cleaner main body away in an upwards direction.

Attaching the microfibre mop head pad

STEP 1: Remove the mop head from the steam cleaner main body, following the instructions in the section entitled '**Attaching the mop head**'.

STEP 2: Attach the microfibre mop head pad to the mop head by aligning the hook and loop tabs.

STEP 3: Place the mop head into the carpet glider and press down firmly to lock it into position.

STEP 4: Reattach the mop head to the steam cleaner main body.



NOTE: The microfibre mop head pad must be installed correctly before use. The carpet glider should only be used on carpets.

Filling the water tank

Switch off and unplug the steam cleaner from the mains power supply before attempting to fill the water tank.

STEP 1: Position the steam cleaner main body horizontally on a flat, stable surface.

STEP 2: Carefully lift the water tank cap.

STEP 3: Fill the measuring jug with water and pour the contents into the water tank, using the funnel. Repeat until the water tank is full and then replace the water tank cap.



NOTE: The water may take a couple of seconds to rise; allow time for this before adding more to the water tank, making sure that it is not overfilled.



CAUTION: Do not attempt to fill the water tank whilst the steam cleaner is turned on, as this could cause damage to the appliance or injury to the user. Never add descaling, aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.

Using the steam cleaner

As an upright steam cleaner

STEP 1: Assemble the steam cleaner following the instructions in the section entitled '**Assembling the steam cleaner**'. Attach the upright handle and mop head to the steam cleaner main body.

STEP 2: Fill the water tank.

STEP 3: Plug in and switch on the steam cleaner at the mains power supply.

STEP 4: The steam cleaner features a flexi-hinge that is ideal for cleaning under furniture. Push the flexi-hinge fully in towards the main unit to activate it; deactivate the flexi-hinge by pressing the flexi-hinge button and straightening the upright handle.

STEP 5: Turn the adjustable steam control dial in a clockwise direction. The power indicator light will illuminate green, indicating that the steam cleaner is ready to use.

STEP 6: Turn the adjustable steam control dial in a clockwise direction to increase the amount of steam; turn in an anticlockwise direction to decrease it.

As a handheld steam cleaner

STEP 1: Remove the upright handle by pressing the tube release button and pulling it up and away from the steam cleaner main body.

STEP 2: Fill the water tank.

STEP 3: Fully insert the accessory adaptor into the steam nozzle.

STEP 4: If necessary, attach the required accessory to the accessory adaptor, using the corresponding arrows as alignment guides. Turn the accessory in a clockwise direction to secure it.

STEP 5: Plug in and switch on the steam cleaner at the mains power supply.

STEP 6: Turn the adjustable steam control dial in a clockwise direction. The power indicator light will illuminate green, indicating that the steam cleaner is in operation and steam will be emitted.



NOTE: A full water tank will supply approx. 15 minutes of continuous steam. Steam will run continuously until the water tank is empty or the adjustable steam control dial is in the off position.



CAUTION: Do not attempt to use the steam cleaner as a handheld steamer whilst the upright handle is inserted. Never leave the steam cleaner stationary on a floor area for longer than 15 seconds. The handheld unit will become hot during use.

Storing the power cord

The steam cleaner is equipped with a handy cord storage system. To use it, simply wrap the power cord around the upper and lower cord hooks; the upper cord hook must be in the upright position. To unwrap the power cord and release it from the stored position, pull and twist the upper cord hook 180° in a clockwise direction.

Accessories

Accessory	Suggested use	Further usage information
Accessory adaptor		The accessory adaptor is the base attachment for all of the handheld accessories supplied with the steam cleaner.
Large round brush	Both round brush accessories are perfect for cleaning hobs, showers, BBQs, taps and sanitaryware.	The large round brush is best for stubborn stains and removing residue from kitchen and bathroom surfaces. Always make sure that hot surfaces have cooled to room temperature before using the round brushes.
Grouting tool	Ideal for cleaning grout in kitchens and bathrooms.	Use on a low steam setting and apply light pressure.
Microfibre mop head pad	For the general cleaning of hard floors.	Use a low steam setting for wood floors and a higher steam setting for tiled floors.
Carpet glider	For ease of use on carpets.	To prevent carpets from becoming wet, use a low steam setting.



WARNING: Exercise caution when using the wire round brush, as it has very sharp bristles. Never hold the wire round brush by the bristles; always use the steam cleaner main body.

Storage

Remove the microfibre mop head pad, making sure that it has been cleaned following the instructions in the section entitled '**Care and maintenance**'.

Wrap the power cord around the upper and lower cord storage hooks.

Check that the steam cleaner is cool and dry, and the water tank is empty before storing in a cool, dry place.

Specifications

Product code: BEL02172

Input: 220–240 V ~ 50–60 Hz

Output: 1300 W

Water tank capacity: 350 ml

Waterproof level: IPX4

Power consumption (off mode): 0 W

Beldray Guarantee

Should any defects due to faulty workmanship or materials appear within 12 months from the date of purchase, please return the goods with proof of purchase to the retailer. For any further queries, visit www.beldray.com. To be eligible for the extended guarantee, go to guarantee.upplc.com/beldray and register your product within 30 days of purchase.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. ROI.

MADE IN CHINA.
©Beldray trademark. All rights reserved.
CD280725/MD000000/V1