



# ASSEMBLY INSTRUCTION

## DINING CHAIR


**A** Chair Body      **B** Front Leg      **C** Left Back Leg      **D** Right Back Leg

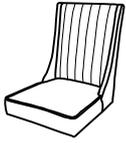

 
1pc



2pcs

 


1pc

 

1pc

 **E** Bolt  
Ø5/16\*2-1/4"



8pcs

**F** Lock Washer  
Ø5/16\*13mm



8pcs

**G** Flat Washer  
Ø5/16\*19mm




8pcs

**H** Allen Key  
M5




1pc

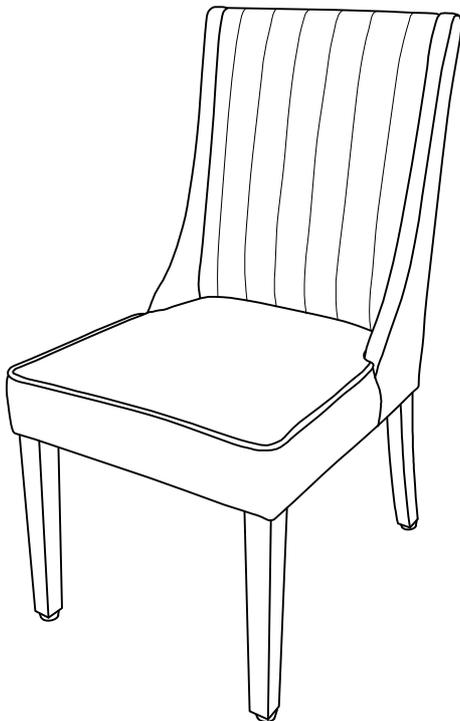


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

**1** Put Chair Body (A) on a smooth flat surface, attached Front Legs (B), Left Back Leg (C) and Right Back Leg (D) to Chair (A), using Bolt (E), Lock Washer (F) and Flat Washer (G) by Allen Key (H) as below shown.


Take the Allen Key, and turn the bolts until the legs are secure. **DO NOT TIGHTEN COMPLETELY.** Stop when you feel you are adding force to tighten the bolt.

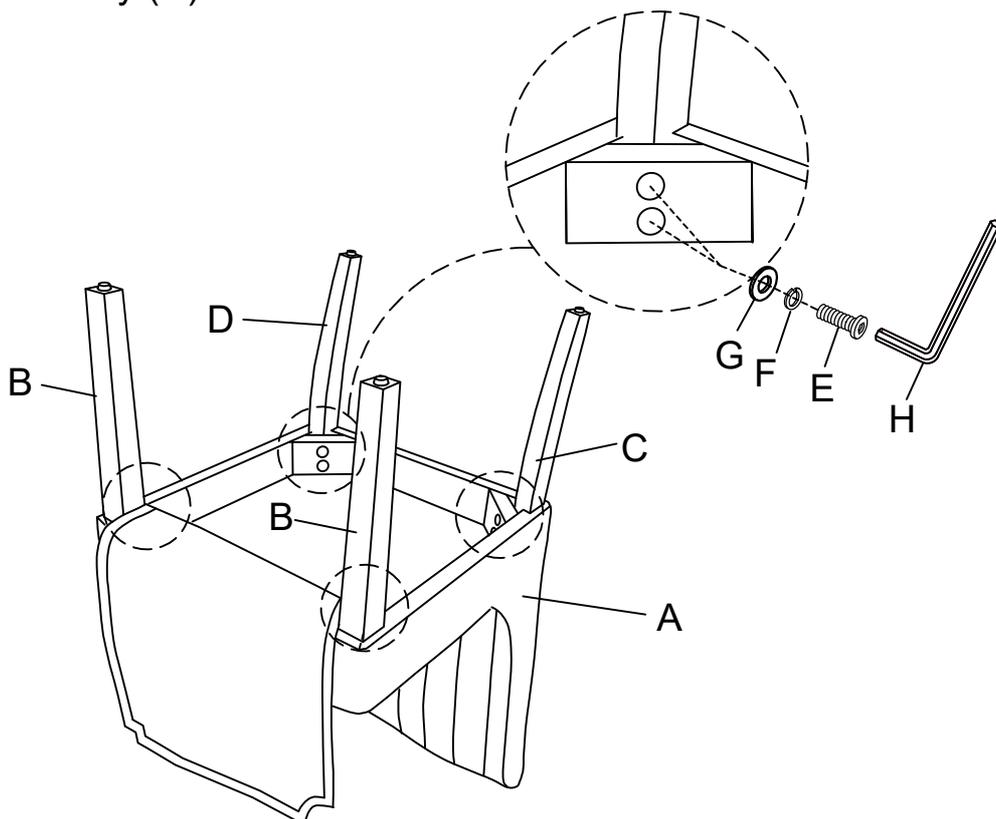

Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

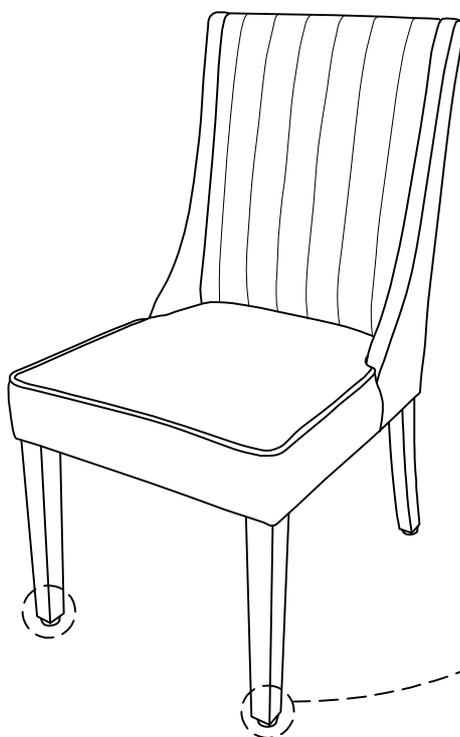

**Helpful Tip:** -Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the bench while you tighten the bolts.

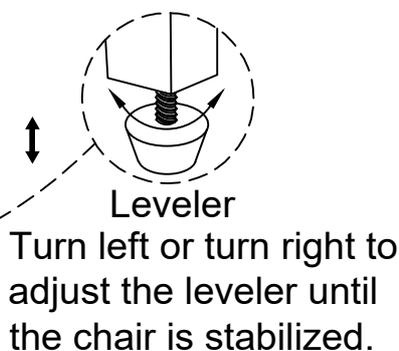

## Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.