


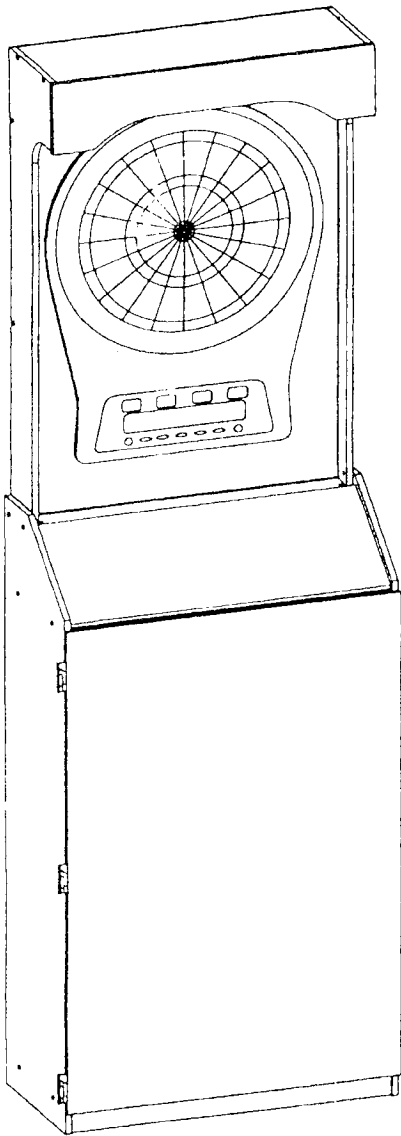

MODEL: E800FS1010

Do not return this game to the store where purchased as they are not authorized to handle returns or repairs.

For parts or warranty issues, please call
1-800-423-3220

or visit our website at www.dmisports.com

For all warranty issues, you must have your store receipt for proof of purchase.

OWNER'S MANUAL

Important Notes

- Make sure you have all the necessary parts before beginning assembly.
- Perform the assembly steps exactly as listed to avoid errors.
- Refer to diagrams to aid in the assembly process.
- Keep your original receipt and instruction manuals for the cabinet and electronic game for warranty purposes.

Tools Needed

- Screwdriver


Preparation

1. Find an open area on the floor to perform the assembly, in close proximity to where you plan to put the finished game.
2. Carefully open the box. Do not use a knife as you may scratch the cabinet.
3. Remove the inner box holding the electronic game and put it to the side until you are ready to assemble it to the cabinet.
4. Take the cabinet and hardware parts out of the box and make sure all of the parts are there


Begin assembly.

PARTS LIST

- A. Lower left side panel
- B. Right side panel
- C. Connector panel
- D. Lower sections shelf
- E. Base cross panel
- F. Lower back cover
- G. Door panel
- J. Upper left side panel
- K. Upper right side panel
- L. Upper section bottom panel
- M. Dart board anchor panel
- N. Upper panel
- P. Upper section arched front panel
- Q. Dart board
- R. Front baffle panel
- S. Upper back cover
- T. Tilt-down door panel

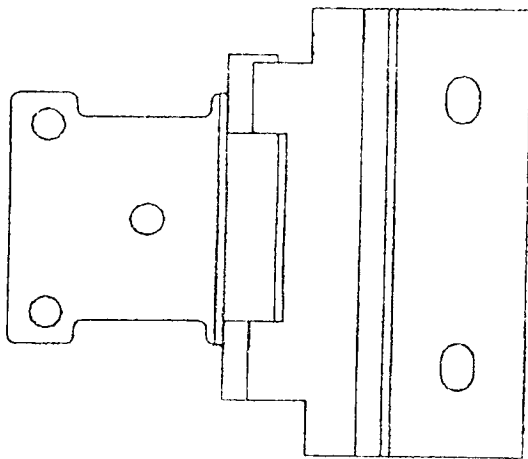

H8. Door Hinge – 3 pcs

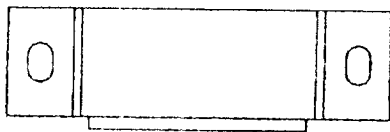

H10. Door Magnetic – 1pc



H11. Door Magnetic Attachment– 1pc



H4. Wood Dowel Pin– 16 pcs

HARDWARE LIST

- H1. Machine Screw
- H2. Panel bolt M6x25
- H3. Panel bolt lock
- H4. Wood dowel pin
- H5. Allen bolt 1/4"x5/8"L
- H6. Flat head phillips screw 3x15mm
- H7. Steel shaft
- H8. Door hinge
- H9. Door hinge round head screw
- H10. Door magnet
- H11. Door magnet attachment
- H12. Door hinge flat head screw

H1. Machine Screw



H1. Machine Screw – 24 pcs



H5. Allen Bolt 1/4"x5/8" – 2pcs



H6. Flat Head Phillips Screw – 42pcs



H9. Door Hinge Screw – 14pcs



H12. Door Hinge Screw – 4 pcs



H7. Steel Shaft – 2 pcs




H2. Panel Bolt – 4 pcs




H3. Panel Bolt Lock – 4 pcs

Complete View Upper Cabinet Assembly (Figure 1.0)

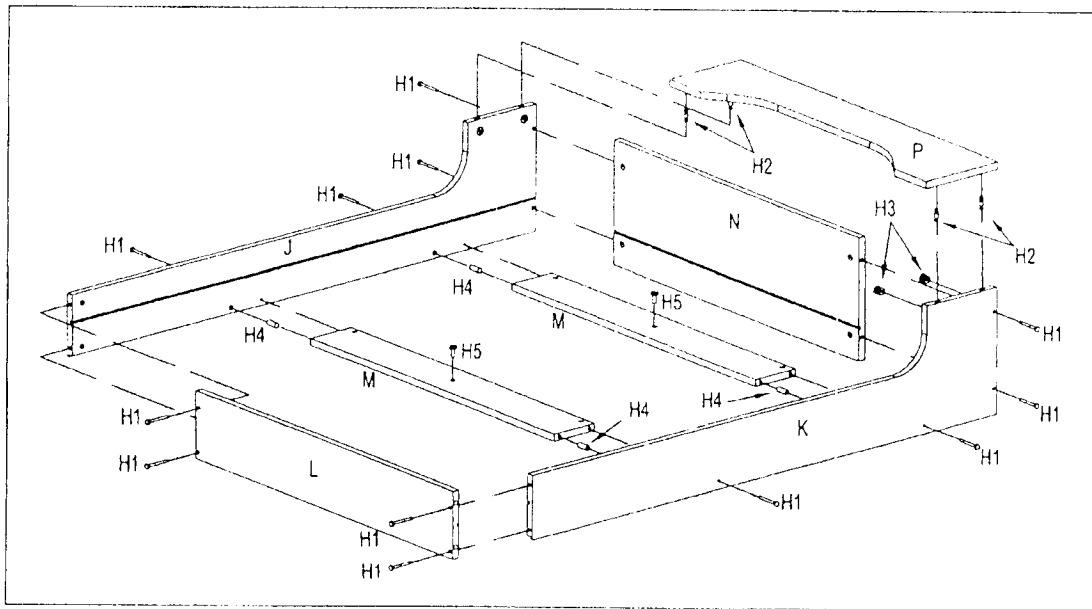


Complete View Lower Cabinet Assembly (Figure 2.0)

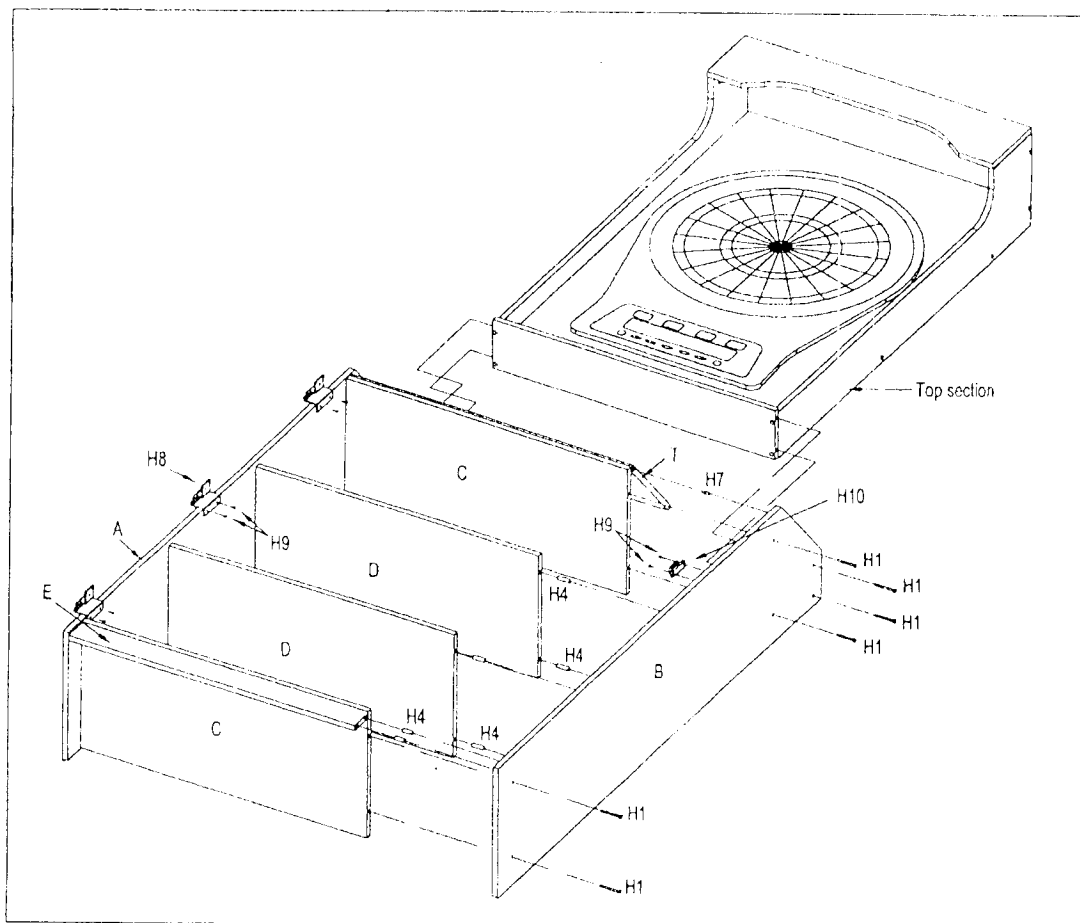


Upper Cabinet Assembly


1. Attach Parts N and L to Part J using Machine Screws (H1). See Figure 1.1. Embedded Barrel Nuts on Part N must be aligned to screw holes for proper attachment. See Figure 1.1A. Make sure slots on all parts are aligned.

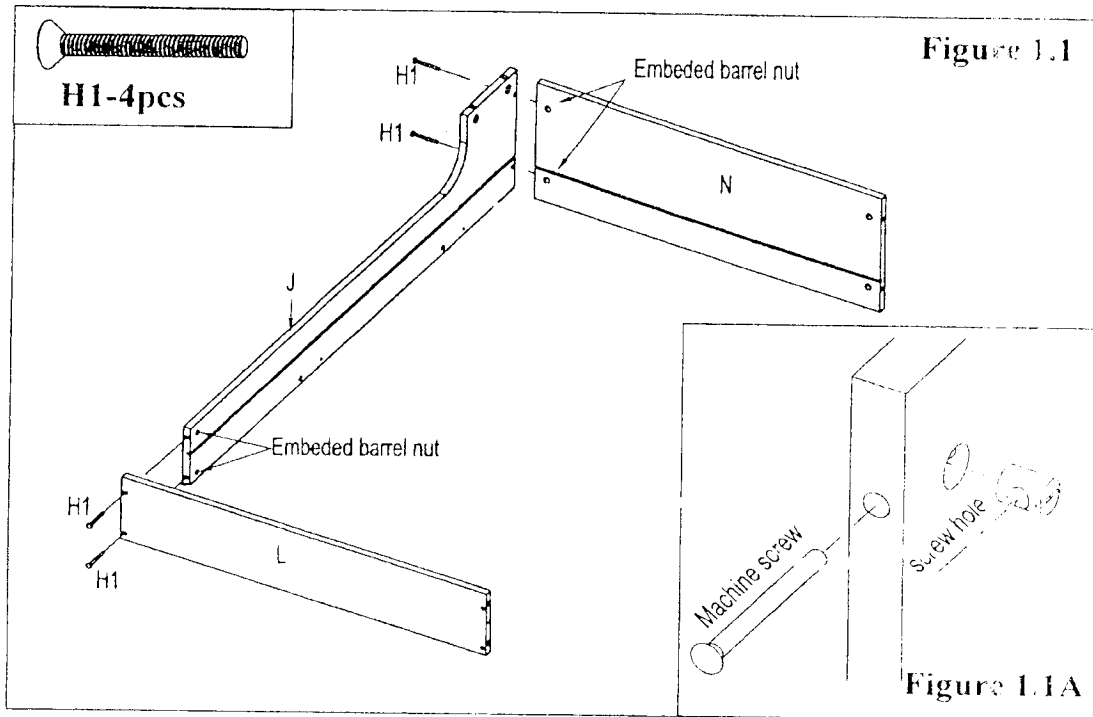


2. Screw Allen Bolts (H5) into Embedded nut on Part M.
3. Attach Parts M to Part J using Machine Screws (H1) and Wood Dowel Pins (H4). See Figure 1.2

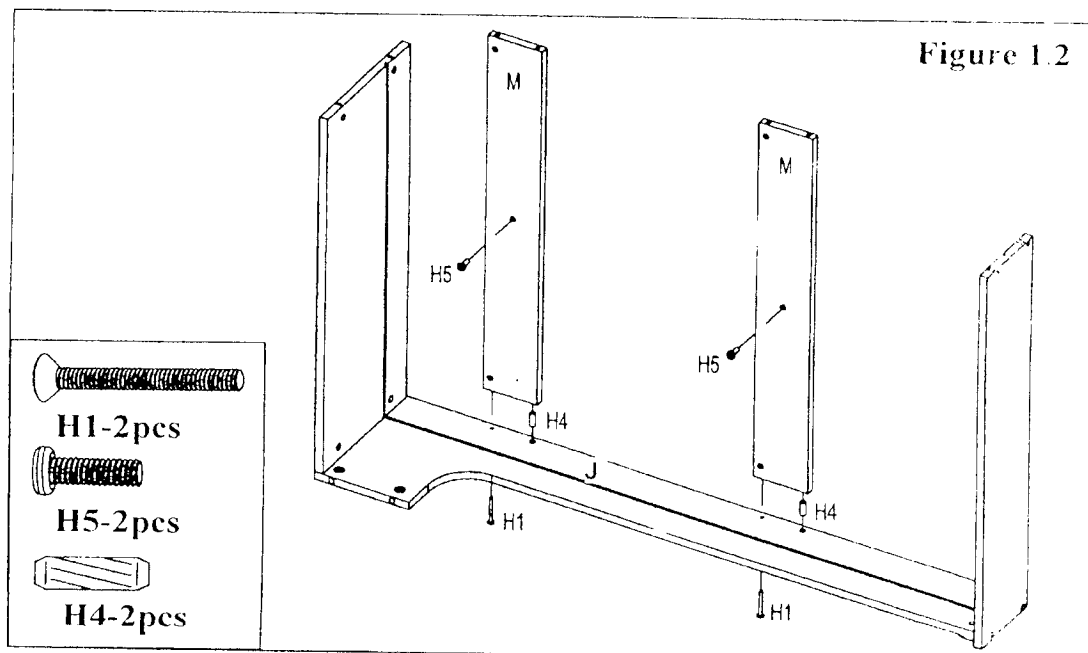


4. Hang dartboard on Parts M.

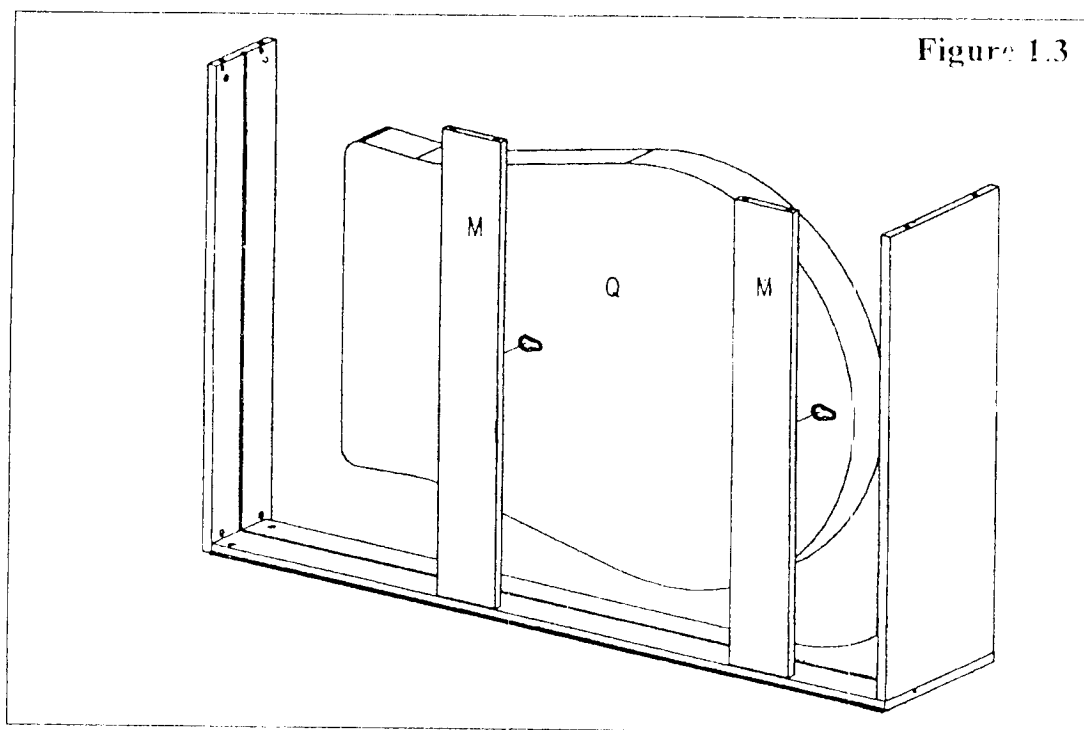


5. Slide Part R into slots on Parts N and L and over dartboard until board shows through cut out piece. See Figure 1.4.

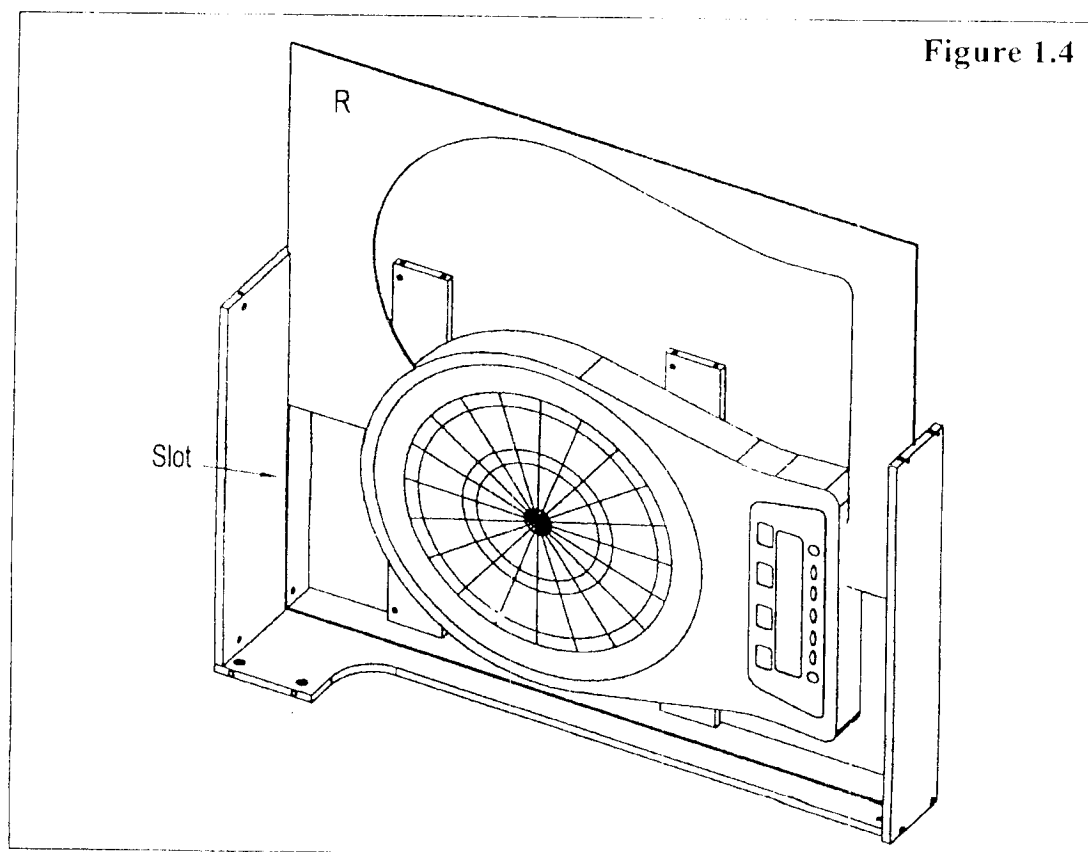

6. Attach Part K to partially assembled Upper Cabinet using Machine Screws (H1) and Wood Dowel Pins (H4). See Figure 1.5.

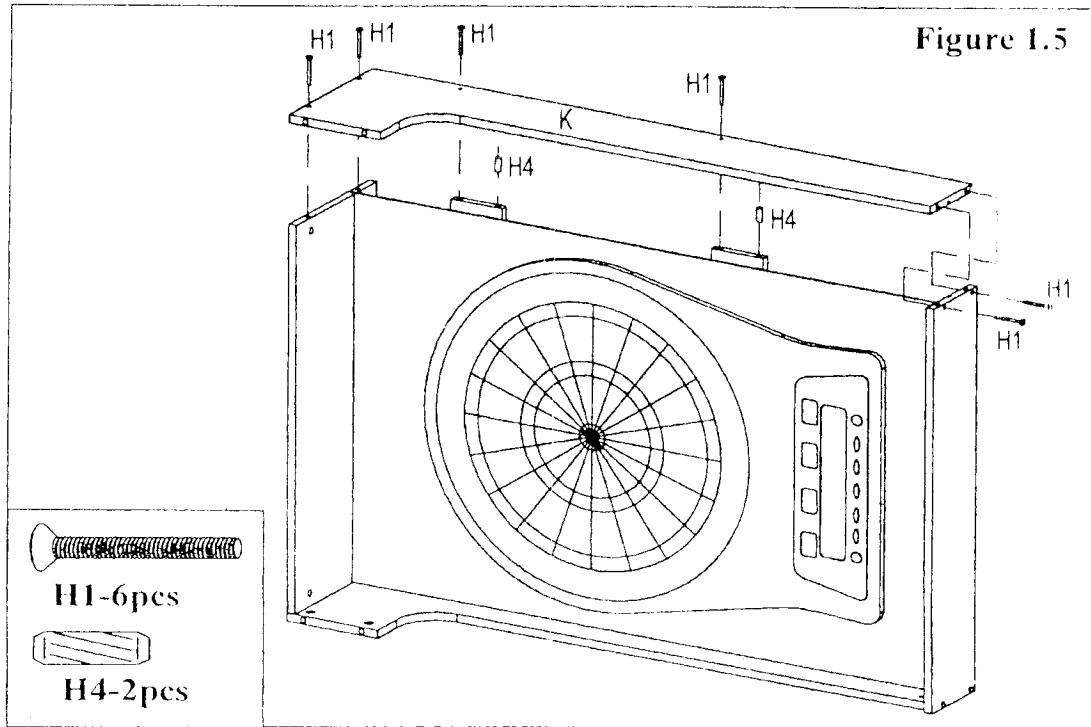


7. Screw Panel Bolts (H2) into Embedded Wood nut on Part P.
8. Insert Panel Bolt Locks (H3) into holes on Parts J and K. Make sure the arrow on the Panel Bolt Locks (H3) points toward the Panel Bolt Entry Holes. See Figure 1.6A.
9. Attach Part P to Parts J and K. Tighten Panel Bolt Locks (H3) with a Screw driver. See Figure 1.6.

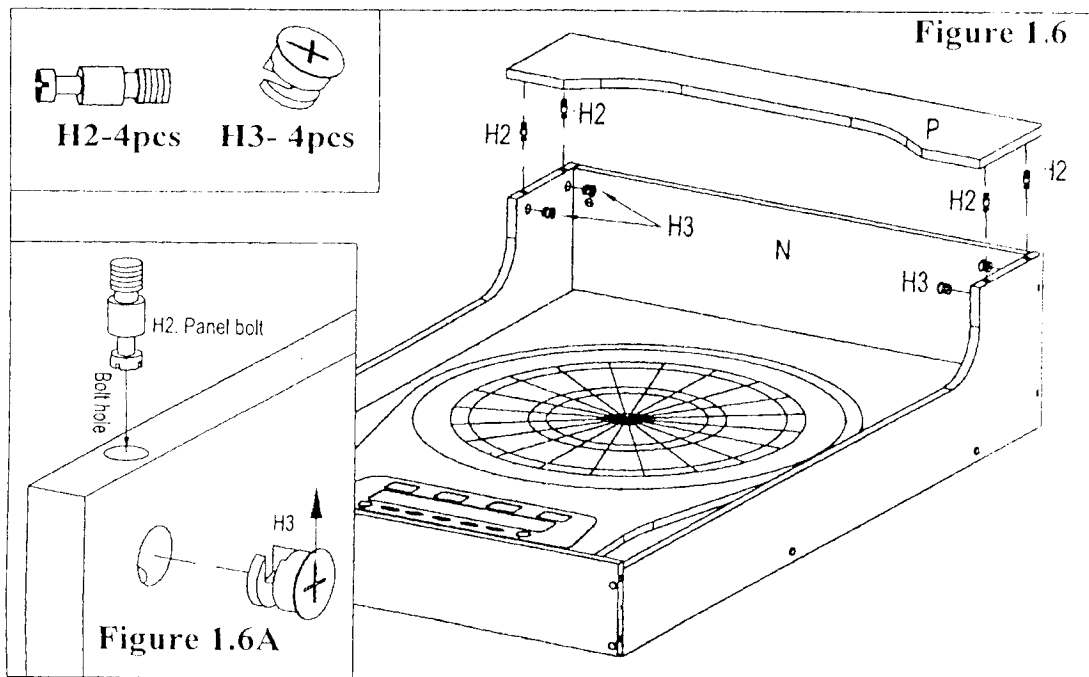


Lower Cabinet Assembly


1. Attach Parts C to Part B using Machine Screws (H1). See Figure 2.1.
2. Insert Wood Dowel Pins (H4) into pre-drilled holes on Parts D. Attach Parts D to Part B. See Figure 2.1.

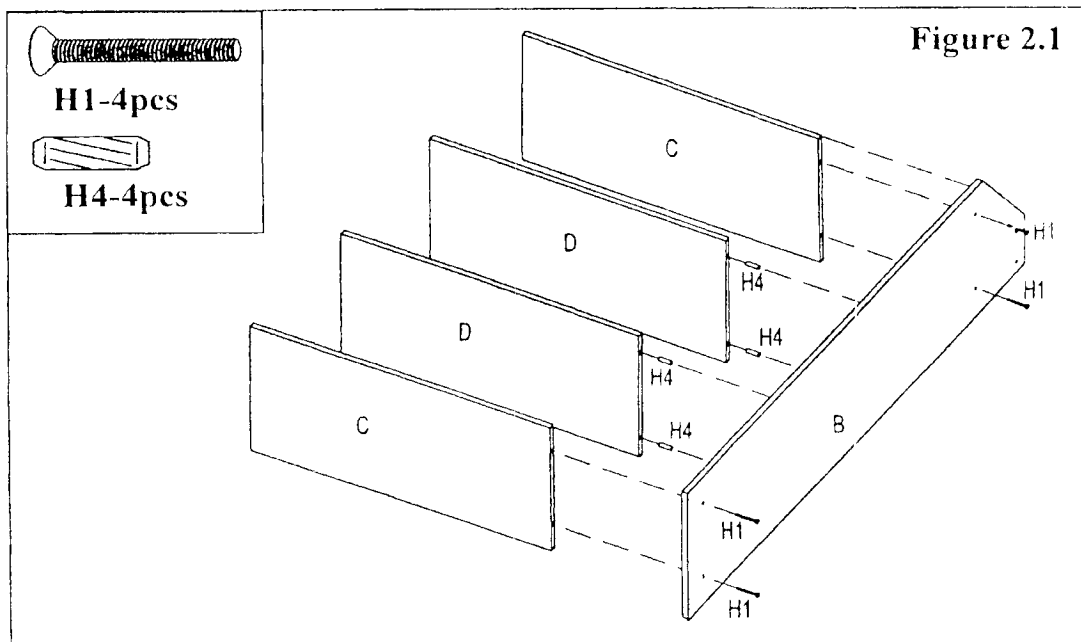


3. Insert Wood Dowel Pins (H4) into Part E. Attach Part E to Part B. See Figure 2.2.
4. Attach Part A to partially assembled Lower Cabinet using Machine Screws (H1) to secure it to Parts C. See Figure 2.2. Note: Do NOT fully tighten Machine Screws (H1) until after you have completed step 5
5. Attach Part T to Lower Cabinet using Steel Shafts (H7). See Figure 2.2.
6. Fully tighten all Machine Screws (H1).

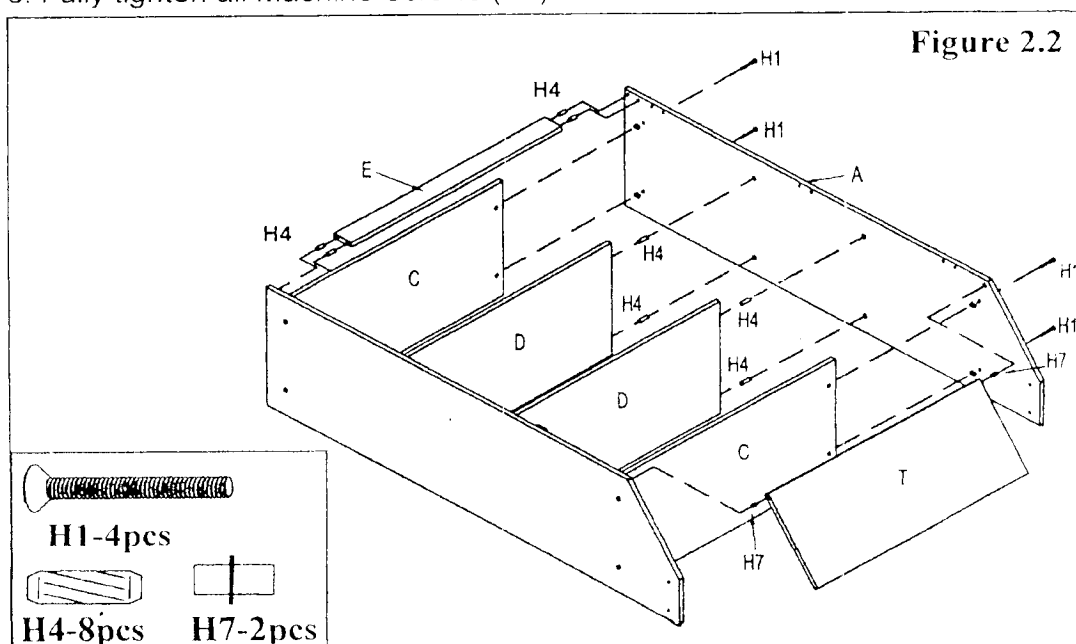


7. Attach Door Magnet (H10) to Part B using Door Hinge Screws (H9). See Figure 2.3.
8. Attach Door Hinges (H8) to Part A using Door Hinge Screws (H9). See Figure 2.3.
9. Attach Door Magnet Attachment (H11) to Part G using 1 Flat Head Screw (H12). See Figure 2.3.
10. Attach Part G to Lower Cabinet using 2 Round Head Screws (H9) and 1 Flat Head Screw (H12) for each hinge. See figure 2.3.

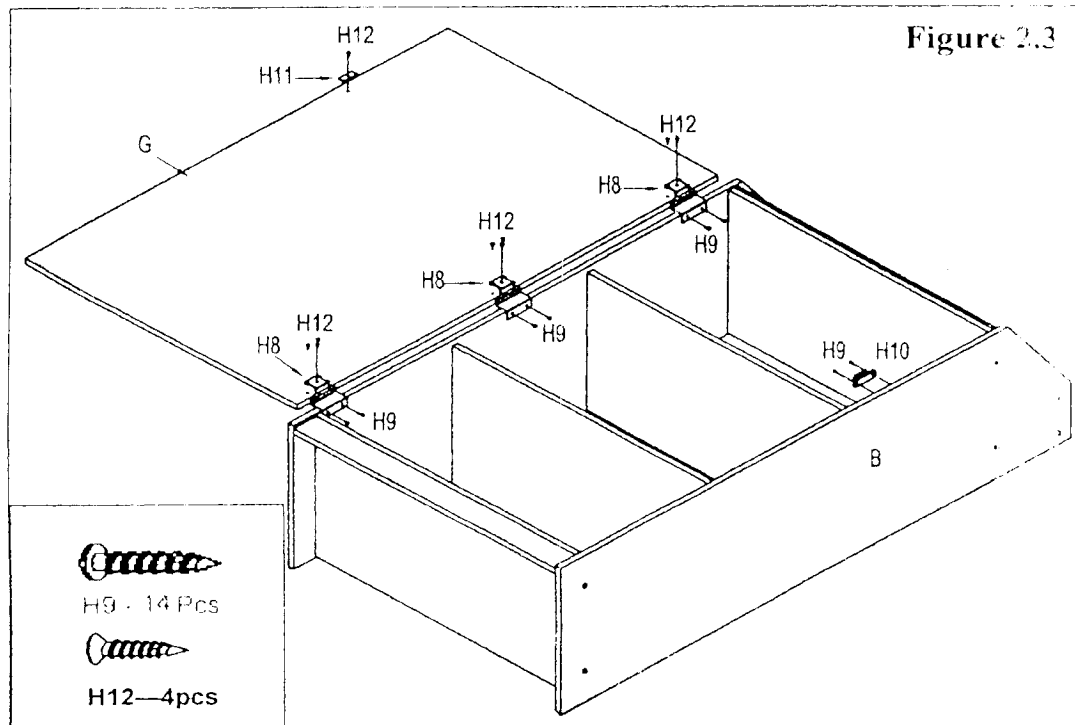


* Be sure to use the screws accordingly when install the door hinge.

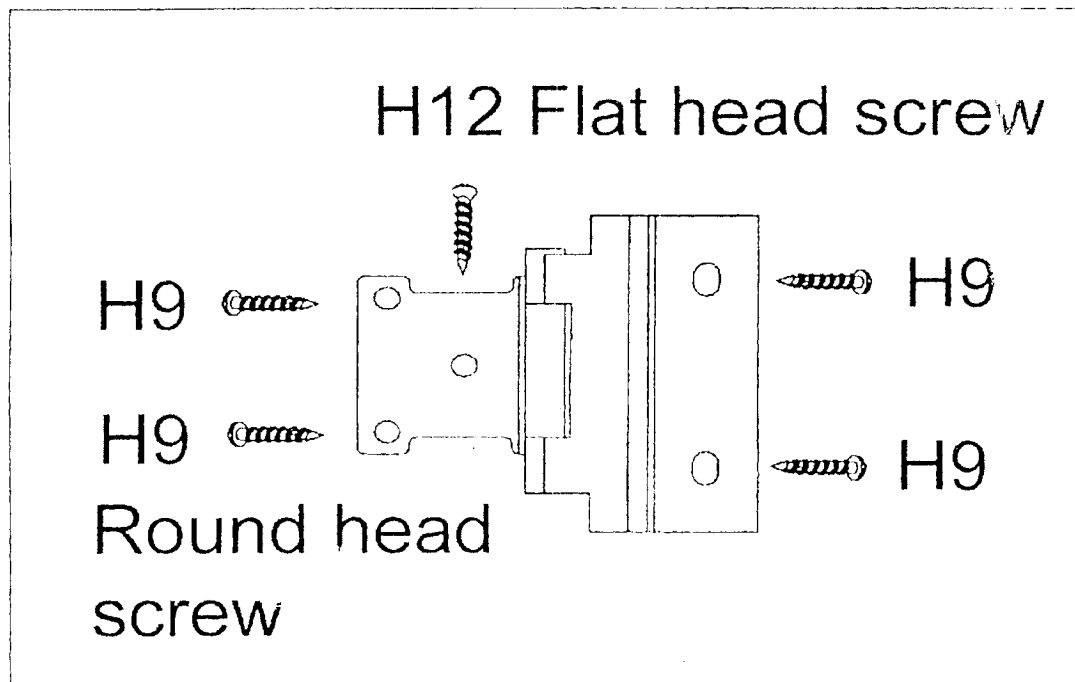

11. Attach Lower Cabinet to Upper Cabinet using Machine Screws (H1). See Figure 2.4.

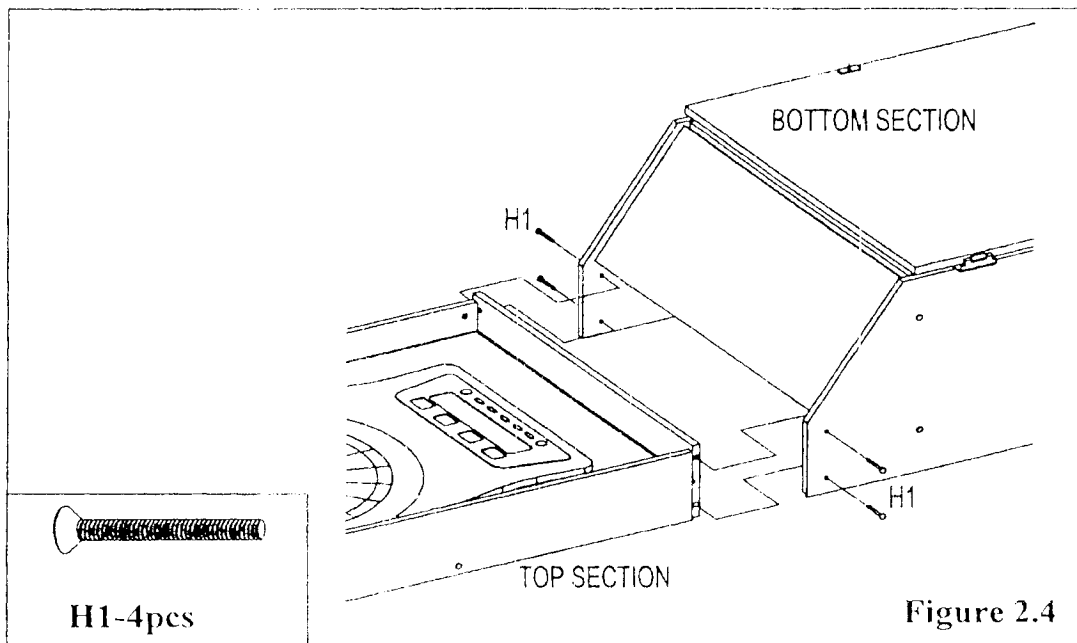

12. Plug in the adapter to the back of dart board and pull through opening in part S.
13. Stand up assembled cabinet
Attach Parts S and F to back of assembled cabinet using Flat Head Screws (H6) See Figure 2.5.

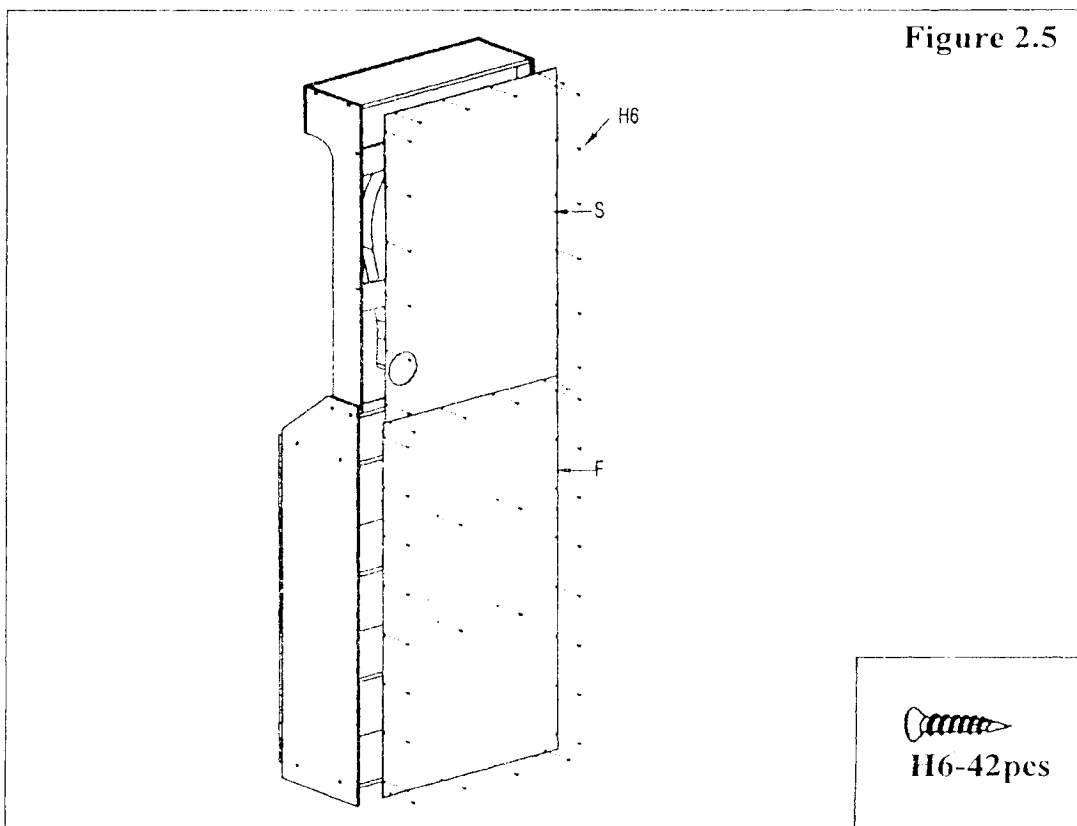

Customer service

We have a commitment to you by providing the very best home entertainment product, backed by our dedicated customer service department and a limited warranty. If you have any questions about the use or operation of your E800FS1010, call our customer service department. Our friendly staff will be available to assist you immediately or, at the very least, have one of our technicians call you back. When ordering parts, please use the model number, part number and description listed on the parts list in the manual.

In the US and Canada, please contact,
DMI Sports, Inc. 1300 Virginia Drive, Suite 401, Fort Washington, PA 19034
Tel: 1-800-423-3220
Email: dmi@dmisports.com

E800FS1010**PARTS RE-ORDER FORM**

Name: _____ Date: _____

REF	QTY	PART#	DESCRIPTION	UNIT PRICE	TOTAL AMOUNT
A		E800FS1010-A	Lower Left Side Panel	\$10.00	
B		E800FS1010-B	Right Side Panel	\$10.00	
C		E800FS1010-C	Connector Panel	\$10.00	
D		E800FS1010-D	Lower Section Shelf	\$10.00	
E		E800FS1010-E	Base Cross Panel	\$10.00	
F		E800FS1010-F	Lower Back Cover	\$10.00	
G		E800FS1010-G	Door Panel	\$20.00	
J		E800FS1010-J	Upper Left Side Panel	\$10.00	
K		E800FS1010-K	Upper Right Side Panel	\$10.00	
L		E800FS1010-L	Upper Section Bottom Panel	\$10.00	
M		E800FS1010-M	Dart Board Anchor Panel	\$10.00	
N		E800FS1010-N	Upper Panel	\$10.00	
P		E800FS1010-P	Upper Section Arched Front Panel	\$10.00	
Q		E800FS1010-Q	Dart Board	\$10.00	
R		E800FS1010-R	Front Baffle Panel	\$10.00	
S		E800FS1010-S	Upper Back Cover	\$10.00	
T		E800FS1010-T	Tilt-down Door Panel	\$10.00	
H1		E650FSBK-H1	Flat Head Machine Screw M5 x 40	\$1.95	
H2		E650FSBK-H2	Panel Bolt M6 x 25	\$1.95	
H3		E650FSBK-H3	Panel Bolt Lock	\$1.95	
H4		E650FSBK-H4	Plastic Dowel Pin	\$1.95	
H5		E650FSBK-H5	Allen Bolt 1/4" x 5/8"L	\$1.95	
H6		E650FSBK-H6	Flat Head Phillips Screw 3 x 15mm	\$1.95	
H7		E650FSBK-H7	Steel Shaft	\$1.95	
H8		E650FSBK-H8	Door Hinge	\$1.95	
H9		E650FSBK-H9	Door Hinge Round Head Screw	\$1.95	
H10		E650FSBK-H10	Door Magnet	\$1.95	
H11		E650FSBK-H11	Door Magnet Attachment	\$1.95	
H12		E650FSBK-H12	Door Hinge Flat Head Screw	\$1.95	
SHIPPING AND HANDLNG:			Subtotal:		
Up to \$15.00 add \$2.00 for S&H			PA Residents Add 6% State Sales Tax:		
Over \$15.00 add \$8.00 for S&H			Shipping and Handling Charges:		
Console add \$5.00 for S&H			TOTAL:		

E800FS1010

PARTS RE-ORDER PAYMENT FORM



Method of Payment

Check or money order ☐ Credit Card ☐ VISA ☐ MasterCard ☐ AMEX ☐ Discover ☐

Credit Card Information

Name (as it appears on card)

Billing Address

City _____ **State** _____ **Zip** _____

Shipping Address (if different)

City _____ **State** _____ **Zip** _____

Credit Card Type _____ **Expiration Date** _____

Credit Card Number _____

Send this form along with your check or money order payable to:

DMI SPORTS Inc. 1300 Virginia Dr • Suite 401 • Fort Washington, PA 19034 • www.dmisports.com



DMI Sports Inc.
1300 Virginia Drive, Suite 401
Fort Washington, PA 19034
Printed in China
082002-V2.0