




BEST CHOICE
PRODUCTS

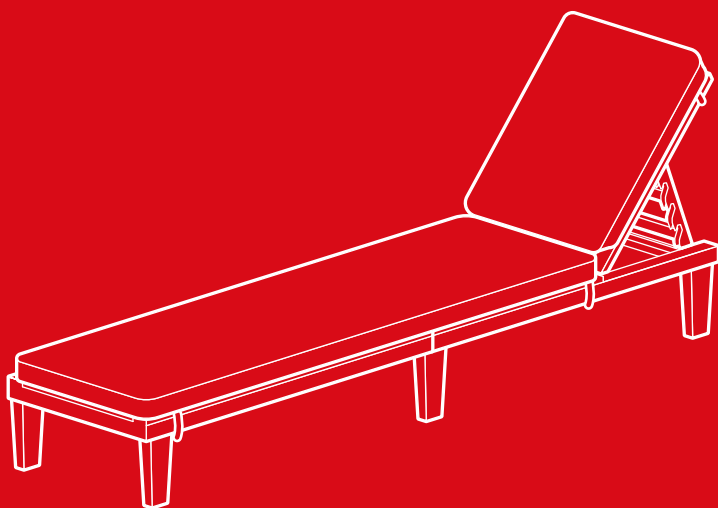

INSTRUCTION MANUAL

 
Outdoor Resin Chaise
Lounge

! NOTICE

Please retain these instructions for future reference.

- This product is intended for residential use only.
- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Do not lean backwards when sitting in chair.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOL FREE ASSEMBLY



RUBBER Mallet
(OPTIONAL)



330 LBS
CAPACITY









1 PERSON
ASSEMBLY



UP TO 15 MIN.
ASSEMBLY

PARTS

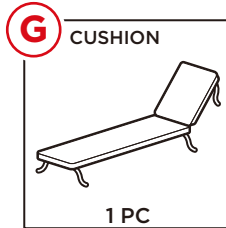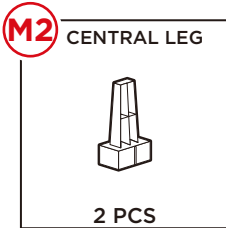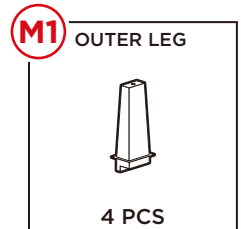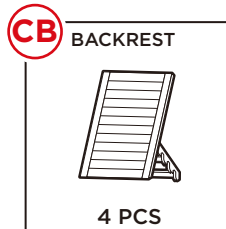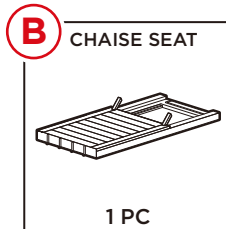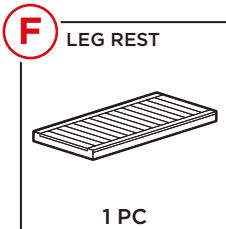


PRODUCT ASSEMBLY

1

Assemble this product facing down. Insert the **part B chaise seat** into the **part F leg rest**.

Align the interlocking catches on the two parts, then press them together until secure.

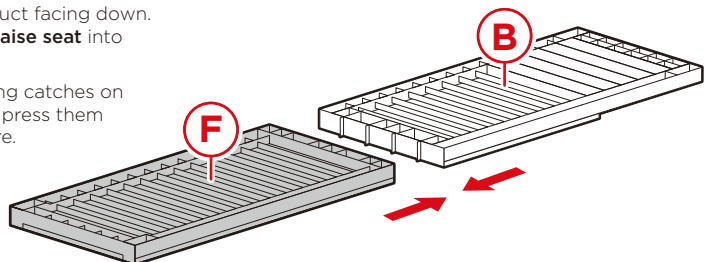


PRODUCT ASSEMBLY

2

Attach the **part M1 outer legs** onto the outer corners of **parts F & B**, two legs per part. Press the legs into their designated space until secure.


Attach the **part M2 central leg** where **part F & B connect**. Press the legs into their designated space until secure.

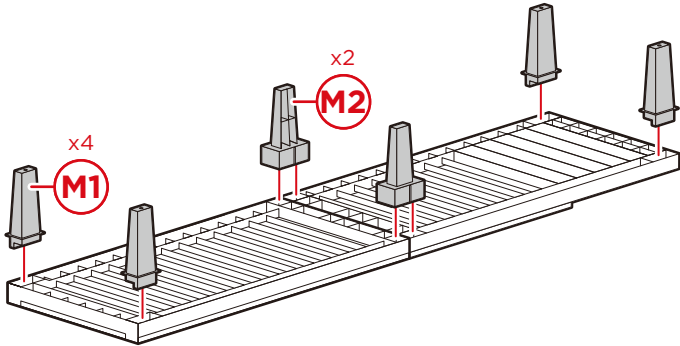

3


Flip the assembly upright and attach the **part CB backrest** to the **part B chaise seat**.

Press the backrest onto the tines of the seat until you hear an audible click.

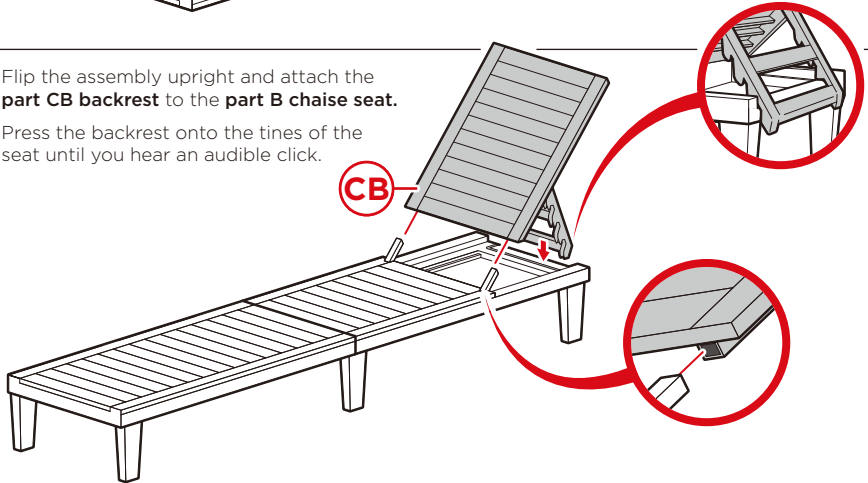

4

Attach the **part G cushion** by tying the attached strings to the chaise frame.

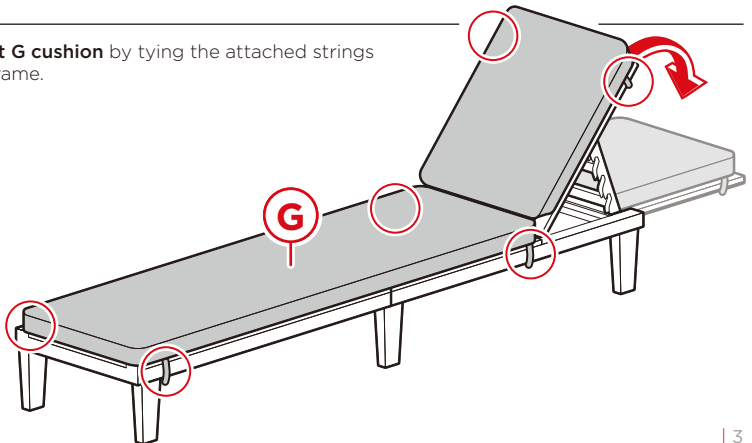



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.