

STEP 1: Fill the water tank following the instructions in the section entitled 'Filling up the water tank'.

STEP 2: Plug in and switch on the iron at the mains power supply.

STEP 3: Slide the steam control lever to the right to set it to the maximum steam setting and set the temperature control dial to the highest heat setting and allow the iron to heat up until the temperature indicator light switches off.

STEP 4: Switch off and unplug the iron from the mains power supply.

STEP 5: Unlock the iron from the iron base and carefully hold it over a sink.

STEP 6: Pull out the self-cleaning attachment using the handles on each side. Hot water and steam will expel from the steam holes along with any impurities. Move the iron back and forth during this process, continuing to release steam and water until the water tank is nearly empty.

STEP 7: Place the iron onto the iron base, slide the locking switch to the right to lock the iron in position and allow to cool thoroughly. Make sure the power base is still unplugged from the mains power supply.



NOTE: Water may be ejected from the steam holes whilst the iron is heating up. For best results, carry out the self-clean process immediately after unplugging the iron from the mains power supply.

Hints and tips

Always start ironing on a low heat setting and work up to a higher one, if necessary; it takes less time for the iron to heat up than it does to cool down.

The temperature of the iron is the hottest when it has initially heated up and will therefore need time to stabilise. Once the iron has heated up, allow the temperature indicator light to cycle off and on again before using the iron.

Storage

Check that the iron is cool and dry and that the water tank is empty before storing in a cool, dry place.

Wrap the cord loosely around the iron; never wrap it tightly as this could cause damage.

Specifications

Product code: BEL02097

Input: 220–240 V ~ 50–60 Hz

Output: 2600 W

Water tank capacity: 320 ml

Go to beldray.com/instruction-manuals.html and search **BEL02097** to access the instruction manual for your produ




Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Quick start guide

Cordless iron

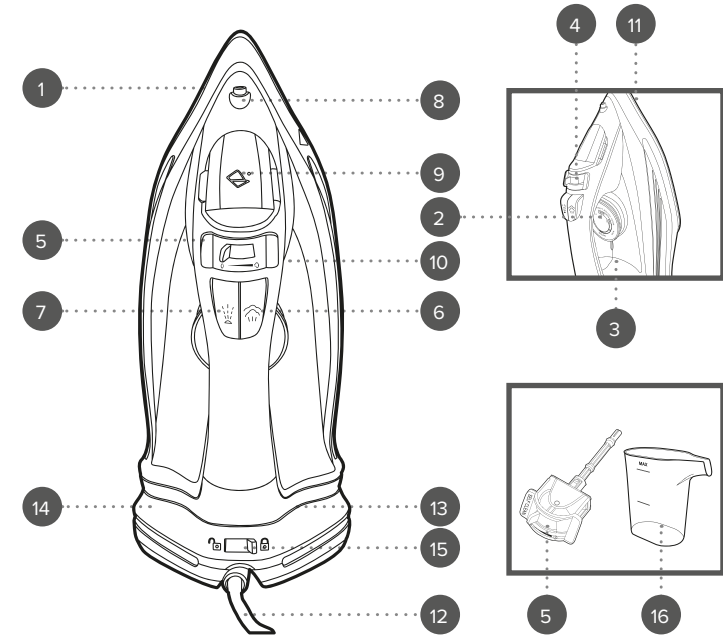

1. Iron main unit
2. Temperature control dial
3. Temperature indicator light
4. Steam control lever
5. Self-cleaning attachment
6. Steam burst button
7. Water spray button
8. Spray nozzle

9. Water tank cap
10. Max. fill mark
11. Ceramic soleplate
12. Cord guard
13. Heel rest
14. Iron base with cord
15. Locking switch
16. Measuring jug



To register for your extended guarantee, scan the QR code or visit guarantee.upplc.com/beldray and register your product within 30 days of purchase. For any further queries, visit www.beldray.com.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.
©Beldray trademark. All rights reserved.
CD301024/MD000000/V1

Please retain instructions for future reference.

Dos and don'ts

DO:

Only use this iron with the stand provided.
Only use this iron rested on a stable surface.
Always hold the iron by its handle.

DON'T:

Overfill the water tank past the max. fill mark.

Care and maintenance

STEP 1: Drain the remaining water from the water tank to prevent it from leaking during cleaning.

STEP 2: Wipe the ceramic soleplate with a soft, damp cloth and dry thoroughly.

STEP 3: If polyester has burnt onto the ceramic soleplate, wipe it with a soft cloth dipped in methylated spirits. Clean off the methylated spirits with a soft, damp cloth and dry thoroughly.

STEP 4: To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits with a soft, damp cloth and dry thoroughly.

Instructions for use

Before first use

STEP 1: Switch off and unplug the iron from the mains power supply.

STEP 2: Wipe the exterior of the iron with a soft, damp cloth and dry thoroughly.

STEP 3: To remove any impurities that may have occurred during the manufacturing process, it is best to use the iron on an old piece of cloth, making sure that it is on the highest temperature setting suitable for the material.



NOTE: When using the iron for the first time, a slight odour and a small amount of smoke may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the iron when it is in use.

Filling the water tank



CAUTION: Do not fill the water tank past the max. fill mark; it is best to check the water level when the iron is positioned upright. Do not fill the water tank when the iron is switched on or plugged in.



WARNING: Never add descaling, aromatic, alcoholic or detergent products to the water tank, as this could cause damage to the iron or injury to the user.

Using as a cordless iron

STEP 1: Check that the iron is switched off and unplugged from the mains power supply.

STEP 2: Move the locking switch towards the '⏻' position to unlock the iron from the iron base.

STEP 3: Plug in and switch on the iron at the mains power supply.

STEP 4: Rotate the temperature control dial to the desired temperature. The temperature indicator light will illuminate orange ('·' position minimum) to signal that the iron is heating up.

STEP 5: When the temperature indicator light switches off, remove the iron from the iron base and use as a cordless iron.

STEP 6: Put the iron back onto the iron base to recharge. This will need to be done regularly for the iron to maintain heat.



NOTE: The iron will only heat up when the temperature control dial is at a minimum of '·' position.

Using as a corded iron

STEP 1: Check that the iron is switched off and unplugged from the mains power supply.

STEP 2: When the iron is on the iron base, move the locking switch towards the '⏻' position. This will lock the power unit to the iron.

STEP 3: Plug in and switch on the iron at the mains power supply.

STEP 4: Rotate the temperature control dial to the desired temperature (minimum '·' position).



NOTE: When the iron is not in use, keep the locking switch in the '⏻' position. This is ideal for storage.

Ironing with steam

The steam settings are ideal for removing creases from fabrics, such as cotton and linen, with ease.

STEP 1: Fill the water tank.

STEP 2: Plug in and switch on the iron.

STEP 3: Rotate the temperature control dial until the desired heat setting is reached.

STEP 4: Select the desired steam setting by sliding the steam control lever to the right. The steam setting can be switched off at any time by sliding the steam control switch to the off position.

STEP 5: After use, rotate the temperature control dial to the '0' position. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly.



NOTE: Allow the iron to reach the desired heat setting before use; not doing so may cause water to drip from the ceramic soleplate. The temperature control dial needs to be at '·' position for the iron to heat up. The temperature indicator light will illuminate whilst the iron is heating up but not when it is cooling down; it should not be misinterpreted as a ready-to-use indicator light. The temperature indicator light will cycle on and off during use to regulate the temperature.



WARNING: Never leave the ceramic soleplate resting on fabric for any longer than 15 seconds. If ironing with steam for prolonged periods of time, it is advisable to use the iron as a corded unit.

Ironing without steam

For removing creases from more sensitive fabrics, try ironing without steam.

STEP 1: Move the steam control switch to the off position.

STEP 2: Plug in and switch on the iron at the mains power supply.

STEP 3: To increase the temperature of the iron, rotate the temperature control dial in a clockwise direction until the desired heat setting is selected.

STEP 4: Test the iron on a small area of the fabric to check that the selected temperature is suitable; adjust if necessary.

Steam burst function

For creases that are stubborn and difficult to remove, use the steam control trigger to select the desired steam setting; if necessary, press the steam burst button for extra steam. Wait approx. 5 seconds in-between each burst to prevent any water leaking out from the steam holes.



NOTE: The iron will only produce steam when the temperature control dial is set to the '...' position.

Water spray function

The water spray function can be used to help to remove stubborn creases on heavier fabrics. It can also be used when dry ironing delicate fabrics that cannot be steam ironed.

To use the water spray function, hold the iron over the area to be ironed and then press the water spray button.



NOTE: The water spray function will not work if the water tank is empty. When using the water spray function for the first time, it may be necessary to press the water spray button several times.

Self-clean function

The self-clean function removes limescale and impurities from within the ceramic soleplate.

It is recommended to use this function on a fortnightly basis or more often if the iron is used in a hard water area.

