

ASSEMBLY INSTRUCTION

CHANNEL FULL HEADBOARD CHANNEL QUEEN HEADBOARD

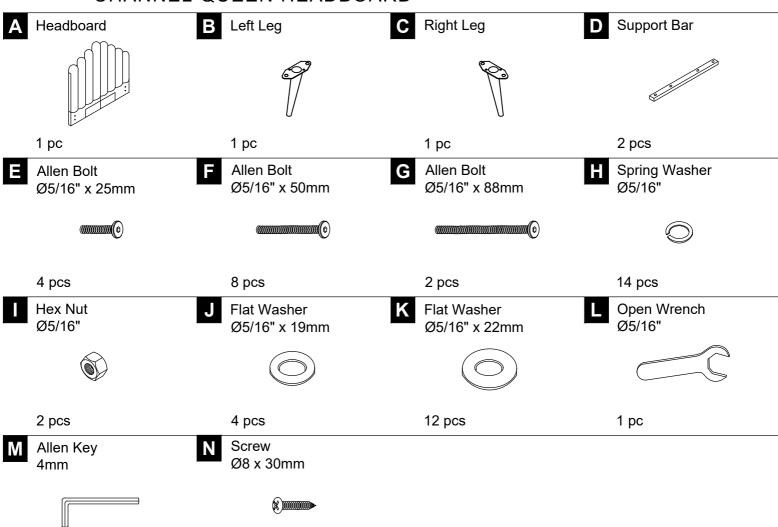

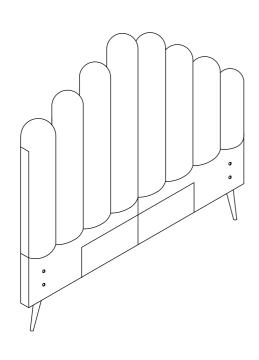

4 pcs

1 pc


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

IMPORTANT NOTE:


- 1. Do not tighten all screws / bolts until all completely assembled.
- 2. Keep all hardware parts out of reach of children.

*** Do not tighten screws & bolts until the entire unit is completely assembled.


Open the Black Woven Fabric and connect the Headboard (A) by using Allen Bolt (G), Spring Washer (H), Flat Washer (K) and Hex Nut (I) and tightening with Open Wrench (L).

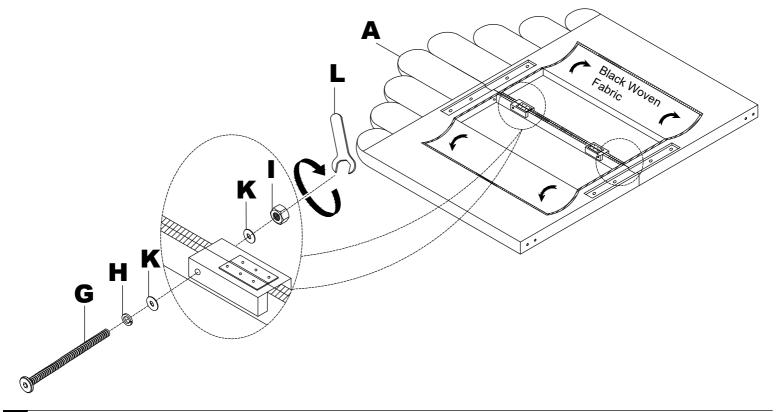


2 Close the Black Woven Fabric of Headboard (A) to position.

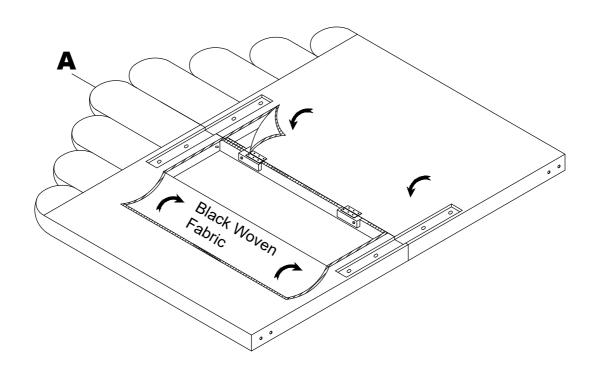

Attach Support Bar (D) to Headboard (A) by using Allen Bolt (F), Spring Washer (H) and Flat Washer (K) and tightening with Allen Key (M).

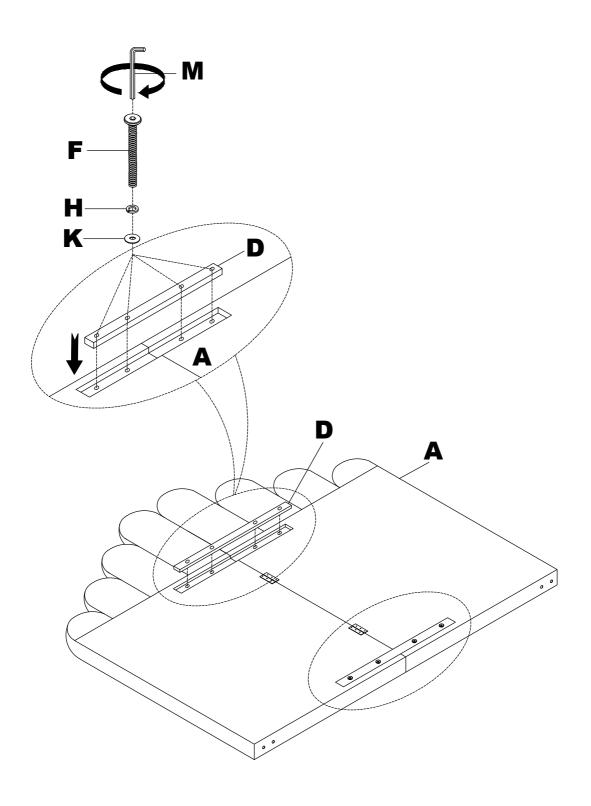

Attach Left & Right Leg (B&C) to Headboard (A) by using Allen Bolt (E), Spring Washer (H) and Flat Washer (J) and tightening with Allen Key (M). Then attach Left & Right (B&C) to Headboard (A) using Screw (N) with Phillips Head Screwdriver (not provided).

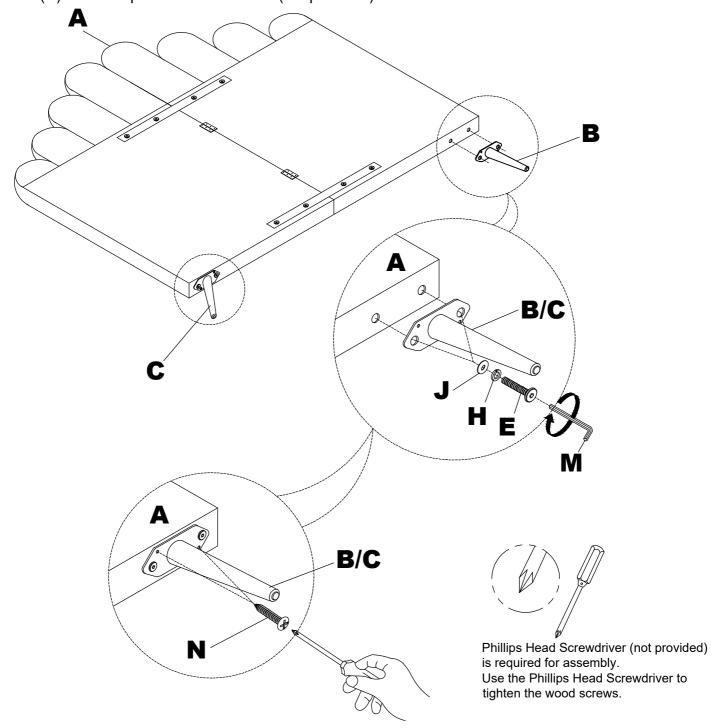


Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION

CHANNEL FULL BED CHANNEL QUEEN BED

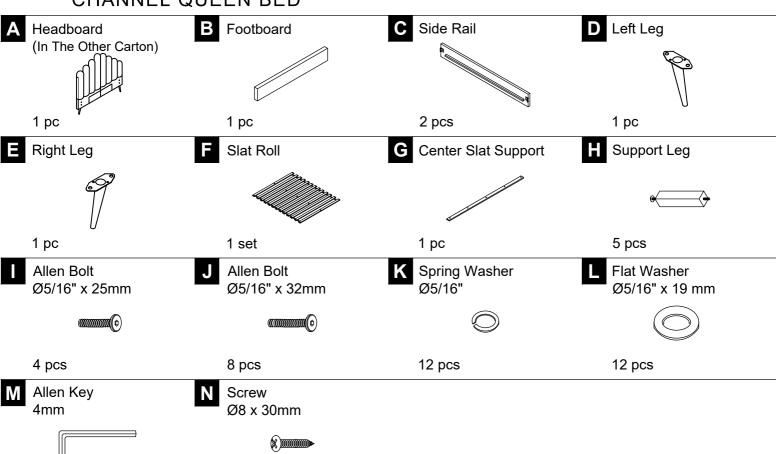



30 pcs


1 pc

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

IMPORTANT NOTE:

- 1. Do not tighten all screws / bolts until all completely assembled.
- 2. Keep all hardware parts out of reach of children.


Attach Left & Right Leg (D&E) to Footboard (B) by using Allen Bolt (I), Spring Washer (K) and Flat Washer (L) and tightening with Allen Key (M). Then attach Left & Right (D&E) to Footboard (B) using Screw (N) with Phillips Head Screwdriver (not provided).

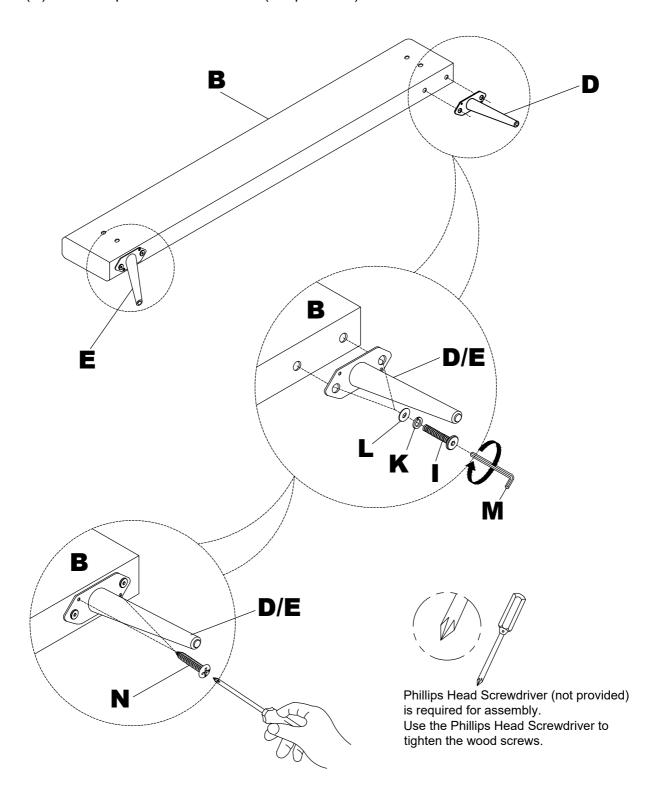

*** Do not tighten screws & bolts until the entire unit is completely assembled.


Attach Side Rail (C) to Headboard (A) by using Allen Bolt (J), Spring Washer (K) and Flat Washer (L) and tightening with Allen Key (M).

Remark: Do not tighten the bolts until screw Slat Roll (F) well on the Side Rail (C).

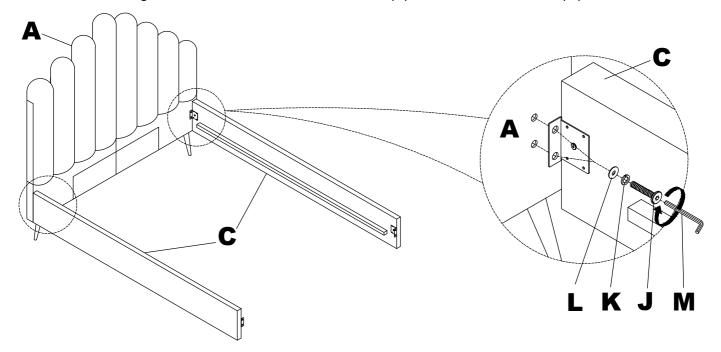


Attach Side Rail (C) to Footboard (B) by using Allen Bolt (J), Spring Washer (K) and Flat Washer (L) and tightening with Allen Key (M).

Remark: Do not tighten the bolts until screw Slat Roll (F) well on the Side Rail (C).

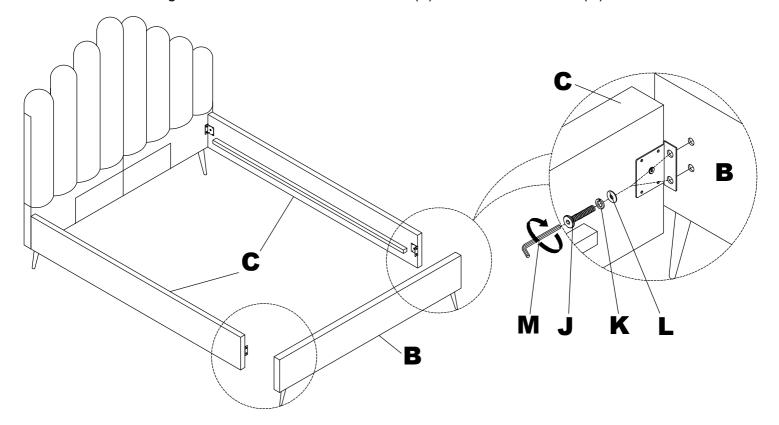

Attach Support Leg (H) to Center Slat Support (G) and Slat Roll (F). Then Attach Slat Roll (F) on Side Rail (C) using Screw (N) with Phillips Head Screwdriver (not provided).

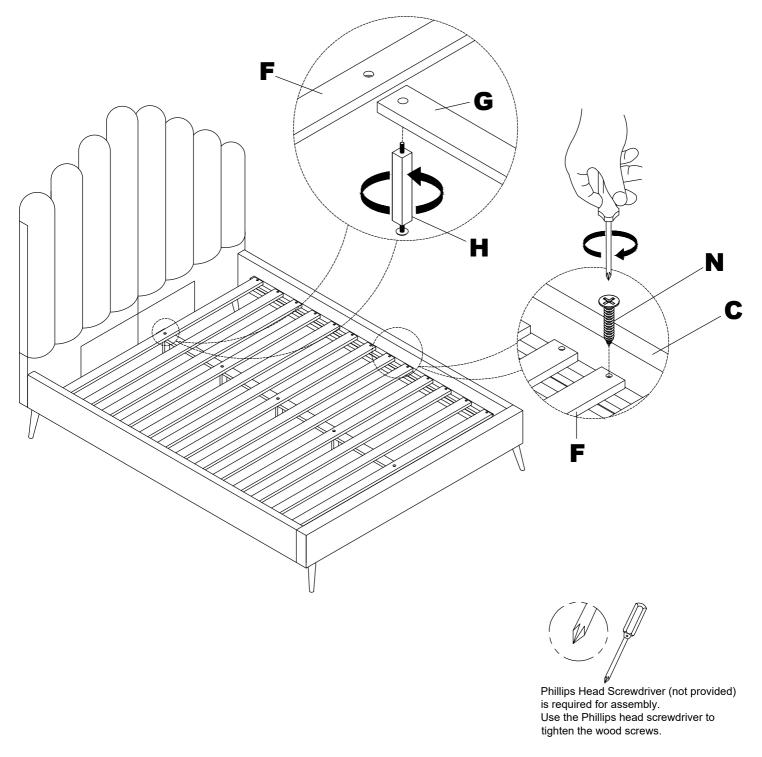

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.