



bestchoiceproducts

Standing **ANIMATRONIC CLOWN**



SOUND
ACTIVATED




MOTION / TOUCH
ACTIVATED



INDOOR/
COVERED PORCH

bestchoiceproducts.com

SKY6512

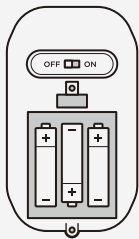

BATTERY BOX INSTALLMENT

1. Locate the battery box in the back of the animatronic
2. Unscrew the battery cover and insert 3 AA batteries

BATTERY BOX FUNCTION

AUTOMATIC MODE: Turn the switch ON to activate motion/touch sensor

MANUAL MODE. Turn the switch OFF. Press the button to activate the animatronic



BUTTON



Questions about your product? Visit our help center via the QR code or link below and search for your product.

bestchoiceproducts.com/pages/help

SKY6512

REQUIRES

- #0 or #1 Mini Screwdriver (Not Included)
- 3 AA Batteries (Not Included)

STAND ASSEMBLY

1. Insert poles into connectors to build stand
2. Slide four legs into base connector
3. Attach figure to top of stand

