 


Tiki[®] BRAND fire pit

TRADITIONAL
ONYX RIDGE

USER GUIDE

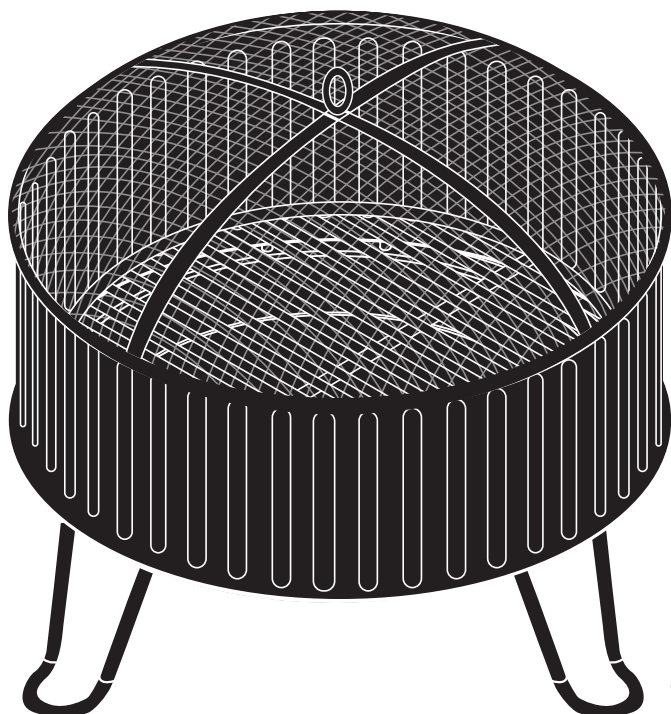

1125178

WARNING

INSTALLER: Leave this manual with the appliance.
CONSUMER: Retain this manual for future reference.

Warnings	2
Pre-Assembly	3
Assembly Instructions	4
Light your Fire Pit	5
Extinguishing	5
Care & Maintenance	6
Frequently Asked Questions	7
Limited Warranty	8

WARNINGS

WARNING

DO NOT use this TIKI® Brand Fire Pit Traditional Onyx Ridge until you have read the operating instructions and safety warnings. Failure to do so can cause death, serious injury or property damage.

WARNING

This product can expose you to chemicals, including lead, which known to the State of California to cause cancer, and carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

CAUTION

Keep clothing, hair and face away from flame when lighting.

- FOR OUTDOOR USE ONLY. Toxic carbon monoxide fumes can accumulate and cause asphyxiation.



WARNING: Hot Surface Hazard

DO NOT touch when in use. The Fire Pit will be extremely hot when burning. Never attempt to touch, move, or clean your Fire Pit while in use and wait until it has completely cooled down.

- DO NOT operate, light, or use the Fire Pit any closer than within 15 ft. of walls, structures or buildings, or other combustible materials such as dry grass/bushes, awnings, etc.
- DO NOT use under a patio roof, low hanging branches, trellises, or overhangs of any kind including covered porches.
- DO NOT use the Fire Pit in any explosive environment such as areas where flammable or combustible gases may be present.
- DO NOT use the Fire Pit with fuel sources other than natural cut firewood.
- DO NOT use an electric style grill starter. Use only matches or lighters which will provide a flame and then can be extinguished and moved away from the flame once the fire is ignited.
- DO NOT use gasoline, kerosene, diesel fuel, lighter fluid, alcohol, or any other flammable liquid to light or relight the Fire Pit.
- DO NOT store or use gasoline or any other flammable vapors, liquids, or materials in the vicinity of the Fire Pit.
- DO NOT store or use LP cylinders within 30 ft. of the Fire Pit while it is in operation.
- DO NOT use the Fire Pit on or near automobiles, trucks, vans, recreational vehicles, or boats.
- DO NOT place on any combustible surface such as wood, dry grass, leaves, mulch, etc.
- Only operate under the supervision of an adult.
- DO NOT lean over the Fire Pit when lighting or when it is in use.
- DO NOT breathe smoke from the fire and avoid getting smoke in your eyes.
- DO NOT use the Fire Pit while under the influence of drugs or alcohol.
- DO NOT leave the Fire Pit unattended, do not leave children or pets unattended near Fire Pit, and/or DO NOT leave a lit or hot Fire Pit unattended.
- Flames may reach a height of 5 ft. from the top of the Fire Pit.
- DO NOT use the Fire Pit in windy conditions.
- When using the Fire Pit, exercise the same precautions you would with any open fire.
- Never leave the Fire Pit unattended until the flames go out.

WARNINGS

- DO NOT use water to extinguish the fire under normal circumstances as this could cause damage to the Fire Pit. Only extinguish with water during emergencies.
- DO NOT cover the Fire Pit with the cloth cover until it has completely cooled down approximately 12 hours.
- Always use the Fire Pit in accordance with all applicable local, state, and national codes. Contact your local fire department for details.
- DO NOT alter or modify the Fire Pit in any manner.
- The Fire Pit should be inspected and cleaned after every use.
- When lifting and moving the Fire Pit always wear protective clothes/gloves to prevent injury.

IMPORTANT: Natural cut firewood contains sap, water, and air pockets as well as irregularities with the potential to eject sparks. We recommend placing a screen, over the top of the Fire Pit to prevent sparks from escaping. Always follow local laws and ordinances when burning.

PRE-ASSEMBLY

⚠ CAUTION


Some parts may contain sharp edges. Wear protective gloves when assembling, moving, or handling the product.

Remove all parts from the packaging, including the smaller components.


Compare all parts with the Package Contents. If any part appears missing or damaged, DO NOT assemble or use this product.

For assistance, contact Customer Service at 1-888-473-1088. Please have your owner's manual and model number available for reference.

Part	Part No.	Description	Quantity
A	6006446	Fire Pit Wall	1
B	6006484	Ash Pan Assembly	1
C	6006448	Legs	3
D	6005264	M6x20 Hex Screws	9
E	6006483	Grate	1
F	6006507	Screen	1
G	6004700	Hex Key	1
H	6006411	Cover	1
I	6006498	Poker	1

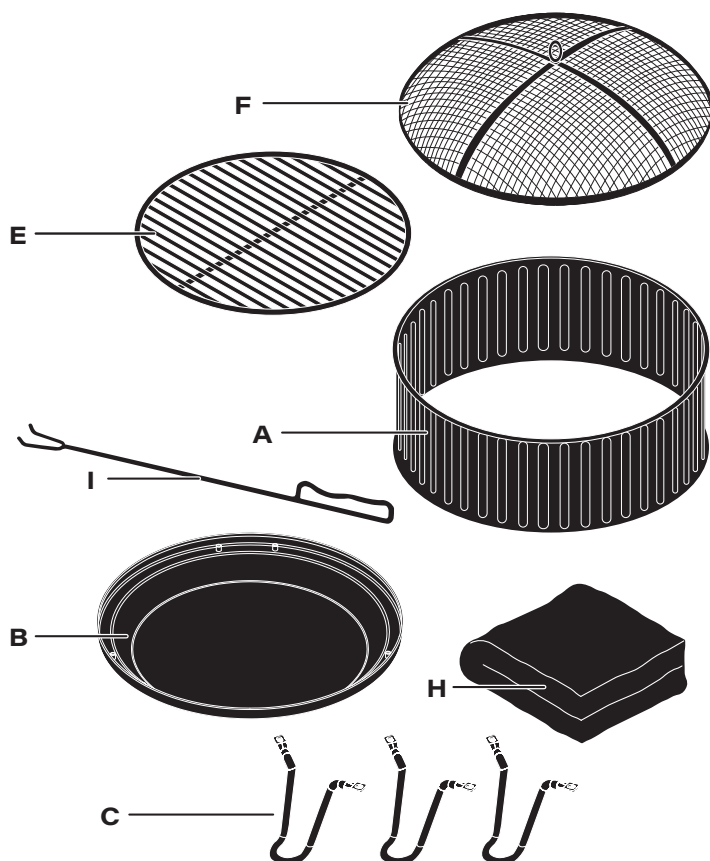 

 Note: Items not shown to actual scale or size.

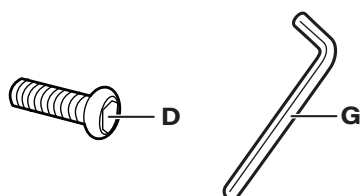

TIKI® Brand Fire Pit | Traditional Onyx Ridge

 
ASSEMBLY INSTRUCTIONS

⚠ CAUTION

Some parts may contain sharp edges. Wear protective gloves when assembling, moving, or handling the product.


STEP 1

Place fire pit wall on its side on a soft surface to prevent scratching. Insert the ash pan (B) into the fire pit wall (A) and align it. Alignment is correct when the rectangular holes (AA) in the fire pit wall match the threaded insert (BB) with the square hole in the ash pan. Secure with 3 screws (D) in each square hole using the hex key (G).

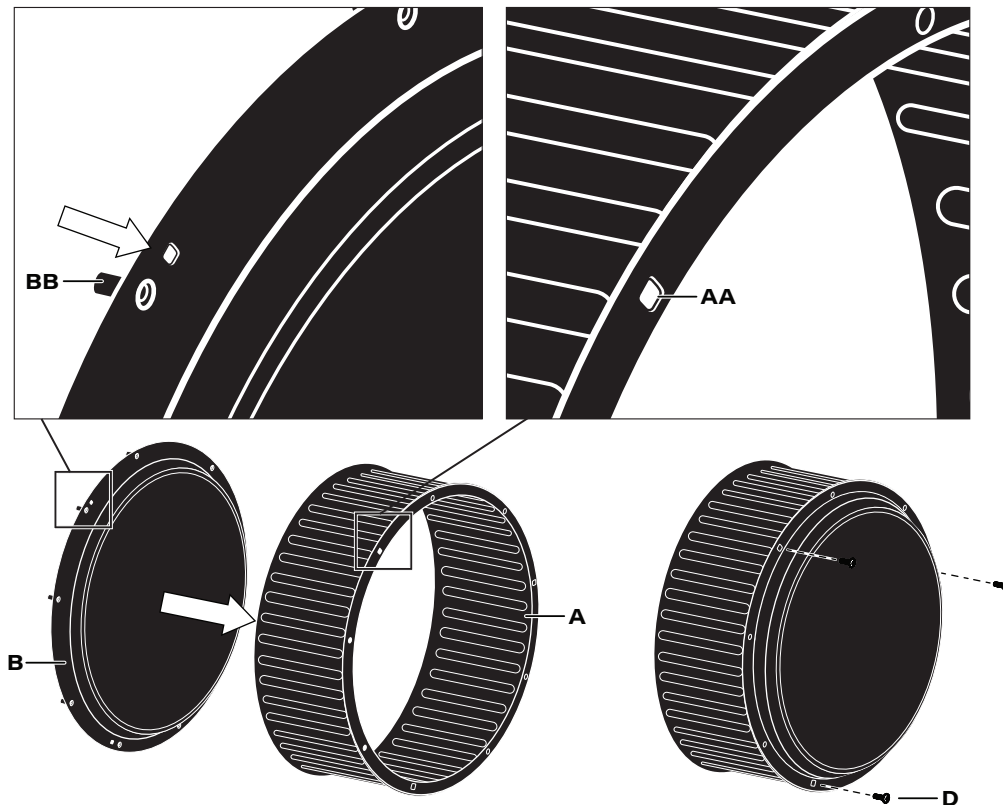


STEP 2

 Secure each leg (C) to the fire pit wall and ash pan assembly with 2 screws (D) using the hex key (G).

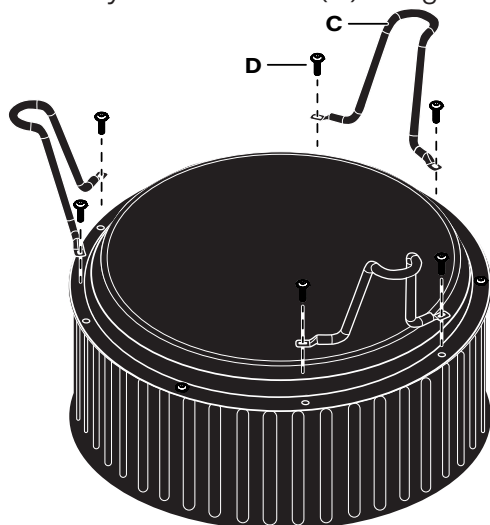

STEP 3

 Place the grate (E) into the fire pit.

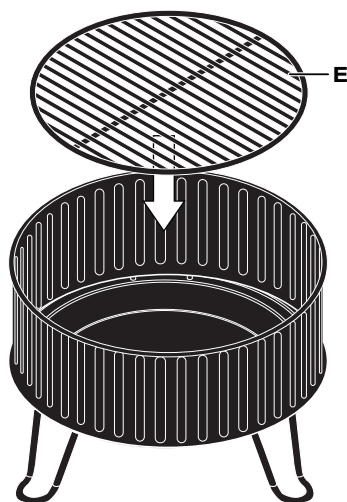

LIGHT YOUR FIRE PIT

- Stack kindling, newspaper, a commercially-available fire starter or TIKI® Brand Fire Starter, in the center of the Fire Pit.
- Build larger pieces of wood around the fire starter.
- Ignite the kindling, newspaper, or fire starter with a match. Use with caution as these ignitable materials could catch fire quickly and could cause burns if your hand is too close to the fire.
- DO NOT use lighter fluid to light the natural cut wood. Logs should be less than 16 in. in length. DO NOT use any flammable fluids (gasoline, lighter fluid, etc.) to light or relight fires. Doing so could cause serious injury and lead to the fire getting out of control.

CAUTION

Keep clothing, hair, and face away from the flame when lighting the Fire Pit.



EXTINGUISHING

The safest and preferred method for extinguishing a fire is to wait it out and allow the fire to burn out naturally. This method takes the longest but results in the least amount of smoke, less mess, and the best experience. To ensure the fire goes out completely, NEVER leave the Fire Pit unattended.

Only in the case of an emergency should you use a garden hose and water:

Note: If no garden hose is available, you can pour water over the Fire Pit. Use caution as this generates a significant amount of steam and smoke. You can also use sand or a dry chemical extinguisher that is specified for wood fire applications.

- Stand back at least 5 ft. while spraying to avoid the hot steam and debris.
- Spray the coals and inside the Fire Pit continuously for 5 minutes or until there is no visible flames and the steam has dissipated.
- Using your fire poker, stir the remaining contents to ensure no hot coals or flames remain. Spray for an additional 5 minutes if flames persist.

CARE & MAINTENANCE

CAUTION

Allow the Fire Pit to cool for at least 12 hours before performing any cleaning or maintenance. Some parts may contain sharp edges. Wear protective gloves when moving or handling product.

With proper care, you can improve the efficiency and performance of your Fire Pit and prolong its life. Here is how you should care for your Fire Pit:

- **Cover during periods of inactivity.** Cover the Fire Pit only after it has completely cooled.
- **Clean out ash regularly after Fire Pit has cooled completely.** Cleaning regularly will help maintain airflow and reduce smoke. Carefully brush the left-over ash through the grate and into the ash pan. Remove the grate (E) and dispose of the ash and debris properly. Wood ash mixed with water creates a basic (alkaline) solution which can affect finishes.

You should always use metal containers for ash disposal.

Never leave the ash container on a combustible surface.

DO NOT use or dispose of ash in a garden or landscape application unless you review local laws and ordinances.

- **Clean the Fire Pit with dish soap or baking soda.** Removable parts such as the grate can be removed for cleaning. Regular cleaning of these parts will help with performance. DO NOT use oven cleaner or abrasive cleaners as they will damage the finish. Thoroughly dry the Fire Pit and all parts with a soft cloth to prevent rust from forming.



GET THE FIRE GOING

FOR MORE FIRE STARTERS AND OTHER PRODUCTS TO
HELP YOU ENJOY YOUR FIRE, VISIT TIKIBRAND.COM



FREQUENTLY ASKED QUESTIONS

Can I use firewood in the Fire Pit?

Yes. Never use "green" wood. For example, freshly cut wood from a live tree (cut less than six months prior to use). The moisture content is too high and will result in smoke and incomplete combustion. Logs should be less than 16 in. in length. At least one portion of every log should be touching the bottom of the flame basin for maximum stability. Never add flammable or combustible liquids to the Fire Pit after ignition. This could lead to flare ups in the ash pan and flame basin.

Can I cook or roast marshmallows over the Fire Pit?

Yes , if you follow all other instructions, warnings, and good fire safety practices.

How long do I have to wait before I put the cover on?

After a fire, this should take approximately 12 hours. Times will vary depending on the amount of wood used and consumed. Be sure to clean out all ash, taking appropriate safety measures, to ensure there are no embers left over before putting the cover on.

Where can I put my Fire Pit?

The Fire Pit should not be used closer than 15 ft. to any walls, structures or buildings, and should not be placed on any combustible surface such as wood, dry grass, leaves or mulch. Flames may reach a height of 5 ft. above the top of the Fire Pit. Further, the Fire Pit should not be used under a patio roof, any low hanging branches, trellises or overhangs of any kind, including covered porches. If used on a grassy area, you should have a non-flammable, heat resistant mat placed under the Fire Pit.

What are the best practices for storing my Fire Pit?

Keep the Fire Pit in a covered environment away from moisture. Keep it out of reach of children and pets.

How often do I need to empty the ash catcher pan?

The pan should be emptied after every use.

How do I clean out the ash from the bottom of the Fire Pit?

Put on protective gloves. Remove the grate and tip the fire pit upside down to remove ash. Be sure to dispose ash properly. You should always use metal containers for ash disposal. DO NOT use or dispose of ash in a garden or landscape application unless you review local laws and ordinances.

How do I clean the Fire Pit?

If soot or ash has accumulated on the outside of the Fire Pit, once the Fire Pit is completely cool, wipe down with a damp cloth. Rinse with clean water and use dish soap or baking soda. DO NOT use any abrasive cleaners as they will damage the finish. Once you've removed all residue, dry with a soft cloth to prevent any rust from forming.

For more information on other things you should know, refer to this user guide or visit **TIKIBrand.com**.

LIMITED WARRANTY

Visit tikibrand.com/pages/our-guarantee or contact us at 1-888-473-1088 for more information.



TIKIBRAND.COM

4003127

©2026 Lamplight Farms Incorporated