

SAVANT

Savant® Button Remote (RTR-1000-xx) Quick Reference Guide



<http://dealers.savantav.com/portal/redirector.php?id=1196>




Box Contents

- (1) Traditional Remote Control (RTR-1000-xx)
- (2) AA Batteries (014-0028-xx)
- (1) Quick Reference Guide (009-1623-xx, this document)


Required Components

- Savant System Host
- SSC-W103I (RF gateway)
- Savant Design and Configuration Tools.

Specifications

Environmental			
Temperature	32° to 104° F (0° to 40° C)		
Humidity	10% to 80% Relative Humidity (non-condensing)		
Dimensions and Weight			
Height	6.8 inch (17.27 cm)		
Width	2.2 inch (5.59 cm)		
Depth	1.2 inch (3.05 mm)		
Weight	Net: 0.35 lb (0.16 kg) Shipping: 1.00 lb (0.45 kg)		
Power			
Power Supply	Two AA batteries. Battery Life - 3 months under moderate use.		
Regulatory			
Safety and Emissions	FCC Part 15 	CE 	C-Tick 
RoHS	Compliant		
Minimum Supported Release			
Savant OS: da Vinci 8.8			

Rear Panel

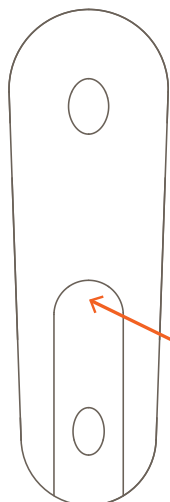

Battery Installation


To install batteries, do the following

1. Locate the battery cover on the underside of the remote.
2. Press down on the cover and slide outward.
3. Observing polarity, place the two AA batteries into the battery compartment.
4. Reinstall cover into the battery compartment slot and slide inward until cover clicks securely into the remote.

Press downward here on battery cover and slide outward.

HELPFUL! The Savant unique identification (UID) of the remote can be found on the inside of the battery cover. This ID is required when remote is being added to a Blueprint configuration.

Front Panel

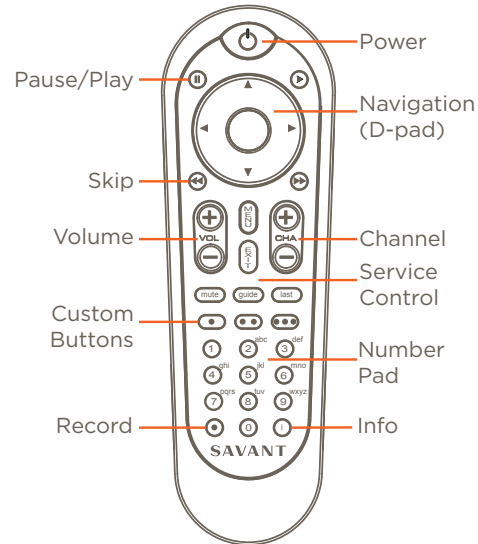

Power Button	Powers off the device in the active service -OR- powers on the device from the last service that was active.
Pause/Play	Pause button is on the left. Play button is on the right.
Skip	Skip Back button is on the left. Skip Forward button is on the right.
Volume	Increase or decrease the volume in a zone.
Custom Buttons	Each button can be set up in Blueprint to perform a specific function. Set up information is available in the Savant Button Remote Deployment Guide available on the Savant Community .
Navigation (D-pad)	Standard up, down, left, and right arrows for on-screen control. Press the SEL button at the center of the D-pad to select the highlighted item.
Channel	Channel up or channel down the device in the active service.
Service Controls	Menu, Exit, Mute, Guide, and Last buttons. Functions change depending on the active service. Service type buttons may not function with all services.
Number Pad	Buttons 0-9 are used to enter numbers and letters within some of the services.
Record	Initiates devices to begin recording. The Record button does not function with all services.
Info	Press to open an information screen. The Info button does not function with all services.

Additional Information

For more information on the setup and configuration of the REM-0300RF remote and controller combination, refer to the documents below located on the [Savant Community](#):

- Savant Button Remote Deployment Guide (009-1624-xx)
- SmartControl 3 Quick Reference Guide (009-1580-xx)
- SmartControl 3 Deployment Guide (009-1518-xx)