







 



ASSEMBLY INSTRUCTION


3613-04RD(SPK) ROUND ACRYLIC END TABLE

A	Glass Top / Bottom Glass	B	Top Frame	C	Bottom Frame	D	Leg
							
2 PCS		1 PC		1 PC		4 PCS	
E	Bolt 1/4 "x1-1/8"	F	Lock Washer 1/4 "	G	Flat Washer 1/4 "	H	Pad ø8*2
							
16 PCS		16 PCS		16 PCS		8 PCS	
I	Allen Key M4						
							
1 PC							

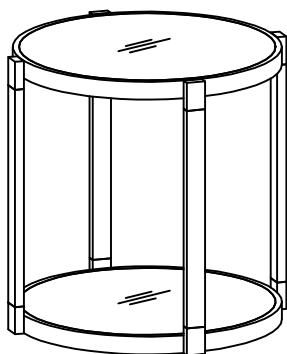


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


-
- 1** Attach Legs (D) to Bottom Frame (C) using Flat Washer (G), Lock Washer (F), Bolt (E) with Allen Key (I).

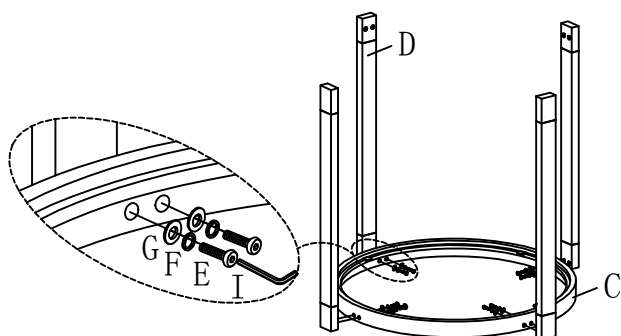


-
- 2** Put Pad (H) to Bottom Frame (C). Then put Glass Top / Bottom Glass (A) to Bottom Frame (C).

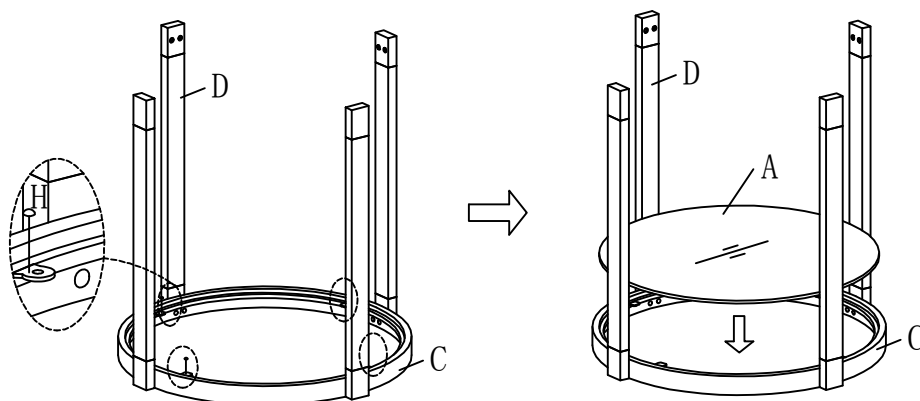


-
- 3** Attach Top Frame (B) to Leg (D) using Bolt (E), Lock Washer (F), Flat Washer (G) with Allen Key (I).

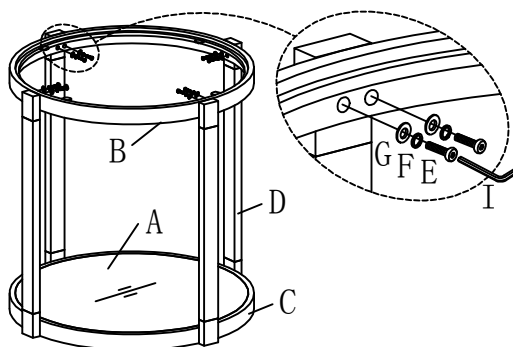

-
- 4** Put Pads (H) to Top Frame (B). Then put Glass Top / Bottom Glass (A) to Top Frame (B).

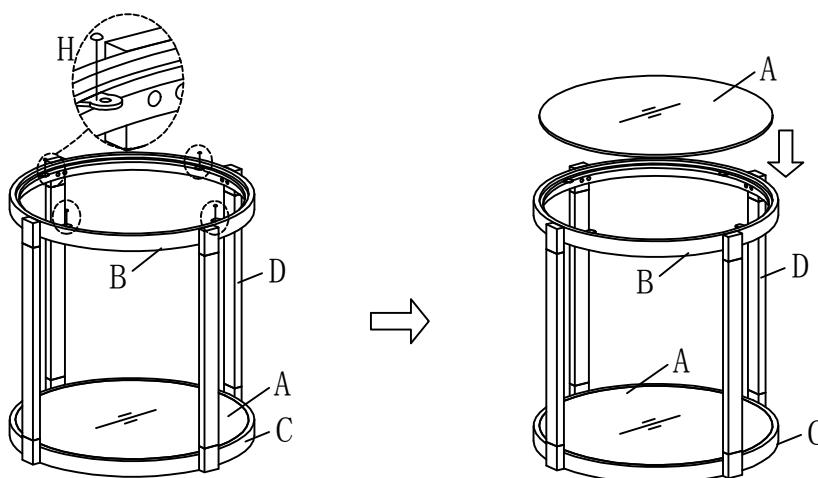

-
- 5** Adjust the Pre-installed Levelers at the Bottom Frame (C) until the End Table is level with the ground.

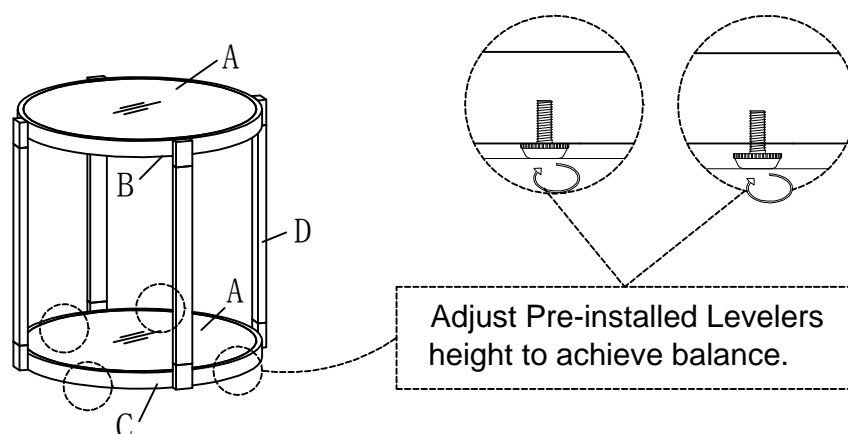

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.